

MUSICflow P7

便攜藍牙揚聲器


NP7550 / NP7550W
NP7550B / NP7550D

中文 使用說明書

操作前請細心閱讀本說明書，並保留作日後參考之用。


ENGLISH OWNER'S MANUAL

Please read this manual carefully before operating your set and retain it for future reference.

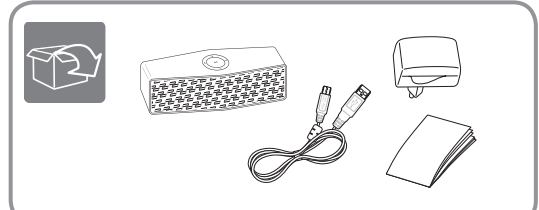

<http://www.lg.com>

產品概覽 Product Overview

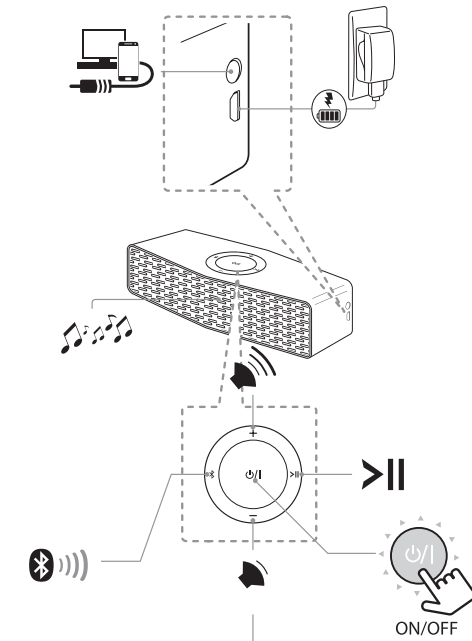

連接便攜纜線時，您可選擇藍牙或便攜輸入模式。

When you connect portable cable, you can select between **Bluetooth** and portable input mode.


開啟：按 **ON/OFF**

關閉：長按 **ON/OFF**

On : Press the **ON/OFF**

Off : Press and hold the **ON/OFF**

充電 Charging

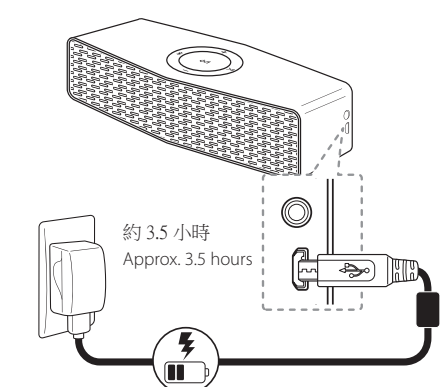

檢查電池壽命的方法：開啟裝置後請按 **ON/OFF**。

How to check the battery life: when the unit is turned on, press the **ON/OFF**.

	➡ ON/OFF	≥ 60 %
	➡ ON/OFF	≥ 15 %
	↔ ON/OFF	< 15 %

安裝應用程式 App Installation

若要更舒適地使用本機，請在您的藍牙裝置安裝「Music Flow Bluetooth」。

To use this unit more comfortably, install "Music Flow Bluetooth" on your **Bluetooth** devices.




版本 4.0.3 (或更新)
Version 4.0.3 (or higher)




版本 6 (或更新)
Version 6 (or higher)

藍牙連接 BLUETOOTH® Connection

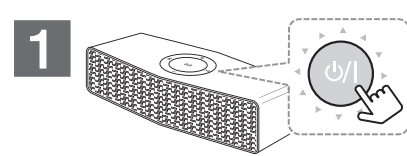


按鍵 **ON/OFF** 開啟裝置。
Press **ON/OFF** to turn on the unit.

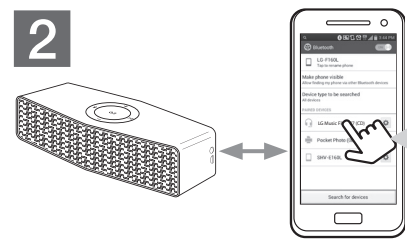

在您的藍牙裝置上選取「LG Music Flow P7」。
(XX 即 BT 位址的最後 2 個數字。)
開啟裝置時，最後連接的藍牙裝置會自動連接。
(僅限外部裝置沒有以便攜纜線連接，而裝置已在藍牙裝置上登記。)
視乎藍牙裝置而定，您需輸入 PIN 碼 (0000)。


Select "LG Music Flow P7" on your **Bluetooth** device.
(XX means the last two digits of BT address.)
When you turn on the unit, the last connected Bluetooth device is connected automatically.
(Only if the external device is not connected with portable cable and the unit is registered on the **Bluetooth** device.)
Depending on the Bluetooth device, you need to enter the PIN code (0000).

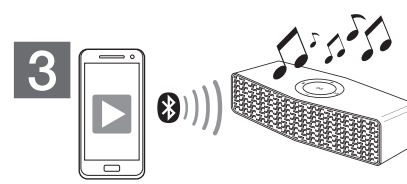

多配對：長按 **ON/OFF** 2 秒新增其他藍牙裝置。
初始化：長按 **ON/OFF** 10 秒。
Multi pairing : Press and hold **ON/OFF** for 2 seconds to add another **Bluetooth** device.
Initializing : Press and hold **ON/OFF** for 10 seconds.

播放/暫停：按 **PLAY/PAUSE**。
向前快轉：按 **FF** 兩下。
向後快轉：按 **REW** 三次。
Play/Pause : Press **PLAY/PAUSE**.
Forward Skip : Press **FF** twice.
Back Skip : Press **REW** three times.


使用外部裝置 Using External Device

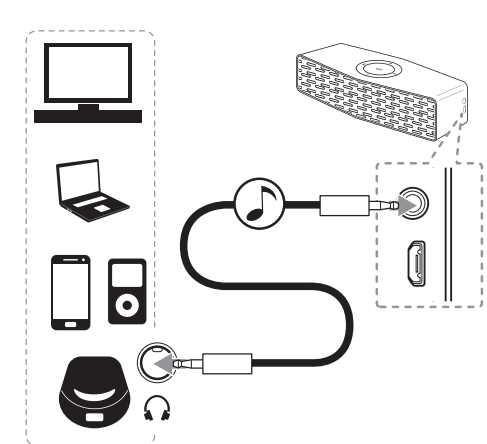


連接便攜纜線時功能會自動切換至 portable in 模式。
When you connect the portable cable, the function is changed to portable in mode automatically.

靜音：按 **MUTE**。(便攜，LG Sound Sync)
Mute : Press **MUTE** (Portable, LG Sound Sync)

安全資訊 Safety Information

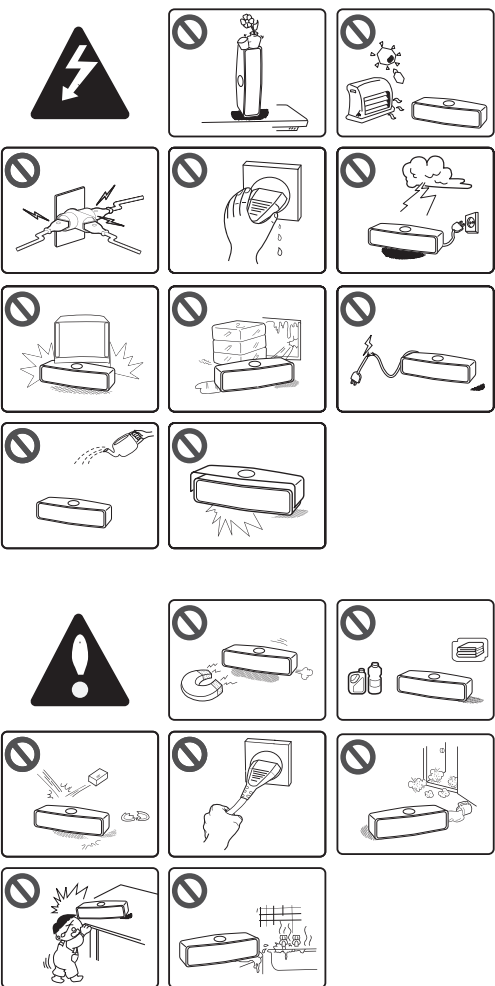


Dual Play 連接 (另購) Dual Play Connection (Optional)

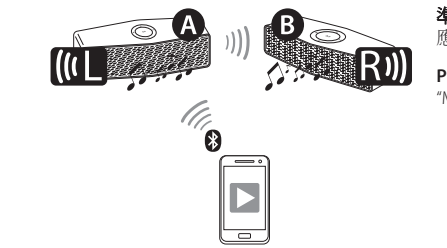


準備：需使用兩個揚聲器才能享受立體聲。詳情請參閱「Music Flow Bluetooth」應用程式。

Preparation : Two speakers are needed to enjoy in stereo. For more detail, refer to the "Music Flow Bluetooth" app.

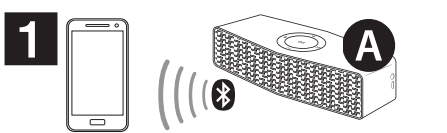


以藍牙連接 **A** 揚聲器。

Connect the **A** speaker using **Bluetooth**.

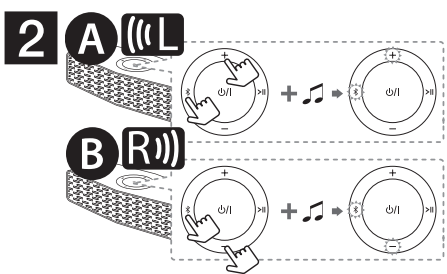

同時長按按鍵 (**A** 揚聲器：**ON/OFF** / **B** 揚聲器：**ON/OFF**) 直至聽到嗶一聲。按鍵會閃動白燈。

Press and hold the buttons (**A** speaker: **ON/OFF** / **B** speaker: **ON/OFF**) simultaneously until you hear a beep. Buttons will blink white.

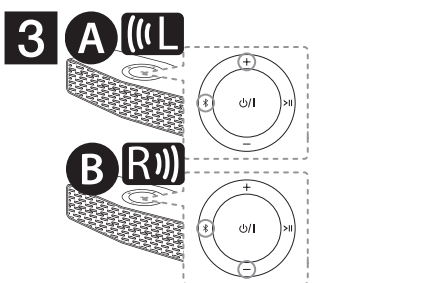


如已連接兩個揚聲器，按鍵會持續閃動白燈和響嗶聲。

If two speakers are connected, blinking buttons will stay white with beep sound.

LG Sound Sync LG Sound Sync

您可以 LG TV 的遙控透過 LG Sound Sync 控制裝置的某些功能。可控制的功能有音量高 / 低和靜音。請確保您的電視機有以上顯示的 LG Sound Sync 商標。


LG Sound Sync enables you to control some functions of this unit by a remote control of your LG TV. Controllable functions are volume up/down and mute. Make sure that your TV has LG Sound Sync logo as shown above.

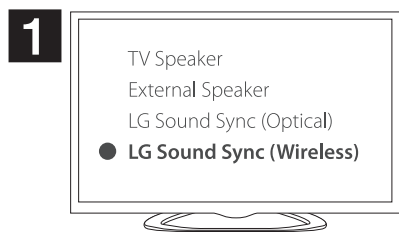

設定電視機的聲音輸出：TV setting menu → [Sound] → [TV Sound output] → [LG Sound Sync (Wireless)]

Set up the sound output of your TV: TV setting menu → [Sound] → [TV Sound output] → [LG Sound Sync (Wireless)]

LG Sound Sync 的設定方法或視乎電視機而不同。請參閱您的電視機說明書。
The setting method of LG Sound Sync may differ depending on the TV. Refer to your TV manual.

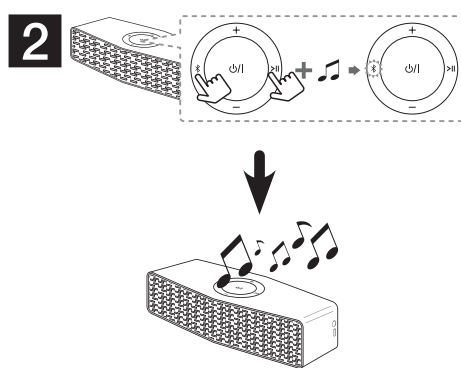

同時長按 **ON/OFF** 直至聽到嗶一聲。閃動黃燈。如已連接，黃燈會持續亮著。
Press and hold **ON/OFF** simultaneously until you hear a beep. **ON/OFF** blinks amber. If connected, **ON/OFF** stay amber.

Sound Sync Wireless

關於 LED 指示燈 About LED Indicator

亮起紅燈
Turned on red
 亮起黃燈
Turned on amber
 亮起白燈
Turned on white
 熄滅
Turned off

		充電中 ➡ 充電完畢 In Charging ➡ Fully Charged
		電源已開啟。 Power is turned on.
		電池已耗盡。(快速閃動) Battery is discharged. (Blinks rapidly)
		本機操作不正常。將本機置於室溫 (5 - 35 °C) 一段時間，然後重試。 The unit operates abnormally. Leave the unit at room temperature (5 - 35 °C) for a while and try again.
		正等待 dual play 連接 Waiting for dual play connection
		正等待 sound sync Waiting for sound sync
		靜音狀態 (可攜式) Mute Status (Portable)
		閃動 ：正搜尋藍牙裝置， 保持亮燈 ：藍牙裝置已連接。 Blink : Searching for Bluetooth device, Stay on : Bluetooth device is connected.

