


\* Image shown may differ from your TV.

\* Image shown on a PC or mobile phone may vary depending on the OS (Operating System).

## Wired Network Connection

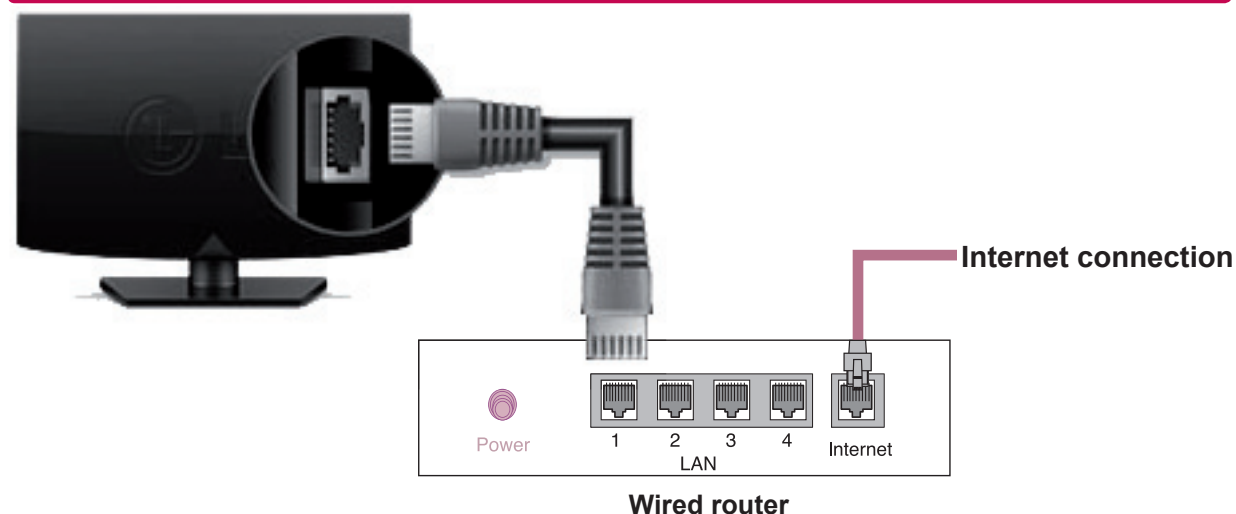


## NETWORK SETTING


- 1 Press the **SETTINGS** button to access the main menu.
- 2 Select the **NETWORK** → **Network Setting** menu.




- 3 Select the **Start Connection**.

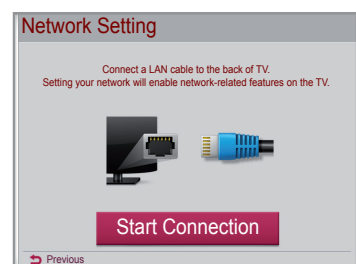

- 4 The device automatically tries to connect to the network.

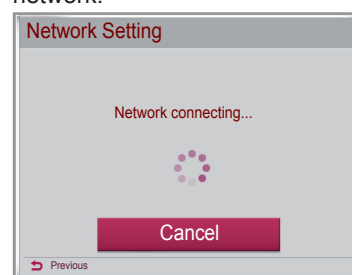


- 5 The connected network is displayed. Select the **Complete** to confirm the network connection.

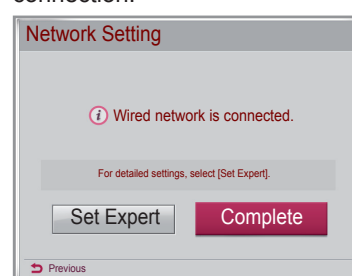


## Troubleshooting Network Problems

- 1 Press the **SETTINGS** button to access the main menu.
- 2 Select the **NETWORK** → **Network Status** menu.

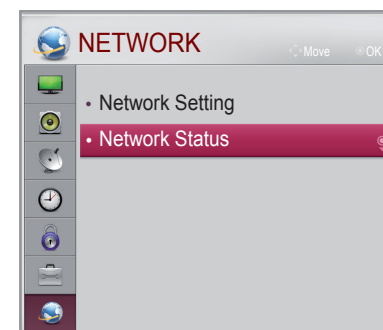

Follow the instructions below that correlate to your network status.


### Check the TV or the router.

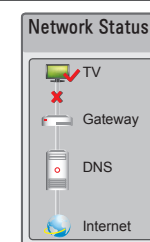

#### When an X appears between TV and Gateway.


- 1 Check the cable connection between the TV and the wired router.
- 2 Reset the power for both the TV and the router/cable modem.
- 3 If you use a fixed IP address and choose to set the IP address automatically, an X will appear between TV and Gateway.
- 4 If you are not using a router, consult your Internet service provider for service.

### Check the router or consult your Internet service provider.

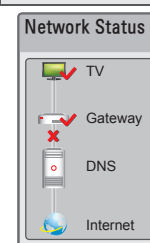

#### When an X appears between Gateway and DNS.

- 1 Check the router/cable modem.
  - Unplug the router/cable modem, then plug it back in after 5 seconds.
  - Press the Reset button on the router/cable modem.
- 2 If you are not using a router, consult your Internet service provider.

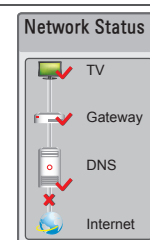

#### When an X appears between DNS and Internet.

- 1 Unplug the router/cable modem, then plug it back in after 5 seconds.
- 2 Press the Reset button on the router/cable modem.
- 3 Check that the MAC address of the TV/router is registered with your Internet service provider. (The MAC address displayed on the right pane of the network status window should be registered with your Internet service provider.)
- 4 Check the router manufacturer's website to make sure your router has the latest firmware version installed.

## SmartShare PC SW Installing & Setting


Install the **SmartShare PC SW(DLNA)** programme on your PC.

- 1 Go to **www.lg.com**. Then, select your region.
- 2 Select **Support**. Then, Search for your model.
- 3 Select **Drivers & Software** or **Software Update**. Then, select **SmartShare PC SW(DLNA)**.
- 4 You can run the programme when installation is complete.


### NOTE

- DLNA service is available if TV and other devices are connected via a single router.

## DLNA Connection to PC

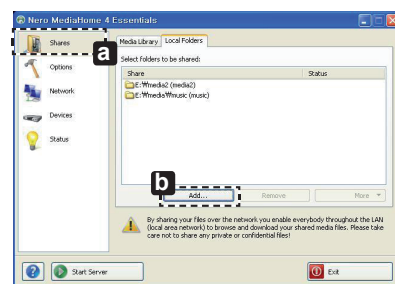


- 1 Start Nero Media Home 4 and enable shared folders on your PC.
  - » **a** : Click the Share button.
  - » **b** : Click the Add button and select the desired folder.

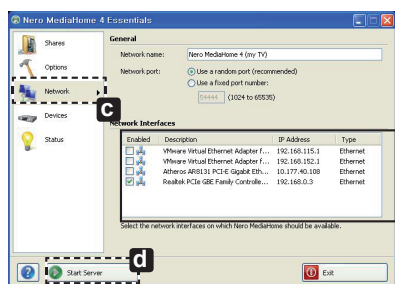

- 2 Make sure that the PC network device is selected.

Enabled	Description	IP Address	Type
<input type="checkbox"/>	VMware Virtual Ethernet Adapter f...	192.168.115.1	Ethernet
<input type="checkbox"/>	VMware Virtual Ethernet Adapter f...	192.168.152.1	Ethernet
<input type="checkbox"/>	Atheros AR8131 PCI-E Gigabit Eth...	10.177.40.108	Ethernet
<input checked="" type="checkbox"/>	Realtek PCIe GBE Family Controlle...	192.168.0.3	Ethernet


- » **c** : Click the Network button and check that the correct PC network device is selected. (At least one network device must be selected.)
- » **d** : Click the Start Server button.

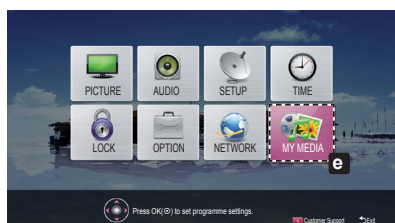

- 3 You can view and enjoy shared content by using the TV's **MY MEDIA**(**f**) function.
  - » **f** : Select the DLNA Device on the TV's **MY MEDIA** to enjoy content from your PC.

## Updating the TV Firmware

**SETTINGS** → **Customer Support (a)** → **Software Update**

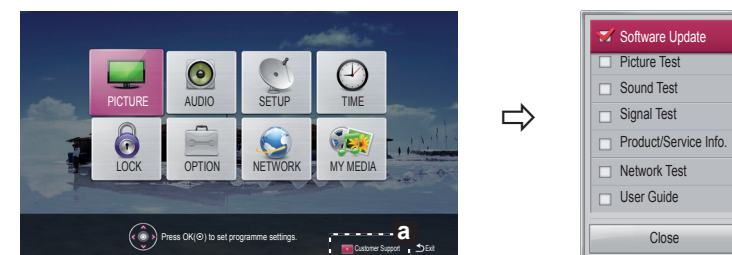

Uses Software Update to check and obtain the latest version. If not updated, certain functions may not work properly. It is also possible to check manually for available updates.

<b>Software Update</b>	Set it to <b>On</b> . When an updated file is detected, the file is downloaded automatically. When the file download is complete, the software update window appears.
<b>Check Update Version</b>	Checks the latest update version installed. When a new update is available, the download process can be performed manually.

### NOTE

- The latest version can be obtained via the digital broadcast signal or an internet connection.
- Changing the programme while downloading the software via a digital broadcast signal interrupts the download process. Returning to the initial programme allows downloading to resume.
- If software is not updated, certain functions may not work properly.