

Printing specification

	Drawn	Checked	Approved
Signature	Sanghee.park	Mira.woo	Jongok.kim
MMM/DD/YYYY	Jan/06/2014	Jan/06/2014	Jan/06/2014

1. Model Description

Model name	:	Netcast 4.5	Brand name	:	LG	Part number	:	MBM64101611
2nd, 3rd Suffix	:	AU	Product name	:	QSG card	(Revision number)	:	(1505-REV03)











2. Printing Specification

1. Trim size (Format)		
• Unfolded size		: 444 mm x 210 mm
• Folded size		: 148 mm x 210 mm
2. Printing colors		: 1 Color (Black)
3. Stock (Paper)		: Uncoated, wood-free paper 150 g/㎡
4. Bindery		: One sheet (2 Folded)
5. Language		: ENG (1)
6. Number of pages		: 2
NOTE	“This part contains Eco-hazardous substances (Pb, Cd, Hg, Cr6+, PBB, PBDE, etc.) within LG standard level,	
	Details should be followed Eco-SCM management standard[LG(56)-A-2524].	
	Especially, Part should be followed and controlled the following specification.	
	(1) Eco-hazardous substances test report should be submitted when Part certification test and First Mass Production.	
	(2) Especially, Don’t use or contain lead(Pb) and cadmium(Cd) in ink.	

3. Origin Notification

 
LGEAK	:	Printed in Kazakhstan	LGEKR	:	Printed in Korea	LGERS	:	Printed in Mexico
LGEAZ	:	Printed in Brazil	LGEMA	:	Printed in Poland	LGESY	:	Printed in China
LGEEG	:	Printed in Egypt	LGEMX	:	Printed in Mexico	LGETH	:	Printed in Thailand
LGEIL	:	Printed in India	LGEND	:	Printed in China	LGEVN	:	Printed in Vietnam Made by LG Electronics (Only TW Suffix)
LGEIN	:	Printed in Indonesia	LGERA	:	Printed in Russia	LGEWR	:	Printed in Poland
LGEAS	:	Printed in Algeria						

4. Changes



				
				
				
				
				
				
				
	May/06/2015	SANG HEE PARK	EKLF500189	Changed the LG logo image
	Apr/11/2015	SANG HEE PARK	EKLF201259	Changed the LG logo image
	Jun/12/2014	SANG HEE PARK	EKLE600644	Added the barcode
Rev. Number	MMM/DD/YYYY	Signature	ECO Number	Change Contents

Pagination sheet


Front

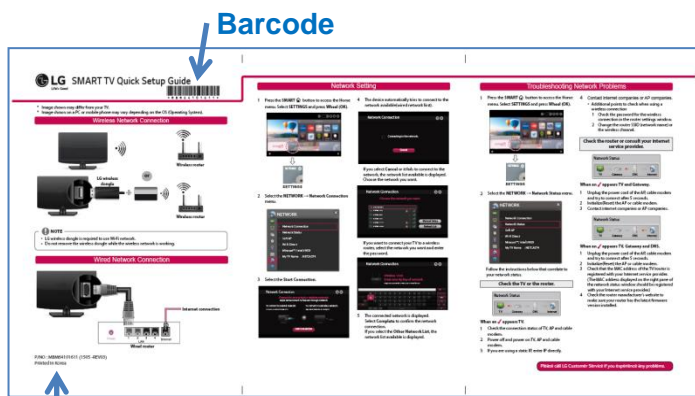


Back

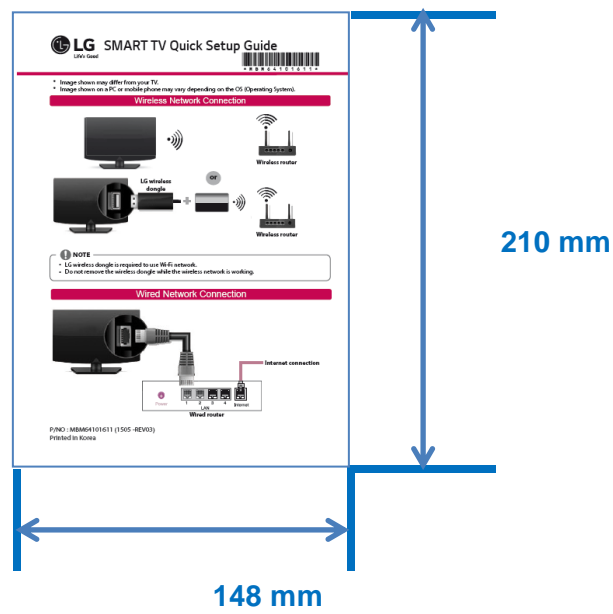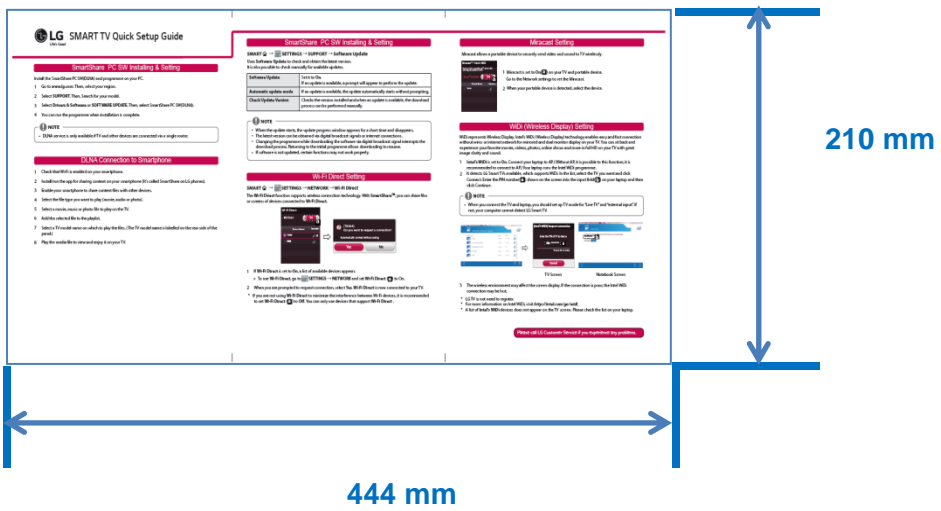 

Back

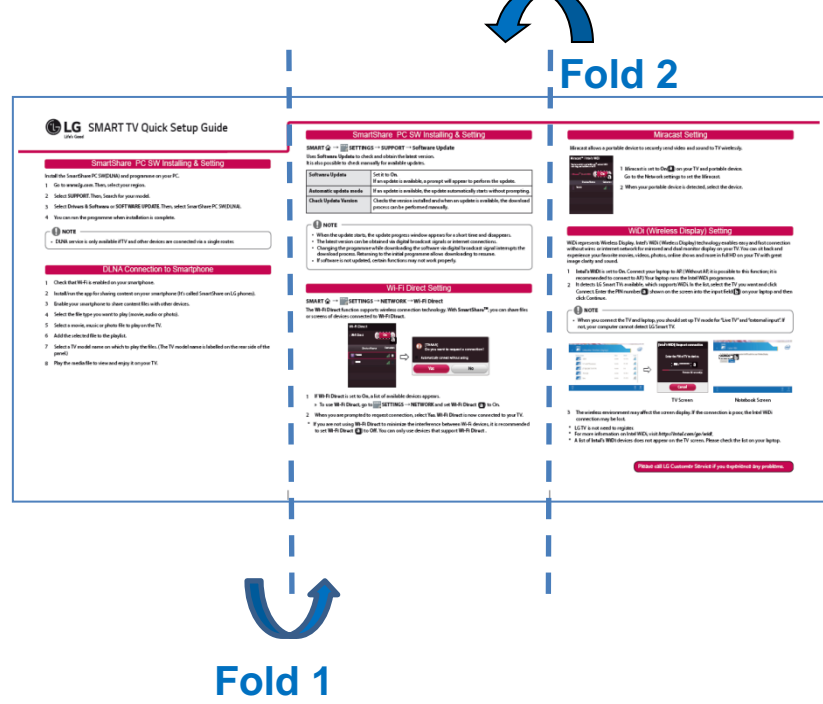 


Front

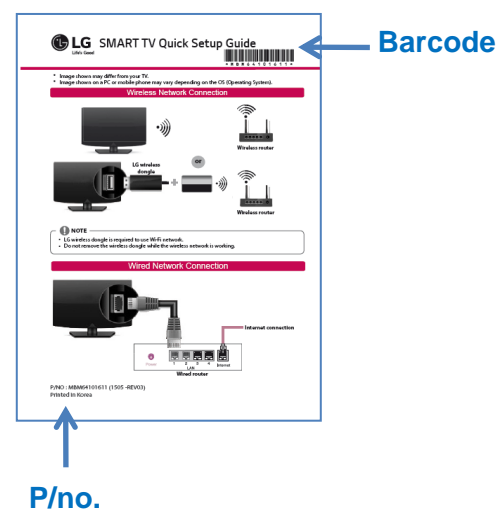




- * Image shown may differ from your TV.
- * Image shown on a PC or mobile phone may vary depending on the OS (Operating System).

Wireless Network Connection

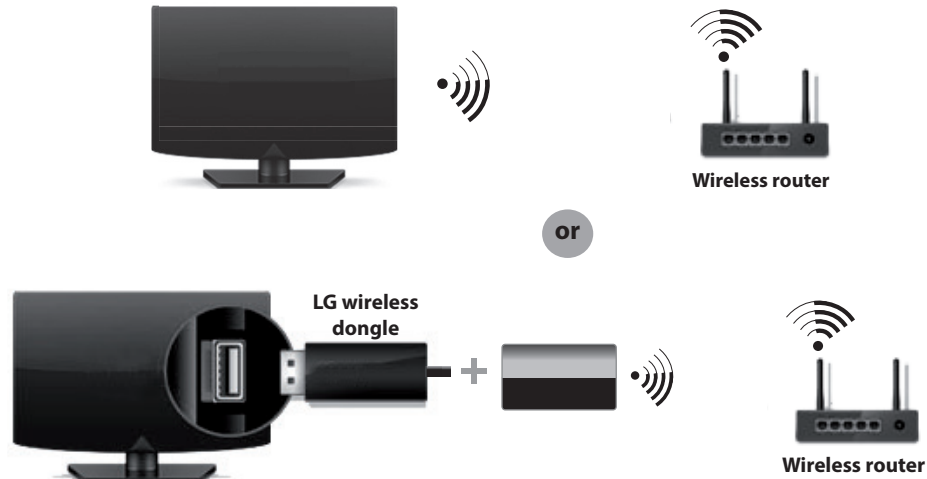

- NOTE**
- LG wireless dongle is required to use Wi-Fi network.
 - Do not remove the wireless dongle while the wireless network is working.



Wired Network Connection

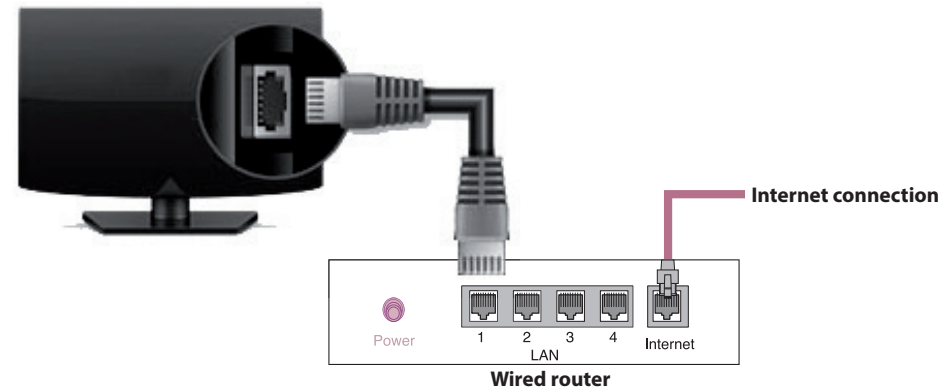


Network Setting

Premium Apps are pre-installed on the TV. These may vary by country.

- 1 Press the **SMART** button to access the Home menu. Select **SETTINGS** and press **Wheel (OK)**.

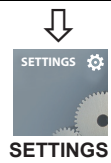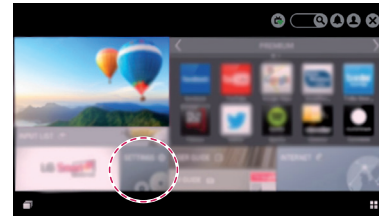

 
- 2 Select the **NETWORK** → **Network Connection** menu.

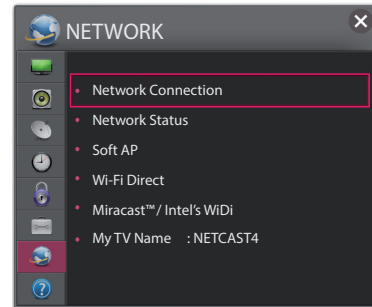


- 3 Select the **Start Connection**.




- 4 The device automatically tries to connect to the network available(wired network first).

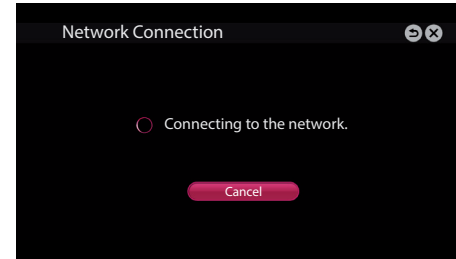

 
If you select **Cancel** or it fails to connect to the network, the network list available is displayed. Choose the network you want.

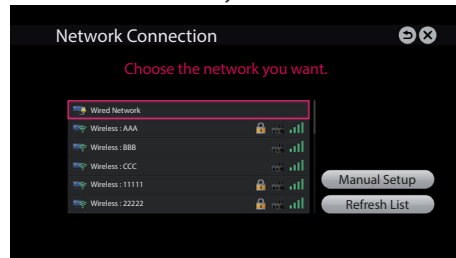

 If you want to connect your TV to a wireless router, select the network you want and enter the password.


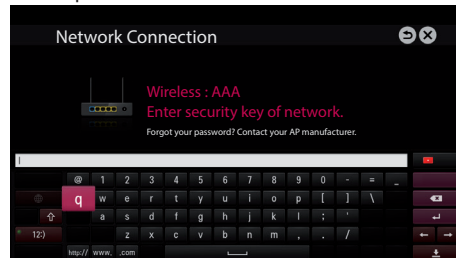


 - 5 The connected network is displayed. Select **Complete** to confirm the network connection. If you select the **Other Network List**, the network list available is displayed.

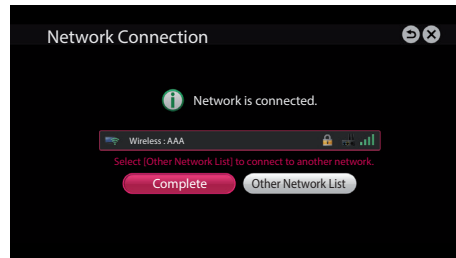


Troubleshooting Network Problems

- 1 Press the **SMART** button to access the Home menu. Select **SETTINGS** and press **Wheel (OK)**.

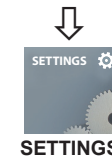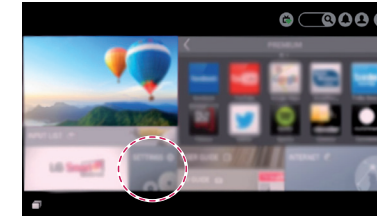


 - 2 Select the **NETWORK** → **Network Status** menu.

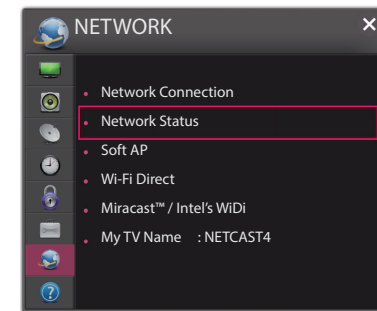

Follow the instructions below that correlate to your network status.

Check the TV or the router.

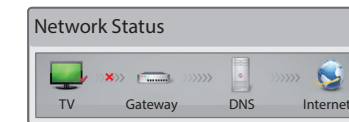

When an **✓** appears TV.

- 1 Check the connection status of TV, AP and cable modem.
- 2 Power off and power on TV, AP and cable modem.
- 3 If you are using a static IP, enter IP directly.


- 4 Contact internet companies or AP companies.
 - Additional points to check when using a wireless connection
 - 1 Check the password for the wireless connection in the router settings window.
 - 2 Change the router SSID (network name) or the wireless channel.

Check the router or consult your Internet service provider.



When an **✓** appears TV and Gateway.

- 1 Unplug the power cord of the AP, cable modem and try to connect after 5 seconds.
- 2 Initialize(Reset) the AP or cable modem.
- 3 Contact internet companies or AP companies.

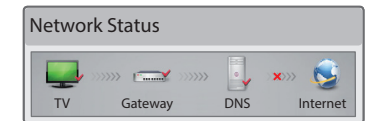

When an **✓** appears TV, Gateway and DNS.

- 1 Unplug the power cord of the AP, cable modem and try to connect after 5 seconds.
- 2 Initialize(Reset) the AP or cable modem.
- 3 Check that the MAC address of the TV/router is registered with your Internet service provider. (The MAC address displayed on the right pane of the network status window should be registered with your Internet service provider.)
- 4 Check the router manufacturer's website to make sure your router has the latest firmware version installed.

Please call LG Customer Service if you experience any problems.

SmartShare PC SW Installing & Setting

Install the SmartShare PC SW(DLNA) and programme on your PC.

- 1 Go to **www.lg.com**. Then, select your region.
- 2 Select **SUPPORT**. Then, Search for your model.
- 3 Select **Drivers & Software** or **SOFTWARE UPDATE**. Then, select SmartShare PC SW(DLNA).
- 4 You can run the programme when installation is complete.




NOTE

- DLNA service is only available if TV and other devices are connected via a single router.

DLNA Connection to Smartphone

- 1 Check that Wi-Fi is enabled on your smartphone.
- 2 Install/run the app for sharing content on your smartphone (It's called SmartShare on LG phones).
- 3 Enable your smartphone to share content files with other devices.
- 4 Select the file type you want to play (movie, audio or photo).
- 5 Select a movie, music or photo file to play on the TV.
- 6 Add the selected file to the playlist.
- 7 Select a TV model name on which to play the files. (The TV model name is labelled on the rear side of the panel.)
- 8 Play the media file to view and enjoy it on your TV.

SmartShare PC SW Installing & Setting

SMART  → **SETTINGS** → **SUPPORT** → **Software Update**

Uses **Software Update** to check and obtain the latest version.
It is also possible to check manually for available updates.

Software Update	Set it to On . If an update is available, a prompt will appear to perform the update.
Automatic update mode	If an update is available, the update automatically starts without prompting.
Check Update Version	Checks the version installed and when an update is available, the download process can be performed manually.



 
NOTE

- When the update starts, the update progress window appears for a short time and disappears.
- The latest version can be obtained via digital broadcast signals or internet connections.
- Changing the programme while downloading the software via digital broadcast signal interrupts the download process. Returning to the initial programme allows downloading to resume.
- If software is not updated, certain functions may not work properly.

Wi-Fi Direct Setting

SMART  → **SETTINGS** → **NETWORK** → **Wi-Fi Direct**


The **Wi-Fi Direct** function supports wireless connection technology. With **SmartShare™**, you can share files or screens of devices connected to **Wi-Fi Direct**.

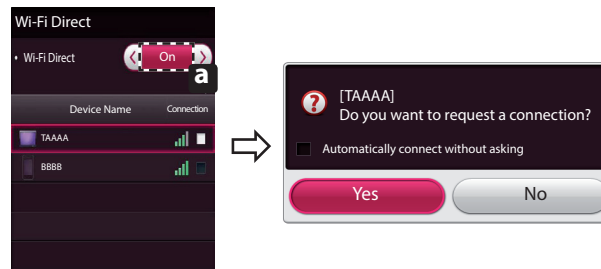

- 1 If **Wi-Fi Direct** is set to **On**, a list of available devices appears.
» To use **Wi-Fi Direct**, go to **SETTINGS** → **NETWORK** and set **Wi-Fi Direct (a)** to **On**.
 - 2 When you are prompted to request connection, select **Yes**. **Wi-Fi Direct** is now connected to your TV.
- * If you are not using **Wi-Fi Direct** to minimize the interference between Wi-Fi devices, it is recommended to set **Wi-Fi Direct (a)** to **Off**. You can only use devices that support **Wi-Fi Direct**.

Miracast Setting

Miracast allows a portable device to securely send video and sound to TV wirelessly.

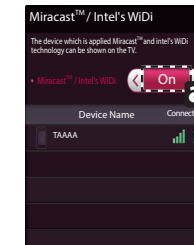

- 1 Miracast is set to **On(a)** on your TV and portable device.
Go to the Network settings to set the Miracast.
- 2 When your portable device is detected, select the device.

WiDi (Wireless Display) Setting


WiDi represents Wireless Display. Intel's WiDi (Wireless Display) technology enables easy and fast connection without wires or internet network for mirrored and dual monitor display on your TV. You can sit back and experience your favorite movies, videos, photos, online shows and more in full HD on your TV with great image clarity and sound.

- 1 **Intel's WiDi** is set to **On**. Connect your laptop to AP. (Without AP, it is possible to this function; it is recommended to connect to AP.) Your laptop runs the Intel WiDi programme.
- 2 It detects LG Smart TVs available, which supports WiDi. In the list, select the TV you want and click Connect. Enter the PIN number **(a)** shown on the screen into the input field **(b)** on your laptop and then click Continue.



NOTE

- When you connect the TV and laptop, you should set up TV mode for "Live TV" and "external input". If not, your computer cannot detect LG Smart TV.

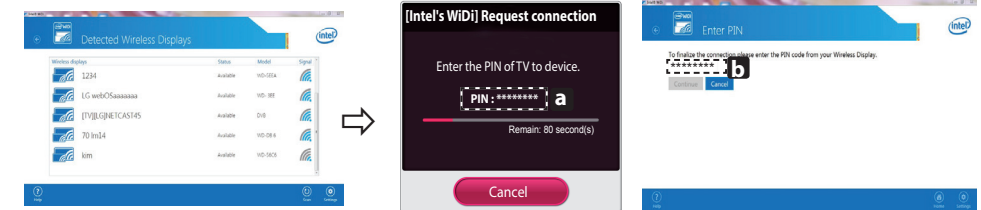

TV Screen

Notebook Screen

- 3 The wireless environment may affect the screen display. If the connection is poor, the Intel WiDi connection may be lost.
- * LG TV is not need to register.
* For more information on Intel WiDi, visit <http://intel.com/go/widi>.
* A list of **Intel's WiDi** devices does not appear on the TV screen. Please check the list on your laptop.

Please call LG Customer Service if you experience any problems.