
3D Blu-ray™ / DVD Home Theater System

BH6240S, BH6340H, BH6440P, BH6540T

ENGLISH | SIMPLE MANUAL


An extended Owner's Manual that contains information on the advanced features is located on the CD-ROM provided in an electronic version. To read these files, you will need to use a Personal Computer (PC) equipped with a CD-ROM drive.

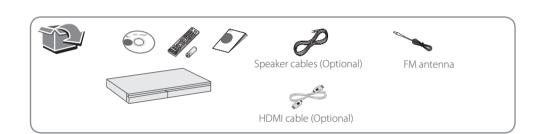


www.lg.com




TV Connection (HDMI OUT)

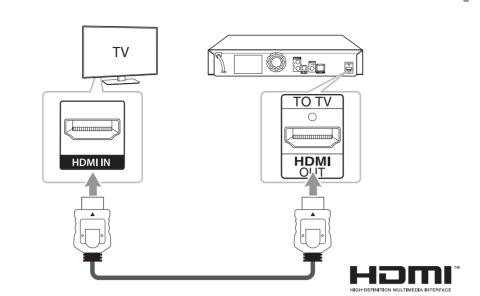

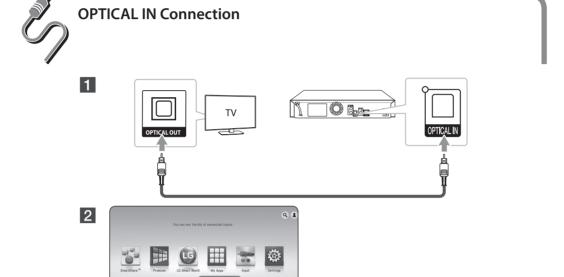




Wired Network Connection

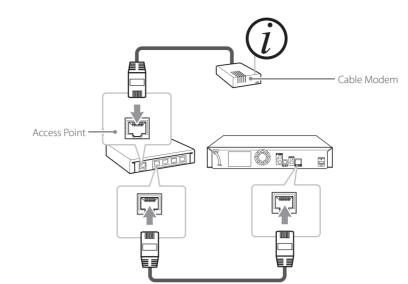



Speaker Connection

Speaker design and connection method may be different according to models.

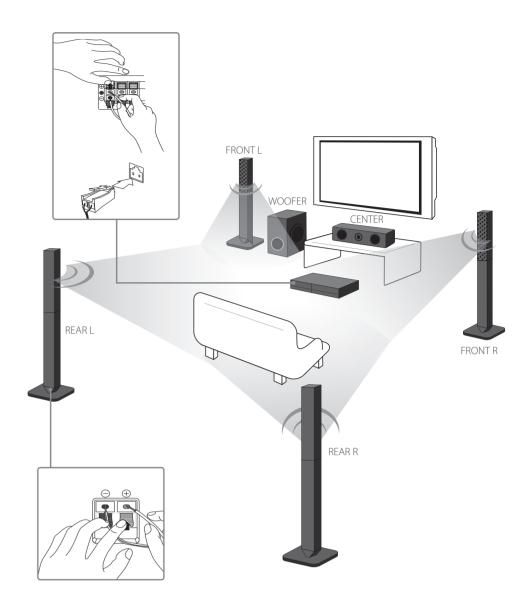



Initial Setup



^/V/</>>

Follow the directions for the initial setup displayed on the




Start the speaker test.



Stop the speaker test and select [Next].



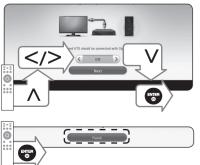


Setup [TV Sound Connecting] and select [Next].



Using HOME menu

\/\/</>

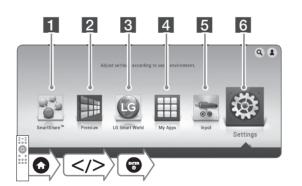

Displays SmartShare menu.



Displays LG Apps titles provided to the unit.



Displays the [My Apps] screen.



Displays the [My Apps] screen.




Changes input mode.



Adjusts the system settings.



Disc, Data Playback

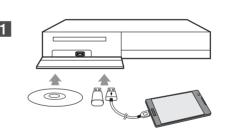

Devices that support MTP.



Displays all linked devices. UP Folder FOLDER SZ FEE SZ. jog FEE SZ. jo THE STATE OF THE S \/\/</> Selects video, photo or audio content. Displays the file or folder on linked device.

For the most Audio CD, BD-ROM and DVD-ROM discs, playback starts automatically.



Network Playback

SmartShare PC software Installation

1 Install SmartShare PC Software.

 


Run the program, and set the share folder you want.





Check the network connection and settings.










Enjoying Private Sound

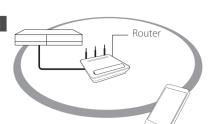

Make sure that your smartphone is connected to the same Wi-Fi network as this player.

Turn on the mobile device LG AV Remote app is Installed and run LG AV Remote.



Not all modes support private sound and pairing multiple devices is not available.

Software Update











Additional Information

Customer Support

You can update the Player using the latest software to enhance the products operation and/or add new features. To obtain the latest software for this player (if updates have been made), proceed the software updates as above or visit http://www.lg.com or contact LG Electronics customer

Open source software notice

To obtain the corresponding source code under GPL, LGPL and other open source licenses, please visit http:// opensource.lge.com. All referred license terms, warranty disclaimers and copyright notices are available to download with the source code.



Specification

ENGLISH Power requirements Refer to main label. Power consumption Refer to main label. Dimensions Approx. 360 mm x 60.5 mm x 299 $(W \times H \times D)$ Net Weight 2.7 kg (Approx.) Bus Power Supply 5 V === 500 mA

Design and specifications are subject to change without



Some of the content in this manual may differ from your player depending on the software of the player or your service provider.



 


 












































This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's nclosure that may be of sufficient magnitude to onstitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation

CAUTION concerning the Power Cord

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily

accessible. **CAUTION:** The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall

be placed on the apparatus. This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the

equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.



Memo