



LG

Life's Good

ENGLISH

General Inquiries

<LG Customer Information Centre>

0844-847-5847 or +44-844-847-5847

* Make sure the number is correct before making a call.

Quick start guide

LG-E430

MBM63956902 (1.1)

www.lg.com



CE0168



ENGLISH

Quick start guide

LG-E430

To download the latest full version of the user guide, go to www.lg.com on your PC or laptop.

 
Index

Overview	1	Google account.....	11	Connect your phone with your computer	17
Setup	2	E-mail.....	12	Guidelines for safe and efficient use	19
Home screen.....	5	Downloading applications.....	13		
Unlock screen	7	Internet/Maps	14		
Notification screen	8	Camera	15		
Call/Messaging	9	Video camera	15		
Contacts	10	QuickMemo function	16		

NOTE:

- Screen displays and illustrations may differ from those you see on actual phone.
- Some of the contents in this guide may differ from your phone depending on the software of the phone or your service provider. All information in this document is subject to change without notice.
- Always use genuine LG accessories. Failure to do this may void your warranty.
- Available accessories may vary depending on your region, country or service provider.
- Some features and service may vary by region, phone, service provider and software version.

Overview

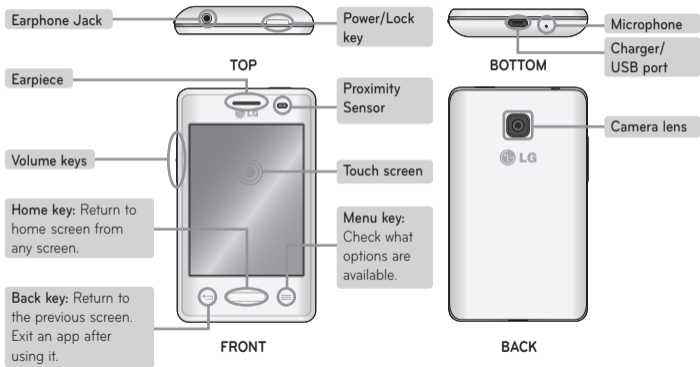

Setup

Before you start using the phone, you need to insert the SIM card and battery.

Installing the SIM card and battery



1. Remove the battery cover.



2. Make sure the gold contact area on the card is facing downwards.
3. Insert the battery.
4. Insert the battery cover.

Setup

To store multimedia files, such as pictures taken using a built-in camera to SD card, you must insert a memory card into your phone.


Installing the memory card



1. Turn the phone off before inserting or removing the memory card. Remove the battery cover.



2. Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

⚠ WARNING! Do not insert or remove the memory card when the phone is turned on. Otherwise the memory card, as well as your phone, may become damaged and the data stored on the memory card may get corrupted. To remove the memory card safely, touch  > **Apps** tab > **Settings** > **Storage** from the DEVICE > **Unmount SD card** > **OK**.

Setup

When you first turn on the phone, you will be guided through a series of essential steps to configure the phone settings.

Turning on the phone



Press and hold the **Power/Lock** key for a couple of seconds.

TIP! If the phone is locked and does not work, press and hold the Power/Lock key for 10 seconds to turn it off.

Charging the phone



- The charging port is at the bottom of the phone.
- Insert one end of the charging cable into the phone and plug the other end into an electrical socket.
- To maximize the battery lifetime, ensure that the battery is fully charged before you use it for the first time.


⚠ WARNING! Use only LG-approved chargers, batteries, and cables. When using unapproved chargers or cables, it may cause battery charging slowly or pop up the message regarding slow charging. Or, unapproved chargers or cables can cause the battery to explode or damage the device, which are not covered by the warranty.

Home screen

You can customize each screen by adding widgets or shortcuts of your favourite applications.



Adding icons to the Home screen

- 1 Swipe your finger right or left to move through the screens. Stop when you get to a screen that you want to add items to.
- 2 Touch  and *Apps, Downloads, Widgets options. Plus, touch and hold an empty area on Home screen to select * Wallpapers.



*

Apps: Add applications that are updated dynamically

Downloads: Add direct links to downloaded applications

Widgets: Add widgets to organize your contacts/shortcuts

Wallpapers: Change the wallpaper on the current Home screen


TIP! Touch and hold the application you want to add to the Home screen, by selecting it from . To delete an application, touch and hold it, then drag it to the  icon.

Home screen



Customizing the Application design from Home screen

According to your preference you can further edit application icons on the Home screen.

 
- 1 Tap and hold an application to customize for a while, then the editing icon  appears at the upper right side of the application icon.
- 2 Tap the editing icon and select the desired icon design.

NOTE:

- Do not to press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to tap the option you want or to make a memo on a screen. Do not use your fingernail.

Unlock screen


After a period of inactivity, to conserve the battery, the screen you are currently viewing will be replaced by the lock screen.

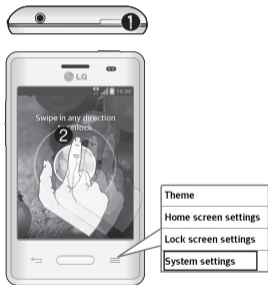


Unlocking the screen

- 1 Press the **Power/Lock**  key.
- 2 Swipe the screen to any direction to unlock it.

Setting up the screen timeout period

1. Touch  > **System settings**.
2. Select **Display** > **Screen timeout**.
3. Select the period of time you want from screen timeout option.

NOTE: To lock your screen using the pattern lock feature, touch  > **System settings** > **Lock screen** > **Select screen lock** > **Pattern**. A short tutorial will guide you through the process of setting a pattern lock.

Notification screen



On this screen, you can view and manage Sound, Wi-Fi, Bluetooth etc. The notification drawer runs across the top of the screen.



Turning features on/off

1. Touch and slide the status bar downwards.
2. Touch the icons to turn the corresponding features on/off.

To view further notification setting



Touch **Edit**  > , and select items to be displayed on the notification drawer.

TIP! To preserve battery life, turn off Wi-Fi, Bluetooth and GPS when you are not using them.





Call/Messaging

Making a call


1. Touch .
2. Dial the number you want to call or start typing the name of the contact by touching .

NOTE: To answer an incoming call in locked screen, hold and slide  icon towards any direction. When the screen is unlocked, you just need to touch the  icon to answer.


Sending a message


1. Touch  > .
2. In the **To** field, enter a number or touch  to select a number from **Call logs**, **Contacts**, **Favourites** or **Groups**.
3. Enter your message. Touch  to attach a file.
4. Touch **Send** to send the message.

Contacts

You can automatically synchronise the contacts on the phone with any of your online address books, or even import contacts from another SIM/SD card. To importing/exporting contacts, touch  > **Import/Export**.

Creating a new contact



1. To create a new contact, touch  and enter the contact's information.
2. Touch **Add another field** to see more categories.
3. Touch **Save** to save the contact.

NOTE: To add a number from a recent call to your contacts, locate the number in your call log, touch the number. Touch  > **Create new contact** to create a new contact entry, or touch existing contacts to add a new number to existing contacts.

Google account

The first time you open the Google application, you need to sign in. If you do not have a Google account, you will be prompted to create one.

Creating a Google account



1. Touch  > .
2. Touch **New** to start the Gmail setup wizard.
3. You then need to follow the setup instructions and enter the necessary information to activate the account. Please wait while the server creates your account.

TIP! Once you have created your Gmail account, you can access Gmail and Google Apps and use Google's many services on the phone.






E-mail

You can stay connected with MS Exchange and other popular email providers.

Setting up an account

1. Touch  > .
2. Select an email provider.
3. Enter your email address and password, then touch **Next**.
4. Follow the remaining instructions.
5. When complete, touch **Done** to view your inbox.

Sending an email

1. Touch  > .
2. Touch  to compose an email. Enter recipient and other relevant information.
3. Enter your text, touch  to attach a file (if needed) and then touch .




TIP! You can set sound and vibration alerts to notify you when you receive a new email.

Downloading applications

Download fun games and useful applications from Play Store.




In home screen

1. Touch  > .
2. Sign in to your Google account.
3. Touch a category to browse selections, or touch  to search for an item.
4. Touch an app and follow the on-screen installation instructions.
Once the app has been downloaded and installed, you will see a notification in the Status Bar.

Managing applications

 
Touch  >  > **Apps**.

You cannot uninstall the pre-installed applications.






TIP! Launch the downloaded application from the  icon > **Downloads** tab.

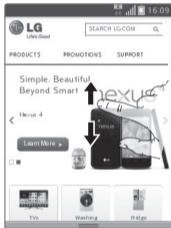Internet/Maps

Use the Web browser to surf the Net with ease. Use Maps during a journey to pinpoint your location and check for traffic updates on route.



Browsing the Web

1. Touch  > .
2. Touch the web address bar and enter an address, and then touch **Go**.
3. Scroll to navigate and touch links to open them. Touch the Menu key  to access additional settings.
4. To open a new browser tab, touch  > .

Setting up Maps

 
1. Touch  > .
2. Set up the connection to Wi-Fi or mobile data connection with GPS.

TIP! Use your index finger and thumb in a pinching or spreading motion to zoom in or out when using the Web browser, map or pictures.

Camera



Video camera

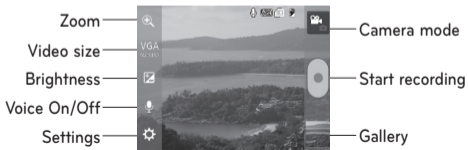



QuickMemo function




The **QuickMemo function** allows you to create memos and capture screen shots. Capture screens, draw on them, and share them with family and friends with QuickMemo function.



OR



1. Enter the **QuickMemo function** screen by pressing both the Volume up and down keys for one second on the screen you want to capture. Or touch and slide the status bar downwards and touch .
2. Select the desired menu option from **Pen type**, **Colour**, **Eraser** and create a memo.
3. Touch  in the Edit menu to save the memo with the current screen. To exit QuickMemo function at any time, touch the Back key.

TIP! Touch  to keep the current memo on the screen and use the phone continuously. Tap  to select whether to use the background screen. Tap  to share the memo with others via any of the available applications.

Connect your phone with your computer

By connecting your phone to a PC, you can transfer data directly by using PC software program (LG PC Suite).

Sync your phone with your computer

To synchronize your phone with your PC using the USB cable, you need to install PC software (LG PC Suite) onto your PC. Download the program from the LG website (www.lg.com).

 
1. Use the USB data cable to connect your phone to the PC.
2. **USB connection type** list will appear, and select **LG software**.
3. Run the LG PC Suite program from your PC.
Refer to the PC software (LG PC Suite) help for more information.

Connect your phone with your computer

Transferring music, photos and videos using Media sync (MTP)



1. Connect the phone to your PC using the USB cable.

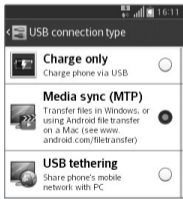

2. Select **Media sync (MTP)** option.

3. Your phone will appear as another hard drive on your computer. Click on the drive to view it. Copy the files from your PC to the drive folder.

4. When you're finished transferring files, slide down the Status bar and touch **USB connected > Charge only**. You may now safely unplug your device.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Should a fault occur, a software tool is built into your device that will gather a fault log. This tool gathers only data specific to the fault, such as signal strength, cell ID position in sudden call drop and applications loaded. The log is used only to help determine the cause of the fault. These logs are encrypted and can only be accessed by an authorized LG Repair centre should you need to return your device for repair.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model LG-E430 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used

Guidelines for safe and efficient use

- frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
 - The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
 - The highest SAR value for this model phone tested for use at the ear is 0.998 W/kg (10g) and when worn on the body is 0.515 W/Kg (10g).
 - This device meets RF exposure guidelines when used either in the normal use

position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Product care and maintenance



WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage

Guidelines for safe and efficient use

- your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns.

Therefore, use care when handling your phone during or immediately after operation.

- If your phone gets wet, immediately unplug it to dry off completely. Do not attempt to accelerate the drying process with an external heating source, such as an oven, microwave or hair dryer.
- The liquid in your wet phone, changes the color of the product label inside your phone. Damage to your device as a result of exposure to liquid is not covered under your warranty.

Efficient phone operation

Electronics devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs etc.
- Use your phone in temperatures between 0°C and 40°C, if possible. Exposing

Guidelines for safe and efficient use

your phone to extremely low or high temperatures may result in damage, malfunction, or even explosion.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car

stereos and safety equipment.

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove it. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in

Guidelines for safe and efficient use

progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before

boarding any aircraft.

- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.

Guidelines for safe and efficient use

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

HOW TO UPDATE YOUR SMARTPHONE

Access to latest firmware releases, new software functions and improvements.

- **Update your smartphone without a PC.** Select **Software Update**.
- **Update your smartphone by connecting it to your PC.** For more information about using this function, please visit <http://www.lg.com/common/index.jsp> select country and language.

DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-E430** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>

Notice: Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>

All referred licence terms, disclaimers and notices are available for download with the source code.

Contact office for compliance of this product :

LG Electronics Inc.

EU Representative, Krijgsman 1,

1186 DM Amstelveen, The Netherlands

 **WARNING**

While in the speaker phone mode (Handsfree mode) the speaker sound might be high, and so to avoid damage to your hearing, do not close the handset to your ear while using speaker phone mode.



Disposal of your old appliance

- 1 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 2 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 3 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



Disposal of waste batteries/accumulators

- 1 This symbol may be combined with chemical symbols for mercury (Hg), cadmium (Cd) or lead (Pb) if the battery contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
- 2 All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
- 4 For more detailed information about disposal of your old batteries/accumulators, please contact your city office, waste disposal service or the shop where you purchased the product.