

Guides on Using Product Functions (Windows,Mac)

Please read this manual carefully before operating your set and retain it for future reference.

Guides on Using Product Functions (Windows)

System Requirements for Graphics Cards

Graphics Card			Interface		OS				
			HDMI	DP	Win XP	Win Vista	Win 7	Win 8	Mac
2560 x 1080	Intel	HD3000 or higher	O	O	No constraints				
	AMD	HD54XX/HD64XX/ HD77XX or higher	O	O					
	NVIDIA	GeForce 300 or higher	O	O					

Precautions for Changing Resolution


- Failing to set the graphics card to the recommended (optimal) resolution may result in blurred text, a dimmed screen, a truncated display area, or misalignment of the display.
- The configuration procedure may differ depending on your computer and/or operating system. Also, some graphics cards may not support certain resolutions. If this is the case, contact the manufacturer of the computer or graphics card for assistance.
- Some graphics cards may not support 2560 x 1080 resolution. It is recommended to use a graphics card that supports 2560 x 1080 resolution. Even when you set the resolution to 2560 x 1080 on your PC, the actual PC output may not support the resolution. Press the OK button on the monitor to check the current resolution of your PC. (Shown on the OSD at the top right of the monitor screen.)



CAUTION

- The setting method can vary depending on the computer and the O/S. You may not be able to select certain resolutions depending on the graphics card performance. In such cases, please refer to the user's manual of the computer and/or graphics card.

 [Windows XP]

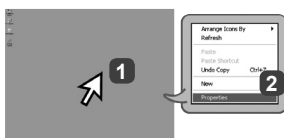


<STEP 1>

- Move the mouse pointer to an empty area on the Windows screen (with no icons or task bars) and click the right mouse button.
- When the pop-up menu appears, click the "Property".



<STEP 2>

 
- Choose the "Settings" menu and select an optimal resolution.(2560 x 1080)
- Click the [Apply] button to complete resolution setting.

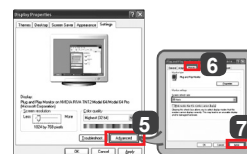

<STEP 3>

- Select the [Advanced] button.
- Select the [Monitor] tab and set the vertical frequency to 60Hz in the "Refresh Rate" column.
- Click the [Apply] button to complete optimal frequency setting.

 [Windows Vista]

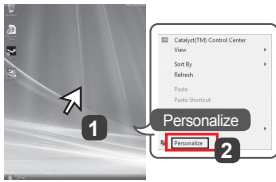


<STEP 1>

- 1** Move the mouse pointer to an empty area on the Windows screen (with no icons or task bars) and click the right mouse button.
- 2** When the pop-up menu appears, click the "Personalize".



<STEP 2>

 
- 3** Choose the "Display Settings" menu and select an optimal resolution.(2560 x 1080)

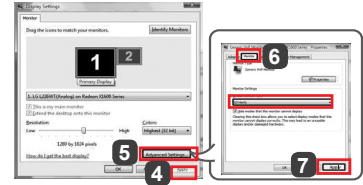

<STEP 3>


- 4** Click the [Apply] button to complete resolution setting.
- 5** Select the [Advanced] button.
- 6** Select the [Monitor] tab and set the vertical frequency to 60 Hz in the "Refresh Rate" column.
- 7** Click the [Apply] button to complete optimal frequency setting.

 [Windows 7,Windows 8]

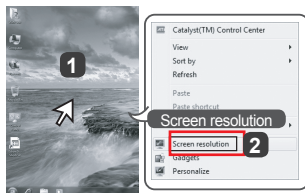

<STEP 1>

 - 1** Move the mouse pointer to an empty area on the Windows screen (with no icons or task bars) and click the right mouse button.
- 2** When the pop-up menu appears, click the "Screen resolution".

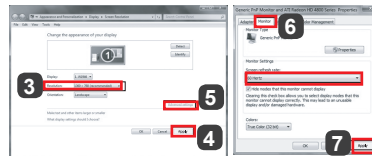

<STEP 2>

- 3** Choose the "Settings" menu and select an optimal resolution.(2560 x 1080)
- 4** Click the [Apply] button to complete resolution setting.

<STEP 3>

- 5** Select the [Advanced] button.
- 6** Select the [Monitor] tab and set the vertical frequency to 60 Hz in the "Refresh Rate" column.
- 7** Click the [Apply] button to complete optimal frequency setting.

Using the Program Guide Function

Press the **GUIDE** button on the remote control.

* Press the "INFO" key in the countries where the **GUIDE** button is not available.



Confirm the channel information.

▲ / ▼ Time ◀ / ▶ Menu change ● All

You can move up or down by using the ▲ and ▼ buttons.

⊙ Using the buttons, you can select the Watch or Remind functions.

● Displays the program guide for all of the channels. * Depending on your country, this function may not be available.

◀ Schedule ▶

You can check the channel information for the current channel or for all channels.

! NOTE

- It is possible to switch channels while operating the information display and, if the channel is changed, the information will then be updated to display the next channel instead.

LG Software Introduction/System Requirements

Software	Installation Priority (required/optional)	Supported Interface		Supported OS					
		DP	HDMI	Win XP	Win Vista	Win 7	Win 8	Mac	Linux
Screen Split	Optional	O	O	O	O(32bit)	O	O	10.7 / 10.8 / 10.9	X
Monitor Driver	Optional	O	O	O	O	O	O	X	X
Auto Resolution	Required	O	O	X	X	O	O	X	X

- Screen Split: Automatically splits the monitor screen into the desired layouts.

- Auto Resolution : Automatically switches to the optimal resolution when the monitor is connected to the PC in PBP mode.

* The software listed above can be installed using the CD provided with the product or downloaded from the LG Electronics website.

*** Graphics card: It is recommended to use a graphics card that supports 2560 x 1080 resolution.**

Driver

- Installation priority (required/optional): Optional

- Usage: The resolution and frequency are adjusted for the monitor.

How to Install

- Installing with the CD provided

: Insert the user manual CD provided in the product box into the PC's CD drive and install the program.

- Downloading from the LG Electronics website

 
: Visit the LG Electronics website (www.lg.com) and download the latest software for your model.

Screen Split (MONITOR Screen Split Software)


- Installation priority (required/optional): Optional
- Usage: Automatically splits the monitor screen into desired layouts (2 sections, 3 sections, or 4 sections).

How to Install

- Installing with the CD provided
: Insert the user manual CD provided in the product box into the PC's CD drive and install the LG Monitor Software.
On the Select Options window, select Screen Split and continue.
- Downloading from the LG Electronics website
: Visit the LG Electronics website (www.lg.com) and download the latest software for your model.

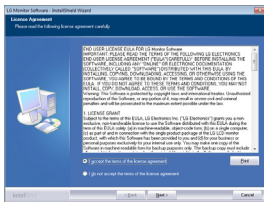

 
Check "I accept the terms of the agreement" on the License Agreement screen and then click on the [Next] button.

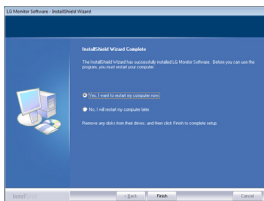

When the installation is complete, restart the system.

How to Run

 
- 1 Double-click on the shortcut icon on the desktop, or
- 2 Click on the tray icon at the bottom right of the PC screen.

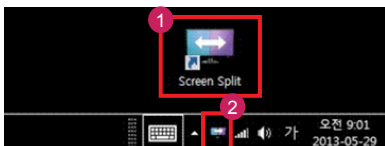


How to Use

* For details on using the software, refer to the program's Help.

 1. Click on the tray icon at the bottom right of the PC screen.



 2. Select a screen layout.

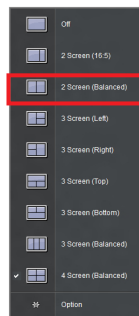

3. The screen split layout is applied.



 
* Image shown may differ from your TV.

Using PIP


- Usage: The input for each device is simultaneously displayed on the monitor screen.
- * If the Main Input is TV, component, AV, or USB then the PIP function is not available.

How to Run

1. Press the **PIP** button on the remote control.

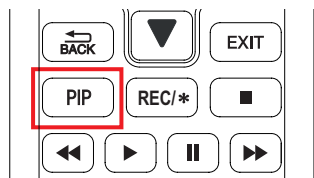

 
2. Select an input to use as the sub screen.

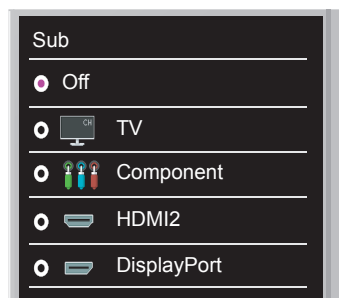

Setting the PIP




 ■ Size: Set the PIP screen size.

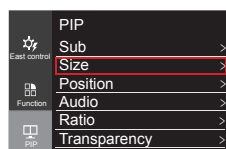


- 1 Press the PIP Settings button on the remote control and then select **"Size."**
- 2 Select the desired size using the arrow keys.

 ■ Position: Set the PIP position.

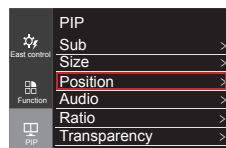


- 1 Press the PIP Settings button on the remote control and then select **"Position."**
 - 2 Select the desired position using the arrow keys and then press the **OK** button.
- * Activate when the size is not PIP Balanced.

 ■ Audio : Select an audio output device.

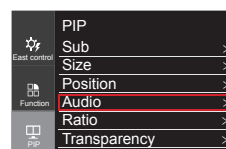


- 1 Press the PIP Settings button on the remote control and then select **"Audio."**
- 2 Select the desired audio input using the arrow keys.

 ■ Ratio: Set the PIP sub screen ratio.

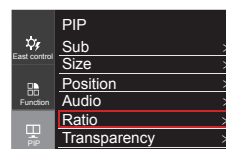

- 1 Press the PIP Settings button on the remote control and then select **"Ratio."**
 - 2 Select the desired ratio using the arrow keys and then press the **OK** button.
- * Activate when the size is PIP Balanced.

 ■ Transparency: Set the transparency of the PIP window.

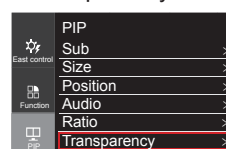

- 1 Press the PIP Settings button on the remote control and then select **"Transparency."**
 - 2 Select the desired transparency using the arrow keys and then press the **OK** button.
- * Activate when the size is not PIP Balanced.

Guides on Using Product Functions (Mac)

System Requirements for Graphics Cards

Graphics Card			Interface		OS				
			HDMI	DP	Win XP	Win Vista	Win 7	Win 8	Mac
2560 x 1080	Intel	HD3000 or higher	O	O	No constraints				
	AMD	HD54XX/HD64XX/HD77XX or higher	O	O					
	NVIDIA	GeForce 300 or higher	O	O					

* For HDMI connections, you may be required to enforce custom settings from the graphics card control panel or update to the latest graphics card driver.

* Support settings are subject to change.

Precautions for Changing Resolution

- Failing to set the graphics card to the recommended (optimal) resolution may result in blurred text, a dimmed screen, a truncated display area, or misalignment of the display.
- The configuration procedure may differ depending on your computer and/or operating system. Also, some graphics cards may not support certain resolutions. If this is the case, contact the manufacturer of the computer or graphics card for assistance.
- Some graphics cards may not support 2560 x 1080 resolution. It is recommended to use a graphics card that supports 2560 x 1080 resolution. Even when you set the resolution to 2560 x 1080 on your PC, the actual PC output may not support the resolution. Press the OK button on the monitor to check the current resolution of your PC. (Shown on the OSD at the top right of the monitor screen.)

[Mac]

<Step 1>

- On the Doc bar, click on the System Preferences icon.

 


- When the System Preferences window opens, select "Display."




<Step 3>

- In the Display tab, select Best for display. The display is now set to the recommended resolution (2560 x 1080).

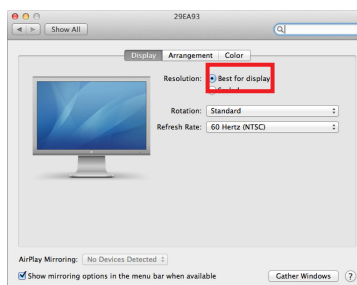

<Step 2>

 - Select Scaled and select a desired resolution and a refresh rate. Settings are now complete.

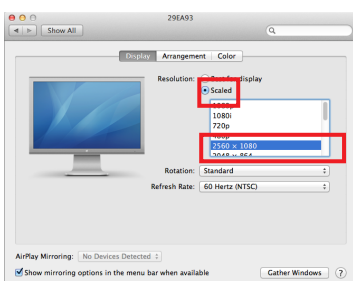

Using the Program Guide Function

Press the **GUIDE** button on the remote control.

* Press the "INFO" key in the countries where the **GUIDE** button is not available.



Confirm the channel information.

▲ / ▼ Time ◀ / ▶ Menu change ● All

You can move up or down by using the ▲ and ▼ buttons.

● Using the buttons, you can select the Watch or Remind functions.

● Displays the program guide for all of the channels. * Depending on your country, this function may not be available.

◀ Schedule ▶

You can check the channel information for the current channel or for all channels.

! NOTE

- It is possible to switch channels while operating the information display and, if the channel is changed, the information will then be updated to display the next channel instead.

LG Software Introduction/System Requirements

Software	Installation Priority (required/ optional)	Supported Interface		Supported OS						
		DP	HDMI	Win XP	Win Vista	Win 7	Win 8	Mac	Linux	
Screen Split	Optional	O	O	O	O(32bit)	O	O	10.7 / 10.8 / 10.9	X	

- Screen Split: Automatically splits the monitor screen into the desired layouts.

* The software listed above can be installed using the CD provided with the product or downloaded from the LG Electronics website.

* Graphics card: It is recommended to use a graphics card that supports 2560 x 1080 resolution.

 
Screen Split (MONITOR Screen Split Software)

- Installation priority (required/optional): Optional
- Usage: Automatically splits the monitor screen into desired layouts (2 sections, 3 sections, or 4 sections).


How to Install

- Installing with the CD provided
 - : Insert the user manual CD provided in the product box into the PC's CD drive and install the Screen Split.
- Downloading from the LG Electronics website
 - : Visit the LG Electronics website (www.lg.com) and download the latest software for your model.


1. When the installation program starts, click on [Continue]. During the installation, you have to accept the license agreement.

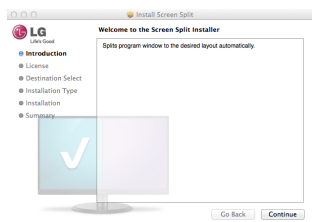

 2. Enter the Super User password and click on [Install Software].

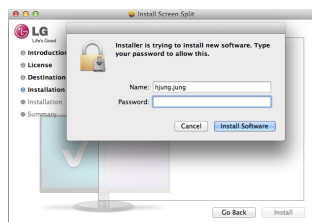

 3. Click on [Close] to finish the installation.

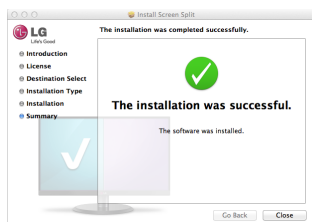

How to Run

- Finder → Applications → Run Screen Split



- Click on the Screen Split icon on the menu bar.



- Search for "Screen Split" in Spotlight search.



 
How to Use

- * For details on using the software, refer to the program's Help.

1. Click on the tray icon at the bottom right of the PC screen.



2. Select a screen layout.

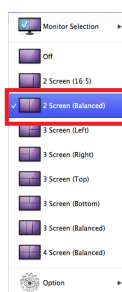

3. The screen split layout is applied.



 
 
- * Image shown may differ from your TV.

Using PIP

- Usage: The input for each device is simultaneously displayed on the monitor screen.
- * If the Main Input is TV, component, AV, or USB then the PIP function is not available.

How to Run


1. Press the **PIP** button on the remote control.
2. Select an input to use as the sub screen.

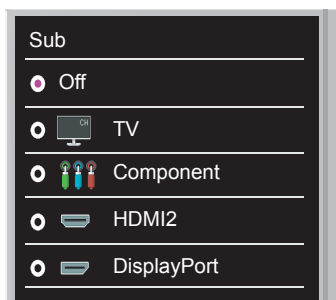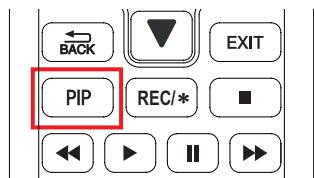

Setting the PIP




 ■ Size: Set the PIP screen size.

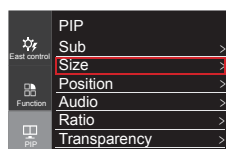


- 1 Press the PIP Settings button on the remote control and then select **"Size."**
- 2 Select the desired size using the arrow keys.

 ■ Position: Set the PIP position.

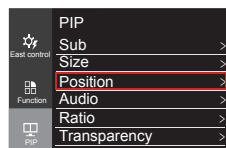


- 1 Press the PIP Settings button on the remote control and then select **"Position."**
 - 2 Select the desired position using the arrow keys and then press the **OK** button.
- * Activate when the size is not PIP Balanced.

 ■ Audio-input: Select an audio output device.

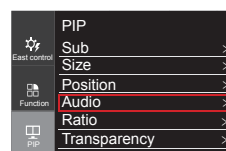


- 1 Press the PIP Settings button on the remote control and then select **"Audio."**
- 2 Select the desired audio input using the arrow keys.

 ■ Ratio: Set the PIP sub screen ratio.

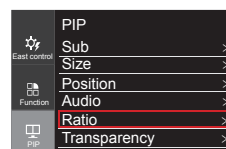

- 1 Press the PIP Settings button on the remote control and then select **"Ratio."**
 - 2 Select the desired ratio using the arrow keys and then press the **OK** button.
- * Activate when the size is PIP Balanced.

 ■ Transparency: Set the transparency of the PIP window.

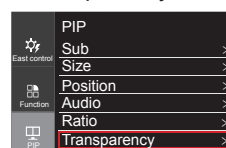

- 1 Press the PIP Settings button on the remote control and then select **"Transparency."**
 - 2 Select the desired transparency using the arrow keys and then press the **OK** button.
- * Activate when the size is not PIP Balanced.





產品功能使用指南 (Windows, Mac)

請於操作產品前仔細閱讀本手冊並將其保留以供未來參考之用。

產品功能使用指南 (Windows)

圖像卡的系統要求

顯示卡			介面		作業系統				
			HDMI	DP	Win XP	Win Vista	Win 7	Win 8	Mac
2560 x 1080	Intel	HD3000 或以上	0	0	沒有限制				
	AMD	HD54XX/HD64XX/HD77XX 或以上	0	0					
	NVIDIA	GeForce 300 或以上	0	0					

變更解像度的注意事項


- 如沒有將顯示卡設定為建議選用（最佳）解像度，可能會導致文字模糊、螢幕偏暗、顯示區域截斷或顯示錯位。
- 配置程序因電腦及 / 或作業系統而可能有所不同。同時，部分顯示卡可能不支援指定解像度。如果出現這個情況，請聯絡電腦或顯示卡的製造商尋找協助。
- 部分顯示卡可能不支援 2560 x 1080 解像度。建議使用支援 2560 x 1080 解像度的顯示卡。即使將電腦解像度設定至 2560 x 1080，實際電腦輸出可能不支援該解像度。按下顯示器上的確定鍵，以檢查電腦目前的解像度。（顯示於顯示器螢幕右上方的 OSD 上。）



注意

- 設定方式因電腦及作業系統而有所不同。視乎顯示卡的性能，您可能無法選取指定解像度。在這些情況下，請參閱電腦及 / 或顯示卡的用戶手冊。

 [Windows XP]

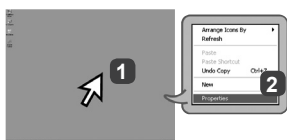


〈步驟 1〉

- 將鼠標移至 Windows 畫面上的空白位置（沒有圖示或工作列），然後點擊右滑鼠鍵。
- 彈出式功能表顯示時，點擊「Property（屬性）」。



〈步驟 2〉

 
- 選擇「Settings（設定）」功能表，然後選取最佳解像度。（2560 x 1080）
- 點擊「Apply（套用）」按鈕以完成解像度設定。

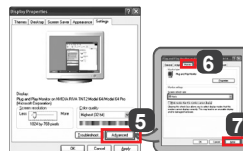

〈步驟 3〉

- 選取「Advanced（進階）」按鈕。
- 選取「Monitor（顯示器）」標籤，在「RefreshRate（重新整理頻率）」欄將垂直頻率設定為 60 Hz。
- 點擊「Apply（套用）」按鈕以完成頻率設定。

 [Windows Vista]

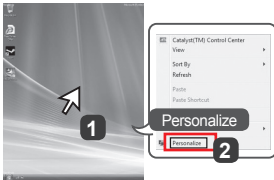

<步驟 1>

- 1 將鼠標移至 Windows 畫面上的空白位置（沒有圖示或工作列），然後點擊右滑鼠鍵。
- 2 彈出式功能表顯示時，點擊「Personalize（個人化）」。



<步驟 2>

 
- 3 選擇「Display Settings（顯示設定）」功能表，然後選取最佳解像度。（2560 x 1080）



<步驟 3>


- 4 點擊 [Apply（套用）] 按鈕以完成解像度設定。
- 5 選取 [Advanced（進階）] 按鈕。
- 6 選取 [Monitor（顯示器）] 標籤，在「Refresh Rate（重新整理頻率）」欄將垂直頻率設定為 60 Hz。
- 7 點擊 [Apply（套用）] 按鈕以完成頻率設定。

[Windows 7, Windows 8]

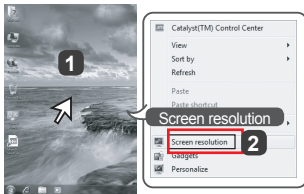

<步驟 1>

 - 1 將鼠標移至 Windows 畫面上的空白位置（沒有圖示或工作列），然後點擊右滑鼠鍵。
- 2 彈出式功能表顯示時，點擊「Screen resolution（螢幕解像度）」。

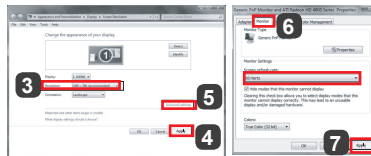

<步驟 2>

- 3 選擇「設定」功能表，然後選取最佳解像度。（2560 x 1080）
- 4 點擊 [Apply（套用）] 按鈕以完成解像度設定。

<步驟 3>

- 5 選取 [Advanced（進階）] 按鈕。
- 6 選取 [Monitor（顯示器）] 標籤，在「Refresh Rate（重新整理頻率）」欄將垂直頻率設定為 60 Hz。
- 7 點擊 [Apply（套用）] 按鈕以完成頻率設定。

使用節目指南功能

ENGLISH

按下遙控器上的 **GUIDE** 按鍵。

* 在「Guide」按鍵無法使用的國家 / 地區，按下「Info」鍵。



確定頻道資訊。

▲ / ▼ 時間 ◀ / ▶ 功能表變更 ● 所有

您可使用 ▲ 及 ▼ 鍵向上或向下移動。

⊙ 使用這些按鍵，您可以選取觀看或提醒功能。

● 顯示所有頻道的節目指南。* 視乎不同國家，這項功能可能無法使用。

◀ 預錄清單 ▶

您可以檢查目前頻道或所有頻道的頻道資訊。

! 注意

- 節目資訊顯示運作時可能會切換頻道。如果頻道變更，節目資訊亦會更新，以顯示下一個頻道。

LG 軟件介紹/系統要求

軟件	安裝優先 (必需/ 選擇性)	支援的介面		支援的 OS					
		DP	HDMI	Win XP	Win Vista	Win 7	Win 8	Mac	Linux
畫面分割	選擇性	0	0	0	0(32bit)	0	0	10.7 / 10.8 / 10.9	X
顯示器驅動器	選擇性	0	0	0	0	0	0	X	X
自動解像度	必需	0	0	X	X	0	0	X	X

- 畫面分割模式：自動將顯示器畫面分割至所需版面。
- 自動解像度：當顯示器在 PBP 模式下連接至電腦時，自動切換至最佳解像度。
- * 上列軟件可以使用產品隨附的 CD 進行安裝，或在 LG Electronics 網站上下載。
- * 圖像卡：建議使用支援 2560 x 1080 解像度的圖像卡。

驅動器

- 安裝優先（必需/選擇性）：選擇性
- 使用：解像度及頻率根據顯示器而作出調整。

安裝方法

- 使用隨附的 CD 安裝
- : 將產品盒隨附的用戶手冊 CD 插入電腦 CD 磁碟機，然後安裝程式。
- 在 LG Electronics 網站上下載
- : 瀏覽 LG Electronics 網站 (www.lg.com) 並下載適合您型號的最新軟件。

畫面分割（顯示器畫面分割軟件）

- 安裝優先（必需/選擇性）：選擇性
- 使用：自動將顯示器畫面分割為所需版面（2 部分、3 部分，或 4 部分）。

 
安裝方法

- 使用隨附的 CD 安裝
- 將產品盒隨附的用戶手冊 CD 插入電腦 CD 磁碟機，然後安裝 LG Monitor Software（LG 顯示器軟件）。
- 在選取選項的視窗中，選取「ScreenSplit（畫面分割）」，然後繼續。

- 在 LG Electronics 網站上下載
- 瀏覽 LG Electronics 網站 (www.lg.com)
- 並下載適合您型號的最新軟件。



在授權合約畫面上勾選「我同意合約上的所有條款」，然而點擊 [Next（下一步）] 按鈕。

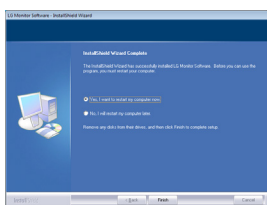


安裝完成後，重新啟動系統。


使用方法

* 有關使用軟件的詳情，請參閱程式的說明。

 1. 點擊電腦螢幕右下方的托盤圖示。



 2. 選取畫面佈置。

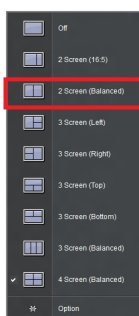


3. 已套用畫面分割佈置。



* 於您電視上顯示的影像可能有異。

執行方法

 - 1 雙點擊桌面上的快捷圖示；或
- 2 點擊電腦螢幕右下方的托盤圖示

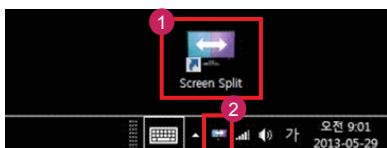


使用 PIP

- 使用：每個裝置的輸入會同時顯示於顯示器畫面上。

* 如果主輸入為 TV，色差，AV，或 USB，PIP 功能將無法使用。

執行方法

 1. 按下遙控器上的 PIP 按鍵。

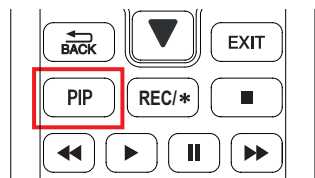


2. 選取用作子畫面的輸入。



設定 PIP



 ■ 大小：設定 PIP 畫面大小。

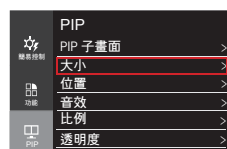

- 1 按下遙控器上的 PIP 設定按鍵，然後選取「大小」。
- 2 使用箭頭鍵選取所需大小。

 
■ 位置：設定 PIP 位置。



- 1 按下遙控器上的 PIP 設定按鍵，然後選取「位置」。
- 2 使用箭頭鍵選取所需位置，然後按下確定  按鍵。

* 大小並非 PIP 平衡時啟動。

■ 音效：選取音效輸出裝置。

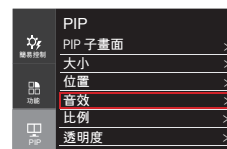

- 1 按下遙控器上的 PIP 設定按鍵，然後選取「音效」。
- 2 使用箭頭鍵選取所需音效輸入。

 
■ 比例：設定 PIP 子畫面比例。



- 1 按下遙控器上的 PIP 設定按鍵，然後選取「比例」。
- 2 使用箭頭鍵選取所需位置，然後按下確定  按鍵。

* 大小為 PIP 平衡時啟動。

■ 透明度：設定 PIP 視窗的透明度。

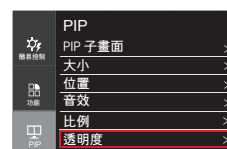

- 1 按下遙控器上的 PIP 設定按鍵，然後選取「透明度」。
- 2 使用箭頭鍵選取所需位置，然後按下確定  按鍵。

* 大小並非 PIP 平衡時啟動。

產品功能使用指南 (Mac)

圖像卡的系統要求

顯示卡			介面		作業系統				
			HDMI	DP	Win XP	Win Vista	Win 7	Win 8	Mac
2560 x 1080	Intel	HD3000 或以上	0	0	沒有限制				
	AMD	HD54XX/HD64XX/ HD77XX或以上	0	0					
	NVIDIA	GeForce 300 或以上	0	0					

* 有關 HDMI 連接，您可能需要於圖像卡控制面板中執行自訂設定，或更新至最新版本的圖像卡驅動器。

* 支援設定可能隨時變更。

變更解像度的注意事項

- 如沒有將顯示卡設定為建議選用（最佳）解像度，可能會導致文字模糊、螢幕偏暗、顯示區域截斷或顯示錯位。
- 配置程序因電腦及 / 或作業系統而可能有所不同。同時，部分顯示卡可能不支援指定解像度。如果出現這個情況，請聯絡電腦或顯示卡的製造商尋找協助。
- 部分顯示卡可能不支援 2560 x 1080 解像度。建議使用支援 2560 x 1080 解像度的顯示卡。即使將電腦解像度設定至 2560 x 1080，實際電腦輸出可能不支援該解像度。按下顯示器上的確定鍵，以檢查電腦目前的解像度。（顯示於顯示器螢幕右上方的 OSD 上。）

[Mac]

〈步驟 1〉

- 在 Dock 列上，點擊 System Preferences（系統偏好設定）圖示。

 


- System Preferences（系統偏好設定）視窗開啟時，選取「Display（顯示）」。




〈步驟 3〉

- 在 Display（顯示）標籤中，選取 Best for display（最佳顯示效果）。顯示現已設定至建議選用解像度（2560 x 1080）。

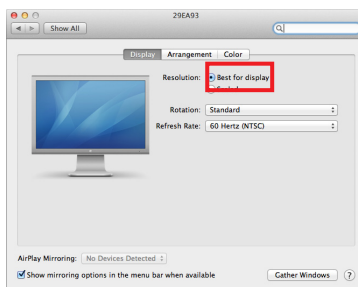

〈步驟 2〉

 - 選取 Scaled（按比例），然後選擇所需解像度及重新整理頻率。設定現已完成。

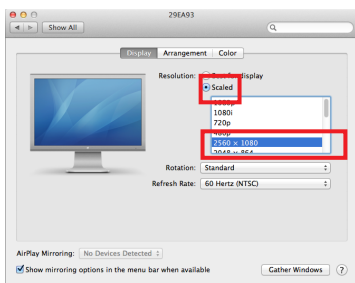

使用節目指南功能

按下遙控器上的 **GUIDE** 按鍵。
* 在「Guide」按鍵無法使用的國家 / 地區，按下「Info」鍵。



確定頻道資訊。
▲ / ▼ 時間 ◀ / ▶ 功能表變更 ● 所有

您可使用 ▲ 及 ▼ 鍵向上或向下移動。
◎ 使用這些按鍵，您可以選取觀看或提醒功能。
● 顯示所有頻道的節目指南。 * 視乎不同國家，這項功能可能無法使用。

◀ 預錄清單 ▶

您可以檢查目前頻道或所有頻道的頻道資訊。

 **注意**

- 節目資訊顯示運作時可能會切換頻道。如果頻道變更，節目資訊亦會更新，以顯示下一個頻道。

LG 軟件介紹/系統要求

軟件	安裝優先 (必需 / 選擇性)	支援的介面		支援的 OS					
		DP	HDMI	Win XP	Win Vista	Win 7	Win 8	Mac	Linux
畫面分割	選擇性	0	0	0	0(32bit)	0	0	10.7 / 10.8/10.9	X

- 畫面分割模式：自動將顯示器畫面分割至所需版面。
* 上列軟件可以使用產品隨附的 CD 進行安裝，或在 LG Electronics 網站上下載。
* 圖像卡：建議使用支援 2560 x 1080 解像度的圖像卡。

 
畫面分割（顯示器畫面分割軟件）

- 安裝優先（必需/選擇性）：選擇性
- 使用：自動將顯示器畫面分割為所需版面（2 部分、3 部分，或 4 部分）。


安裝方法

- 使用隨附的 CD 安裝
：將產品盒隨附的用戶手冊 CD 插入電腦 CD 磁碟機，然後安裝 Screen Split（畫面分割）。
- 在 LG Electronics 網站上下載
：瀏覽 LG Electronics 網站 (www.lg.com) 並下載適合您型號的最新軟件。


1. 安裝程式開始時，點擊 [Continue（繼續）]。安裝時，您必須同意授權合約。

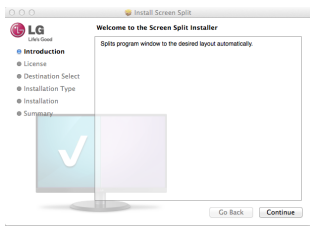

 2. 輸入 Super User（超級用戶）密碼，並點擊 [Install Software（安裝軟件）]。

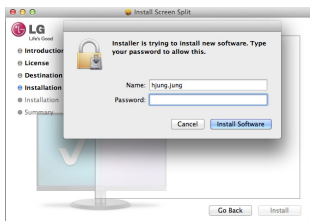


 3. 點擊 [Close（關閉）] 以完成安裝。

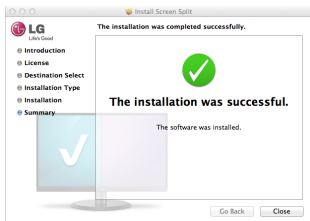

執行方法

 - Finder（搜尋器）→ Applications（應用程式）→ 執行 Screen Split（畫面分割）

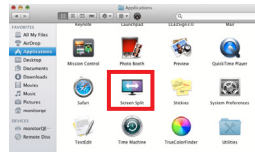

- 點擊功能表列上的畫面分割圖示。



- 在 Spotlight（焦點）搜尋中搜尋「Screen Split（畫面分割）」。



 
使用方法

- * 有關使用軟件的詳情，請參閱程式的說明。

1. 點擊電腦螢幕右下方的托盤圖示。



2. 選取畫面佈置。

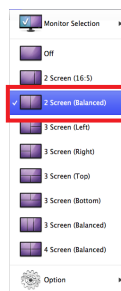

3. 已套用畫面分割佈置。



- * 於您電視上顯示的影像可能有異。

 
使用 PIP

- 使用：每個裝置的輸入會同時顯示於顯示器畫面上。

* 如果主輸入為 TV，色差，AV，或 USB，PIP 功能將無法使用。

執行方法

1. 按下遙控器上的 PIP 按鍵。

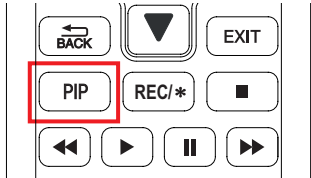


2. 選取用作子畫面的輸入。



設定 PIP




 ■ 大小：設定 PIP 畫面大小。

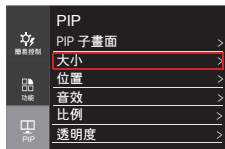

- 1 按下遙控器上的 PIP 設定按鍵，然後選取「大小」。
- 2 使用箭頭鍵選取所需大小。

 ■ 位置：設定 PIP 位置。

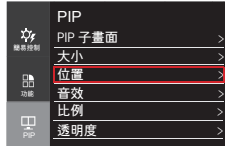

- 1 按下遙控器上的 PIP 設定按鍵，然後選取「位置」。
 - 2 使用箭頭鍵選取所需位置，然後按下確定  按鍵。
- * 大小並非 PIP 平衡時啟動。

■ 音效輸入：選取音效輸出裝置。



 
- 1 按下遙控器上的 PIP 設定按鍵，然後選取「音效輸入」。
- 2 使用箭頭鍵選取所需音效輸入。

■ 比例：設定 PIP 子畫面比例。



- 1 按下遙控器上的 PIP 設定按鍵，然後選取「比例」。
 - 2 使用箭頭鍵選取所需位置，然後按下確定  按鍵。
- * 大小為 PIP 平衡時啟動。

■ 透明度：設定 PIP 視窗的透明度。

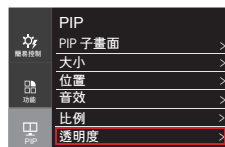

- 1 按下遙控器上的 PIP 設定按鍵，然後選取「透明度」。
 - 2 使用箭頭鍵選取所需位置，然後按下確定  按鍵。
- * 大小並非 PIP 平衡時啟動。

