

▪ **USB/Disc update for BD500's**

LG_BD_5x00B30.ROM-00 and LG_BD_5x00B30.ROM-01 are update files for Main Software.

Step 1: Creating Separate Firmware Update Device

You can create a firmware update files on your own media by saving them in the USB memory device or in CD/DVD.

[Option A] Creating a Firmware Update USB Device

To create a firmware update in a USB memory device, copy theupdate file(s) to the USB device.

Preparation:The USB memory device should have at least 100MB of freespace to save the firmware update files.

- 1. Insert a USB memory device into the PC.
- 2. Copy the latest version of firmware update files to the USB drive. (You do not need to create directory, the files willbe saved in the root directory.)

[Option B] Creating a Firmware Update CD/DVD

 
To create a firmware update in a CD/DVD, write the update file(s) to the CD+R/RW or DVD±R/RW disc using CD burning software.

Preparation:To create a firmware update CD/DVD, prepare the following items according to your storage media:

CD	-CD-RW drive and CD burning software. (Both must be installed in your PC to create a firmware update CD.) -Blank recordable CD-R or CD-RW disc.
DVD	-DVD-RW drive and DVD burning software. (Both must be installed in your PC to create a firmware updateDVD -Blank recordable DVD-R, DVD-RW, DVD+R, or DVD+RW disc.

▪ USB/Disc update for BD500's

1. Insert a blank recordable CD/DVD-R, CD/DVD-RW, DVD+R, or DVD+RW disc into the CD/DVD-RW drive.
2. Run the CD/DVD burning software, and select the [CD Data] or the [Burn DVD Data] option on the program.
3. Write the firmware update file(s) in the root directly of CD/DVD. For details, follow the operating instructions provided by the CD/DVD burning software provider.

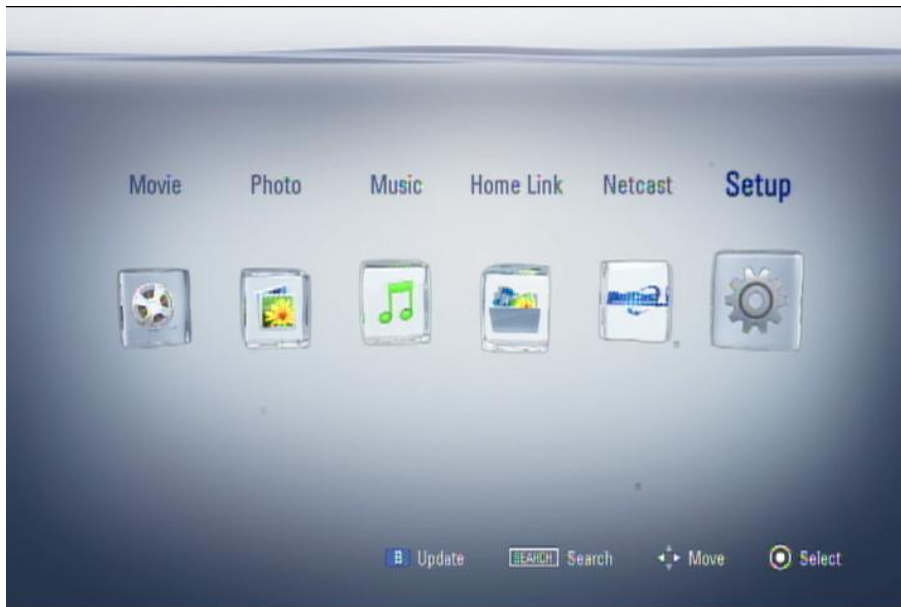


- ① Turn on the player and wait until the Home Menu appears.
- ② Insert USB memory or CD/DVD disc that contains the update file(s) of the latest firmware version into the player.

-USB memory device: Insert the USB memory device to a USB port on the front panel of the player.


-CD/DVD: Press OPEN/CLOSE button to open the disc tray. Load the disc and press OPEN/CLOSE button to close the disc tray.

 ▪ USB/Disc update for BD500's

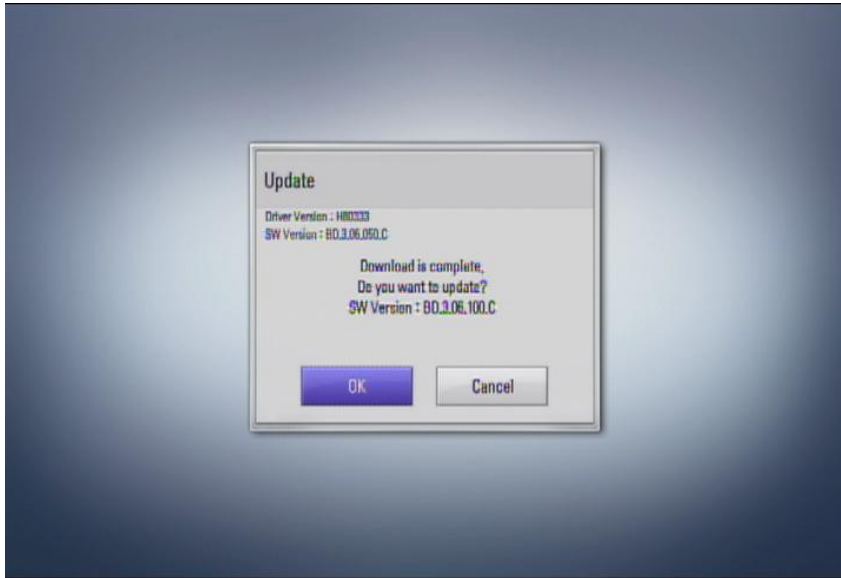

③ The UPDATE window appears displaying the versions of current firmware in white, and the versions saved in the USB memory device or CD/DVD in BD500's.

 
④ Select OK to start updating

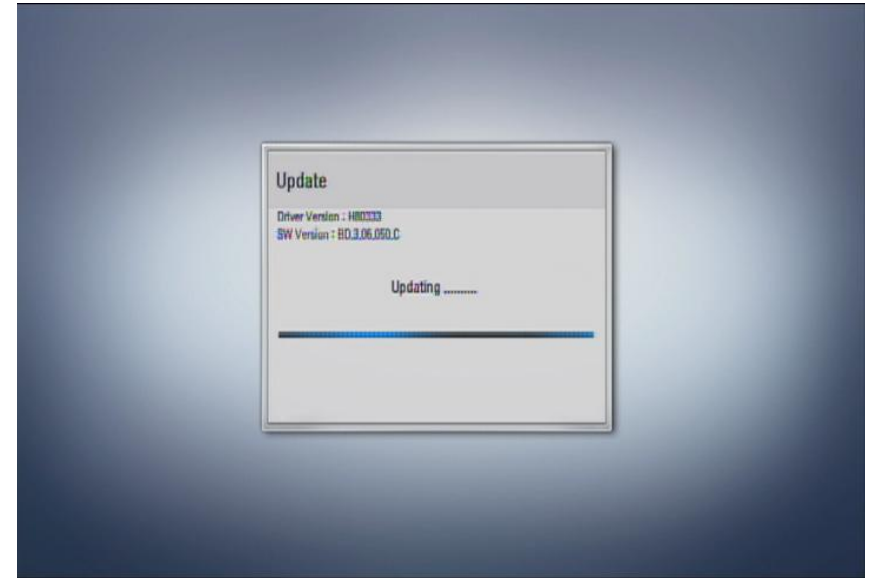

⑤ Press ENTER on the remote control or press Play on the player to start the update. A status bar shows the progress of the firmware update. -Updating Main Software will take about 3 minutes. -Updating Driver will take about 1 minute. -Updating both Main Software and Driver will take about 4 minutes. Please be patient during the software update!

Caution : Do not turn off the power during firmware update

 ▪ USB/Disc update for BD500's

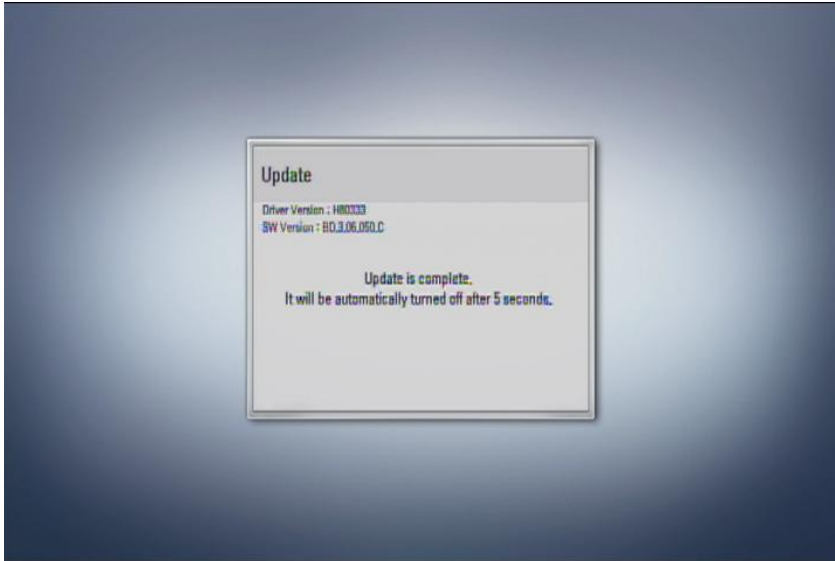

- ⑥ When update is completed, the message, **“Update is complete.”** will appear, and the power will turn off automatically after 5 seconds.
- ⑦ Turn the power back on. The system now operates with the new version.