


Network 3D Blu-ray Disc™ / DVD Player

BP740

ENGLISH | SIMPLE MANUAL


To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

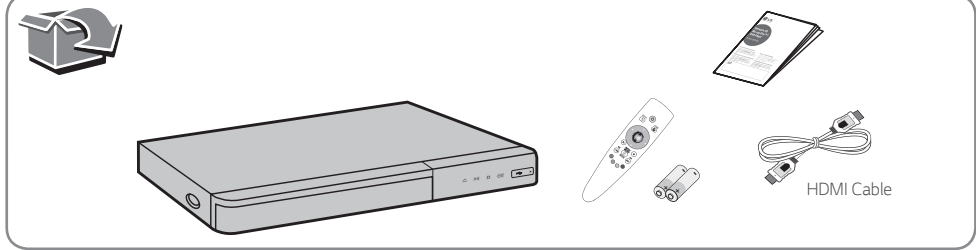

www.lg.com



TV Connection (HDMI OUT)

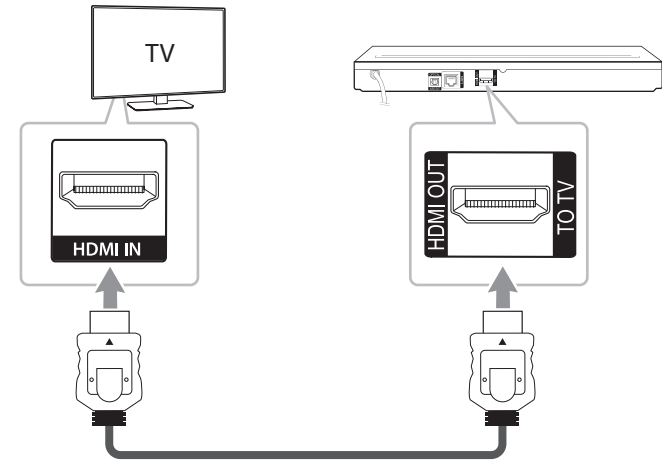

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE




How to register the Magic remote control

- 1 Put batteries into the remote control and turn on the unit.
- 2 Press Wheel (WHEEL) button.
- 3 Shake the remote control to make a pointer appear on the screen.




Using HOME menu

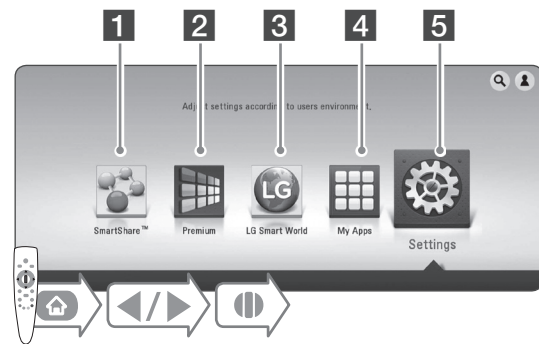


- 1 Displays SmartShare menu.
- 2 Displays the Premium Home screen.
- 3 Displays LG Apps titles provided to the unit.
- 4 Displays the [My Apps] screen.
- 5 Adjusts the system settings.



Wired Network Connection

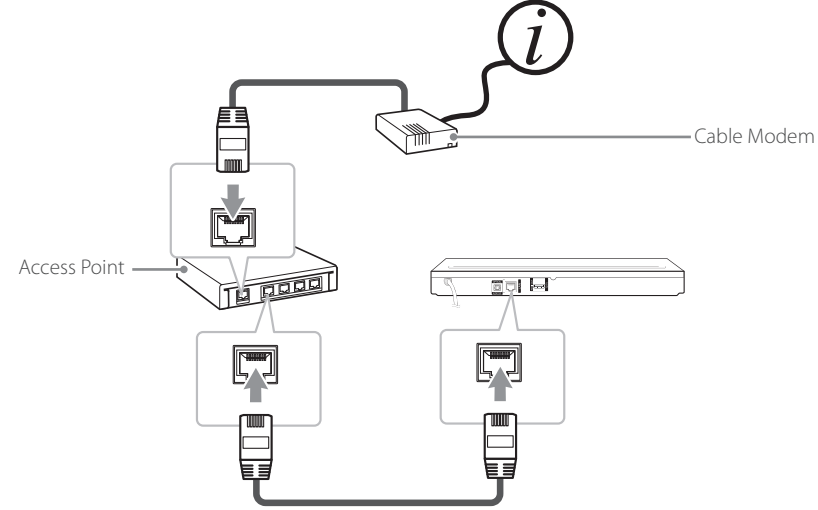

Wireless Network Connection

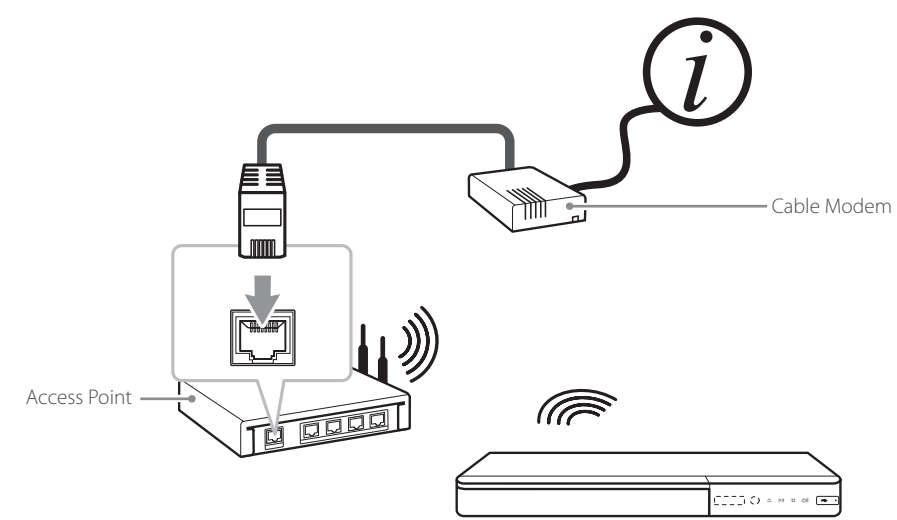

Disc, Data Playback

- 1 Disc is loaded into the player.
- 2 Displays all linked devices.
- 3 Selects video, photo or audio content.

! For the most Audio CD, BD-ROM and DVD-ROM discs, playback starts automatically.



Initial Setup

- 1 Follow the directions for the initial setup displayed on the screen.
- 2 Make sure that LAN cord is plugged or wireless router is on.
- 3 Easy Setup is completed.



Network Playback

SmartShare PC software Installation

- 1 Download SmartShare PC software on the support tab and install it.
- 2 Run the program, and set the share folder you want.

SmartShare Network Playback

- 1 Check the network connection and settings.
- 2 Displays the file or folder on linked device.
- 3 Displays the file or folder on linked device.



Enjoying Miracast

- 1

Miracast™ certified device
- 2
- 3
- Turn on the device and run its [Miracast] function.

! Depending on your wireless network condition, mirroring may be unstable.



Enjoying Private Sound

- 1
- 2

Turn on the mobile device LG AV Remote App is Installed and run LG AV Remote App.
- 3
- Make sure that mobile device is connected to the same Wi-Fi network as this player.


! Not all modes support sound privacy and pairing multiple devices is not available.



Software Update

- 1
- 2
- 3
- 4

How to Re-register the Magic remote control

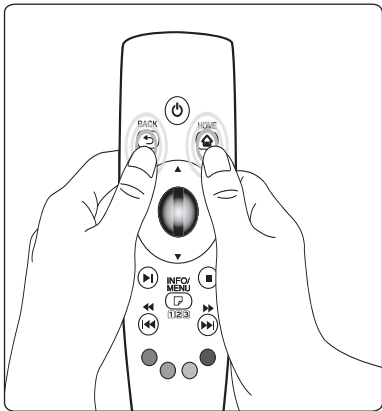

Press the HOME (🏠) and BACK (↩) buttons at the same time for about 5 seconds.



Enjoying Web browsing

- 1

Check the network connection and settings.
- 2

! We recommend a minimum connection speed of 4 Mbps and playable file formats on web browsing are "jpeg", "png", "gif", "wmv", "asf", "wma", "mp3", "mp4".




Specification

ENGLISH	
Power requirements	110 - 240 V ~ 50 / 60 Hz
Power consumption	16 W
Dimensions (W x H x D)	Approx. 430 mm x 43.5 mm x 205 mm
Net Weight (Approx.)	1.58 kg
Bus Power Supply (USB)	5 V $\overline{\text{DC}}$ 500 mA

Design and specifications are subject to change without notice.



Safety Information

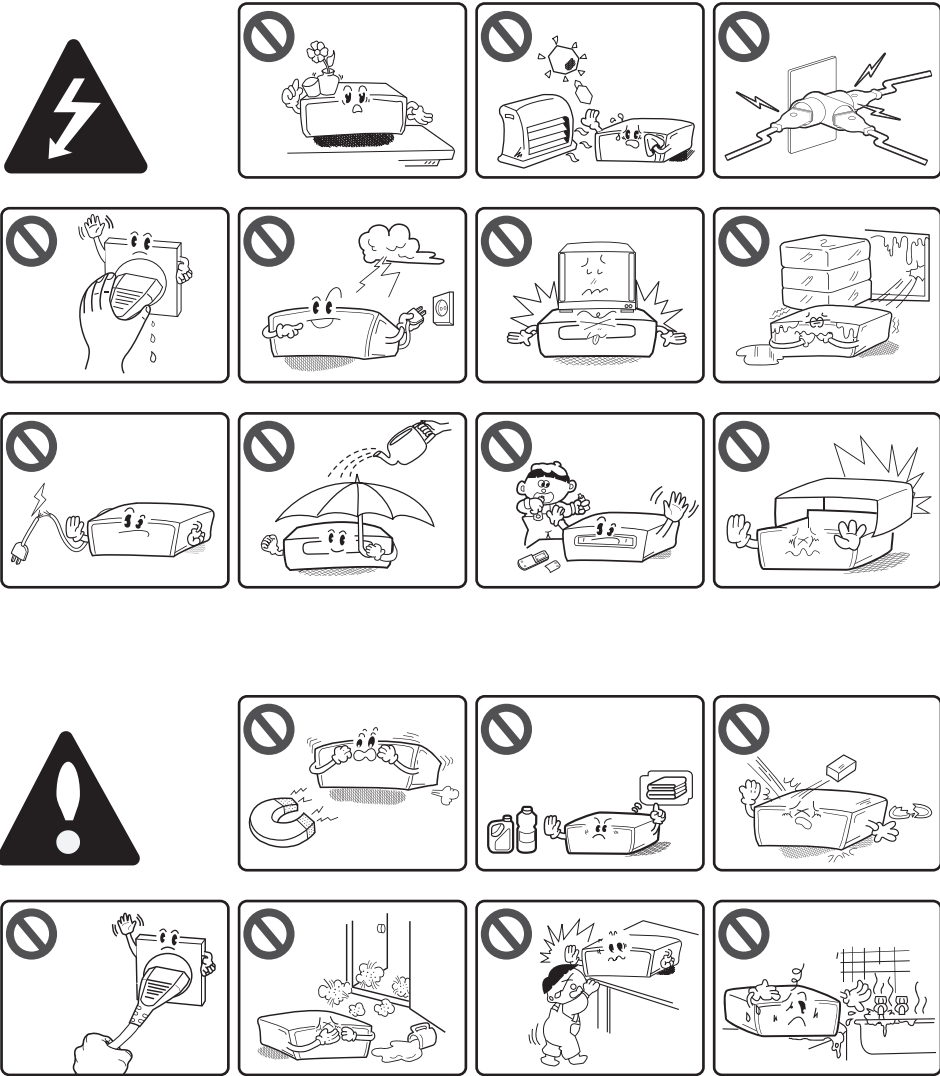

Specification for the Remote Control

ENGLISH	
Model	M4-Media
Range of frequency	2.400 GHz ~ 2.4835 GHz
Channel	79 channels
Transmission	Under 10 dBm
Reception sensitivity	-86 dBm
Dimensions	Approx. 42.4 mm x 47 mm x 186 mm
Weight	80 g \pm 5 g (excluding battery)
Power source	AA 1.5 V, 2 alkaline batteries
Operational temperature range	0 °C - 60 °C

