


Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 350.0 mm x 163.0 mm x 251.0 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	950 W RMS

Design and specifications are subject to change without notice.

Replacement of battery

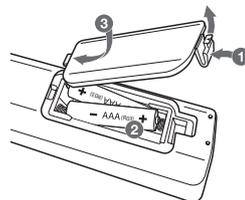

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

POWER: This unit operates on a mains supply of 110 - 240 V ~ 50 / 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



SIMPLE MANUAL

Mini Hi-Fi System

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

CL65



This product has no disc drive.




MFL72142307
2407_Rev01

www.lg.com

Copyright © 2024 LG Electronics Inc. All Rights Reserved.



Front Panel

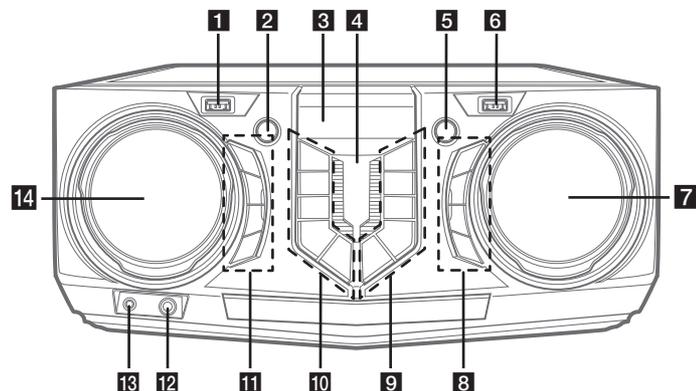

- 1** USB 1 Port
You can play sound files by connecting the USB device.
- 2** ⏻ (Standby)
Turns the power on or off.
- 3** Display window
- 4** 📡 (Remote sensor)
- 5** 🔄 TWIN
Connects two speakers for TWIN mode in WIRELESS PARTY LINK.
- 6** USB 2 Port
You can play sound files by connecting the USB device.
- 7** VOLUME
- Adjust speaker volume.
- Adjusts microphone volume.
- 8** MIC VOL (Microphone volume)
Selects microphone volume mode.
MIC (Microphone) ECHO
Selects ECHO mode.
VOICE CANCELLER
You can reduce the vocal tones during music playback from various input sources.
VOCAL EFFECTS
Selects various vocal effects mode.
- 9** F (Function)
Selects the function and input source.
▶⏸ (Play/Pause)
- Starts or pauses playback.
- Selects stereo/mono.
⏭ (Skip/Search)
- Skips forward.
- Searches for a section within a file.
- Selects the radio stations.
KEY CHANGER (#/b)
Changes the key to suit your vocal range.
- 10** USB REC / DEMO
- Records to USB.
- Stops Recording.
- In power off status, if you press **USB REC / DEMO**, show DEMO mode.
⏹ (Stop)
Stops playback or cancels DELETE function.
⏭ (Skip/Search)
- Skips backward.
- Searches for a section within a file.
- Selects the radio stations.
ℹ (Information)
- Sees information about your music. An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
- Sees **Bluetooth** device name of the unit in BT READY.
- Sees the name of connected all **Bluetooth** device in **Bluetooth** mode.
- When these units are successfully connected each other in WIRELESS PARTY LINK mode, each of connected device names appears in the each unit.
AUTO DJ
Selects the AUTO DJ mode.

11 LIGHTING

Selects the lighting mode.

SPECIAL EQ / BASS BLAST (or BASS BLAST+)

- Chooses special equalizer.
- Press and hold to select BASS (or BASS+) effect directly.

SEARCH

Moves to folder or file in selection mode.

OK

Selects a folder when searching a file.


12 MIC (Microphone) jack

13 AUX IN 1 jack

14 EQUALIZER / SEARCH & MULTI


- Chooses sound impressions.
- Searches a folder or a file.
- Selects the lighting effects.

Rear Panel

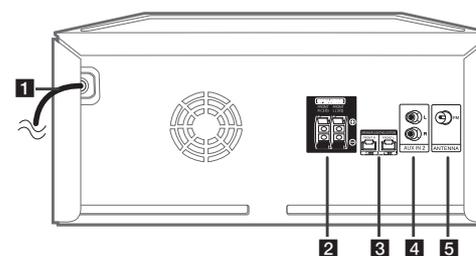

- 1** Power cord
- 2** SPEAKERS terminals
- 3** SPEAKER LIGHTING SYSTEM
Connect the speaker lighting cables.
- 4** AUX IN 2 (L/R)
Connect an auxiliary device.
- 5** ANTENNA (FM)

Speaker Connection

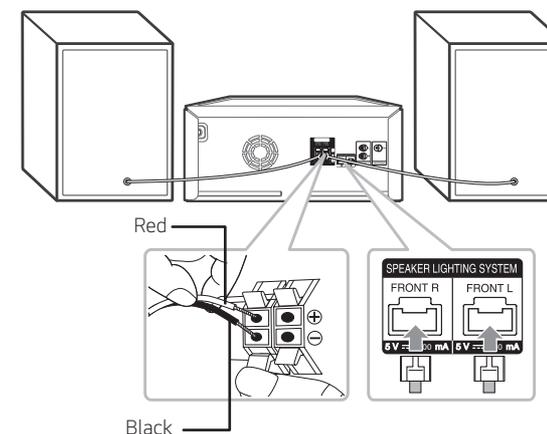

Controller App



Download the **LG XBOOM** App to your device.
(Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>