



OWNER'S MANUAL

AIR CONDITIONER



Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times.

ENGLISH

Stand

www.lg.com

MFL67724535
Rev.12_121125

Copyright © 2017-2025 LG Electronic. All Rights Reserved

TABLE OF CONTENTS

This manual may contain images or content that may be different from the model you purchased.
This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

- READ ALL INSTRUCTIONS BEFORE USE 4**
 - Safety Messages.....4
- WARNING INSTRUCTIONS 4**
 - Technical Safety.....4
 - Installation6
 - Operation7
 - Wireless Remote Control.....8
 - Maintenance8
 - Refrigerant.....9
- CAUTION INSTRUCTIONS 9**
 - Installation9
 - Operation10
 - Maintenance11

OPERATION

- Before Use 12**
 - Notes for Operation.....12
 - Suggestions for Energy Saving.....12
- Product Overview 13**
 - Stand.....13
 - Using the Appliance with Remote Control.....14
- Preparing before Operation 14**
 - Inserting the Batteries into the Wireless Remote Control.....14
 - Installing the Remote Control Holder14
- Wireless Remote Control Overview 15**
 - Wireless Remote Control.....15
- Using Wireless Remote Control 18**
 - Operating with the Wireless Remote Control.....18
 - Cooling, Auto, Dehumidification, Heating, Fan Mode18
 - Power Cooling, Power Heating.....19
 - Adjusting the Fan Speed20
 - Adjusting the Airflow Direction (On Some Models)20

Timer Setting	21
I-Control Ampere Function (On Some Models)	22
Auto Dry Function (On Some Models)	24
Display Overview	25
Display	25
Using Display	26
Child Lock Function	26
Auto Dry Function	27
Auto Restart Function	28

MAINTENANCE

Cleaning	30
Cleaning Interval	30
Cleaning the Air Filter	31
Tips for Maintenance	31
Before Long Periods of Disuse	31
After Long Periods of Disuse	31

TROUBLESHOOTING

Before Calling for Service	32
Operation	32
Performance	35
Calling for Service	36
Situations in which Calling for Service is Necessary	36
Disposal of Waste Batteries	36
After Sales Service (Egypt Only)	36
Guidelines for Electrical Energy Saving	36

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety Messages



This symbol is displayed to indicate matters and operations that can cause risk.
Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

WARNING INSTRUCTIONS

WARNING

- To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:
-

Technical Safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and

understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Installation or repairs made by unauthorized persons can pose hazards to you and others.
- The information contained in the manual is intended for use by a qualified service technician who is familiar with the safety procedures and equipped with the proper tools and test instruments.
- Failure to read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.
- The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. Consult a service agent or a similarly qualified person before disposing of them.
- When the power cord is to be replaced, the replacement work shall be performed by authorized personnel using only genuine replacement parts.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or a similarly qualified person in order to avoid a hazard.
- The appliance shall be installed in accordance with national wiring regulations.
- This appliance must be properly grounded.
- Do not cut or remove the grounding prong from the power plug.
- Attaching the earth wire to the power outlet cover screw does not ground the appliance unless the cover screw is metal, uninsulated, and the power outlet is grounded through house wiring.

- If you have any doubt whether the air conditioner is properly grounded, have the power outlet and circuit checked by a qualified electrician.

Installation

- Contact an authorized service centre when installing or relocating the air conditioner.
- Contact the dealer, seller, qualified electrician or authorized service centre for cleaning or maintenance the air conditioner.
- Do not install, remove, or re-install the unit by yourself (customer). Installation or repairs done by unauthorized persons can pose hazards to you and others.
- For electrical work, contact the dealer, seller, a qualified electrician or an authorized service centre.
- Do not attempt to do electrical work or grounding work unless you are licensed to do so. Consult with the dealer for electrical work and grounding work.
- Do not install the product on a defective installation stand.
- Be sure the installation area does not deteriorate with age.
- Be sure to only use accessories made by LG which are specifically designed for use with the equipment and have them installed by a professional.
- Never install the outdoor unit on a moving base or a place from where it can fall down.
- Do not install the unit in potentially explosive atmospheres.
- Do not install the air conditioner in a place where flammable liquids or gases such as gasoline, propane or paint thinner are stored.
- Install the panel and the cover of the control box safely.
- Install a dedicated electric outlet and earth leakage breaker before using the appliance.
- Use a standard circuit breaker and fuse that conform to the rating of the air conditioner.

- Do not use a multiple socket, extension power cable or adapter with this appliance.
- The indoor/outdoor wiring connections must be secured tightly, and the cable should be routed properly so that there is no force pulling the cable from the connection terminals. Improper or loose connections can generate heat or cause a fire.
- Do not connect the ground wire to a gas pipe, a lightning rod, or a telephone ground wire.
- Use non-flammable gas (nitrogen) to check for leaks and to purge air; using compressed air or flammable gas may cause fire or explosion.

Operation

- Do not modify or extend the power cable. Scratches or peeling insulation on the power cables may result in fire or electric shock, and the cables should be replaced.
- Make sure that the power cable is neither dirty, loose, nor broken.
- Do not place any objects on the power cable.
- Take care to ensure that the power cable could not be pulled out or damaged during operation.
- Never touch, operate, or repair the air conditioner with wet hands.
- Do not insert hands or other objects through the air inlet or outlet while the air conditioner is operating.
- Make sure that nobody, especially children, climbs on or hits the outdoor unit.
- Be sure to use only those parts listed in the service parts list. Never attempt to modify the equipment.
- Do not touch the refrigerant pipe, water pipe or any internal parts while the unit is operating or immediately after operation.
- Do not leave flammable substances such as gasoline, benzene, or thinner near the air conditioner.
- Do not use the air conditioner for an extended period of time in a small place without proper ventilation.

- Be sure to ventilate sufficiently when the air conditioner and a heating appliance such as a heater are used simultaneously.
 - There is the possibility of oxygen deficiency.
- Do not block the inlet or outlet airflow.
- Cut off the power supply if there is any noise, smell, or smoke coming from the air conditioner.
- Contact an authorized service centre if the air conditioner is submerged by flood waters.
- In the event of a gas leak (such as Freon, propane gas, or LP gas), ventilate sufficiently before using the air conditioner again.
- Stop operation and close the window during a storm or hurricane. If possible, remove the product from the window before the hurricane arrives.

Wireless Remote Control

- Never mix different types of batteries, or old and new batteries in the remote control.
- Do not recharge or disassemble the batteries.
- Dispose of the batteries in a place where there is no danger of fire.
- Stop using the remote control if there is a fluid leak in the battery. If your clothes or skin is exposed to the leaking battery fluid, wash off with clean water.
- If the leaking battery fluid has been swallowed, rinse the inside of the mouth thoroughly and consult a doctor.
- Never let the indoor unit or the remote control get wet.

Maintenance

- Before cleaning or performing maintenance, disconnect the power supply and wait until the fan stops.
 - The fan rotates at a very high speed during operation.
 - There is a possibility of injury if the unit's power is accidentally triggered on while you are cleaning the inner parts of the unit.

- Appliance shall be disconnected from its power source during service and replacing parts.

Refrigerant

- Follow the standards of the corresponding region or country for handling the refrigerant and the air conditioner and for disassembling the air conditioner.
- Use only the refrigerant specified on the air conditioner label.
- Do not input air or gas into the system except the specified refrigerant.
- Do not touch the leaking refrigerant during installation or repair.
- If the refrigerant gas leaks during the installation, ventilate the area immediately.
- Be sure to check for refrigerant leaks after installing or repairing the product.
- In the case of refrigerant leakage, consult the dealer. When the air conditioner is to be installed in a small room, it is necessary to take proper measures so that the amount of any leaked refrigerant does not exceed the limiting concentration even when it leaks. If the refrigerant leaks exceeding the level of limiting concentration, an oxygen deficiency accident may happen.

CAUTION INSTRUCTIONS

CAUTION

- To reduce the risk of minor injury to persons, malfunction, or damage to the product or property when using this product, follow basic precautions, including the following:

Installation

- Use a forklift or 2 or more people to transport the air conditioner.
- Do not install the air conditioner in an area where it is directly exposed to sea wind (salt spray).

- Install the drain hose properly for the smooth drainage of water condensation.
- Install the air conditioner in a place where the noise from the outdoor unit or the exhaust fumes will not inconvenience the neighbours.
- Safely dispose of packing materials such as screws, nails, plastic bags or batteries using proper packaging after installation or repair.
- Exercise caution when unpacking or installing the air conditioner.
- Be especially careful of the case edges and the fins on the condenser and evaporator.
- To avoid vibration or water leakage, keep the product level even when installing it.
- When installing the unit, use the installation kit provided with the product.
- The edges of heat exchanger fins are sharp enough to cut. To avoid injury, wear gloves or cover the fins while working around them.

Operation

- Do not drink the water drained from the air conditioner.
- Do not place objects in direct proximity to the outdoor unit and do not let leaves and other debris accumulate around the unit. Leaves are a hotbed for small animals which can enter the unit. Once inside the unit, such animals can cause malfunctions, smoke or fire if they come into contact with electrical parts.
- Do not let the air conditioner run for a long time when humidity is very high or when a door or a window has been left open.
- Do not expose people, animals, or plants to the cold or hot wind from the air conditioner for extended periods of time.
- Do not use the product for special purposes, such as preserving foods, works of art, etc. The air conditioner is designed for consumer purposes, and is not a precision refrigeration system. There is risk of damage or loss of property.
- Do not turn on the breaker or power when the front panel, cabinet, top cover, or control box cover are removed or opened.

- Do not open the front grille of the product during operation. Do not touch the electrostatic filter, if the unit is so equipped.
- Take care to prevent water from entering the product.
- Make sure that there are no obstacles close to the outdoor unit. The presence of obstacles close to the outdoor unit may reduce the performance of the outdoor unit or increase its operating sound.
- Do not turn off the power immediately after stopping operation. Always wait for at least five minutes before turning off the power.

Maintenance

- Use a sturdy stool or ladder when cleaning, maintaining, or repairing the air conditioner at a height.
- Do not plug or unplug the power supply plug to turn the unit on or off.
- Never use strong cleaning agents or solvents or spray water when cleaning the air conditioner. Use a soft cloth.
- Never touch the metal parts of the air conditioner when removing the air filter.
- Tear apart and throw away plastic packaging bags so that children will not play with them.
- When the product will not be used for a long time, disconnect the power supply plug or turn off the breaker.
- Do not tilt the unit when removing or uninstalling it. The condensed water inside can spill.
- Check the foundation for damage on a regular basis, especially if the product has been in use for a long time.
- Always insert the filter securely. Clean the filter every two weeks or more often if necessary. A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.

OPERATION

Before Use

Notes for Operation


- Adjust the direction of the airflow vertically or horizontally to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, within a short period of time.
- Turn off the appliance and periodically open windows for ventilation. The indoor air quality may deteriorate if the appliance is used for long periods.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the airflow or reduce the appliance performance.

Suggestions for Energy Saving

- Do not over-cool the space. This may be harmful to your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the appliance.
- Keep doors or windows closed tightly while you are operating the appliance.

Product Overview

Stand

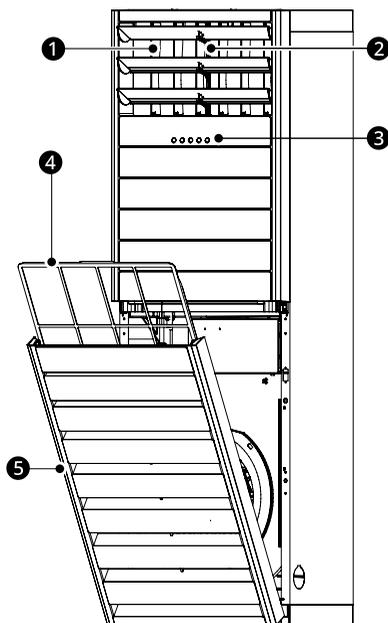

1 Air Deflector (Left-Right Louver)

Adjusts the airflow direction left or right.

2 Air Deflector (Up-Down Vane)

Adjusts the airflow direction up or down.

3 Display

Displays the set temperature and operating status.

4 Air Filter

Reduces dust in the air.

5 Air Inlet Vents

Takes in air from the room.

NOTE

- The number and location of parts may vary depending on the model of the appliance.
- Features may change depending on the model type.

14 OPERATION

Using the Appliance with Remote Control

Follow these steps to see a detailed guide for using the product with the remote control.

- 1 Click the below website address.
 - www.lg.com
- 2 Insert the model name in the search box.
 - The model name is on the remote control or printed on the box in which the remote control is packed.
- 3 Search the manual that you want to see.

NOTE

 
- Some models do not have a manual on the website. For those models, refer to the manual included with the remote control.
-

Preparing before Operation


Inserting the Batteries into the Wireless Remote Control

Insert AAA (1.5 V) batteries into the wireless remote control.

- 1 Remove the battery cover and insert the new batteries, making sure that the + and - terminals of the batteries are oriented correctly.



 - 2 Reattach the cover by sliding it back into position.




NOTE

- When the wireless remote control display begins to fade, replace the AAA (1.5 V) batteries.
 - If the system is not going to be used for a long time, remove the batteries to save their working life.
 - Do not use old and new batteries together.
-

Installing the Remote Control Holder

- 1 Choose a suitable place where its safe and easy to reach.
- 2 Fix the firmly to the wall with the supplied screws.

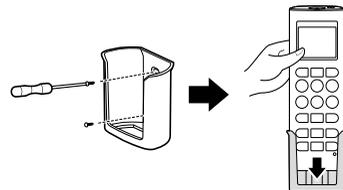

- 3 Slide the remote controller inside the holder.


NOTE

- The remote controller should never be exposed to direct sunlight.
 - The signal transmitter and receiver should always be clean for proper communication. Use a soft cloth to clean them.
 - If other appliances are accidentally affected by the remote controller, change their position or consult your serviceman.
-

Wireless Remote Control Overview

Wireless Remote Control

Use the wireless remote control to operate the appliance more conveniently.

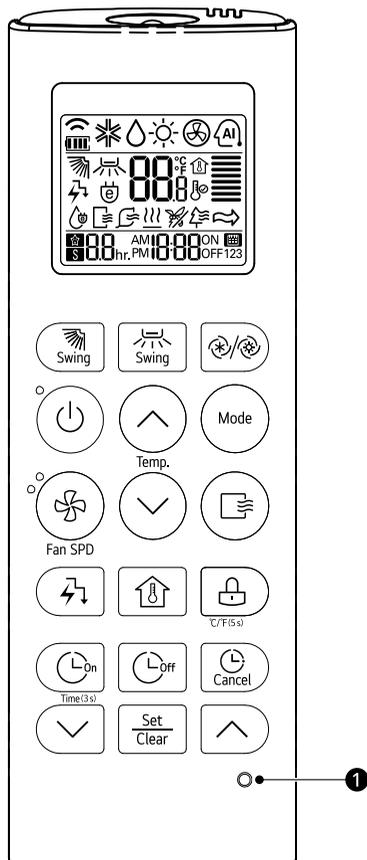

Buttons

Image	Description
	<p>Swing (Up-Down Swing) Adjusts the airflow direction up and down.</p>
	<p>Swing (Left-Right Swing) Adjusts the airflow direction left and right.</p>
	<p>Power Cooling / Power Heating Changes the room temperature quickly.</p>
	<p>Power  Turns the appliance on or off.</p>
 	<p>Temperature Setting   Adjusts the desired room temperature.</p>
	<p>Mode Selects the desired operating mode.</p> <ul style="list-style-type: none"> • Heat Pump Model Each press changes the modes in this order: Cooling → Auto → Dehumidification → Heating → Fan. • Cooling Only Model Each press changes the modes in this order: Cooling → Auto → Dehumidification → Fan.
 Fan SPD	<p>Fan Speed  Adjusts the fan speed.</p>
	<p>Auto Clean  Reduces the moisture remaining inside the air conditioner when the air conditioner is turned off.</p>
	<p>Ampere Control  Bring the effect of the power saving.</p> <ul style="list-style-type: none"> • Capacity may decrease when this mode is selected.

Image	Description
	<p>Room Temperature </p> <p>Check the indoor temperature.</p> <ul style="list-style-type: none"> The room temperature is displayed for 3 seconds and then returns to the previous screen.
 <p>C/F(5s)</p>	<p>Child Lock </p> <p>Lock the air conditioner. In operation this function, display key will be locked and air conditioner indicates "CL" on its display panel whenever you press any button.</p> <hr/> <p>°C / °F (5 s) (Selecting Celsius or Fahrenheit)</p> <p>Press and hold the  button for about 5 seconds to set the temperature display to show either Fahrenheit (°F) or Celsius (°C) units.</p>
 <p>Time(3s)</p>	<p>On Timer</p> <p>Turns on the air conditioner at the set time.</p> <hr/> <p>Current Time</p> <p>Press and hold the On Timer Button for 3 seconds to set the current time.</p>
	<p>Off Timer</p> <p>Turns off the air conditioner at the set time.</p>
	<p>Cancel</p> <p>Cancels the timer settings.</p>
 	<p>Timer Setting  , </p> <p>Adjusts the time on the display.</p>
	<p>Set/Clear</p> <p>Sets or cancels the special functions or timer.</p>
	<p>① RESET</p> <p>Resets the wireless remote control settings.</p>

NOTE

- Some functions may not be supported, depending on the model.

Using Wireless Remote Control

Operating with the Wireless Remote Control


- Aim at the signal receptor on the floor standing type air conditioner when operating.
- Block a strong light over the signal receptor with a curtain or etc. so as to prevent the abnormal operation. (ex: electronic quick start, ELBA, inverter type fluorescent lamp)
- The remote control signal can be received at a distance of up to about 7 meters.
- Be sure that there are no obstructions between the remote control and the signal receptor.
- Do not drop or throw the remote control.
- Do not place the remote control in a location exposed to direct sunlight, or next to a heating unit, or other heat source.

Cooling, Auto, Dehumidification, Heating, Fan Mode

You can change the operating mode when the appliance is turned on.


- 1 Turn the appliance on.
- 2 Press the **Mode** button repeatedly to select the desired mode.
 - **Heat Pump Model**
Each press changes the modes in this order:
Cooling → **Auto** → **Dehumidification** → **Heating** → **Fan**.
 - **Cooling Only Model**

Each press changes the modes in this order:
Cooling → **Auto** → **Dehumidification** → **Fan**.

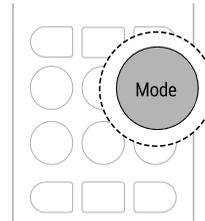

Icon	Description
	Cooling Mode Cool air blows from the air outlets.
	Auto Mode The product adjusts the airflow automatically.
	Dehumidification Mode This function removes moisture in indoor air.
	Heating Mode Warm air blows from the air outlets.
	Fan Mode This function circulates the air without heating or cooling it.

- 3 Press the or button to set the desired temperature.

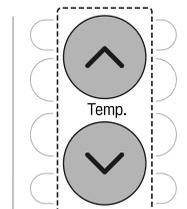

- **Cooling Mode:** Set the temperature from 18 °C to 30 °C. (Only Egypt cooling mode 20 °C to 30 °C due to local regulation.)

- Auto Mode (Heat Pump Model): Set the temperature from 18 °C to 30 °C. (Only Egypt cooling mode 20 °C to 30 °C due to local regulation.)
- Auto Mode (Cooling Only Model): Each press changes the temperature as follows: -2 ↔ -1 ↔ 0 ↔ 1 ↔ 2

Code	Description
2	Cold
1	A Little Cold
0	Maintain Room Temperature
-1	A Little Hot
-2	Hot

- Dehumidification Mode: There is no temperature control.
- Heating Mode: Set the temperature from 16 °C to 30 °C. (Only Egypt heating mode 16 °C to 28 °C due to local regulation.)
- Fan Mode: There is no temperature control.

NOTE

- The temperature range may change depending on the model.
- Each press increases or decreases the temperature by 1 °C.

NOTE

• What is 3 minutes delay function?

The reason that cold wind is not coming out when operating the unit after turning off the cooling is because of the function to protect compressor. Cold wind will be coming out when compressor is operated after 3 minutes.

NOTE

- What is Deforst mode and Preheating function?


Heating operation will be started in a little time. This is not a failure because it is the operation to reduce frost.

- During heating operation, if outside temperature is low and humidity is high, heating capability will be deteriorated as frost is generated at outdoor unit, therefore, the frost will be removed by performing defrost operation.
- When indoor and outdoor unit fans are automatically stopped and defrost operation is completed, preheating for heating cycle will automatically be started.
- During the heating, indoor fan will not be operated until indoor tubing temperature becomes more than 22 °C, therefore, this is the function to block the discharge of cold wind, so heating cannot be performed.
- During defrost operation, ❄ will be indicated at display section of indoor.

Power Cooling, Power Heating

You can change the room temperature quickly.

- 1 Turn the appliance on.
- 2 Press the **Mode** button repeatedly to select the desired mode.
 - The operation is available with the Cooling and Heating modes.
- 3 Press the  button.

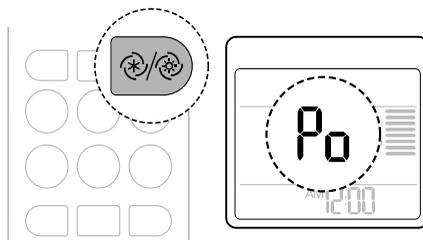


NOTE

- When you press the  button again, the power cooling or power heating function will be turned off.

Adjusting the Fan Speed

You can adjust the fan speed.

- Press the button  repeatedly to select the desired fan speed.

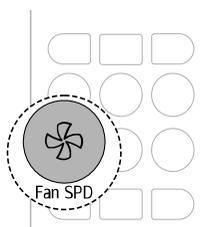

Speed	Wireless Remote Control Icon
Super High	
High	
Mid	
Low	

NOTE

• Heat Pump Model

The function is available with the Cooling, Heating and Dehumidification, Fan, Auto modes.

• Cooling Only Model

The function is available with the Cooling, and Dehumidification, Fan modes.


- Fan speeds may differ according to the model.

Adjusting the Airflow Direction (On Some Models)

You can adjust the direction of airflow vertically.

Setting Up-Down Airflow Direction

- Turn the appliance on.
- Press the **Swing** () button to adjust the up-down direction of the airflow automatically.

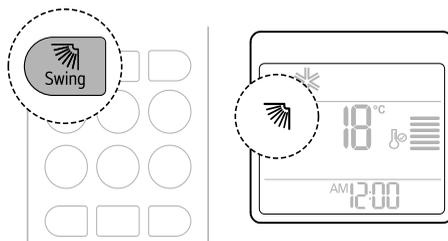


NOTE

- Press the **Swing** () button once more during rotation, the wind direction is fixed at the desired location.

Setting Left-Right Airflow Direction

- Turn the appliance on.


- 2 Press the **Swing** (扇) button to adjust the left-right direction of the airflow automatically.

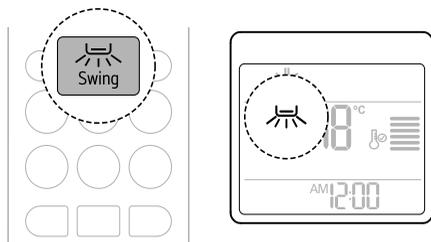


NOTE

- Press the **Swing** (扇) button once more during rotation, the wind direction is fixed at the desired location.

- If you press and hold the button for a long time, the time will change more quickly in 10 minute increments.

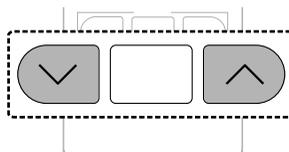


- 3 Press **Set/Clear** button to stop the icon from flashing.

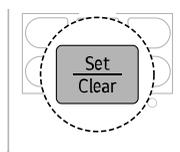

Timer Setting

Setting the Current Time

- 1 Press and hold the **On Timer** button for about 3 seconds.
- The **AM** or **PM** icon flashes at the bottom of the display screen.

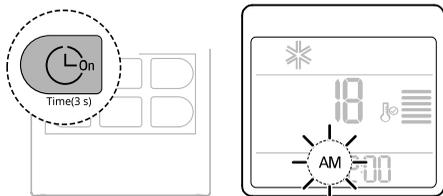

- 2 Press the  or  button to set the desired time.


NOTE

- Check the icon for A.M. and P.M.

Setting the On Timer


This function can be set when the appliance is turned on.

- 1 Press the **On Timer** button.
- The **ON** icon below flashes at the bottom of the display screen.

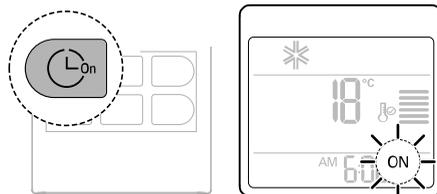


22 OPERATION


- 2 Press the  or  button to set the desired time.

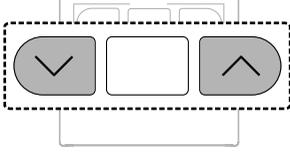

- 3 Press the **Set/Clear** button to stop the icon from flashing.

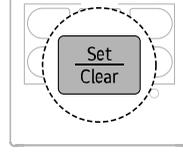


- 3 Press the **Set/Clear** button to stop the icon from flashing.

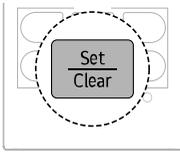

Cancelling the Timer Setting

You can cancel all timer settings.


- Press **Cancel** button.

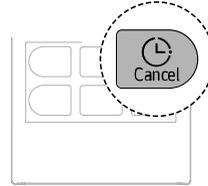

Setting the Off Timer

This function can be set when the appliance is turned off.


- 1 Press the **Off Timer** button.
- The **OFF** icon below flashes at the bottom of the display screen.

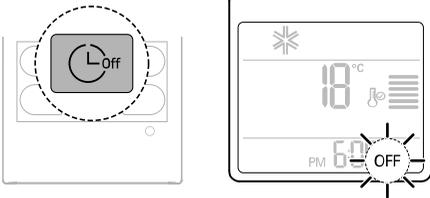

NOTE

- If you wish to cancel a specific timer setting, press the each timer button as you want. Then press the **Cancel** button while aiming the remote controller at the signal receptor.
- The timer lamp on the air conditioner and the display will go off.

- 2 Press the  or  button to set the desired time.

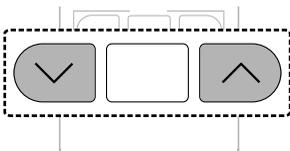


I-Control Ampere Function (On Some Models)


You can bring the effect of the power saving.

- 1 Turn the appliance on.


2 Press the **Mode** button repeatedly to select the Cooling mode.

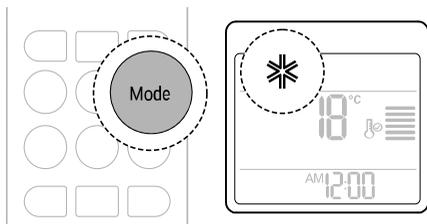


5 Press the **Set/Clear** button to set the function. When the ⚡ icon displayed, the function has been applied.

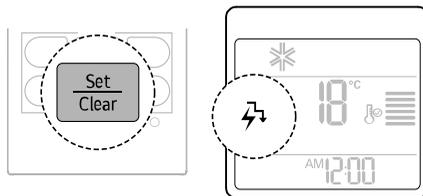

3 Press the ⚡ button.

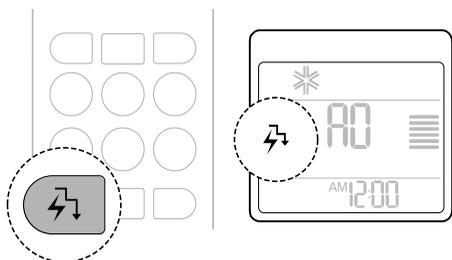

4 Press the ⬆ or ⬇ button to select the desired step.

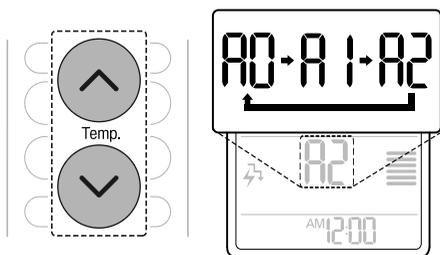

NOTE

- 1 step : The power input is setting around α A to operate the appliance.
- 2 step : The power input is setting around β A to operate the appliance.
- ⚡ will be blinking on the indoor unit, when the air conditioner needs more Ampere for operating than setting ampere's operation range.
 - If you change the step by pressing ⚡ button, ⚡ blinking will be disappeared.
 - Display icon may not appear depending on the model accordingly.
- Capacity may decrease when I-Control Ampere mode is selected.
- Some functions may not be supported, depending on the model.
- Name of the function may differ depending on the model accordingly.
- How to use I-CONTROL AMPERE

Display	Step
A0	Normal
A1	1 step
A2	2 step

• A0 means the function is not used.

Model	Display	Ampere Range	Temperature Range
APNW 36GT3 S1	Normal	National Power	up to 54 °C
	A1, 12A(α)	11.0 ~ 13.9 Amperes	
	A2, 8A(β)	7.0 ~ 9.9 Amperes	up to 46 °C

24 OPERATION


Model	Display	Ampere Range	Temperature Range
APNW 50GT3 E0	Normal	National Power	up to 54 °C
	A1, 14A(α)	12.0 ~ 17.9 Amperes	
	A2, 10A(β)	8.0 ~ 13.9 Amperes	up to 46 °C
APNW 36GT2 E4	Normal	National Power	up to 54 °C
	A1	11.0 ~ 13.9 Amperes	
	A2	8.0 ~ 10.9 Amperes	up to 46 °C

NOTE

Above recommended figures are based on laboratory testing under following conditions:

- Standard voltage (220 V ±15 %)
- Properly insulated room
- Suitable A/C tonnage for room size
- Correctly installed unit with R410A gas and vacuum work

- Press the  button.

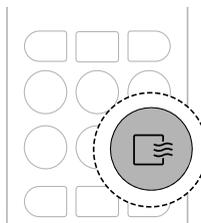

NOTE

- Auto dry function is released at initial state as standard.
- The indoor unit will respond with beep once and indicate "5C" on its display panel. Then Auto dry function will be set.
- The indoor unit will respond with beep twice and Auto dry function will be removed.

Auto Dry Function (On Some Models)

You can reduce the moisture remaining inside the air conditioner when the air conditioner is turned off.


When pressing the  button after setting the function, evaporator in indoor unit will be automatically dried as showing counting 00 to 99 on its display panel.

After indicating 99 on the display panel, the unit will be automatically turned off.


Display Overview

Display


Heat Pump

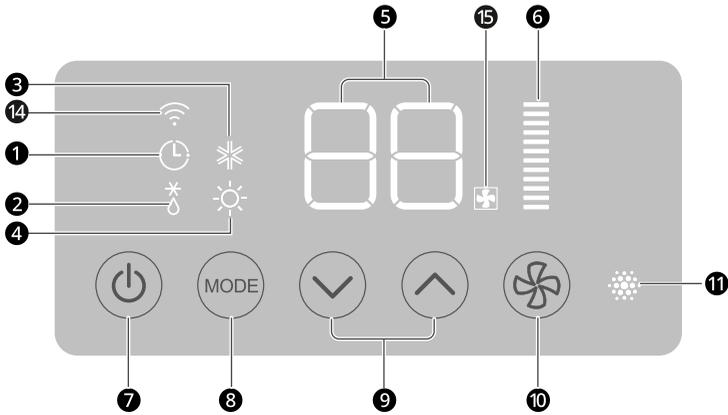

Heat Pump (Iraq only)

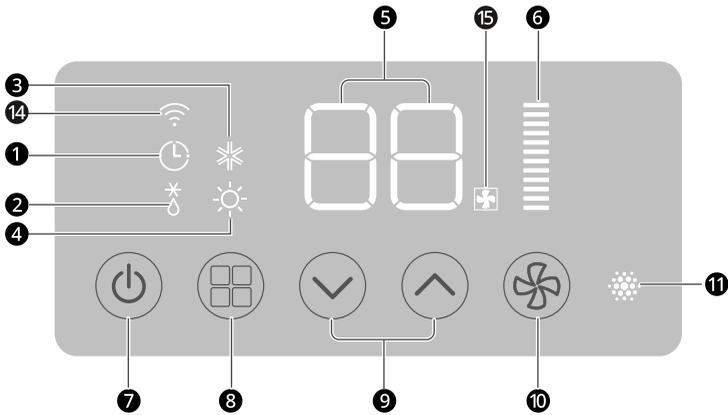

Cooling Only

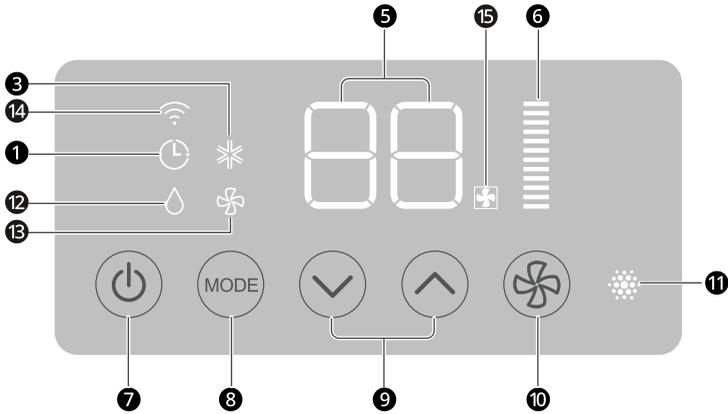


- ❶ Timer
- ❷ Defrosting operation lamp
- ❸ Cooling operation lamp
- ❹ Heating operation lamp
- ❺ Room temp. / Set temp. display
- ❻ Indoor fan speed lamp
- ❼ Start/Stop button
- ❽ Operation mode selection button
- ❾ Room temperature setting button
- ❿ Indoor fan speed button
- ⓫ Signal receptor
- ⓬ Dehumidification operation lamp
- ⓭ Fan mode operation lamp
- ⓮ Wi-Fi function operation lamp (Only M7 series)
- ⓯ Outdoor unit operation lamp (Only M7 series)

Using Display

Child Lock Function

You can prevent children or others from using it carelessly.

- Press and hold the **▲** and **🌀** simultaneously for about 3 seconds.

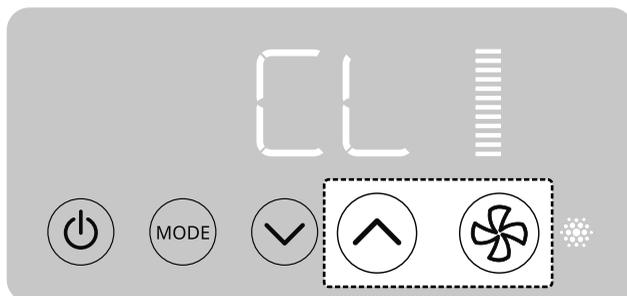

NOTE

- Whenever you press any button on display panel, it will immediately display **CL**, which means display panel is locked.
- All the button on the indoor unit display panel will not work. But the button on the remote controller will be operated.
- If you want to cancel the child lock function, press and hold the **▲** and **🌀** button simultaneously for about 3 seconds again. The unit will respond with beep.


Auto Dry Function

You can reduce the moisture remaining inside the air conditioner when the air conditioner is turned off. When pressing the **t** button after setting the function, evaporator in indoor unit will be automatically dried as showing counting 00 to 99 on its display panel.

After indicating 99 on the display panel, the unit will be automatically turned off.

28 OPERATION

- Press and hold the  and **Mode** simultaneously for about 3 seconds.

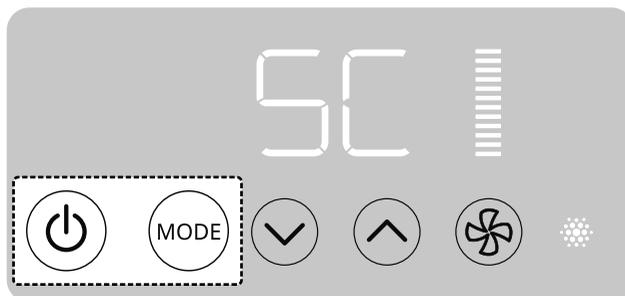

NOTE


- Auto dry function is released at initial state as standard.
 - The indoor unit will respond with beep once and indicate "50" on its display panel. Then Auto dry function will be set.
 - The indoor unit will respond with beep twice and Auto dry function will be removed.
-

Auto Restart Function

When the appliance is turned on again after a power failure, it resumes operating using the same settings.

- This function is useful in the case of a power failure.
- This function is enabled by the factory default settings.

- If you want to set or disable the auto restart function, press and hold the , ,  and  simultaneously for about 3 seconds.

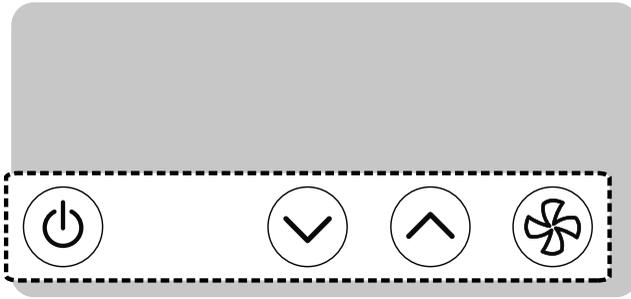

MAINTENANCE

Cleaning

Cleaning Interval

⚠ WARNING

- Before cleaning or performing maintenance, disconnect the power supply and wait until the fan stops.
 - When you remove the air filter, do not touch the metal parts of the indoor unit. Doing so may cause an injury.
-

Cleaning the Filter

Type	Description	Interval
Air filter	Clean with a vacuum or hand wash.	2 weeks

NOTE


- Never use water that is hotter than 40 °C when you clean the filters. Doing so may cause deformation or discoloration.
 - Never use volatile substances when you clean the filters. Doing so may damage the surface of the appliance.
-

Cleaning the Air Filter

NOTE

- Do not bend the air filter, as it may break.
- Assemble the air filter properly to prevent dust and other substances from entering the product.

- 1 Turn off the power to the appliance.
- 2 Remove the air filter from the air intake.
 - Take hold of the tab and pull slightly forward to remove the filter.

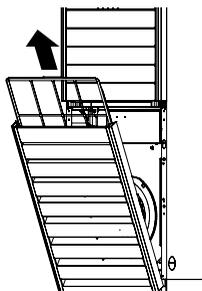

- 3 Clean the air filter with a vacuum cleaner or wash it with lukewarm water and a mild detergent.
- 4 Dry the filter in the shade.
- 5 Insert the air filter in the air intake.

Tips for Maintenance

Before Long Periods of Disuse

- 1 Operate the air conditioner in the **Fan mode** for 2 to 3 hours.
 - This will dry out the internal mechanisms.

- 2 Turn off the appliance.

- 3 Turn off the breaker.

After Long Periods of Disuse

- 1 Clean the air filter and install it in the indoor unit.
- 2 Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.
- 3 Check that the ground wire is connected correctly.
 - The ground wire may be connected to the side of the indoor unit.

TROUBLESHOOTING

Before Calling for Service

Please check the following before you contact the service centre. If the problem persists, contact your local service centre.

NOTE

- Some functions may not be supported, depending on the model.

Operation

Symptoms	Possible Cause & Solution
The appliance does not work normally.	Burning smell and strange sounds are coming from the appliance. <ul style="list-style-type: none"> • Turn off the appliance, switch off or disconnect the power supply, and contact a service centre.
	Water leaks from the indoor unit even when the humidity level is low. <ul style="list-style-type: none"> • Turn off the appliance, switch off or disconnect the power supply, and contact a service centre.
	The power cable is damaged or it is generating excessive heat. <ul style="list-style-type: none"> • Turn off the appliance, switch off or disconnect the power supply, and contact a service centre.
	A switch, a circuit breaker (safety, ground) or a fuse is not operating properly. Has the fuse blown or has the circuit breaker been tripped? <ul style="list-style-type: none"> • Turn off the appliance, switch off or disconnect the power supply, and contact a service centre.
	The appliance generates an error code from its self-diagnosis. <ul style="list-style-type: none"> • Turn off the appliance, switch off or disconnect the power supply, and contact a service centre.
The fan speed cannot be adjusted.	The Jet mode or Auto Operation mode is selected. <ul style="list-style-type: none"> • In some operating modes, you cannot adjust the fan speed. Select an operating mode in which you can adjust the fan speed.
	The airflow generated by the air conditioner may be automatically adjusted during operation. <ul style="list-style-type: none"> • When the air conditioner reaches the set temperature, it reduces the airflow rate to avoid generating cool airflow when heating, or to minimize energy consumption and indoor humidity change when cooling.
The temperature cannot be adjusted.	The Fan mode or Jet mode is selected. <ul style="list-style-type: none"> • In some operating modes, you cannot adjust the temperature. Select an operating mode in which you can adjust the temperature.

Symptoms	Possible Cause & Solution
The appliance stops during operation.	The appliance is suddenly turned off. <ul style="list-style-type: none"> The Off Timer function may have timed out, which turns the appliance off. Check the timer settings.
	Have you made a mistake in timer operation? <ul style="list-style-type: none"> Set the timer correctly.
	A power failure has occurred during operation. <ul style="list-style-type: none"> Wait for the power to come back on. If you have the Auto Restart function enabled, your appliance will resume its last operation several minutes after power is restored.
The appliance does not work.	A fuse blew or the power supply is blocked. <ul style="list-style-type: none"> Replace the fuse or check if the circuit breaker has tripped.
	The appliance is unplugged. <ul style="list-style-type: none"> Check whether the power cord is plugged into the outlet or the power isolators are switched on.
	A power failure has occurred. <ul style="list-style-type: none"> Turn off the appliance when a power failure occurs. When the power is restored, wait 3 minutes, and then turn on the appliance.
	The voltage is too high or too low. <ul style="list-style-type: none"> Check if the circuit breaker has tripped.
	The appliance was turned off automatically at a preset time. <ul style="list-style-type: none"> Turn the appliance on.
	The battery orientation in the wireless remote control is incorrect. <ul style="list-style-type: none"> Make sure that the batteries are inserted correctly in your wireless remote control. If the batteries are placed correctly, but the appliance still does not operate, replace the batteries and try again.
	Are the indoor unit's air inlet or outlet vents obstructed? <ul style="list-style-type: none"> Remove the obstacles.
The appliance does not emit cool air.	Air is not circulating properly. <ul style="list-style-type: none"> Make sure that there are no curtains, blinds, or pieces of furniture blocking the front of the appliance.
	The air filter is dirty. <ul style="list-style-type: none"> Clean the air filter once every 2 weeks. See "Cleaning the Air Filter" for more information.

Symptoms	Possible Cause & Solution
<p>The appliance does not emit cool air.</p>	<p>The room temperature is too high.</p> <ul style="list-style-type: none"> In summer, cooling the indoor air fully may take some time. In this case, select the Jet mode to cool the indoor air quickly.
	<p>The room may have been very hot when the room air conditioner was first turned on.</p> <ul style="list-style-type: none"> Allow time for it to cool down.
	<p>Cold air is escaping from the room.</p> <ul style="list-style-type: none"> Make sure that no cold air is escaping through the ventilation points in the room.
	<p>The desired temperature is higher than the current temperature.</p> <ul style="list-style-type: none"> Set the desired temperature to a level lower than the current temperature.
	<p>There is a heating source nearby.</p> <ul style="list-style-type: none"> Avoid using heat generators like electric ovens or gas burners while the air conditioner is in operation.
	<p>Fan mode is selected.</p> <ul style="list-style-type: none"> During Fan mode, air blows from the appliance without cooling or heating the indoor air. Switch the operating mode to a cooling operation.
	<p>Outside temperature is too high.</p> <ul style="list-style-type: none"> The cooling effect may not be sufficient.
<p>The appliance does not emit warm air.</p>	<p>When the Heating mode starts, the vane is almost closed, and no air comes out, even though the outdoor unit is operating.</p> <ul style="list-style-type: none"> This is normal. Please wait until the appliance has generated enough warm air to blow through the indoor unit.
	<p>The outdoor unit is in Defrosting mode.</p> <ul style="list-style-type: none"> In Heating mode, ice and frost is built up on the coils when the outside temperature falls. The Defrosting mode reduces a layer of frost on the coil, and it should finish in approximately 15 minutes.
	<p>Outside temperature is too low.</p> <ul style="list-style-type: none"> The heating effect may not be sufficient.
<p>The air conditioner changes generated airflow during operation.</p>	<p>When the appliance reaches the desired temperature, the airflow rate reduces in order to avoid generating cool airflow during heating, or to minimize energy consumption and indoor humidity change during cooling.</p> <ul style="list-style-type: none"> This symptom is normal.
<p>It seems that condensation is leaking from the air conditioner.</p>	<p>Condensation occurs when the airflow from the air conditioner cools the warm room air.</p> <ul style="list-style-type: none"> This symptom is normal.

Performance

Symptoms	Possible Cause & Solution
The indoor unit is still operating even when the appliance has been turned off.	<p>The Auto Clean function is being operated.</p> <ul style="list-style-type: none"> Allow the Auto Clean function to continue since it reduces any remaining moisture inside the indoor unit. If you do not want this function, you can turn the indoor unit off.
The air outlet on the indoor unit is discharging mist.	<p>The cooled air from the appliance makes mist.</p> <ul style="list-style-type: none"> When the room temperature decreases, this phenomenon will disappear.
Water leaks from the outdoor unit.	<p>In the heating operations, condensed water drops from the heat exchanger.</p> <ul style="list-style-type: none"> Install a drain hose under the base pan. Contact the installer.
There is noise or vibration.	<p>A clicking sound can be heard when the appliance starts or stops due to movement of the reversing valve.</p> <p>Creaking sound: The plastic parts of the indoor unit creak when they shrink or expand due to sudden temperature changes.</p> <ul style="list-style-type: none"> Noise is normal during or after operation. It is not a sign of malfunction.
	<p>Flowing sound: This is the flow of refrigerant through the appliance.</p> <p>Blowing sound: This sound generates when compressed air is released into the atmosphere.</p> <p>This is the sound of the dehumidifying water being processed inside the air conditioning unit.</p> <ul style="list-style-type: none"> These are normal symptoms. The noise will stop.
Crack sound is heard.	<p>This sound is generated by the expansion or constriction of the front panel, etc. due to changes of temperature.</p> <ul style="list-style-type: none"> These are normal symptoms. The noise will stop.
The indoor unit gives off an odour.	<p>Odours (such as cigarette smoke) may be absorbed into the indoor unit and discharged with airflow.</p> <ul style="list-style-type: none"> If the smell does not disappear, you need to wash the filter. If this does not work, contact the service centre to clean your heat exchanger.
	<p>Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room.</p> <ul style="list-style-type: none"> If the smell comes out from walls, carpet, furniture or cloth item, clean it.
Remote control display is faint, or no display at all.	<p>Are the batteries depleted?</p> <ul style="list-style-type: none"> Replace the batteries with a new one.
	<p>Are the batteries inserted in the opposite + and - directions?</p> <ul style="list-style-type: none"> Make sure that the + and - terminals of the batteries are oriented correctly.

Calling for Service

Situations in which Calling for Service is Necessary

If the appliance is in one of the following situations, please call the service.

- Anything abnormal, such as a burning smell, loud noises, etc., occur;
 - Turn off the appliance and circuit breaker.
 - Never try to repair or restart the appliance yourself.
- Main power cord is too hot or damaged.
- Error code is generated by self diagnosis.
- Water leaks from the appliance even if the humidity is low.
- Any switch, circuit breaker(safety, earth) or fuse fails to work properly.

NOTE

- The user is responsible for routine checks and cleaning to avoid poor appliance performance.
 - In cases involving unusual or special situations and circumstances servicing must be carried out only by trained service personnel.
-

Disposal of Waste Batteries

- All batteries should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of your old batteries will help to prevent potential negative consequences for the environment, animal and human health.
- For more detail information about disposal of your old batteries, please contact your city office, waste disposal service or the shop where you purchased the product. Also You can contact our LG Support Representative Call center from below Link https://www.lg.com/sa_en/support/contact/

After Sales Service (Egypt Only)

- Shelf Life Time: 7 Years
- LG is committed to providing all spare parts of this appliance during the shelf life time.

Guidelines for Electrical Energy Saving

This manual shall include instructions for Electrical Energy saving related to operating air conditioner by the customer as follows:

- Select the temperature which is adjusted for cooling or heating mode to be energy saving so that room temperature is at a comfortable level.

In summer

Don't wait until the room is too hot. Turn the room air conditioner for cooling before that.

Avoid exaggeration in adjusting the temperature so that the room is very cold in the case of cooling mode because it leads to increased consumption of electrical energy as it is harmful to health.

In winter

Don't wait until the room is too cold, Turn the air conditioner for heating before that.

Avoid exaggeration in adjusting the temperature so that the room is very hot in the case of heating mode because it leads to increased consumption of electrical energy as it is harmful to health.

- Doors, windows and any other openings shall be closed inside the conditioned room to prevent leakage of the conditioned air outside and to prevent the non-conditioned air from entering the conditioned room to maintain the air conditioner efficiency.
- Make sure that the conditioned room is not exposed to direct sunlight. In case of exposure to sunlight, set down the curtains on windows to prevent exposure to sunlight and to maintain the efficiency of the air conditioner.
- Make sure that there is no obstructing to the movement of the air conditioned out of the air conditioner or the movement of return air to the device in order to maintain the efficiency of the device and the amount of air necessary for it, so take into account the absence of curtains, furniture or any obstructions in front of your air conditioner.
- Use the healthy economic function during the sleeping time to save electrical consumption and get comfortably healthy sleep while running the air conditioner for cooling or heating.
- Ensure the regularity of the air distribution in the place to be conditioned by the correct choice for the prompt movement of the air conditioned router by the operating system cooling or heating by:
 - Using automatic Swing function for horizontal movement router to the air conditioned.
 - Using Control the movement of horizontal movement router to the air conditioned.
 - Manual adjustment of the vertical routers to the air conditioned to the left or right as needed.
 - Instruction manual for installation and maintenance of the air-conditioner.

Memo

