

SIMPLE MANUAL

HIGH POWER ALL-IN-ONE SPEAKER SYSTEM

To view the instructions of advanced features,
visit <http://www.lg.com> and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

 
MODEL
FH6



www.lg.com



Top panel

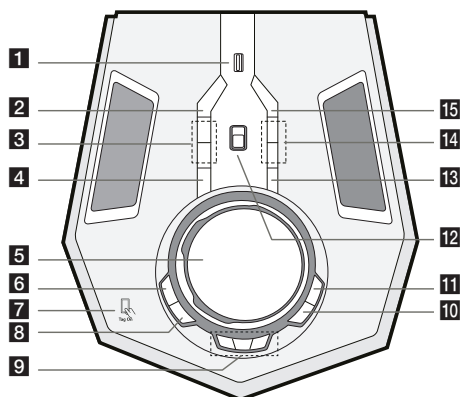

- 1** USB
You can play or record sound by connecting the USB device.
- 2** USB REC / DEMO
- Records to USB.
- Shows Demo mode.
- 3** MIC (Microphone) VOL +/-
- 4** VOICE CANCELLER
VOICE CANCELLER can reduce the Vocals of Singer in certain source/content allowing you to enjoy the music.
Press to switch this Mode On or Off.
- 5** SCRATCH / SEARCH & LEVEL CONTROL
- Turns clockwise or counterclockwise to make Scratch sound.
- Searches a folder or a file.
- Adjust DJ EFFECT level.
- 6** DJ EFFECT
Selects DJ EFFECT mode.
- 7** Tag On
You can easily connect to **Bluetooth** device through NFC Tag.

- 8** LIGHTING
- Turns ON/OFF the lighting effects.
- Press and hold to turn on/off the Flash Lighting.
- 9** CLUB, DRUM, USER (DJ PRO)
Press and hold to select CLUB, DRUM or USER sound effect for mix.
(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)
1, 2, 3 (DJ PRO PAD)
Press a desired sound pad.
- 10** OK
Selects a folder when searching a file.
- 11** SEARCH
Moves to folder or file in selection mode.
- 12** BLUETOOTH
Changes input source to the **Bluetooth**.
(Even in power off mode, if you press BLUETOOTH, then power is on and automatically changed to **Bluetooth** function.)
- 13** USER EQ / BASS BLAST
- Selects the sound effect created by your own.
- Press and hold to select BASS effect directly.
- 14** KEY CHANGER (# / b)
Changes the key to suit your vocal range.
- 15** WIRELESS LINK
Selects Wireless Party Link mode.

Controller App



 
 
Download the **Music Flow Bluetooth** App to your device.

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

Front panel / Rear panel

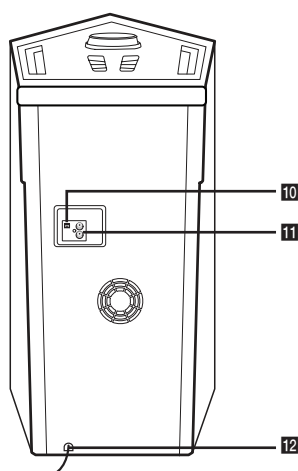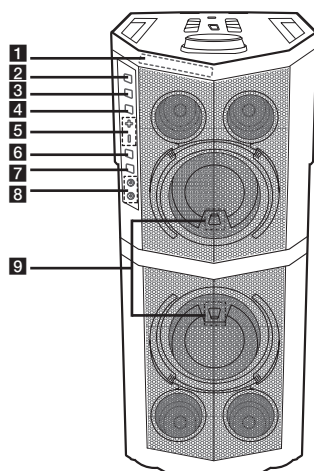


- 1** Display window
- 2** **>>I** (Skip/Search)
 - Skips forward.
 - Searches for a section within a file.
 - Selects the radio stations.
- 3** **>II** (Play/Pause)
 - Starts or pauses playback.
 - Selects Stereo/Mono (Horizon mode Only)
- 4** **I<<** (Skip/Search)
 - Skips backward.
 - Searches for a section within a file.
 - Selects the radio stations.
- 5** **+/-** (Volume)
 - Adjusts speaker volume.


- 6** **F** (Function)
 - Selects the function and input source.
- 7** **⏻/I** (Standby/On)
- 8** **MIC** (Microphone) **1 / 2** jack
- 9** Remote control receiver
- 10** **FM ANTENNA**
- 11** **AUX IN (L/R)**
- 12** Power cord

How to place the unit

 Vertical



Horizon

 

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 818 mm X 318 mm X 388 mm
Net Weight	Approx. 17.2 kg
Bus Power Supply (USB)	5 V  1 A
Amplifier (Total RMS output power)	600 W

Design and specifications are subject to change without notice.

 
Note

- Do Not look directly at the light emitting path when lighting function is operational.
- If the brightness from the illuminating light source causes excessive glare and eye discomfort during operation then turn On room lights or turn Off the LIGHTING of the unit.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

Replacement of battery

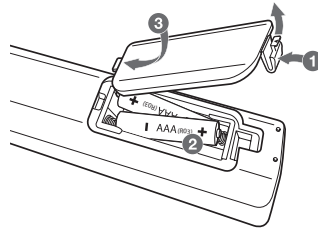



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

This device is equipped with a portable battery or accumulator.

Safety way to remove the batteries or the battery from the equipment: Remove the old batteries or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, to dispose of old batteries or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

CAUTION: No naked flame sources, such as lit candles, should be placed on the apparatus.

- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.
- If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing (of water or any form of liquid) or ingress of moisture.

RF Radiation Exposure Statement

This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

[illegible]

[illegible]

