



Life's Good

SIMPLE MANUAL

HIGH POWER SPEAKER SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

RL3



MFL70900919

1901_Rev01


www.lg.com

Copyright © 2020 LG Electronics Inc. All Rights Reserved.

ENGLISH



Top / Front Panel

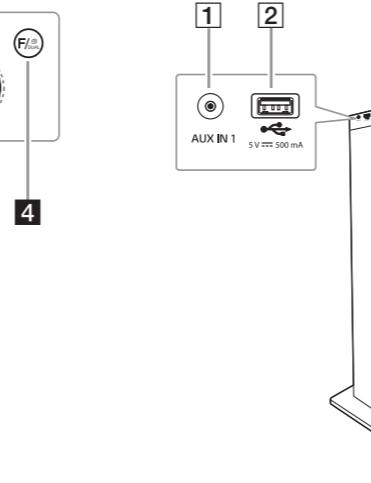


- 1** Display window
- 2** (Standby) Turns the power on or off.
- 3** (Skip/Search)
 - Skips backward or forward.
 - Searches for a section within a file.
 - Selects the radio stations.
- 4** (Play/Pause)
 - Starts or pauses playback.
 - Selects stereo/mono (DUAL mode only).
- 5** Adjusts speaker volume.

- 4** / (Function) / DUAL
 - Selects the function and input source.
 - Press and hold to connects two speakers for DUAL mode in WIRELESS PARTY LINK.

!
When two RL3 are connected via WIRELESS PARTY LINK, only MP3, OGG and WMA files can be played in USB mode.
Lossless Audio Codec [FLAC, M4A(ALAC), WAV] files are skipped automatically.

Side / Rear Panel

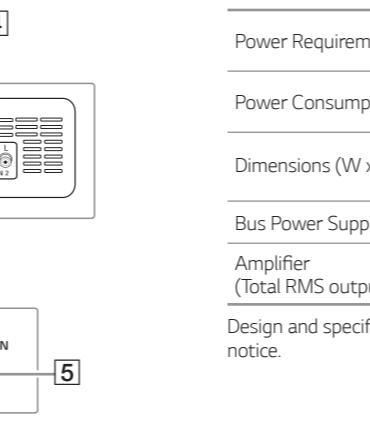

- 1** 5 V 500 mA AUX IN 1 Connect a portable device.
- 2** USB Port You can play sound files by connecting the USB device.
- 3** FM ANTENNA
- 4** AUX IN 2 (L/R) Connect an auxiliary device.
- 5** POWER IN


Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 235 mm x 962 mm x 250 mm
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS output power)	130 W RMS

Design and specifications are subject to change without notice.

Replacement of battery

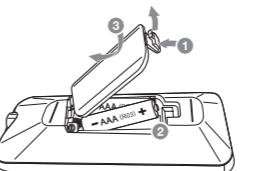

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord,

DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.

SAFETY PRECAUTION

THIS EQUIPMENT MUST BE DISCONNECTED FROM THE MAINS POWER SUPPLY WHEN IT IS NOT IN USE. DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE.

CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

The working life of this set is 7 years since the date of delivery to consumer. Upon the expiry of the said period, it might be unsuitable for the use according to their designation.

PRECAUTIONS

Please read these precautions before you operate this unit.

- Avoid extreme heat, cold, moisture and dust.
- Avoid using near a magnetic field. (This will adversely affect the units performance.)
- Be careful when the surface of the case is wiped with a volatile agent such as benzene, alcohol, thinner, etc. or a chemically processed cloth, the surface finish may deteriorate or its coating may peel.
- Use the unit only in a horizontal position, and do not place anything heavy on it.
- Keep the unit away from flower vases, tubs, sinks, etc. If any liquids should spill into unit, serious damage could occur. In that case, please consult qualified service personnel.
- Do not obstruct the ventilation holes: they prevent overheating. Even soft materials such as paper and cloth may prevent proper ventilation of the unit.
- **There are no serviceable parts inside. For service, please contact your service centre.**

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

JEDDAH MAIN SERVICE CENTER
P.O.BOX 704, JEDDAH 21421 KINGDOM OF SAUDI ARABIA
TEL) 02-629-2929

JEDDAH QUICK SERVICE CENTER
TEL) 02-663-3888 EXT. 340,343

RIYADH BRANCH SERVICE CENTER
TEL) 01-461-5559

AL KHOBAR BRANCH SERVICE CENTER
TEL) 03-857-2629/2637

