 


Pagination & Folding

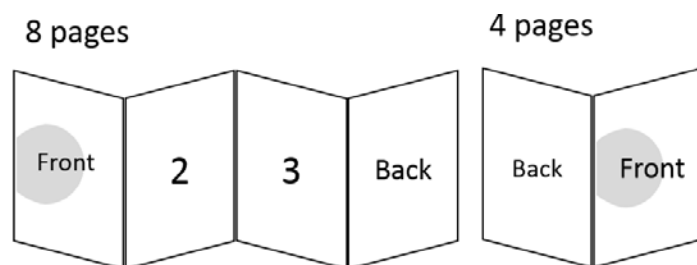

Printing Specifications

Material	Cover	Woodfree 80 g/m²	Note		LEE KYONG WON				
	Inner	Woodfree 80 g/m²							
Coating	Cover	Uncoated			Prepared	Description	Manual		
	Inner	Uncoated							
Color	Cover	1 color (Black)			2019-03-25	P/No.	MFL71422006		
	Inner	1 color (Black)							
Size		148 x 210 mm (A5 size_Folded size)			Checked	Ver.	1.1		
Binding Method		Only folding							
Book Binding		Folding 3 times			Approved				
Completed total pages		8							

SIMPLE MANUAL

DVD MINI
HI-FI AUDIO

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
OL55D



ENGLISH



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



CAUTION: This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

CAUTION: No naked flame sources, such as lighted candles, should be placed on the apparatus.

- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.
- If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing (of water or any form of liquid) or ingress of moisture.



RF Radiation Exposure Statement

This equipment shall be installed and used at a minimum distance of 20 cm from the human body.


Symbols

~	Refers to alternating current (AC).
---	Refers to direct current (DC).
Ⓜ	Refers to class II equipment.
⏻	Refers to stand-by.
I	Refers to "ON" (power).
⚡	Refers to dangerous voltage.





 Top panel

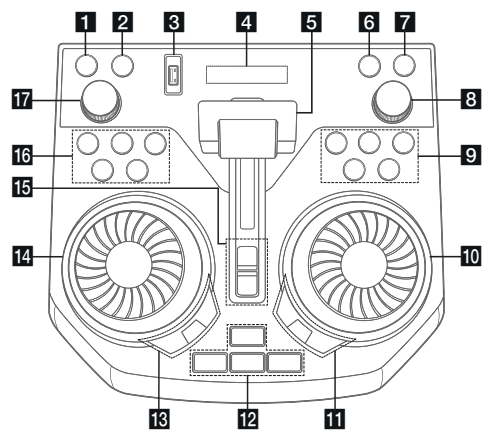

- 1** (Standby)
Turns the power on or off.
- 2** **USB REC / DEMO**
 - Records to USB.
 - Stops recording.
 - In power off status, if you press **USB REC / DEMO**, show demo mode.
- 3** **USB Port**
You can play sound files by connecting the USB device.
- 4** Display window
- 5** **PARTY ACCELERATOR** lever
Slide the lever to create a party atmosphere.
- 6** **F** (Function)
Selects the function and input source.
- 7** **TWIN**
Connects two speakers for TWIN mode in WIRELESS PARTY LINK.
- 8** **MASTER VOL.** (Volume) **-/+**
Adjusts speaker volume.
- 9** **/** (Skip/Scan)
 - Skips backward or forward.
 - Scans for a section within a track/file/chapter.
 - Selects the radio stations. (Play/Pause)
 - Starts or pauses playback.
 - Selects stereo/mono.

- (Stop)
Stops playback or cancels DELETE function.
- (Open/Close)
Opens and closes the disc tray.
- 10** **DJ SCRATCHER / SEARCH & MULTI**
 - Turns clockwise or counterclockwise to make scratch sound.
 - Searches a folder or a file (USB only).
- 11** **SPECIAL EQ / BASS BLAST** (or **BASS BLAST+**)
 - Chooses special equalizer.
 - Press and hold to select BASS (or BASS+) effect directly.
- SEARCH**
Moves to folder or file in selection mode (USB only).
- OK**
Selects a folder when searching a file.
- 12** **PARTY STARTER**
 - In power off state, this function turns on the unit with Party Kick Starter sound.
 - In power on state, this function mixes the music with Party Kick Starter sound.
- CLUB, DRUM, USER** (DJ PAD)
Selects CLUB, DRUM or USER sound effect to mix.
(If you want to use USER, you have to register a source with "LG XBOOM" app.)
- 1, 2, 3** (DJ PAD)
Press a desired sound pad.
- 13** **DJ EFFECT**
Selects a desired DJ effect.
- USER EQ**
Selects the equalizer created by your own.
- LIGHTING**
Selects the lighting mode.
- 14** **DJ SCRATCHER / LEVEL CONTROL**
 - Turns clockwise or counterclockwise to make scratch sound.
 - Turns clockwise or counterclockwise to control the USER EQ level.
 - Adjust DJ EFFECT level.
 - Selects the vocal effects.
 - Selects the lighting effects.
- 15** **PARTY ACCELERATOR MODE**
Selects PARTY ACCELERATOR MODE.
- DJ LOOP**
Selects DJ LOOP mode.
(DJ LOOP mode can use during USB playback.)

- 16** **KEY CHANGER** (/)
Changes the key to suit your vocal range.

 
VOICE CANCELLER
You can reduce the vocal tones during music playback from various input sources.

VOCAL EFFECTS
Selects various vocal effects mode.


MIC ECHO
Selects ECHO mode.

- 17** **MIC VOL.** (Microphone Volume) **-/+**
Adjust microphone volume.

Front panel / Rear panel

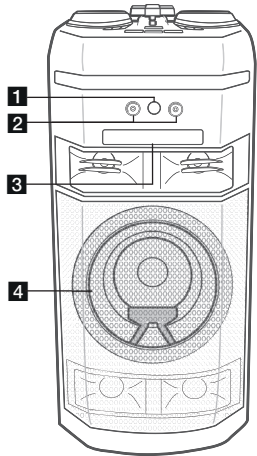

 - 1** (Remote sensor)
- 2** **MIC**(Microphone) **1/2** jack
- 3** Disc tray
- 4** Lighting


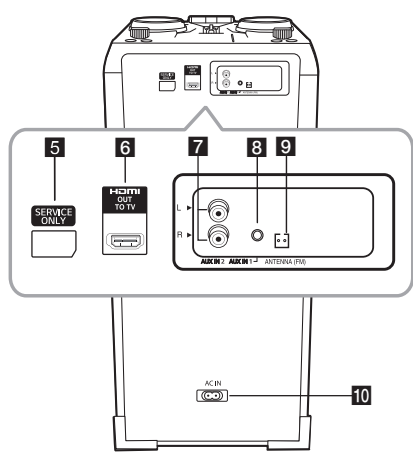


- 5** **SERVICE ONLY:** S/W download connector
- 6** **HDMI OUT TO TV:** Connect to TV
- 7** **AUX IN 2** (L/R): Connect an auxiliary device.
- 8** **AUX IN 1:** Connect a portable device.
- 9** **ANTENNA** (FM)
- 10** **AC IN** socket

1 TV Connection

HDMI Connection :
Connect with the Player and TV using HDMI .

  - 1** Connect the Player to the TV using HDMI cable.
- 2** Set the input selector to HDMI on the TV.
- 3** Follow the instructions on the TV screen using remote control.

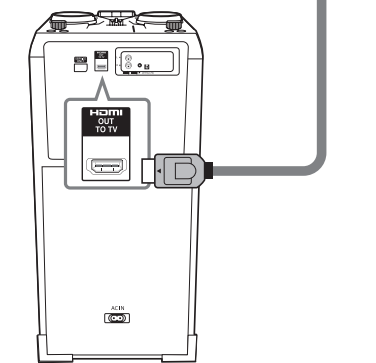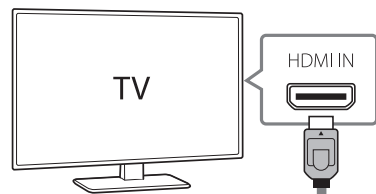

2 Home Menu

Home menu appears on the TV screen. Enjoy various functions on the player.



Home menu only appears on DVD/CD function.

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 330.0 mm x 716.0 mm x 318.0 mm
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS output power)	600 W RMS

Design and specifications are subject to change without notice.

 
Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

Replacement of battery

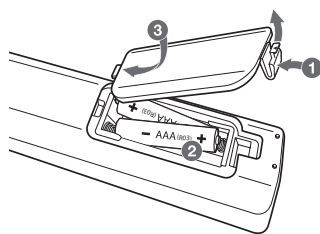

Controller App



Download the **LG XBOOM** App to your device.
(Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE