



To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.


MODEL CM4560



www.lg.com




Front Panel

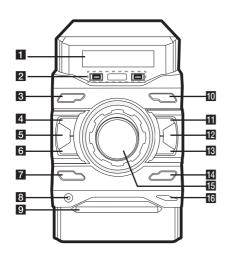

- Display window
- 2 USB1/USB2 : Plays the audio files by connecting the USB device.
 - R USB REC. : Records to USB.
- 3 ()/ (Power): Switches the unit ON or OFF.
- 4 (Stop): Stops playback or recording.
- **5 AUTO DJ**: Selects the AUTO DJ mode.
- 6 I

 ✓ (Skip/Search): Searches backward. / Skips to the previous track/file.
- 7 DEMO: Shows demo mode.
- 8 PORT. IN
- 9 Disc tray
- F / WIRELESS LINK: Selects the function and input source.
 / Press and hold for 3 seconds to select WIRELESS PARTY LINK mode.
- >II starts or pauses playback. / Selects Stereo/Mono.
- 12 REGION EQ: Chooses region equalizer.
- **II ≫ I** (Skip/Search): Searches forward. / Skips to the next track/file.
- 14 BASS BLAST: Selects BASS effect directly.
- 15 MASTER VOLUME: Adjusts volume of speaker.
- 16 △ (Open/Close): Opens or closes the disc tray.

Rear Panel

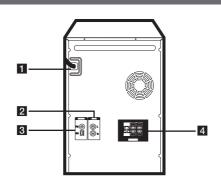

- 1 POWER IN
- 2 AUX IN (L/R) connectors
- 3 ANTENNA (FM/AM)
- 4 SPEAKERS terminal/cord

Controller App



Download the **Music Flow Bluetooth** App to your device.

LG Sound Sync (Wireless)






For more information, download the online owner's manual. http://www.lq.com

10:53:28

Speaker Connection

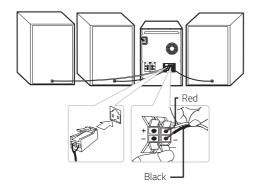

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

Replacement of battery



Additional Information

Specifications

Refer to the main label on the unit.
Refer to the main label on the unit.
Networked standby : 0.5 W
(If all network ports are activated.)
Approx. 206 mm x 308 mm x 284 mm
Approx. 3 kg
5 V === 500 mA
700 W

Design and specifications are subject to change without notice.

