 
 
 
 
 


Quick Start Guide

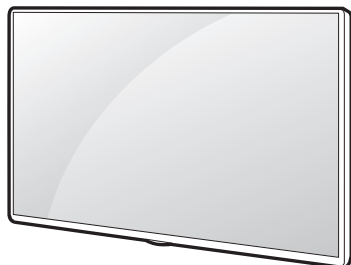

X 2



X 2



X 2

c



X 4

(M4 X L20)

49/55UT761H*

X 8

(M4 X L20)

43/49/55UT665H*

 
 
d



X 4

(M4 X L12)

49/55UT761H*

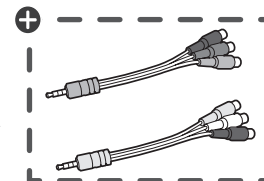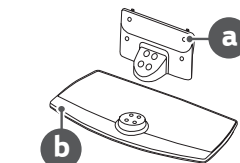

www.lg.com

Image may vary depending on models

Unpacking

Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.

+ : Depending on model
Depending on country



English

- Read **Safety and Reference**.
- For the power supply and power consumption, refer to the label attached to the product.




CAUTION


Image shown may differ from your TV.

When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

 
1

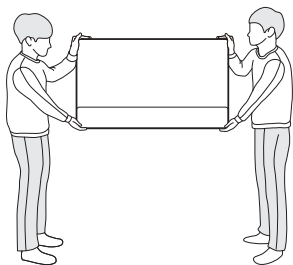


2

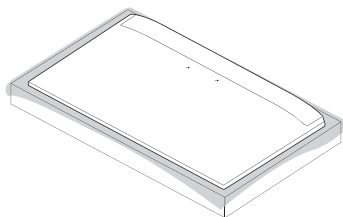 


3

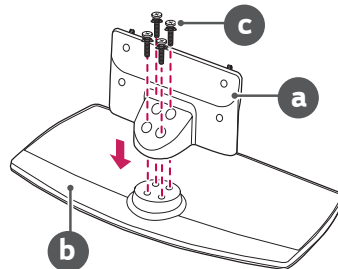 


4

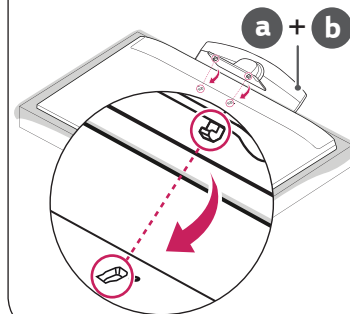 


5-A 49/55UT761H*

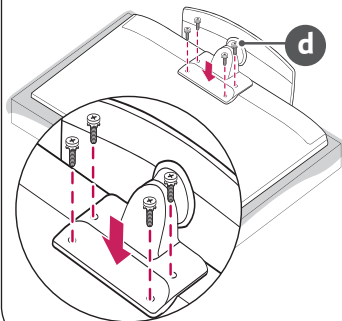 


5-B 43/49/55UT665H*

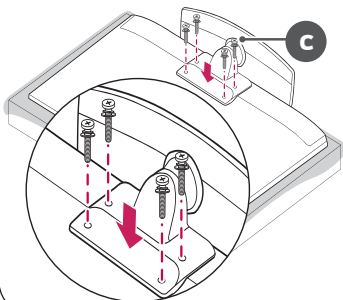 


6


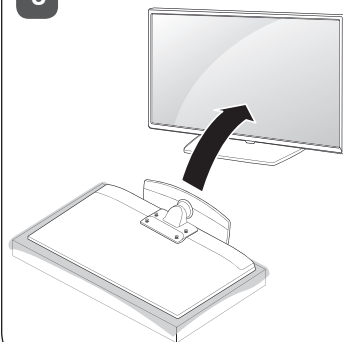 


7


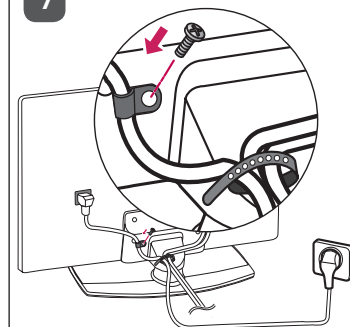 


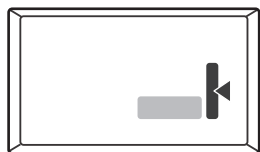 


HDMI IN/ARC

  

USB IN

  


PCMCIA CARD SLOT

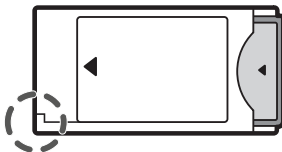  


 
NOTE

Image shown may vary depending on model.

 All connection cables & devices shown in the picture are not included along with the TV set.

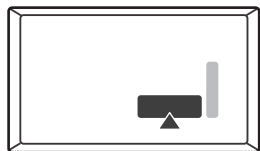


ANTENNA /
CABLE IN



Satellite IN



 HDMI IN



OPTICAL
DIGITAL
AUDIO OUT













EXTERNAL
SPEAKER OUT




NOTE

          Image shown may vary depending on model.
All connection cables & devices shown in the picture are not included
along with the TV set.

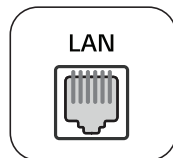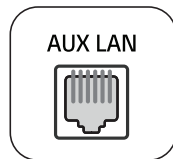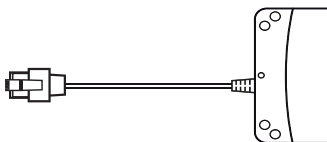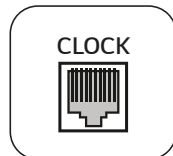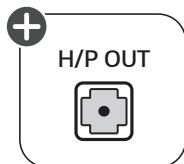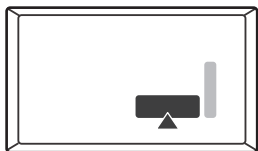


NOTE





 
Image shown may vary depending on model.
All connection cables & devices shown in the picture are not included
along with the TV set.

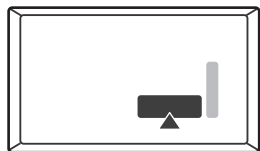

NOTE

      
Image shown may vary depending on model.
All connection cables & devices shown in the picture are not included
along with the TV set.

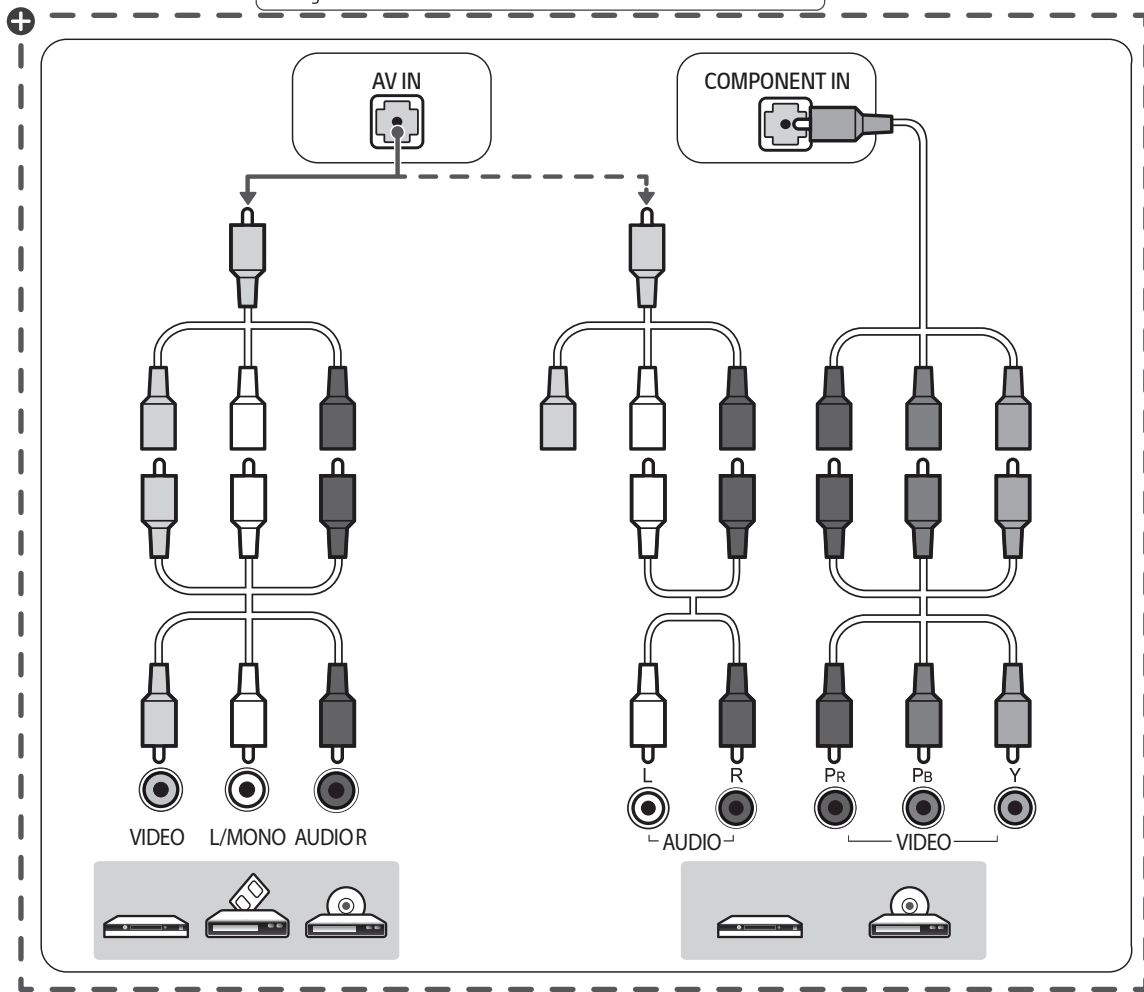

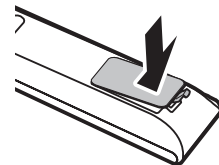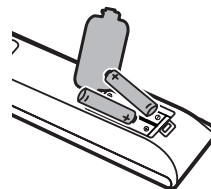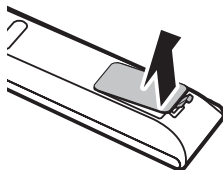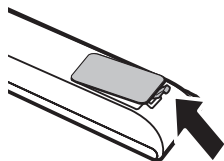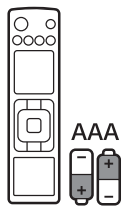

NOTE

 Image shown may vary depending on model.

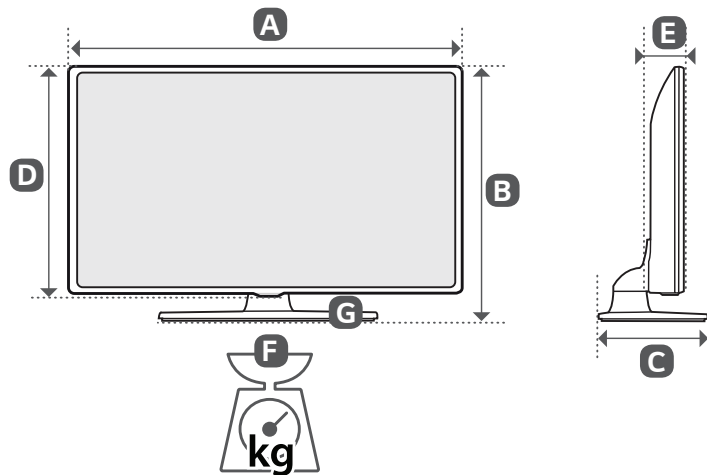

	A	B	C	D	E	F	F - G
	(mm)					(kg)	
43UT665H0VA	973	626	303	572	85.0	11.2	8.0
49UT665H0VA	1110	705	303	650	81.1	14.3	11.1
55UT665H0VA	1244	780	303	726	87.1	17.5	14.3
49UT761H0TA 49UT761H0GA	1096	697	303	640	63.6	17.2	14.0
55UT761H0TA 55UT761H0GA	1232	773	303	716	63.6	20.4	17.2
Power requirement					AC 100-240 V ~ 50 / 60 Hz		