 




OWNER'S MANUAL

LG Pra.L DUAL CLEANSER

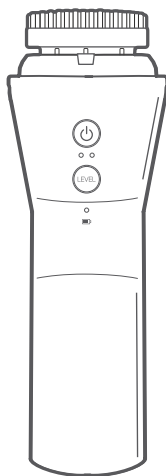

Please read this manual carefully before operating your set and retain it for future reference.

MODEL
BCL1

Copyright © 2019 LG Electronics Inc. All Rights Reserved.



MFL71383717

1910_Rev03

www.lg.com


Table of Contents

1 Skin Safety Information ··· 3	Voice Assistance Setting ··· 27
Recommendations for safe use of the product ····· 3	Language Setting ····· 27
	UV hygiene management function ····· 28
2 Setting up ····· 10	4 Troubleshooting ····· 29
Unique features ····· 10	Troubleshooting ····· 29
Notification ····· 11	
Parts ····· 12	5 Appendix ····· 30
Unit description ····· 13	Specifications ····· 30
	Maintenance ····· 32
3 Operation ····· 14	Handling the Unit ····· 32
Cleansing ····· 14	
Charging the battery ····· 18	6 Precautions for use ··· 33
Charging ····· 18	Safety Information ····· 33
Checking the charging status ··· 21	
Checking battery status ··· 22	
How to use the unit ····· 23	
Adjusting cleansing level and intensity ····· 23	
Brush ····· 24	
Change cleansing time ··· 27	

Recommendations for safe use of the product



 - Do not use this device if you are currently undergoing or underwent in the last 2 months, skin related procedures, cosmetic surgery or procedures for hair loss. Please only use it after consultation with a specialist.

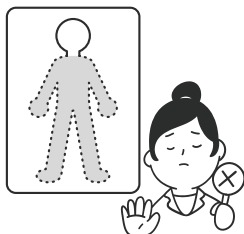


- Device to be used as a facial treatments only, it is not recommended for use on body.



- Do not use the device on mucous membranes including oral cavity. Do not place this device directly on your ear.
- When using this unit on the neck, avoid the part of the neck where the thyroid is located.

 
4 Skin Safety Information

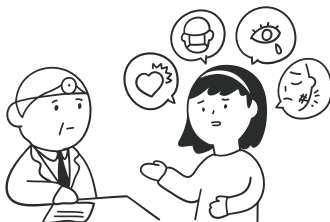

- The level of technology applied to Pra.L is weak strength that can cause minimal side effects, and the effects and safety of the device are verified by an external qualified agency, so the device is safe to use.
- However, in the case of people who have serious diseases or who are under treatment, please consult your doctor before use.
- Regardless of product use, the condition of your skin may change temporarily due to the change of season and external elements. In addition, internal factors such as drinking or stress can change the condition of skin. If the condition of skin changes, discontinue use. We recommend using the device after the skin condition returns to a normal state or after consulting your doctor.
- If you had thyroid-related diseases or if you are under treatment, we recommend using the device after consulting your doctor.
- Depending on individual skin condition, the device may cause a variety of skin irritations. If such irritation occurs, please stop use.



 - Device use not recommended for pregnant, menstruating or lactating women. (Unstable hormonal balance may cause temporary skin issues.)

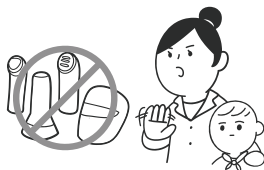

- Do not allow people to use who can not clearly express their own will, including infants.



- Do not use this unit immediately after shaving.

6 Skin Safety Information



- Do not use this unit while driving or walking.



- Do not use a head of the device (skin contact area) with it stopped in one place continuously, but please use it according to the guide of this manual.



- Before use, please remove the precious metal parts that this unit touches.



- Do not use the device for purposes other than those set out in this guide.



Q&A

Q1

What kind of cosmetics should I use?

It is recommended to use a rich foam cleansing product that fits your skin type. Avoid using scrub/peeling cleansing products, including small pills.

Q2 Micro-fine brush (hypersensitive deep cleansing) color was turned yellow.

If you use it without clearing the make-up, or after a period of recommended exposure or exposure to direct sunlight for a long time, the micro-fine brush (hypersensitive deep cleansing) may be discolored.

It is recommended to replace the micro-fine brush every 3 months (hypersensitive deep cleansing), and recommended not to leave it in direct sunlight for a long time.

Unique features

Soft and clean cleansing

Two types (silicone, micro-fine) brushes that can be easily replaced can give a moist and cleaner cleansing effect.

- **Silicone brush:** Micro vibration with two-stage adjustable is delivered to the soft hypoallergenic silicone brush, helping to cleanse beautifully.
Thin inside and thicker outward, the silicone is in the form of a spiraling Fibonacci pattern, enhancing detergency and minimizing skin irritation.
- **Micro-fine brush:** Micro-fine rotation with two-stage adjustable rotation provides soft cleansing without irritation.

UV charging cradle

When charging, UV light can be used to keep the brush clean.

Water-proof

This unit can be used safely even in the shower and cleaned under running water.

※ Water-proof effect can be weakened by natural wear of the unit.

Voice guidance

As voice guidance, guide how to care easily during use.

Notification

Symbols used in this manual

 Note

 
Indicates special notes and operating features.

 Caution


Indicates cautions for preventing possible damages from abuse.

 Note

Make sure that the brush is properly engaged before use.

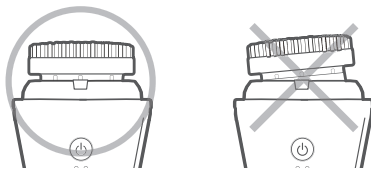

Parts

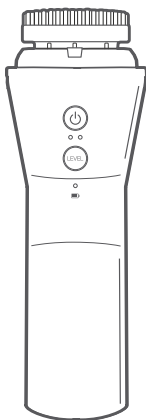 


Unit /
Silicone brush
(Daily gentle
cleansing)




Micro-fine brush
(Hypersensitive deep
cleansing)



 Brush cap (2)




Charging adapter

 

Charging cradle



 
Pouch




Owner's manual /
Quick start guide

Unit description

 Unit

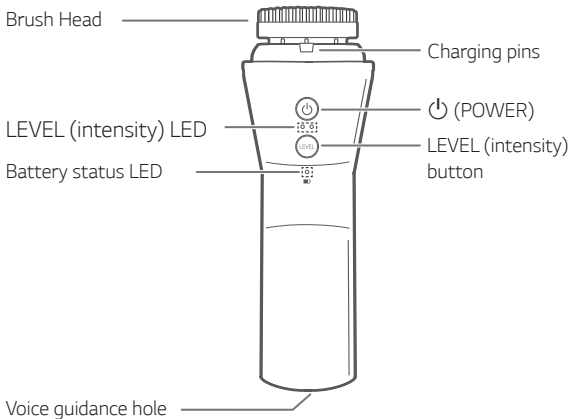

Charging cradle

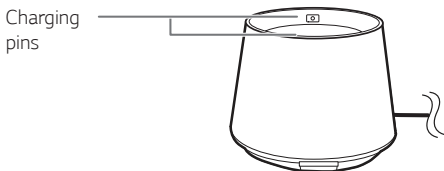 

Cleansing

Recommended usage period

The unit is recommended to use once a day.
If used more than 2 times, the skin may become sensitive.

Cleansing product

It is recommended to use a rich foam cleansing product that fits your skin type. Avoid using scrub/peeling cleansing products, including small pills.



Caution

Before use, please shake off the water well. If the water is guided into the voice guide hole, the voice guide sound may not be heard.

1. Remove the point makeup before cleansing using the unit.
2. Wet your face and brush head of unit with warm water.
3. Put cleansing product for your skin type on your face.


**Note**

 Making sufficient amount of bubble before cleansing is recommended.

4. Press the  (POWER) button to turn this unit on, then press the LEVEL button to select the cleansing level and intensity.
 - Silicone brush (Daily gentle cleansing): Vibration
 - Micro-fine brush (Hypersensitive deep cleansing): Rotation

**Note**

Hold the device naturally in a pencil grip when in use.

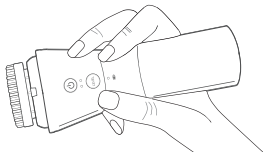


16 Operation


5. Depending on the voice guide function, cleansing the face by gently moving the brush in a small circle, avoiding around the eyes. Cleansing consists of 5 steps for the periods of 70 or 120 seconds. (Default setting: 70 seconds / Setting method: Page 27)

- **70 seconds** : ❶ Left cheek (10's) → ❷ Right cheek (10's) → ❸ Nose (20's) → ❹ Chin (10's) → ❺ Forehead (20's) → Power off

 - **120 seconds** : ❶ Left cheek (20's) → ❷ Right cheek (20's) → ❸ Nose (30's) → ❹ Chin (20's) → ❺ Forehead (30's) → Power off

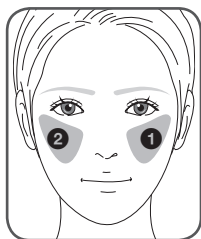


 When you hear the voice guidance or a sound effect, move the device head to gently cleanse both cheeks area in a small circle.

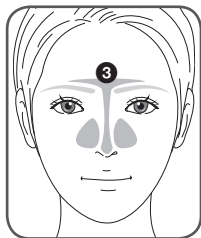


When you hear the voice guidance or a sound effect, slowly move the device head from your cheeks to your nose.

 Gently cleanse the nose area in a small circle.

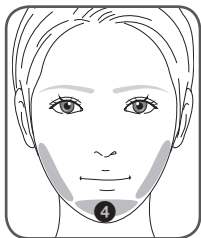

When you hear the voice guidance or a sound effect, slowly move the device head from your nose to your chin.

 Gently cleanse the chin area in a small circle.

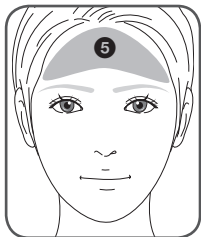

When you hear the voice guidance or a sound effect, use the device to gently cleanse around the forehead in a small circle.

This unit automatically turns off after cleansing.

6. After the cleansing, rinse with warm water and dry your face.
7. After use, remove this unit and brush, rinse in water, and shake to let out the water. Then wipe it with a dry towel or a cloth to remove moisture as much as possible and let it dry in a well-ventilated place.

**Note**

If you set the voice guidance function to mute, the unit doesn't provide voice guidance and beep sound.

Charging the battery

 
Charging

Charge the battery enough before using the unit.




Caution

- Always use the provided charging adapter.
- Using other charging adapters may cause malfunction and can not be repaired.
- Make sure that the brush cap is removed before placing the unit on the charging cradle.
- When charging the unit, charge it with the brush attached.

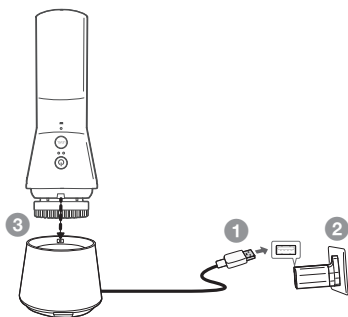

 1. Connect the charging adapter using the cable of charging cradle.
2. Connect the charging adapter to the power outlet.
3. Charging starts when you connect the unit into the charging pins of charging cradle.
(Ensure that the contact point of the device and the charging cradle match).

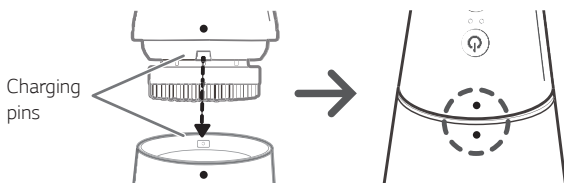

To check the battery charging, refer to checking the charging status or checking battery status. (Page 21-22)

20 Operation



Note

- After the battery is fully charged, unplug the power to save energy.
- The unit can be charged with a secondary battery with a current output of 1 A and more at 5 V voltage.
- Do not use unit during charging. Please use it after completed charging.

Checking the charging status



When you place the unit on the charging cradle, you can check the charge status of the battery through the battery status LED.

LED	Status
Red	Battery is charging.
Green	Battery is fully charged.

Checking battery status

When you disconnect the unit from the charging cradle, you can check the battery charge status via the battery status LED.

If the power turned on, you can check the charging status by pressing  (POWER) button. The battery status LED will change depending on the battery charging status.

LED	Status
Red (blinking)	The battery is low and needs to be charged. "Battery is low." An voice guidance or sound effect is provided and the red LED blinks. Then the power is automatically turned off.
Red	Battery is low. The red LED is turned on and maintained.
Green	Battery is charged. The green light turns on for three seconds and then disappears.



Note

If you set the voice guidance function to mute, the unit doesn't provide voice guidance and sound effect guide.

How to use the unit

Adjusting cleansing level and intensity



With the unit switched on, press LEVEL button, the cleansing level and intensity will be changed. It is recommended to choose the cleansing level and intensity.

The LEVEL LED will be changed depending on the cleansing level and intensity.

●: On / ○: Off

LED	Status	Description	
		Silicone brush	Micro-fine brush
● ○	Level 1	Weak vibration	Weak rotation
● ●	Level 2	Strong vibration	Strong rotation

Brush

Type	Description
Silicone brush (Daily Gentle cleansing)	With the Silicone brush, you can feel sanitary, safe and clean feeling of washing.
Micro-fine brush (Hypersensitive Deep cleansing)	With the Micro- Fine brush, you can feel the non-irritating and gentle cleansing.



 
Note

It is recommended to use the right brush for your skin.
(Depending on the skin condition of the individual, there may be skin irritation.)

Exchanging periods

Recommend Micro-fine brush (hypersensitive deep cleansing) replacement every 3 months for safer use.

How to replace the brush

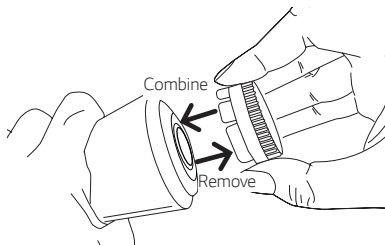


How to store (or dry)

After use, rinse in water and shake to let out the water.
Wipe the remaining moisture with a dry towel or cloth to dry. Keep the unit and brush in a dry, well-ventilated place.




Note

 Keep the brush with brush cap when storing the brush for a long time.

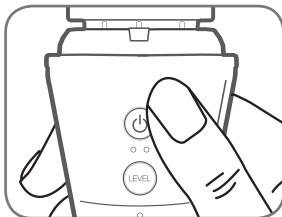


Change cleansing time

 With power off, press and hold the  (POWER) button until you hear the voice assistance. (About 5 seconds) (70's ↔ 120's)

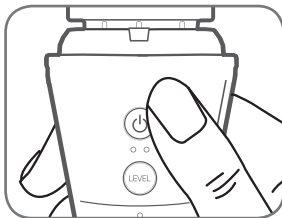

Voice Assistance Setting

 With the power on, press and hold the  (POWER) button for about 5 seconds each time. (Voice assistance → Sound effect guide → Turn off guide (Mute))

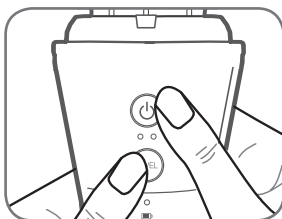


Language Setting

With power on, press and hold both  (POWER) button and LEVEL button simultaneously for about 3 seconds to cycle through each language: (English → Chinese → Korean)

UV hygiene management function

Remove moisture as much as possible, then plug the unit into the charging cradle matching with contact pins. UV hygiene management function is activated automatically when charging starts.

 UV light will turn off automatically after 30 minute.

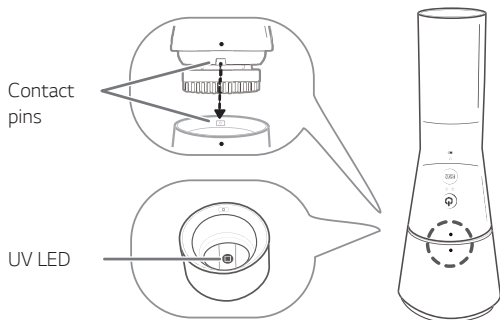

Caution

- Make sure that the brush cap is removed before placing the unit on the charging cradle.
- Keep the UV LED area clean so there is no foreign substance.

Troubleshooting

Symptoms	Cause & Solution
The unit does not operate normally.	• Make sure that you have pressed the on/off button properly. • Charge the unit according to the instructions in this manual. • Check if the battery status LED on the unit lights up when the unit is charging.
No Power	• The battery is discharged. Recharge the battery. • Connect the unit to the power supply with the charging adapter. • Check the charger to which you connect the unit is live. • Check whether the voltage indicated on the unit corresponds to the local mains voltage.
No voice guide	• If the water collected in the voice guide hole, the voice guide might not sound. Please shake off remaining water thoroughly prior to use. • There is Voice guide hole on bottom of the unit. Please hold the unit without blocking voice guidance hole. • Voice guide might be off. Refer to "Voice Assistance Setting" to turn on voice guide. (Page 27)

Specifications

Power supply (AC Adapter):

- Model: ADS-1 2BA-06Y 05010EPB C
- Manufacturer: Shenzhen Honor Electronic Co. , Ltd.
- Input: 100 - 240 V ~ 50 / 60 Hz Max. 0.3 A
- Output: 5 V  2 A

Dimensions (W x H x D):

- Approx. 57 mm x 174 mm x 51 mm (Unit)
- Approx. 73 mm x 55 mm x 69 mm (Charging cradle)

Operating temperature: 5 °C to 35 °C

Operating humidity: 0 % to 90 %

Recommended usage times: once per day

- ※ It is available for about 1 hours when use the unit with Level 2 mode (when equipped with a Micro-fine brush) after charging once.
- ※ Operating time may vary depending on the battery, ambient temperature and operating conditions.

Full charging time: Within 3 hours

- ※ Charging time may vary depending on the remaining capacity of the battery, ambient temperature, or charging conditions.

Water-proof: IPX7

- Based on International Standard IEC 60529 (Water-proof up to 1 meter for 30 minutes.)
- Test results of controlled laboratory condition
- Water-proof effect can be weakened by natural wear of the unit.
- Design and specifications are subject to change without notice.

Maintenance

Handling the Unit

When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

Keeping the exterior surfaces clean

- Do not use volatile liquids such as insecticide spray near the unit.
- Wiping with strong pressure may damage the surface.
- Do not leave rubber or plastic products in contact with the unit for a long period of time.

Cleaning the unit

To clean the unit, use a soft, dry cloth. If the surface is too dirty, use a soft cloth with water or a wet tissue.

Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

34 Precautions for use

CAUTION: No naked flame sources, such as lighted candles, should be placed on the apparatus.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

Check the specification page of this owner's manual to be certain of the current requirements.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

CAUTION: Only use the AC adapter supplied with this device. Do not use a power supply from another device or another manufacturer. Using any other power cable or power supply may cause damage to the device and void your warranty.

CAUTION when using this product in environments of low humidity

- It may cause static electricity in environments of low humidity.
- It is recommended to use this product after touching any metal object which conducts electricity.

For models using a battery

This device is equipped with a portable battery or accumulator.

How to Safely remove the batteries or the battery pack from the equipment: To Remove the old batteries or battery pack, follow the assembly steps in reverse order. To prevent contamination of the environment and bring on possible threat to human and/or animal health, the old batteries or the battery pack must be put in an appropriate container at designated collection points. Do not dispose of batteries or battery pack together with other waste. It is recommended that you use local, free reimbursement systems batteries or battery packs, (may not be available in your area). The batteries or the battery pack should not be exposed to excessive heat such as sunshine, fire or the like.

Symbols

~	Refers to alternating current (AC).
≡	Refers to direct current (DC).
⊞	Refers to class II equipment.
⏻	Refers to stand-by.
I	Refers to "ON" (power).
⚡	Refers to dangerous voltage.

1.  **WARNING:**
Suitable for use in a bath or shower.
2. The appliance is not to be used by persons (including children aged from 8 years) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children being supervised not to play with the appliance.
4. Cleaning and user maintenance shall not be made by children without supervision.
5. This appliance is only to be used with the battery charger provided.
6. For a part of class III construction supplied from a detachable power supply unit, the instructions state that the appliance is only to be used with the unit provided.
7. Instructions for class III appliances state that it must only be supplied at SELV.

38 Precautions for use

POWER: This unit operates on a mains supply of 100 - 240 V ~ 50 / 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Product storage and maintenance

- Do not drop the charging adapter into a drain or sink or place it in a place where it may fall into water or other liquids. Do not use a charging cradle in the shower or immerse in water.
- Do not touch the charging cable that is in the water and disconnect the charging adapter immediately.
- Keep the cord away from heated surfaces.
- Always use the provided charging adapter.
- If not used for a long time, charge the battery at least once every 3 months to maintain battery life.
- Do not prick the unit gap with sharp metal objects such as keys, hairpins, necklaces, or nails.
- Please keep it in the packing box. If it is necessary to carry the product, please repack it in the packing box at the time of purchase.
- Do not place volatile liquids, such as pesticides, near them.
- Wiping the unit surface hard can damage the unit.
- Do not place plastic products or rubber on the unit for a long time.
- To clean the unit, use a soft, dry cloth. If the surface is too dirty, use a soft cloth with water or a wet tissue.
Do not use strong chemicals such as alcohol, benzene or thinner as they may deteriorate the surface of the unit.
- Do not put the unit in dishwasher, oven, washing machine.
- Do not expose the unit to direct sunlight or do not expose it to hot or boiling water.

