



OWNER'S MANUAL

AIR CONDITIONER



Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times.

TYPE: Cassette 1-Way

ENGLISH

BAHASA INDONESIA

TIẾNG VIỆT

ภาษาไทย



MFL70362708
Rev.05_110723

www.lg.com

Copyright © 2018 - 2023 LG Electronics Inc. All Rights Reserved.

TABLE OF CONTENTS

This manual may contain images or content different from the model you purchased. This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE.....	3
WARNING.....	4
CAUTION.....	7

OPERATION

Product Overviews.....	10
Wireless Remote Control.....	11
Using the Mode Function.....	14
Using the Auto Operation Function.....	16
Using the Temperature Setting Function.....	17
Using the Fan Speed Function.....	17
Using the Air Flow Direction Function.....	18
Using the Optional Function.....	20
Using Special Functions.....	22
Timer Functions.....	24
Forced Operation.....	25
Test Operation.....	25
Auto Restart Function.....	25

MAINTENANCE

Clean the Air Filter.....	26
Cleaning the filter.....	27
Cleaning the Deodorization Filter/PM1.0 Filter (Optional).....	28
Cleaning the PM1.0 Sensor (Optional).....	30
Tips for Maintenance.....	31

TROUBLESHOOTING

Before Calling for Service.....	32
---------------------------------	----

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety Messages

 This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.

CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

The following symbols are displayed on indoor and outdoor units. (for R32)

 This symbol indicates that this appliance uses a flammable refrigerant. If the refrigerant is leaked and exposure to an external ignition source, there is a risk of fire.

 This symbol indicates that the Operation Manual should be read carefully.

 This symbol indicates that a service personnel should be handling this equipment with reference to the Installation Manual.

 This symbol indicates that information is available such as the Operating Manual or Installation Manual.

WARNING

WARNING

- To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Children in the Household

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Installation

- This appliance must be properly grounded to minimize risk of electric shock.
- Do not connect the ground wire to a gas pipe, a lightning rod, or a telephone ground wire.
- Install the panel and the cover of the control box safely.
- Contact an authorized service center when installing or relocating the air conditioner.
- Do not install the appliance on an unstable surface or in a place where there is danger of it falling.
- Do not install the unit in an area where there are flammable materials.
- Install dedicated electric outlet and earth leakage breaker before using the appliance.
- Do not install, remove, or reinstall the unit by yourself (customer).
- The indoor/outdoor wiring connections must be secured tightly, and the cable should be routed properly so that there is no force pulling the cable from the connection terminals. Improper or loose connections can cause heat generation or fire.

- When installing the unit, use the installation kit provided with the product.
- The appliance shall be installed in accordance with national wiring regulations.
- Do not use a defective or underrated circuit breaker.
- Do not plug multiple socket outlets, an extension power cable or adapter with this appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Use standard circuit breaker and fuse that conform to the rating of the air conditioner.
- Do not modify or extend the power cable. Scratches or peeling insulation on the power cables may result in fire or electric shock, and should be replaced.
- Make sure that the power cable is neither dirty, loose, nor broken.
- Turn off the power and unplug the power cord before you perform any maintenance; otherwise it may cause electric shock.
- Unplug the power plug during a severe thunderstorm or lightening or when not in use for a long period of time.
- Take care to ensure that power cable could not be pulled out or damaged during operation.
- Do not place any objects on the power cable.
- Do not plug or unplug the power supply plug to turn the unit ON/OFF.
- Appliance shall be disconnected from its power source during service and when replacing parts.
- Keep any required ventilation openings clear of obstruction. (for R32)
- Ducts connected to an appliance shall not contain an ignition source. (for R32)

Operation

- When the product is soaked (flooded or submerged) in water, contact an Authorized Service Center for repair before using it again.
- Use only the refrigerant specified on the air conditioner label.
- Do not touch the power plug or the appliance controls with wet hands.

- Do not place a heater or other heating appliances near the power cable.
- Do not allow water to run into electric parts. Install the unit away from water sources.
- Do not use flammable gas and combustible substances (benzene, gasoline, thinner, petroleum, alcohol, etc.) near the appliance.
- Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives.
- Be cautious that water could not enter the product.
- In outdoor unit the step-up capacitor supplies high voltage electricity to the electrical components. Be sure to discharge the capacitor completely before conducting the repair work.
- Be sure to use only those parts listed in the service parts list. Never attempt to modify the equipment.
- Do not use the product in a tightly closed space for a long time. Perform ventilation regularly.
- Do not open the front grille of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)
- If strange sounds, smell or smoke comes from product. Immediately turn the breaker off or disconnect the power supply cable.
- Be sure to ventilate sufficiently when the air conditioner and a heating appliance such as a heater are used simultaneously.
- Make sure that do not climb on or hit the outdoor unit.
- When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on. Do not use the telephone or turn switches on or off.
- Use a vacuum pump or Inert (nitrogen) gas when doing leakage test or air purge. Do not compress air or Oxygen and Do not use Flammable gases.
- Do not touch refrigerant pipe, water pipe and any internal parts while the unit is operating or immediately after operation.

Maintenance

- Safely dispose of packing materials such as screws, nails or batteries using proper packaging after installation or repair.

Technical Safety

- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification. (for R32)
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants. (for R32)
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation. (for R32)
- The appliance shall be stored in a room without continuously operating open flames (for example an operating gas appliance) and ignition sources (for example an operating electric heater). (for R32)
- The appliance shall be stored so as to prevent mechanical damage from occurring. (for R32)

CAUTION

CAUTION

- To reduce the risk of minor injury to persons, malfunction, or damage to the product or property when using this product, follow basic precautions, including the following:

Installation

- Two or more people must lift and transport the product.
- Do not install the air conditioner in an area where it is directly exposed to sea wind (salt spray).
- Install the drain hose properly for the smooth drainage of water condensation.
- Adjust the level after placing the appliance in the installation area.
- Install the air conditioner in a place where the noise from the outdoor unit or the exhaust fumes will not inconvenience the neighbors. Failure to do so may result in conflict with the neighbors.
- Be sure to check if there is a refrigerant leak after installing or repairing the air conditioner.
- Exercise caution when unpacking or installing the air conditioner.
- Do not touch the leaking refrigerant during installation or repair.
- Do not tilt the appliance to pull or push it when transporting.
- Do not mix air or gas other than the specified refrigerant used in the system.
- If the refrigerant gas leaks during the installation, ventilate the area immediately.
- Dismantling the unit, treatment of the refrigerant oil and eventual parts should be done in accordance with local and national standards.
- If anyone other than a licensed professional installs, repairs, or alters LG Electronics air conditioning products, the warranty is voided. All costs associated with repair are then the full responsibility of the owner.
- Do not install the unit in potentially explosive atmospheres.

Operation

- Do not use the product for special purposes, such as preserving foods, works of art, and etc. It is an air conditioner for consumer purposes, not a precision refrigeration system.
- Do not block the inlet or outlet of air flow.
- Never touch the metal parts of the air conditioner when removing the air filter.
- Do not place any object on the air conditioner.
- Do not insert hands or other objects through the air inlet or outlet while the air conditioner is operating.
- Never mix different types of batteries, or old and new batteries for the remote control.
- Dispose of the batteries in a place where there is no danger of fire.
- Stop using the remote control if there is a fluid leak in the battery. If your clothes or skin are exposed to the leaking battery fluid, wash off with clean water.
- If the leaking battery fluid has been swallowed, wash off the inside of the mouth thoroughly and consult a doctor.
- Do not let the air conditioner run for a long time when humidity is very high or when a door or a window has been left open.
- Do not expose people, animals, or plants to the cold or hot wind from the air conditioner for extended periods of time.
- Do not drink the water drained from the air conditioner.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.


Maintenance

- Use a soft cloth to clean. Do not use harsh detergents, solvents or splashing water etc.
- Clean the air filters once every 2 weeks, or more, if necessary.
- Use a sturdy stool or ladder when cleaning, maintaining, or repairing the air conditioner at a height.

OPERATION

Product Overviews

Indoor Unit

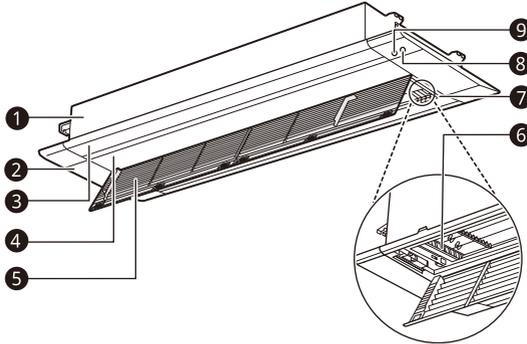

- | | |
|--------------------|-------------------|
| ① Main Body | ⑥ Air Filter |
| ② Side Cover | ⑦ Air Inlet |
| ③ Air Discharge | ⑧ Signal Receiver |
| ④ Front Panel | ⑨ Lamp |
| ⑤ Air Inlet Grille | |


NOTE

- The number and location of operation lamps may vary according to the model of the air conditioner.
- The feature may be changed according to the type of model.

Operating Method

The signal receiver is inside the unit.


- Point the remote control towards the signal receiver at the right side of the air conditioner to operate it.
 - There should not be any obstacles blocking the remote controller.

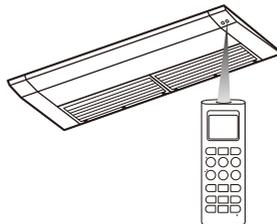

Wireless Remote Control

Inserting Batteries

- 1 Remove the battery cover by pulling it according to the arrow direction.
- 2 Insert new batteries making sure that the (+) and (-) of battery are installed correctly. (Battery Size = AAA).
- 3 Reattach the cover by sliding it back into position.

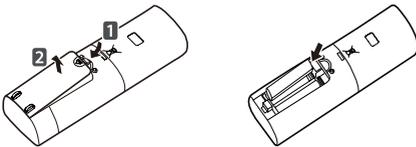


NOTE

- When using or replacing batteries, make sure that they are both the same type.
- If the system is not going to be used for a long time, remove the batteries to save their working life.
- If the display screen of the remote controller starts, fading replace both of the batteries.

Installing the Remote Control Holder

- 1 Choose a suitable place where its safe & easy to reach.
- 2 Fix the firmly to the wall with the supplied screws.
- 3 Slide the remote controller inside the holder.

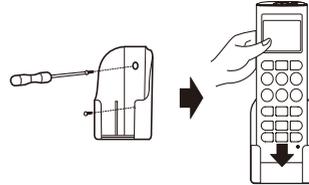


NOTE


- The remote controller should never be exposed to direct sunlight.
- The signal transmitter & receiver should always be clean for proper communication. Use a soft cloth to clean them.
- If other appliances are accidentally affected by the remote controller, change their position or consult your serviceman.

Using Wireless Remote Control

You can operate the air conditioner more conveniently with the remote control.

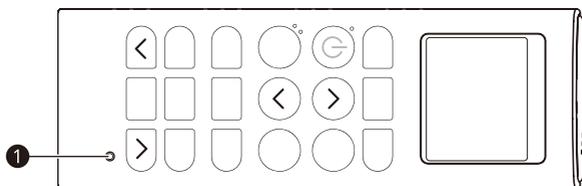

Button	Display Screen	Description
	-	Used to turn on/off the unit.
AIR PURIFY		Used to start or stop the air purification function.
PLASMA		Used to start or stop the plasma-purification function.
VANE ANGLE		Used to set each vane angle.
AIR FLOW		Used to set airflow.
	88 °C	Used to select the room temperature.
MODE	-	Used to select the operation mode.
JET MODE		To change room temperature quickly.
JET COOL		
FAN SPEED	-	To adjust the fan speed.
FUNC.	-	Used to set or clear additional function.
		To adjust the air flow direction vertically or horizontally.
ROOM TEMP		Used to check the room temperature.
SLEEP		Used to set the time for the sleep function.
ON	-	Used to set the start time.
OFF	-	Used to set the stop time.

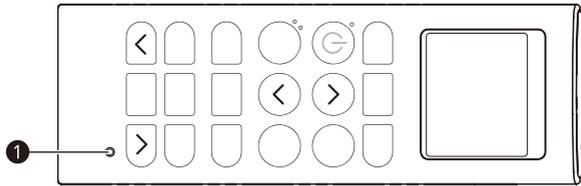

Button	Display Screen	Description
 	-	Used to set the timer. Used to adjust the brightness. Used to check the room temperature. (If it is not time adjust mode)
SET/CLEAR	-	Used to set/clear the timer. Used to set the current time. (hold button for 3 seconds)
1 RESET	-	To initialize the remote control settings.

NOTE

- Depending on the product type, some functions may not be available and displayed.
- Some products don't receive the wired signals.
- When using the simultaneous operation system, the system will operate approximately 1 - 2 minutes after pressing the remote controller button.
- The displayed temperature can be different from the actual room temperature if the remote controller is installed somewhere exposed to direct sunlight or is nearby a heat source.
- Depending on the product, wireless and wired remote control are optional or basic.
- Heating Mode is not available for Cooling only Models.
- Buttons may be changed according to the type of model.

Using the Mode Function

Cooling Mode

This cools the room with a comfortable and clean wind.

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Cooling Mode.
 -  is displayed on the display screen.
- 3 Press  or  button to set the desired temperature.
- 4 Press **FAN SPEED** button repeatedly to adjust the fan speed.

NOTE

- Press the **ROOM TEMP** button to check the Room temperature.
- When setting the desired temperature higher than the current room temperature, the unit will produce only ventilation wind.

Power Cooling Mode

This cools the room with a comfortable and clean wind.

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Cooling Mode.
- 3 Press **JET MODE** or **JET COOL** button.
 -  is displayed on the display screen.

NOTE

- To cancel the Power Cooling Mode, Press the **JET MODE** or **JET COOL** button, the **FAN SPEED** button or the **ROOM TEMP** button.
- This rapidly lowers the room temperature.
- Partial appliance has no Power Cooling function.
- The unit will operate at a high fan speed in cooling mode.
- The feature may be changed according to the type of model.

Dehumidification Mode

It removes humidity while slightly cooling the air.

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Dehumidification Mode.
 -  is displayed on the display screen.
- 3 Press **FAN SPEED** button repeatedly to adjust the fan speed.

NOTE

- The temperature setting can not be adjusted when this mode is operating.
- During rainy seasons or in high-humidity climates, it is possible to simultaneously operate the dehumidifier and cooling mode to remove humidity effectively.
- The menu item of wind powerfulness might not be partially selected according to the product.

Heating Mode

This supplies warm wind to the inside of the building.

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Heating Mode.
 -  is displayed on the display screen.
- 3 Press  or  button to set the desired temperature.
- 4 Press **FAN SPEED** button repeatedly to adjust the fan speed.

NOTE

- Press the **ROOM TEMP** button to check the Room temperature.
- When setting the desired temperature lower than the room temperature, the unit will produce only ventilation wind.
- Heating Mode is not available for Cooling only models.
- To check the indoor temperature, press the room temperature button.

Power Heating Mode

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Heating Mode.
- 3 Press **JET MODE** button.
 -  is displayed on the display screen.

NOTE

- Heating Mode is not available for Cooling only models.
- Some functions may not be supported, depending on the model.

Fan Mode

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Fan Mode.
 -  is displayed on the display screen.
- 3 Press **FAN SPEED** button repeatedly to adjust the fan speed.

NOTE

- Natural wind based on chaos logic
 - For a fresher feeling than other fan speeds, press the Indoor Fan Speed Selector and set to chaos mode. In this mode, the wind blows like a natural breeze by automatically changing fan speed based on the chaos logic.
- During Fan Mode
 - The outdoor compressor doesn't work. Have a function to circulate the indoor as it sends out the air that doesn't have much temperature difference with indoor.

Using the Auto Operation Function

Auto Operation Mode

This mode automatically sets the fan speed and temperature depending on the room temperature.

Cooling Only Model

In this mode, you cannot adjust the fan speed, but you can set the air deflector to rotate automatically.

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Auto Operation Mode.
 -  is displayed on the display screen.



- 3 Press  or  button to set the desired temperature.
 - Please select the code depend on your feeling.



Code	Description
2	Cold
1	Slightly cool
0	Neutral
-1	Slightly warm
-2	Warm

Cooling & Heating Model

This mode changes the mode automatically to maintain the set temperature at ± 2 °C

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Auto Operation Mode.
 -  is displayed on the display screen.



- 3 Press  or  button to set the desired temperature.
 - Setting temp range: 18 °C ~ 30 °C
- 4 Press **FAN SPEED** button repeatedly to adjust the fan speed.

Auto Changeover Mode - Setting the Mode Change Temperature

Cooling & Heating Model

The Mode Change Temperature is the difference of temperature when from cooling mode to heating mode or from heating mode to cooling mode.

- 1 In Auto Operation Mode, Press the **FUNC.** button to select Setting the Mode Change Temperature.
- 2 Press  or  button to set desired Mode Change Temperature.
 - Default value is 2 °C
 - Setting temp range: 1 °C ~ 7 °C



NOTE

- When setting temperature is 25 °C and room temperature is 20 °C, then operating mode is heating. If you set the mode change temperature to 2 °C, when the room temperature up to 27 °C(25 °C + 2 °C), the unit start cooling operation.

Using the Temperature Setting Function

Temperature Setting

Use this function to adjust the desired temperature.

- ⬆️ : Increase 1 °C or 1 °F each time pressed.
- ⬇️ : Decrease 1 °C or 1 °F each time pressed.

NOTE

- 5 °C is proper for the difference between room and outside temperature.
- Cooling operation
 - The cooling mode doesn't work if the desired temperature is higher than room temperature. Please lower the desired temperature.
 - Setting temp range: 18 °C ~ 30 °C
- Heating operation
 - The heating mode doesn't work if the desired temperature is lower than room temperature. Please increase the desired temperature.
 - Setting temp range: 16 °C ~ 30 °C
 - When pressing the **FAN SPEED** button of the remote controller for approx. 3 seconds, the room temperature will be displayed for about 5 seconds before returning to the previous display panel.
- Some functions may not be supported, depending on the model.

Switching Between Celsius/ Fahrenheit

- Press and hold the **ROOM TEMP** or **FUNC.** button long for 5 seconds to change from Celsius to Fahrenheit or from Fahrenheit to Celsius.

NOTE

- Some functions may not be supported, depending on the model.

Using the Fan Speed Function

Adjusting the Fan Speed

- 1 Turn the appliance on.
- 2 Press **FAN SPEED** button repeatedly to adjust the fan speed.

NOTE

- The menu item might not be partially selected according to product function.
- The feature may be changed according to the type of model.

Using the Air Flow Direction Function

Up/Down Airflow Direction Control (Optional)

The up/down airflow (Vertical Airflow) can be adjusted by using the remote controller.

- 1 Turn the appliance on.
- 2 Press  button.
 - The louvers will swing up and down.
- 3 Press the  button again to set the vertical louver at the desired airflow direction.

NOTE

- If you press the  button, the horizontal airflow direction is changed automatically based on the Auto Swing algorithm to distribute the air in the room evenly and at the same time to make the human body feel more comfortable, as if enjoying a natural breeze.
- Always use the remote controller to adjust the up/down airflow direction. Manually moving the vertical airflow direction louver by hand, could damage the air conditioner.
- When the unit is shut off, the up/down airflow direction louver will close the air outlet vent of the system.
- Some functions may not be supported, depending on the model.

Left/Right Airflow Direction Control (Optional)

The left/right (horizontal) airflow can be adjusted by using the remote control.

- 1 Turn the appliance on.
- 2 Press  button.
 - The louvers will swing left and right.
- 3 Press  button again to set the horizontal louver at the desired airflow direction.

NOTE

- Some functions may not be supported, depending on the model.

Indirect Wind (Optional)

It adjusts the wind direction to indirect wind.

- 1 Turn the appliance on.
- 2 Press **AIR FLOW** button repeatedly until  icon displayed.
- 3 Press **SET/CLEAR** button to set or cancel this function.

NOTE

- Some functions may not be supported, depending on the model.

Direct Wind (Optional)

It adjusts the wind direction to direct wind.

- 1 Turn the appliance on.
- 2 Press **AIR FLOW** button repeatedly until  icon displayed.
- 3 Press **SET/CLEAR** button to set or cancel this function.

NOTE

- Some functions may not be supported, depending on the model.

Smart Mode (Optional)

It is the function to set the Smart Mode operation of the product.

- 1 Turn the appliance on.
- 2 Press **AIR FLOW** button repeatedly until  icon displayed.
- 3 Press **SET/CLEAR** button to set or cancel this function.

NOTE

- Smart Mode function can only be selected in the cooling and heating modes.
- Smart Mode/Energy Saving Cooling/Refresh Mode functions cannot be set at the same time.
- Some functions may not be supported, depending on the model.

Refresh Mode (Optional)

It is the function to set the Refresh Mode operation of the product.

- 1 Turn the appliance on.
- 2 Press **AIR FLOW** button repeatedly until  icon displayed.
- 3 Press **SET/CLEAR** button to set or cancel this function.
- 4 When set, it is displayed with the animated effect in the order of  →  → .

NOTE


- Refresh Mode function can only be selected in the cooling and heating modes.
- Smart Mode/Energy Saving Cooling/Refresh Mode functions cannot be set at the same time.
- Some functions may not be supported, depending on the model.

Using the Optional Function


Individual Vane Angle Control (Optional)

This is the function that controls the vane angles individually in the ceiling cassette products.

- 1 Press **VANE ANGLE** button.
 - The individual vane angle control symbol will blink.

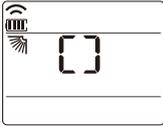

- 2 Set each vane angle by pressing **VANE ANGLE** button.

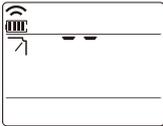

- 3 Press **SET/CLEAR** button to set or cancel this function.

NOTE

- There may be differences between the up/down/left/right buttons on the wireless remote controller and the wind discharge port directions.
- Set the desired angle while checking the movement and angle of the product's vanes.
- Some functions may not be supported, depending on the model.

Air Purification/Plasma Purification (Optional)

- Press **AIR PURIFY** or **PLASMA** button.
 -  is displayed on the display screen.

NOTE

- If you wish to stop, press **AIR PURIFY** or **PLASMA** button again.
- When **AIR PURIFY** button is pressed while the unit is stopped, Air Purification will start independently.
- Plasma filter is a technology developed by LG to get rid of microscopic contaminants in the intake air by generating a plasma of highly charged electrons. This plasma kills and destroys the contaminants completely to provide clean and hygienic air.
- This function can be used in any operation mode and any fan speed can be used while the plasma filter is functioning.
- Some functions may not be supported, depending on the model.

Smart Indicator (Air Quality) Always On Setting (Optional)

- Press the **AIR PURIFY** button for 3 seconds, Air quality level will always be displayed on Smart Indicator of the product.

NOTE

- Some functions may not be supported, depending on the model.

LCD Luminosity Control (Optional)

It is comfortable when you feel that the display of the unit too bright.

- Press the  button.

Checking the Air Quality Level During Air Purification Operation (Optional)

- Press the **AIR PURIFY** button for 3 seconds, Air quality level will always be displayed on Smart Indicator of the product.

Global

Display Color	Air Quality Level	Concentration of Dust ($\mu\text{g}/\text{m}^3$)	
		PM10	PM2.5/1.0
Green	Good	54 ↓	12 ↓
Yellow	Moderate	55 - 154	13 - 35
Orange	Unhealthy	155 - 254	36 - 55
Red	Poor	255 ↑	56 ↑

China/India

Display Color	Air Quality Level	Concentration of Dust ($\mu\text{g}/\text{m}^3$)	
		PM10	PM2.5/1.0
Green	Good	50 ↓	35 ↓
Yellow	Moderate	51 - 150	36 - 75
Orange	Unhealthy	151 - 250	76 - 115
Red	Poor	251 - 350	116 - 150
Pink	Very poor	351 - 420	151 - 250
Violet	Severe	421 ↑	251 ↑

NOTE


- The dust concentration is displayed from 8 to 999 by the unit of 1.
- The dust concentration referred to the data sheet of the sensor manufacturer.
- The dust concentration criteria for the PM1.0 dust were set based on the same criteria as the PM2.5 dust. (Company standard)
- The dust concentration and level displayed on the product may differ from other measuring instruments or other products.
- The displayed dust concentration values can differ from each other depending on the differences in dust measuring methods and also from the actual dust density.
- The dust concentration evaluation is carried out with our company's standard test dust.
- If you use a product generating steam or fine particles (humidifier, cooking appliances, sprays, etc.), the dust concentration may change.
- The dust concentration may vary depending on the installation environment and surrounding environment.
- It is also affected by sofas, beds, carpets, vacuum cleaners, humidity, smoke, bugs, pets, etc.
- It is affected by construction sites, roadsides and factories.
- Dust concentrations can be measured to be higher in an environment where external air is introduced, such as near the entrance, windows and ventilation openings.
- This is an additional function of the product and may not work in some products.
- The feature may be changed according to the type of model.
- Some functions may not be supported, depending on the model.

How to Set Air Quality Level Color (Optional)

- 1 With the **JET COOL** button pressed, press the reset button.



- 2 By using the \wedge or \vee button, set function code and setting value.

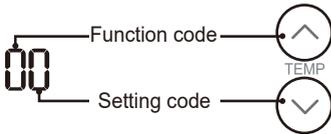

- 3 Press the $\text{\textcircled{P}}$ button toward the indoor unit 1 time.
 - Each countries have different standards for indicating Overall air quality. Please refer to table below.

Value	Step	Overall Air Quality
Type 1 (1 beep)	4 step (For Korea)	Good/Moderate/ Unhealthy/Poor
Type 2 (2 beep)	4 step (For Global)	Good/Moderate/ Unhealthy/Poor
Type 3 (3 beep)	6 step (For China)	Good/Moderate/ Unhealthy/Poor/ Very Poor/ Severe

- 4 Reset the remote controller to use the general operation mode.

NOTE

- The feature may be changed according to the type of model.
- Some functions may not be supported, depending on the model.

Using Special Functions

Setting Special Functions

- 1 Press **FUNC.** button repeatedly to select the desired function.
- 2 Press **SET/CLEAR** button to finish.

NOTE

- Some functions may not be supported, depending on the model.
- Some functions may operate differently from the remote control display.

Canceling Special Functions

- 1 Press **FUNC.** button repeatedly to select the desired function.
- 2 Press **SET/CLEAR** button to cancel the function.

Auto Clean (Optional)

In the Cooling and Dehumidification Mode, moisture is generated inside the indoor unit. This function removes such moisture.

-  is displayed on the display screen.

NOTE

- If you turn off the unit, the fan continues to run for 30 minutes and cleans the inside of the indoor unit.
- Some functions cannot be used while the Auto Clean function is in operation.

Smart Clean (Optional)

The Smart Clean function can be used by setting to manual or automatic.

-  is displayed on the display screen.

Auto Smart Clean Operation

If the accumulated operation time of the product exceeds 30 hours, the Smart Clean automatically starts when the unit is turned off.

Manual Smart Clean Operation

When the unit stop, press the **FUNC.** button to select Smart Clean.

NOTE

- The brush clean a dust from the filter by moving from left to right or from right to left on the filter. The sucked dust is collected into the dust box.
- Some functions may not be supported, depending on the model.

Energy Saving Cooling (Optional)

Energy Saving Cooling is the function to adjust the desired temperature during cooling operation to enhance the comfort of the user and improve the energy saving performance.

-  is displayed on the display screen.

NOTE

- It can be selected only during the cooling operation.
- When pressing Energy Saving Cooling while cooling at 22 °C or lower, it is automatically set to 22 °C
- During the Energy Saving Cooling operation, the temperature on the remote control may be displayed differently from the air conditioner display.
- Smart Mode/Energy Saving Cooling/Refresh Mode functions cannot be set at the same time.
- Some functions may not be supported, depending on the model.

Electric Heater (Optional)

It can only be set during heating operation.

-  is displayed on the display screen.

NOTE

- The indoor unit displays during the heating mode, the Auxiliary heater is automatically turned on, but it is not displayed on the wireless remote controller separately.
- It operates in Floor heating mode in Console products.
- Heating Mode is not available for Cooling only models.
- Some functions may not be supported, depending on the model.

Comfort Cooling (Optional)

This function is automatically control the cooling strength to maintain the pleasant feeling without turning off the product after the indoor temperature reached the desired temperature.

-  is displayed on the display screen.

NOTE

- It can be selected only during the cooling operation.
- Some functions may not be supported, depending on the model.

Timer Functions

Setting the Current Time

- 1 Press **SET/CLEAR** button for 3 seconds.
- 2 Press  or  button until the desired time is set.
 - If you press down and hold the button for a long time, the time will change more quickly in 10 minute increments.

NOTE

- Check the indicator for A.M. and P.M.

Sleep Timer Setting

- 1 Turn the appliance on.
- 2 Press **SLEEP** button to turn the timer on or off.



- 3 Press  or  button until the desired time is set.
 - 7 hours is the maximum setting.
- 4 Press **SET/CLEAR** button.

Setting the On Timer

- 1 Press **ON** button to turn the timer on or off.



- 2 Press  or  button until the desired time is set.
- 3 Press **SET/CLEAR** button.

Setting the Off Timer

- 1 Press **OFF** button to turn the timer on or off.



- 2 Press  or  button until the desired time is set.
- 3 Press **SET/CLEAR** button.

Canceling the Timer Setting

You can cancel all timer settings.

- Press **SET/CLEAR** button.


NOTE

- If you wish to cancel a specific timer setting, press the each timer button to turn on or off the Sleep Timer, On Timer, or Off Timer as you want. Then press the **SET/CLEAR** button while aiming the remote controller at the signal receptor.
- The timer lamp on the air conditioner and the display will go off.

Forced Operation

Forced operation is used when the remote controller can't be used.

- The operation will be started if the **Forced Operation** button is pressed.

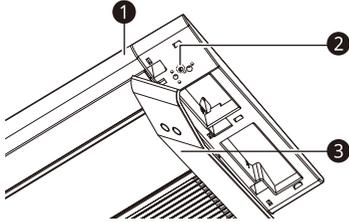

- ① Front Panel
- ② Forced Operation Button
- ③ Side Cover

Test Operation

During the TEST OPERATION, the unit operates in cooling mode at high speed fan, regardless of room temperature, and resets after 18 minutes. During test operation, if the remote controller signal is received, the unit can be set by the remote controller. If you want to use this operation, Press and hold the ON/OFF button for 3 ~ 5 seconds, then the buzzer sound 1 will 'beep'. If you want to stop the operation, re-press the button.

Auto Restart Function

This function is useful in the case of power failure. When power regains after a failure this feature restores the previous operating condition and the air conditioner will run in the same settings.

NOTE

- This feature is enabled by the factory default settings, but you can disable it by pressing and holding the ON/OFF button for 6 seconds. The unit will beep twice and the lamp will blink 8 times.
- To enable it, press the button again for 6 seconds. The unit will beep twice and the blue lamp will blink 4 times.

MAINTENANCE

⚠ WARNING



- Before cleaning or performing maintenance, disconnect the power supply and wait until the fan stops.

If the air conditioner will not be used for an extended period of time, dry the air conditioner to maintain it in best condition. Clean the product regularly to maintain optimal performance and to prevent possible breakdown.

- Dry the air conditioner in Fan mode for 3 to 4 hours and disconnect the power. There may be internal damage if moisture is left in its components.
- Before using the air conditioner again, dry the inner components of the air conditioner in Fan mode for 3 to 4 hours. This will help to remove the odor generated from moisture.

Clean the Air Filter

- 1 Remove the air filters from the indoor unit.
 - Hold the tab and pull slightly forward to remove the filter.
- 2 Clean the filters with a vacuum cleaner or with lukewarm water with neutral detergent.

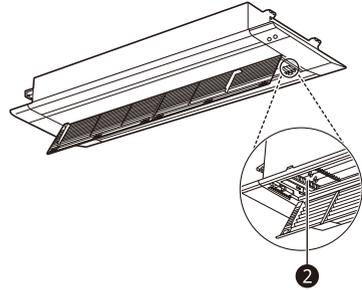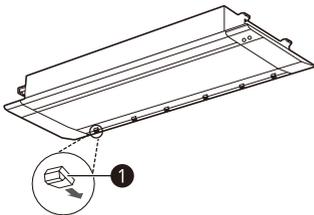

- 3 Dry the filters in the shade.

- 4 Install the Air filter.

- ① Rack
- ② Air Filter

⚠ WARNING

- Turn off the power and unplug the power cord before you perform any maintenance; otherwise it may cause electric shock.
- When the air filter needs to be removed, do not touch the metal parts of the indoor unit otherwise it may cause an injury.

⚠ CAUTION


- Never use water that is higher than 40 °C when you clean the filter. It may cause deformation or discoloration.
- Never use volatile substances when you clean the filter. They may damage the surface of the product.

NOTE


- Clean the air filter once every 2 weeks, or more, if necessary.

Cleaning the filter

- 1 Pull on the handles on both ends of the marked rear side of the front panel, then open the front grille and press down on the two hooks and remove the Pre-filter.

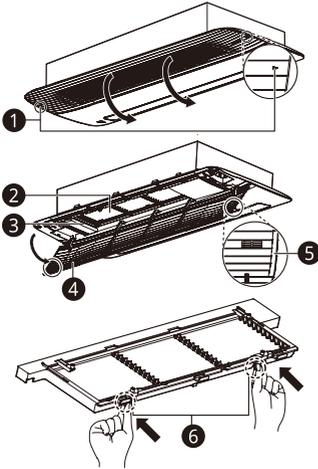

- 2 Clean with a vacuum cleaner or a soft brush.
 - If the filter is very dirty, wash using water and a neutral detergent.
- 3 Allow the filter to dry in the shade until completely dry.
- 4 Install the filter in the reverse order from which it was removed, then close the front grille.
 - When installing the filter, insert the hook in the square hole.

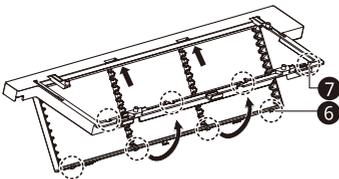

- 1 Marker
- 2 Pre-filter

- 3 Filter case
- 4 Front intake grille
- 5 Handle
- 6 Hook
- 7 Square hole

⚠ WARNING

- For safety, turn off the main power switch.

⚠ CAUTION


- Make sure that the filter is properly installed in the filter case. (When you insert the filter into the case and push the handle, you will hear a clicking sound when it is secured in place.)
- Be careful not to drop the front grille when removing the filter.
- Do not use volatile liquids or water that is 40 °C or hotter.
- Using the filter when it is not completely dry could cause the product to malfunction.
- Drying the filter near a fire or in direct sunlight may cause damage to the filter.
- When cleaning the filter, be careful not to damage the filter's mesh.

NOTE


- If dust gets in the filter, there could be a drop in cooling capacity.
- Clean around once every two weeks.
- If you have the filter cleaned at an LG Electronics Service Center, a separate fee may be charged. (paid service)
- The number and type of filters provided may differ depending on the model.
- Product shape and components may differ depending on the model.
- The feature may be changed according to the type of model.
- Some functions may not be supported, depending on the model.

Cleaning the Deodorization Filter/PM1.0 Filter (Optional)


- 1 Refer to 'How to Remove the Filter' when removing the filter.
- 2 Grab the handle on the filter case holder and pull in the direction of the arrow to remove the PM1.0 filter.
 - Do not remove the filter case holder and the intake grille.

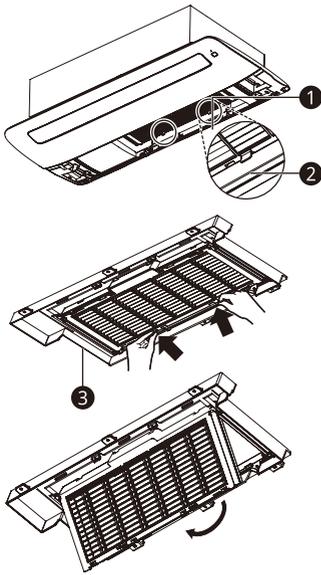

- 3 As shown in the figure, pull on the handle and remove the deodorization filter.

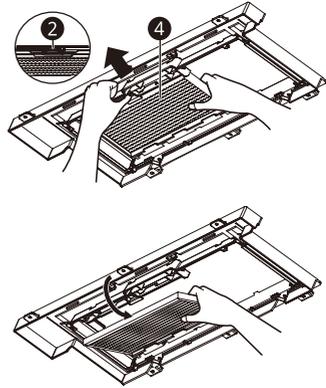

- 4 Wash the filter after checking the washing method in 'Filter Information'.
- 5 After washing, reinstall the deodorization filter and the PM1.0 filter to their original positions, respectively.
 - When installing the PM1.0 filter, insert the hook in the square hole.

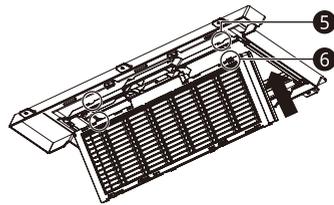

- ① PM1.0 filter
- ② Handle
- ③ Filter case holder
- ④ deodorization filter
- ⑤ Hook
- ⑥ Square hole

⚠ WARNING

- For safety, turn off the main power switch.

⚠ CAUTION

- Be careful that the filter case is correctly assembled to the filter holder.
- Be careful not to drop the front grille when removing the filter.
- Do not wash the dust filter with hot water over 40 °C or volatile liquids.
- Do not wash the photocatalytic Deodorization filter in water.
- After cleaning the PM1.0 filter, the buzzer sounds 7 times if the water is not completely dry. Dry the filter thoroughly.
- Drying the filter near a fire or in direct sunlight may cause damage to the filter.
- Wear gloves during installation.

NOTE

- The quantity and type of filters provided by each model may differ.
- The feature may be changed according to the type of model.
- Some functions may not be supported, depending on the model.


Filter Information

Filter Name	Filter Description
Deodorization filter 	<ul style="list-style-type: none"> • Dry for 3 hours in sunlight or under fluorescent light. • It is recommended to clean it every six months. (assuming 8 hours of daily use) • Washing the filter with water could damage or deform it.
PM1.0 filter 	<ul style="list-style-type: none"> • Clean the filter without disassembling it. • Submerge the PM1.0 filter in water, shaking it several times to clean it. • If the filter is very dirty, soak it for 30 minutes in lukewarm water with mild detergent and rinse thoroughly with clean water. (Do not use acidic detergents such as citric acid.) • It is recommended to clean it every six months. (assuming 8 hours of daily use) • Dry it thoroughly in the shade for about a day. (If there is any remaining moisture, the buzzer will sound 7 times.) Drying with a hot air heater, such as a hair dryer or a heater, could damage or deform the filter. • The inside of the filter is sharp, so do not rub or touch it directly.


Cleaning the PM1.0 Sensor (Optional)

PM1.0 Sensor


- 1 As shown in the figure below, put your finger in the indicator.

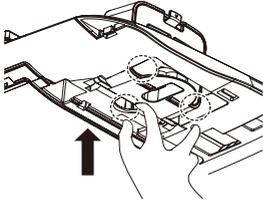


- 2 Open the front panel and lower the PM1.0 Sensor case as shown in the figure below.

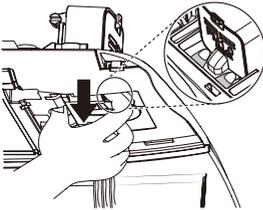


- 3 Once the PM1.0 Sensor case is lowered all the way, turn the PM1.0 Sensor case to secure it as shown in the figure below.

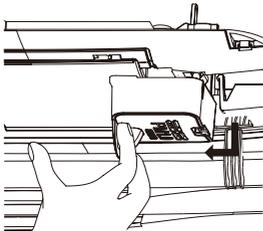

- 4 Open the PM1.0 sensor cover on the side of the case.

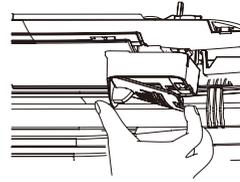

- 5 Use a slightly wet cotton swab to wipe dust off the lens, and then use a dry swab to remove the moisture.

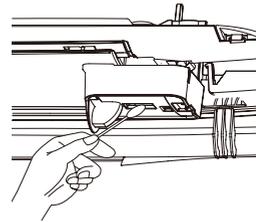

- 6 Close the PM1.0 Sensor case cover, then install the PM1.0 Sensor case in its original position.

⚠ WARNING

- For safety, turn off the main power switch.
- Be careful not to drop the product when removing the PM1.0 Sensor corner cover.
- Be careful of falling accidents when cleaning the PM1.0 sensor.

NOTE

- It is recommended to clean it every six months. (assuming 8 hours of daily use)
- PM1.0 Sensor is only included with Air purification panel.
- The feature may be changed according to the type of model.
- Some functions may not be supported, depending on the model.

Tips for Maintenance

When not in Use for a Long Time

- 1 Operate the air conditioner at the following settings for 2 to 3 hours.
 - Type of operation: Fan operation mode.
 - This will dry out the internal mechanisms.
- 2 Turn off the breaker.

CAUTION

- Turn off the breaker when the air conditioner is not going to be used for a long period of time.
 - Dirt may collect and may cause a fire.

NOTE

- Dust and impurities collected in the air filter may block the air flow or reduce the unit performance.

When Use again after a Long Period of Non-use

- 1 Clean the air filter and install it in the indoor unit.
- 2 Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.
- 3 Check that the ground wire is connected correctly.
 - The ground wire may be connect to the indoor unit side.

Operation Tips

- Do not overcool the room.
 - This is not good for the health and wastes electricity.
- Keep blinds or curtains closed.
 - Do not let direct sunshine enter the room when the air conditioner is in operation.
- Keep the room temperature uniform.
 - Adjust the vertical and horizontal airflow direction to ensure a uniform temperature in the room.
- Make sure that the doors and windows are shut tight.
 - Avoid opening doors and windows as much as possible to keep the cool air in the room.
- Clean the air filter regularly.
 - Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects. Clean at least once every two weeks.
- Ventilate the room occasionally.
 - Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

TROUBLESHOOTING

Before Calling for Service

Please check the following before you contact the service center. If the problem persists, contact your local service center.

Symptoms	Possible Causes & Solution
The air conditioner does not work normally.	Burning smell and strange sounds are coming from the unit. <ul style="list-style-type: none"> Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center.
	Water leaks from the indoor unit even when the humidity level is low. <ul style="list-style-type: none"> Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center.
	The power cable is damaged or it is generating excessive heat. <ul style="list-style-type: none"> Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center.
	A switch, a circuit breaker (safety, ground), or a fuse is not operated properly. <ul style="list-style-type: none"> Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center.
	The unit generates an error code from its self-diagnosis. <ul style="list-style-type: none"> Turn off the air conditioner, switch OFF, or disconnect the power supply, and contact the service center.
The air conditioner does not work.	The air conditioner is unplugged. <ul style="list-style-type: none"> Check whether the power cord is plugged into the outlet or the power isolators are switched on.
	A fuse exploded, or the power supply is blocked. <ul style="list-style-type: none"> Replace the fuse or check if the circuit breaker has tripped.
	A power failure has occurred. <ul style="list-style-type: none"> Turn off the air conditioner when a power failure occurs. When the power is restored, wait 3 minutes, and then turn on the air conditioner.
	The voltage is too high or too low. <ul style="list-style-type: none"> Check if the circuit breaker has tripped.
	The air conditioner was turned off automatically at a preset time. <ul style="list-style-type: none"> Turn the air conditioner on.
	The battery setting in the remote controller is incorrect. <ul style="list-style-type: none"> Make sure that the batteries are inserted correctly in your remote controller. If the batteries are placed correctly, but the air conditioner still does not operate, replace the batteries and try again.

Symptoms	Possible Causes & Solution
The air conditioner stops during operation.	The air conditioner is suddenly turned off. <ul style="list-style-type: none"> The Timer Function may have timed out, which turns the unit off. Check the timer settings.
	A power failure has occurred during operation. <ul style="list-style-type: none"> Wait for the power to come back. If you have the Auto Restart function enabled, your unit will resume its last operation several minutes after power is restored.
The indoor unit is still operating even when the unit has been turned off.	The Auto Clean function is being operated. <ul style="list-style-type: none"> Allow the Auto Clean function to continue since it removes any remaining moisture inside the indoor unit. If you do not want this feature, you can turn the unit off.
The air conditioner does not emit cool air.	Air is not circulating properly. <ul style="list-style-type: none"> Make sure that there are no curtains, blinds, or pieces of furniture blocking the front of the air conditioner.
	The air filter is dirty. <ul style="list-style-type: none"> Clean the air filter once every 2 weeks. Refer to the air filter cleaning instructions.
	The room temperature is too high. <ul style="list-style-type: none"> In summer, cooling the indoor air fully may take some time. In this case, select the Jet Mode to cool the indoor air quickly.
	Cold air is escaping from the room. <ul style="list-style-type: none"> Make sure that no cold air is escaping through the ventilation points in the room.
	The desired temperature is higher than the current temperature. <ul style="list-style-type: none"> Set the desired temperature to a level lower than the current temperature.
	There is a heating source nearby. <ul style="list-style-type: none"> Avoid using heat generators like electric ovens or gas burners while the air conditioner is in operation.
	Fan Mode is selected. <ul style="list-style-type: none"> During Fan Mode, air blows from the air conditioner without cooling or heating the indoor air. Switch the operation mode to cooling operation.
	Outside temperature is too high. <ul style="list-style-type: none"> The cooling effect may not be sufficient.

Symptoms	Possible Causes & Solution
<p>The air conditioner does not emit warm air.</p>	<p>When Heating Mode starts, the vane is almost closed, and no air comes out, even though the outdoor unit is operating.</p> <ul style="list-style-type: none"> This symptom is normal. Please wait until the unit has generated enough warm air to blow through the indoor unit.
	<p>The outdoor unit is in Defrosting Mode.</p> <ul style="list-style-type: none"> In Heating Mode, ice/frost is built up on the coils when the outside temperature falls. This function removes a layer of frost on the coil, and it should finish in approximately 15 minutes.
	<p>Outside temperature is too low.</p> <ul style="list-style-type: none"> The heating effect may not be sufficient.
<p>The air outlet on the indoor unit is discharging mist.</p>	<p>The cooled air from the air conditioner makes mist.</p> <ul style="list-style-type: none"> When the room temperature decreases, this phenomenon will disappear.
<p>Water leaks from the outdoor unit.</p>	<p>In the heating operations, condensed water drops from the heat exchanger.</p> <ul style="list-style-type: none"> This symptom requires installing a drain hose under the base pan. Contact the installer.
<p>There is noise or vibration.</p>	<p>A clicking sound can be heard when the unit starts or stops due to movement of the reversing valve. Creaking sound: The plastic parts of the indoor unit creak when they shrink or expand due to sudden temperature changes. Flowing or Blowing sound: This is the flow of refrigerant through the air conditioner.</p> <ul style="list-style-type: none"> These are normal symptoms. The noise will stop.
<p>The indoor unit gives off an odor.</p>	<p>Odors (such as cigarette smoke) may be absorbed into the indoor unit and discharged with airflow.</p> <ul style="list-style-type: none"> If the smell does not disappear, you need to wash the filter. If this does not work, contact the service center to clean your heat exchanger.

NOTE

- Some functions may not be supported, depending on the model.



PT.LG Electronics Indonesia

Gandaria 8 Office Tower LT.29 BC&31 ABCD, JL.Sultan
Iskandar Muda, Desa/Kelurahan Kebayoran Lama
Utara, Kec. Kebayoran Lama, Kota Adm. Jakarta
Selatan, Provinsi DKI Jakarta, 12240