 





## Additional Information

### Specification

|                                    |  |
|------------------------------------|--|
| Power requirements                 | Refer to main label.   |
| Power consumption                  | Refer to main label.   |
| Dimensions (W x H x D)             | Approx. 360 mm x 58 mm x 298.5 mm  |
| Bus Power Supply (USB)             | 5 V  500 mA |
| Amplifier (Total RMS output power) | 1,000 W RMS  |


Design and specifications are subject to change without notice.
 
### Replacement of battery

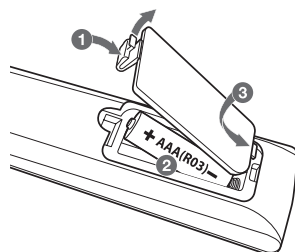

**POWER:** This unit operates on a mains supply of 200 - 240 V ~ 50 - 60 Hz.

**Wiring:** This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

**Warning:** A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

**Important:** The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

## SIMPLE MANUAL

# DVD Home Theater System

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit

<http://www.lg.com> and then download Owner's Manual.

Some of the content in this manual may differ from your unit.

MODEL

LHD677



MFL71404706

 
1909\_Rev01

[www.lg.com](http://www.lg.com)

Copyright © 2019 LG Electronics Inc. All Rights Reserved.




## Front Panel



**MIC 1/2** ..... Connect a microphone.  
**PORT. IN** ..... Connect to a Portable device.  
**USB Port** ..... Connect a USB device.  
**△** ..... Disc Tray Open / Close  
**>II** ..... Starts / Pauses playback.  
**□** ..... Stops playback.  
**F** ..... Changes the input source or function.  
**- / +** ..... Adjusts volume.  
**⏻ / I** ..... Power On / Off

## 1 Speaker Connection

 ! Speaker design and connection method may be different according to models.

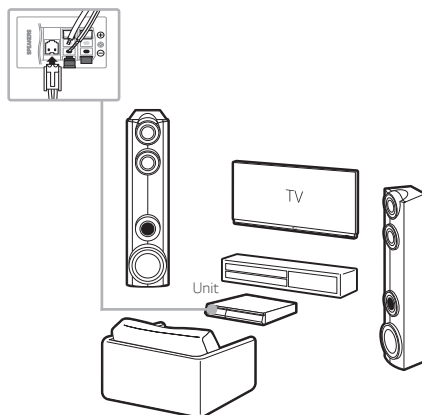

## Rear Panel

 


**SPEAKERS** ..... Connect to speakers.  
**HDMI OUT TO TV** ..... Connect to TV.  
**AUX (L/R) INPUT** ..... Connect to analogue device.  
**VIDEO OUT** ..... Connect to TV.  
**OPTICAL IN** ..... Connect to digital device.  
**ANTENNA FM** ..... Connect to radio antenna.

## 2 TV Connection

### HDMI & Optical Connection

- 1 Connect the Unit to the TV using HDMI & Optical cable.
- 2 Set the input selector to HDMI on the TV.
- 3 Set up [External Speaker (Optical)] on your TV setting menu.
- 4 Follow the instructions on the TV screen using remote control.

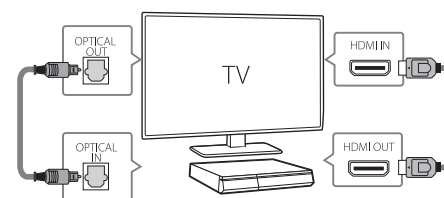

## 3 Home Menu

Home menu appears on the TV screen. Enjoy various functions on the unit.



For more information, download the online owner's manual. <http://www.lg.com>