



Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <a href="http://www.lg.com">http://www.lg.com</a> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL SK5




ENČINA POLSKI ROMÂNĂ LATVIEŠU HRVATSKI SRPSKI БЪЛГАРСКИ МАКЕДОНСК

www.lg.com Copyright © 2018-2019 LG Electronics Inc. All Rights Reserved.




## Front Panel

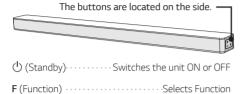

#### Rear Panel

+/- (Volume) · · · · · · Adjusts Volume

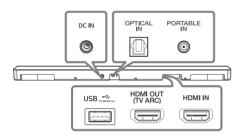

If the optical cable is not connected in the correct direction, it may cause damage of optical jack.

### 1 Subwoofer Connection

Place the wireless subwoofer near the speaker and follow steps below.

- 1 Connect the power cord of wireless subwoofer and sound bar to the outlet.
- 2 Turn on the main unit: The sound bar and wireless subwoofer will be automatically connected. The subwoofer's

#### Subwoofer Connection Manually

green LED turns on.

If the subwoofer does not make sound, try to connect manually.

- Press Pairing button on the rear of the wireless subwoofer.
  - The green LED on the rear of wireless subwoofer blinks quickly. (If the green LED does not blink, press and hold the Pairing button.)
- 2 Turn on the main unit.
- 3 Pairing is completed.
  - The green LED on the rear of wireless subwoofer turns on.


Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

#### 2 TV Connection

Connect with the Sound Bar and TV using Optical (A) or HDMI ARC (B).

#### A Optical Connection

- Connect the sound bar to the TV using Optical cable.
- Set up [External Speaker (Optical)] on your TV setting menu.

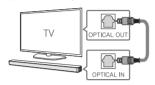

#### B HDMI(ARC) Connection


- 1 Connect the sound bar to the TV using HDMI cable.
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.



- HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal is a high priority.

#### Additional Device Connection

1 Connect to the external device as follows.

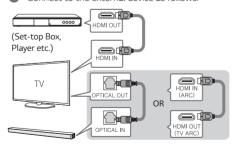

2 Set the input source by pressing **F** on the remote control or unit repeatedly.

#### Remote control




ASC/DTS V:X/STANDARD: Selects the sound effect.

NIGHT ON/OFF: Turns down the volume at night.

WOOFER +/-: Adjusts the volume level of subwoofer.

AUTO POWER ON/OFF: Automatically turns on by an input source.

#### Replacement of battery

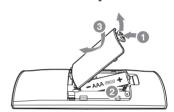

#### Additional Information

#### Specification

Refer to the main label.
Networked standby : 1.2 W (If all network ports are activated.)
<ul> <li>Model: DA-38A25</li> <li>Manufacturer: Asian Power Devices Inc.</li> <li>Input: 100 - 240 V ~ 50 - 60 Hz</li> <li>Output: 25 V == 1.52 A</li> </ul>
Approx. 891.0 mm X 57.5 mm X 87.8 mm With foot
5 V === 500 mA
360 W RMS

Design and specifications are subject to change without notice.

## How to disconnect the wireless network connection or the wireless device

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

# OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit http://opensource.lqe.com.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

#### **Declaration of Conformity**



Hereby, LG Electronics declares that the radio equipment type Wireless Sound Bar is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

http://www.lg.com/global/support/cedoc/cedoc#

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm
5730 to 5821 MHz	13 dBm

