



SIMPLE MANUAL

LG Wi-Fi Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

 
MODEL
SL10YG




www.lg.com
Copyright © 2019 LG Electronics Inc. All Rights Reserved.

ENGLISH

Remote control

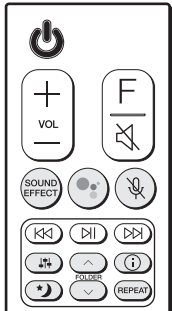

Replacement of Battery

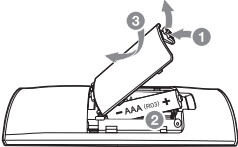 

- SOUND EFFECT:** Selects a sound effect mode.
- **TV remote:** Long press **SOUND EFFECT** and press it again to use TV remote control.
 - : Standby and Stops feedback of Google Assistant.
 - : Enables and disables Voice recognition.
 - : Adjusts sound level of each speaker.
 - **Surround sound:** Long press **•** and press it again.
- FOLDER** ^/∨: Searches a folder.
- : Displays the information of a file, an input source, a connected **Bluetooth** device name or an application name.
- **Auto Power ON/OFF:** Long press **•** and press it again.
 - : Turns on or off the Night time mode.
- REPEAT:** Listens to your files repeatedly or randomly.

Additional Information


Specification	
Power requirements	Refer to the main label.
Power consumption	Refer to the main label.
Dimensions (W x H x D)	Approx. 1443.0 mm x 63.0 mm x 146.0 mm
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS Output power)	570 W RMS

Design and specifications are subject to change without notice.


Rear Speakers Ready
Ready for surround sound with Rear Speakers Kit sold separately. (SPK8-S)



 CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



 This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: No naked flame sources, such as lighted candles, should be placed on the apparatus.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

For more information about Google's open source, visit device settings of Google Home app.

Disclaimers

- Google, Google Home, Google Play, Chromecast built-in and other related marks and logos are trademarks of Google LLC.
- Google Assistant requires an internet/data connection. Data rates may apply.
- The Google Assistant is not available in certain languages and countries.
- Subscriptions may be required, and additional terms, conditions and/or charges may apply.
- Controlling certain devices and features in your home requires a compatible smart device.




RF Radiation Exposure Statement

This equipment shall be installed and used at a minimum distance of 20 cm from the human body.


The use of the 5,150-5,350 MHz band is restricted to indoor use only. The restriction exists in the countries Australia (AU) and New Zealand (NZ). (For Wi-Fi/Bluetooth built-in model or Wi-Fi built-in model)

Symbols

	Refers to alternating current (AC).
	Refers to direct current (DC).
	Refers to class II equipment.
	Refers to stand-by.
	Refers to "ON" (power).
	Refers to dangerous voltage.

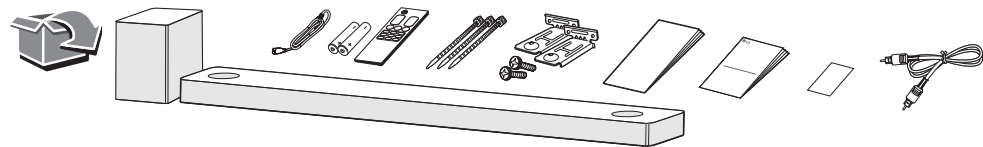 


Front Panel

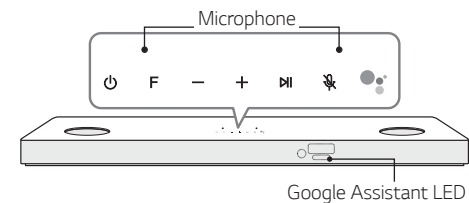 

- ⏻ (Standby) Switches the unit ON or OFF.
- F (Function) Selects function.
- +/− (Volume) Adjusts volume.
- ⏮/⏭ (Play / pause) Play / pause
- 🔇 (Mic mute) Enables and disables Voice recognition.
- ⦿ Standby and Stops feedback of Google Assistant.

 Rear Panel

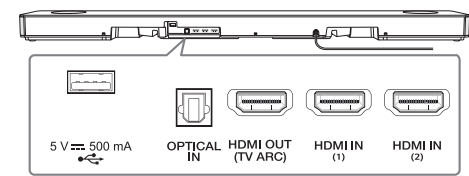

- 5 V 500 mA (USB) Connect to a USB device.
- OPTICAL IN Connect to an optical device.
- HDMI OUT (TV ARC) Connect to a TV.
- HDMI IN (1) / HDMI IN (2) Connect to device with HDMI OUT.

Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

- 1 Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
- 2 Turn on the sound bar.
 - The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.

Manually Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.

- 1 Press **Pairing** on the rear of the wireless subwoofer.
 - The green LED on the rear of the wireless subwoofer blinks quickly. (If the green LED does not blink, press and hold the **Pairing**.)
- 2 Turn on the sound bar.
 - Pairing is completed. The green LED on the rear of the wireless subwoofer turns on.

 
! Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

TV Connection

Connect the sound bar and TV using Optical (A) or HDMI ARC (B).


A Optical Connection

- 1 Connect the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

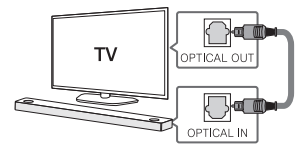

B HDMI (ARC) Connection

 - 1 Connect the sound bar to the TV using HDMI cable.
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.

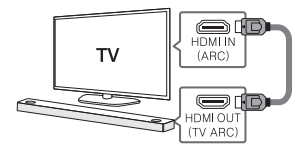


! HDMI connection is unavailable if your TV does not support HDMI ARC.

- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal is a high priority.


Additional Device Connection

 - 1 Connect to the external device like as follow.

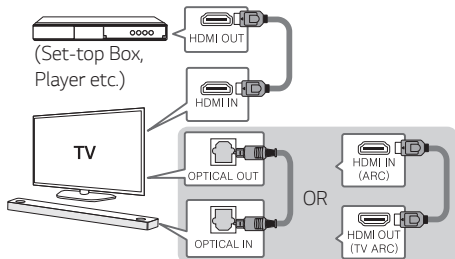

- 2 Set the input source by pressing **F** repeatedly.

 Network Connection

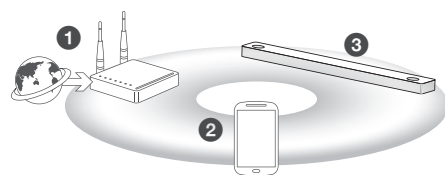

- 1 Check network condition. A router connected to network should be installed.
- 2 Connect your smart device to your home network.
- 3 Connect the sound bar to the power supply.

! All devices should be connected to same router.

Step.1 Install “Google Home” App

Download the Google Home App from the Google Play or App Store.

Step.2 Set up the Wi-Fi connection with app

- 1 Connect your smart device to the Wi-Fi network that you'll use for your speaker.


! In case of iOS devices, it should be turned on **Bluetooth** setting on your smart device.

- 2 Launch the “Google Home” app.
- 3 Follow the steps for Wi-Fi connection on the app.
 - When the speaker is properly connected to Wi-Fi, “CONNECTED” will appear on the display window with sound.

How to Use “Google Assistant”

Make sure the speaker is connected to Wi-Fi.

 
Case 1. Say “Ok Google”

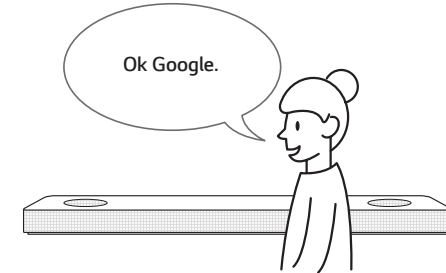

! The Google Assistant only responds to voice commands when you are using Wi-Fi or BT (**Bluetooth**) as the input.

If you are using HDMI, Optical, ARC, Optical Sound Sync, or USB input, then you must use the ⦿ button to activate the Google Assistant.

 Case 2. Press ⦿.

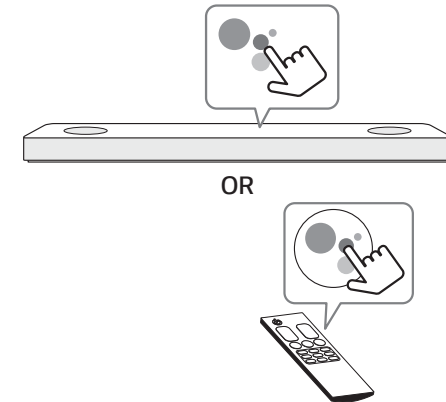

Voice command

- **Plan your day**
 - “Tell me about my day.”
 - “What’s my next meeting?”
 - “Set a reminder to check schedule at 6pm.”
- **Weather**
 - “What’s the weather?”
 - “What’s the weather on tomorrow?”
 - “What’s the weather in New York?”
- **Music**
 - “Play the music.” “Next song.”
 - “Previous song.” “Pause the music”
- **Availability**
 - “How many calories in a hot dog?”
 - “How do I get to Ocean Beach?”
 - “How do you say hello in Korean?”
 - “Talk to Best Jokes.”
- **Internet**
 - “What movies are showing this weekend?”
 - “Why is the sky blue?”
 - “What is the smallest country in Europe?”
 - “How much sugar is there in a Coke?”
- **Subscriptions**
 - “What are the latest headlines?”
 - “Play Time’s The Brief.”
- **Smart Home**
 - “Turn up the thermostat.”
 - “Set the thermostat to 22 degrees”
 - “Dim the lights in the kitchen.”
 - “Is the light on in the living room?”
- For more information on the voice commands, refer to the “Google Home” app screen or visit the web site. <https://support.google.com/assistant>
- If you're having problems with Voice recognition or this product, suggest your feedback by saying "Ok Google, feedback". It is helpful to Google Service quality enhancement.

Bluetooth Connection

Step 1. Connect the Wi-Fi

Make sure the speaker connects to Wi-Fi by using “Google Home” app.

! **Bluetooth** function is inactive before connecting to Wi-Fi.

Step 2. Change Function

Select the **Bluetooth** function by pressing **F** repeatedly.

Step 3. Find and Select your speaker name

Select speaker name that was set on “Google Home” app on the device list of your smart device. When successfully connected **Bluetooth**, “PAIRED” will appear on display window.

Additional

Comfortable Function

With the Google Assistant built in, you can control compatible smart home devices such as TVs, lights, switches, plugs, thermostats and more by simply using your voice.

! For more information, visit the below web site.

- **Set up, Usage and more:** <https://support.google.com/assistant>
- **Compatible LG appliance models:** Visit <http://www.lg.com> and then search the information.

Download LG Wi-Fi Speaker Application

You can manage the speaker settings and control the speaker by using “LG Wi-Fi Speaker”
Download “LG Wi-Fi Speaker” on the App Store or Google Play Store.