

**Specification****Power consumption**

- Refer to the main label.

**AC adapter**

- Model: **DA-50F25**
- Manufacturer: Asian Power Devices Inc.
- Input: 100 - 240 V ~ 50 - 60 Hz 1.5 A Max.
- Output: 25 V  $\overline{\text{---}}$  2 A
- Model: **MS-Z2000R250-050D0-P**
- Manufacturer: MOSO POWER SUPPLY TECHNOLOGY CO, LTD.
- Input: 100 - 240 V ~ 50/60 Hz Max. 1.5 A
- Output: 25 V  $\overline{\text{---}}$  2 A
- Model: **A650-250200W-M21**
- Manufacturer: Dongguan Aohai Technology Co, Ltd.
- Input: 100 - 240 V ~ 50/60 Hz 1.5 A
- Output: 25 V  $\overline{\text{---}}$  2 A

Dimensions (W x H x D): Approx. 1000.0 mm x 63.0 mm x 105.0 mm

Bus Power Supply (USB): 5 V  $\overline{\text{---}}$  500 mA

Amplifier (Total RMS Output power): 440 W RMS

**Open Source Software Notice Information**

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com).

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

**POWER:** This unit operates on a mains supply of 100 - 240 V ~ 50 - 60 Hz.

**Wiring:** This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below.

**Warning:** A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  $\perp$  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

**Important:** The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



## SIMPLE MANUAL

# WIRELESS SOUND BAR

SP7Y






MFL71797097

2310\_Rev04


[www.lg.com](http://www.lg.com)

Copyright © 2021-2023 LG Electronics Inc. All Rights Reserved.

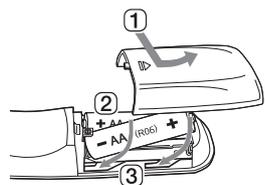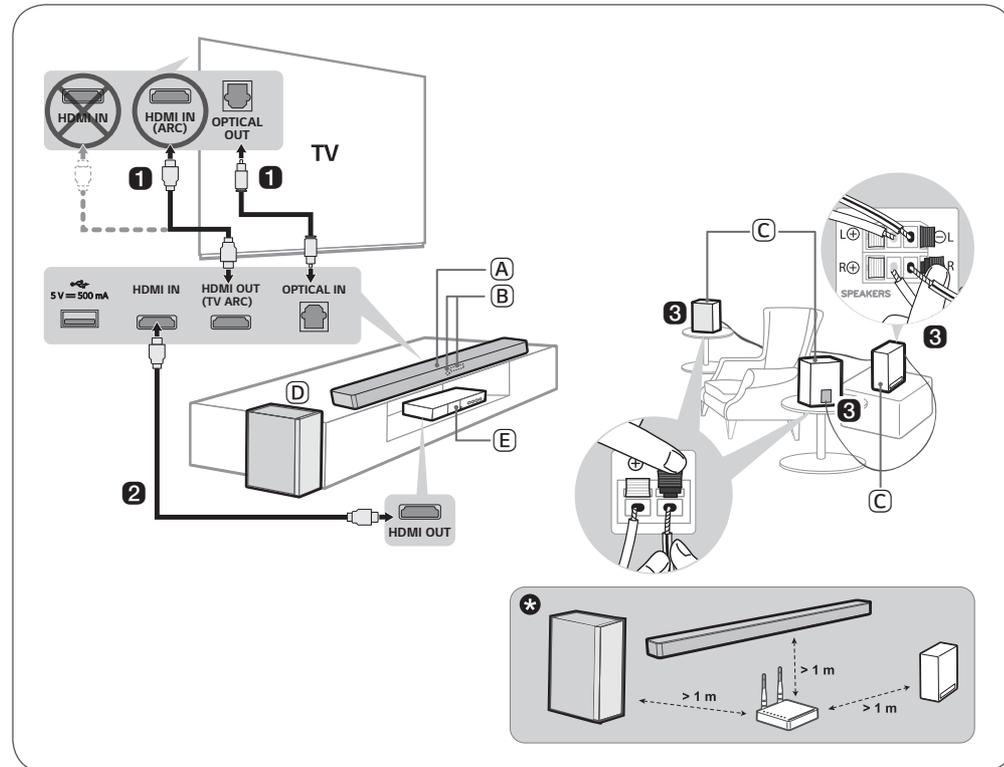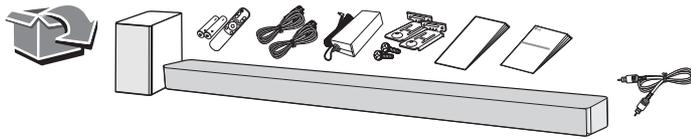

Replacement of Battery

## ENGLISH Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



- (A) Sound bar
- (B) Remote Control Receiver / Status Display
- (C) Rear Speakers / Wireless Receiver (Sold separately, SPK8-S)
- (D) Wireless Subwoofer - Install it close to the sound bar.
- (E) External Device - (Blu-ray player, game console, etc.)

- 1** Connect the sound bar to your TV via an optical cable or an HDMI cable.
- 2** If you are using an external device (ex. Blu-ray player, game console, etc.), connect it to the sound bar via an HDMI cable.
- 3** If you purchased the rear speakers and wireless receiver separately, connect the rear speakers to the wireless receiver via a speaker cable. When connecting the rear speakers to the wireless receiver, connect the black striped cable to the negative terminal of each speaker and the remaining cable to the positive terminal of each speaker.
- 4** Connect to power in the following order: wireless subwoofer → wireless receiver → sound bar. Then, turn on the sound bar. When the connection is automatically established with the sound bar, the LEDs on the wireless subwoofer and the wireless receiver will light up green.
- 5** Using the product with your TV
  - 1** Press the **Function** (⏏) button repeatedly until "OPT/HDMI ARC" appears on the status display.
  - 2** On your TV's settings, set the output speaker to [HDMI ARC], [Optical], or [External Speaker].
  - 3** When the TV is properly connected to the product, "OPT" or "ARC" appears on the status display with a sound.
- 6** Connecting the product to your smartphone via Bluetooth
  - 1** Tap the **Settings** (⚙) button on your smartphone and select **Bluetooth**. Turn on the **Bluetooth** function. (Off > On)
  - 2** Press the **Bluetooth pair** (🔗) button. After a moment, you will see "BT READY" on the status display.
  - 3** Find and tap the product on your smartphone. The product appears as "LG SP7Y (XX)".
  - 4** When the product is connected to your smartphone via **Bluetooth**, you can see the status display change from "PAIRED" → "Connected Bluetooth device name" → "BT".
- 7** Connecting to the LG Sound Bar app
  - 1** Find and install the **LG Sound Bar app** on Google Play or App Store from your smartphone.
  - 2** You can get more information regarding its use by selecting [Help] in [Setting].



If you see a red LED on the back of the wireless subwoofer or on the front of the wireless receiver, it means that the sound bar is not connected to the speakers. If this is the case, connect them in the following order.

- 1** Press the **Power** (⏏) button on the sound bar to turn it off.
  - 2** Press the **PAIRING (Pairing)** button on the back of the disconnected wireless subwoofer or wireless receiver. Check if each LED blinks green.
    - If you still see a red LED on the back of the wireless subwoofer, press and hold the button on the back of the subwoofer again.
  - 3** Press the **Power** (⏏) button on the sound bar to turn it on.
  - 4** When the connection is established, you will see a green LED light on the back of the wireless subwoofer or on the front of the wireless receiver light up in green.
- ⚠ Keep the sound bar, the subwoofer and wireless receiver away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.
- Some speakers may not make sound depend on the input source. Select CINEMA sound mode to listen through all speakers.

- Design and specifications are subject to change without notice.
- Google Play is a trademark of Google LLC.

**HDMI™**  
HIGH-DEFINITION MULTIMEDIA INTERFACE