

PORTUGUÊS | MANUAL SIMPLES

Para visualizar instruções sobre funcionalidades avançadas, visite <http://www.lg.com> e transfira o Manual do Proprietário.

**NEDERLANDS | EENVOUDIGE
HANDLEIDING**


Om de instructies voor geavanceerde functies weer te geven gaat u naar <http://www.lg.com> vanwaar u de gebruikershandleiding kunt downloaden.

Ελληνικά | ΑΠΛΟ ΕΓΧΕΙΡΙΔΙΟ

Για να δείτε τις οδηγίες για τις προηγμένες λειτουργίες, επισκεφθείτε τη διεύθυνση <http://www.lg.com> και μετά κατεβάστε το Εγχειρίδιο Χρήστη.

SLOVENŠČINA | ENOSTAVNI PRIROČNIK

Če si želite ogledati navodila za napredne funkcije, obiščite <http://www.lg.com> in prenesite navodila za uporabo.

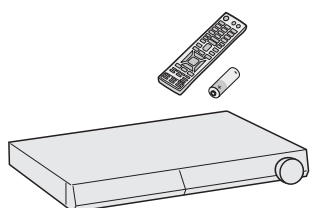

Speaker ca
(Optional)

 



FM antenna





* M F L 6 8 8 0 0 7 4 2 *












**Informação de Segurança / Veiligheidsinformatie /
Στοιχεία σχετικά με την ασφάλεια /
Varnostne informacije**

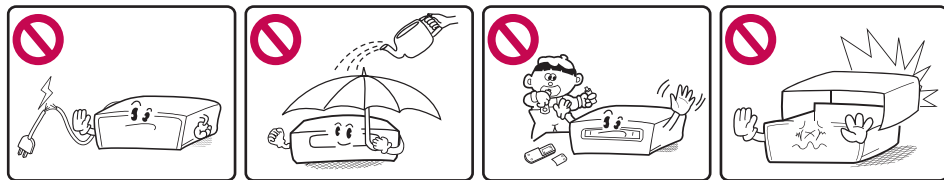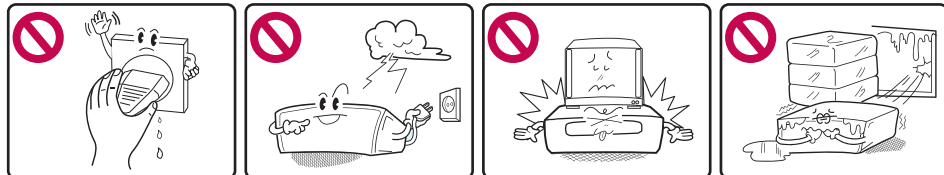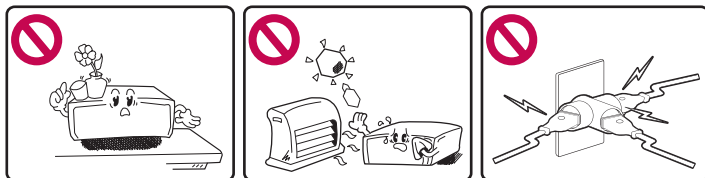

**Ligação dos altifalantes / Luidsprekerboxen installeren
/ Σύνδεση ηχείων / Priključek za zvočnik**

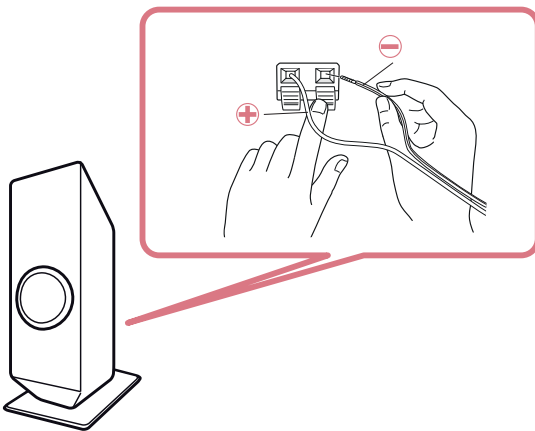
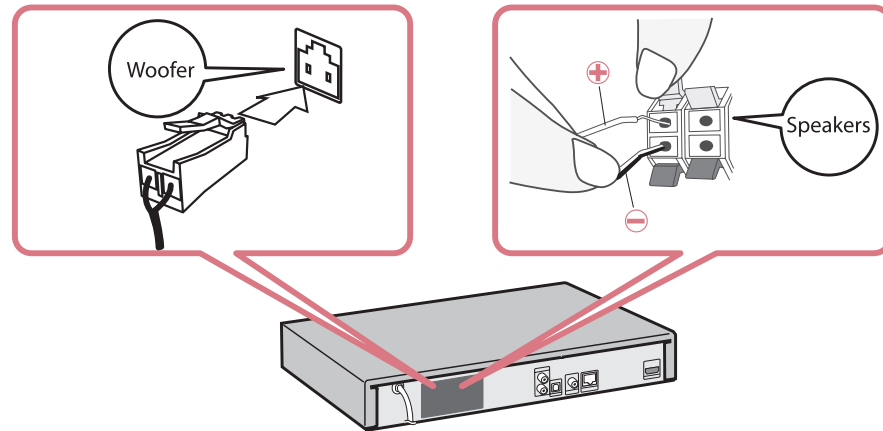


Configuração Inicial / Begininstellingen / Αρχική διαμόρφωση / Začetna nastavitve

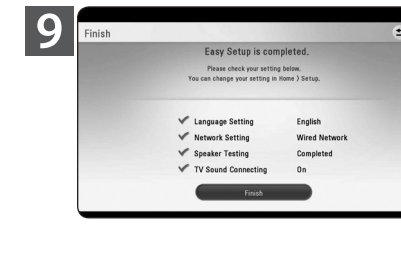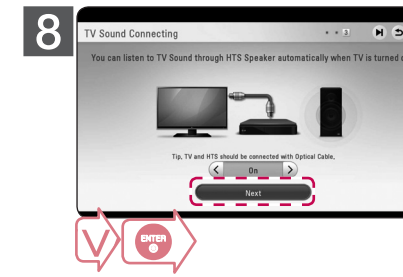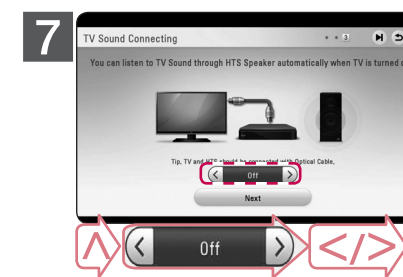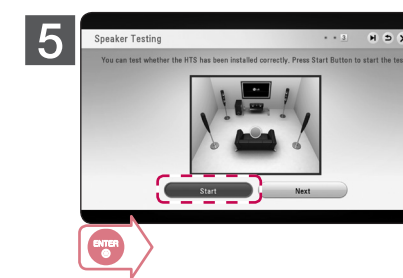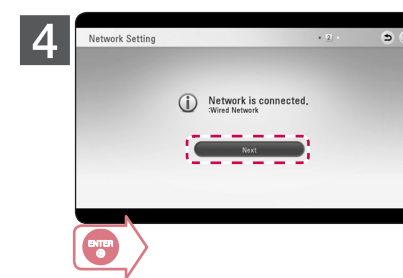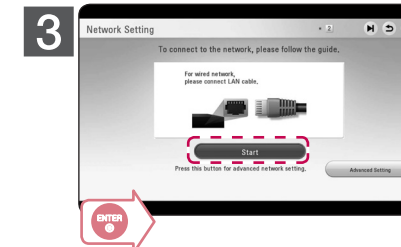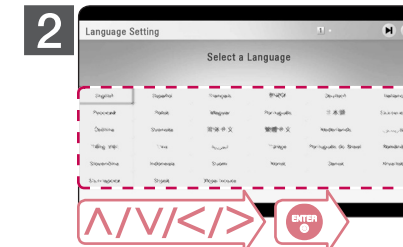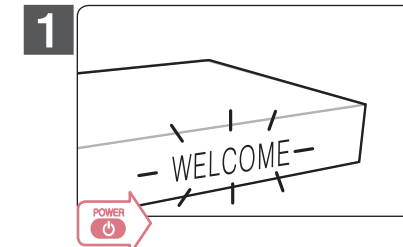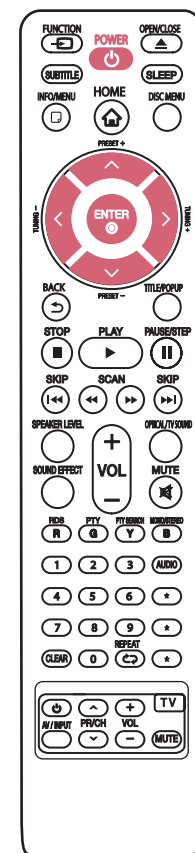




Utilizar o menu de INÍCIO / HOME-menu gebruikt / Χρήση ΚΕΝΤΡΙΚΟΥ μενού / Uporaba menija DOMAČA STRAN

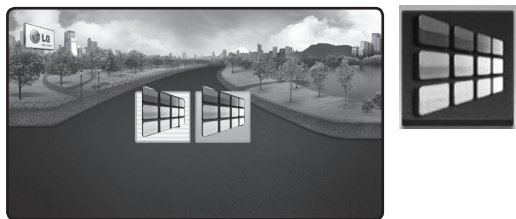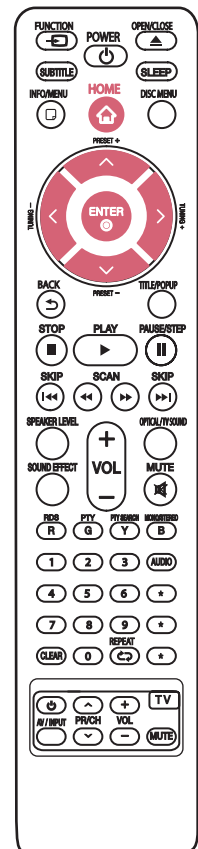

[Premium] - Exibir o écran inicial do Premium.
[Premium] - Dit laat het Premium Home scherm zien.
[Premium] - Προβάλλει την αρχική οθόνη Premium.
[Premium] - Prikaže domači zaslon Premium

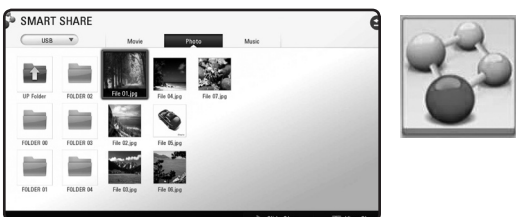

[Smart Share] - Exibe o menu Smart Share.
[Smart Share] - Toont het Smart Share menu.
[Smart Share] - Εμφάνιση μενού Smart Share.
[Smart Share] - Prikaže meni "Smart Share".



[LG Smart World] - Exibe os títulos LG Apps fornecidos à unidade.
[LG Smart World] - Toont de aan het apparaat verstrekte titels van de LG Apps.
[LG Smart World] - Εμφάνιση τίτλων συνοδευτικών εφαρμογών LG Apps.
[LG Smart World] - Prikaže naslove LG Apps, ki so dostopni na tej enoti.



[Entr] - Altera o modo de Entrada.
[Invoer] - Hiermee wijzigt u de invoermodus.
[Είσοδος] - Αλλάζει τον τρόπο εισόδου.
[Input] - spremeni vhodni način.



[Configurar] - Ajusta as configurações do sistema.
[Instellen] - De systeeminstellingen aanpassen.
[Ρύθμιση] - Ορίζει τις ρυθμίσεις του συστήματος.
[Settings] - Nastavitev sistemskih nastavitev.




[As Minhas Aplicações] - Exibe o ecrã as [As Minhas Aplicações].
[Mijn Apps] - Toont het [Mijn Apps] scherm.
[My Apps] - Εμφάνιση οθόνης [My Apps].
[My Apps] - Prikaže zaslon [My Apps].



Para Utilizar Reprodução de Rede / Network Playback gebruiken / Για χρήση της αναπαραγωγής δικτύου / Predvajanje z uporabo omrežja

Preparação / Voorbereiding / Προετοιμασία / Priprava

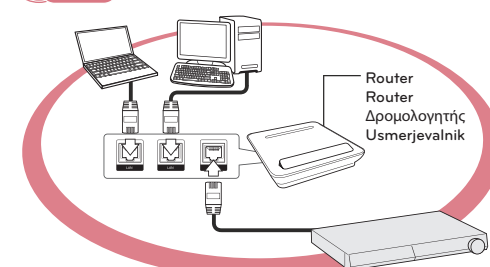

Verifique a conexão de rede e as configurações. /
Controleer de netwerk aansluiting en de instellingen. /
Ελέγξτε τη σύνδεση και τις ρυθμίσεις δικτύου. /
Preveri omrežno povezavo in nastavitve.


1 Transfira e instale o software Nero MediaHome 4 Essentials. /
Download en installeer de Nero MediaHome 4 Essentials-software. /
Κατεβάστε και εγκαταστήστε το Nero MediaHome 4 Essentials. /
Prenesite in namestitve programsko opremo Nero MediaHome 4 Essentials.

Windows : <http://www.nero.com/download.php?id=nmhlgewin>
Mac OS : <http://www.nero.com/download.php?id=nmhlgemac>


2 Execute o programa e defina a pasta de partilha que desejar. /
Start het programma en stel de gewenste gedeelde map in. /
Τρέξτε το πρόγραμμα και ρυθμίστε τον φάκελο διαμοιρασμού που θέλετε. /
Zaženi program in odpri poljubno mapo v skupni rabi.




Reprodução de Rede Smart Share / Smart Share Network Playback / Αναπαραγωγή δικτύου Smart Share / Predvajanje v omrežju z uporabo funkcije "Smart Share"

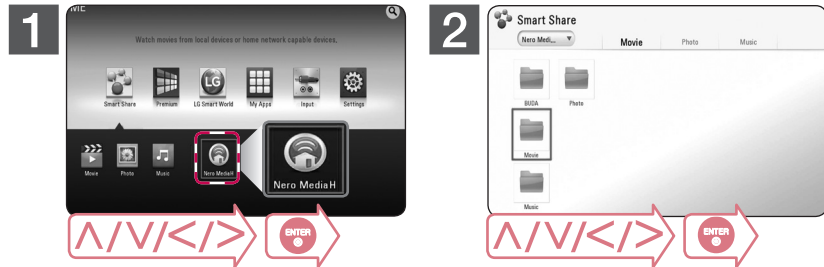

Reprodução de Disco / Schijf afspelen / Αναπαραγωγή δίσκου / Predvajanje plošče

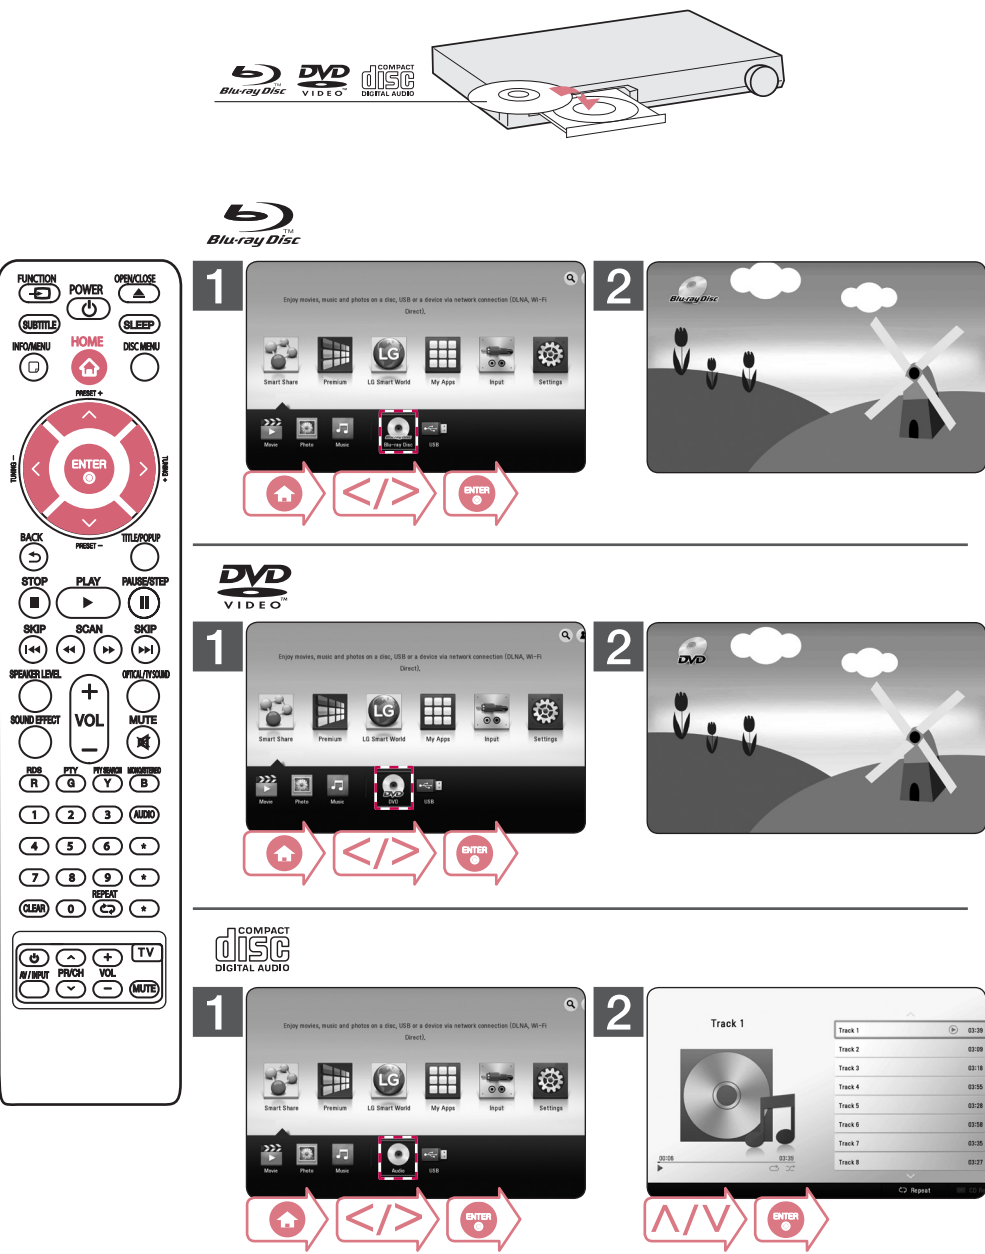

Reprodução de Dados / Gegevens afspelen / Αναπαραγωγή δεδομένων / Predvajanje podatkov

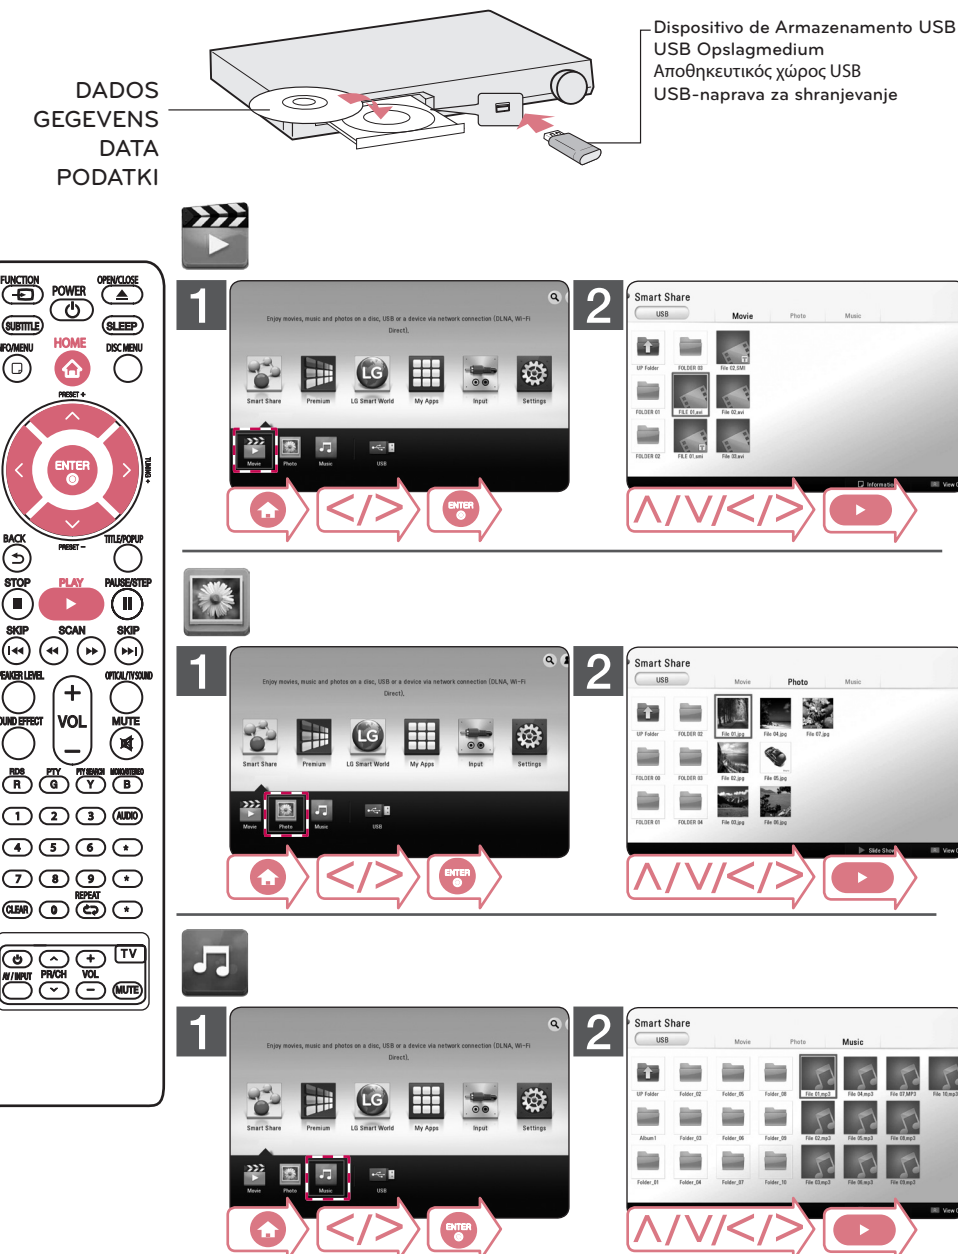

Especificação / Specificatie / Προδιαγραφή / Specifikacije

PORTUGUÊS

Requisitos de alimentação	Consultar a etiqueta em baixo.
Consumo de energia	Consultar a etiqueta em baixo.
Dimensões (L x A x P)	360 mm X 60,5 mm X 304 mm
Peso Neto (Approx.)	2,5 kg
Barramento Alimentação (USB)	DC 5 V 500 mA

O modelo e as especificações estão sujeitos a alterações sem aviso prévio.

NEDERLANDS

Stroomvereisten	Zie etiket.
Opgenomen vermogen	Zie etiket.
Afmetingen (B x H x D)	Circa 360 mm X 60,5 mm X 304 mm
Netto gewicht (circa)	2,5 kg
USB-busvoeding	DC 5 V 500 mA

Ontwerp en specificaties kunnen zonder voorafgaande kennisgeving worden gewijzigd.

Ελληνικά


Απαιτήσεις τροφοδοσίας	Ανατρέξτε στην κύρια ετικέτα.
Κατανάλωση ενέργειας	Ανατρέξτε στην κύρια ετικέτα.
Διαστάσεις (Π x Υ x Β)	Περίπου 360 χιλ X 60,5 χιλ X 304 χιλ
Καθαρό βάρος (περίπου)	2,5 κιλά
Παροχή ρεύματος διαύλου (USB)	DC 5 V 500 mA

Η σχεδίαση και οι προδιαγραφές υπόκεινται σε μεταβολή χωρίς προειδοποίηση.

SLOVENŠČINA

Zahteve za napajanje	Glejte glavno nalepko.
Poraba moči	Glejte glavno nalepko.
Dimenzije (Š x V x G)	Pribl. 360 mm X 60,5 mm X 304 mm
Neto teža (približno)	2,5 kg
Napajanje vodila (USB)	DC 5 V 500 mA

Substituição da bateria / Vervangen van de batterij / Αντικατάσταση μπαταρίας / Zamenjava baterije


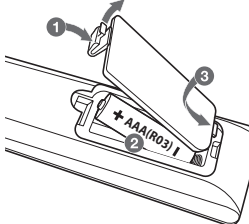


Disposal of your old appliance

1. This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream.
2. Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.
3. You can take your appliance either to the shop where you purchased the product, or contact your local government waste office for details of your nearest authorised WEEE collection point. For the most up to date information for your country please see www.lg.com/global/recycling

Disposal of waste batteries/accumulators

1. This symbol may be combined with chemical symbols for mercury (Hg), cadmium (Cd) or lead (Pb) if the battery contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.
2. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
4. For more detailed information about disposal of your old batteries/accumulators, please contact your city office, waste disposal service or the shop where you purchased the product. (<http://www.lg.com/global/sustainability/environment/take-back-recycling/global-network-europe>)

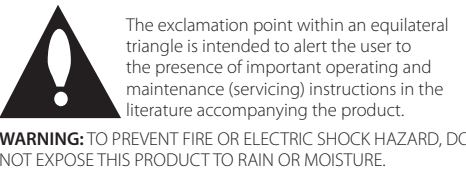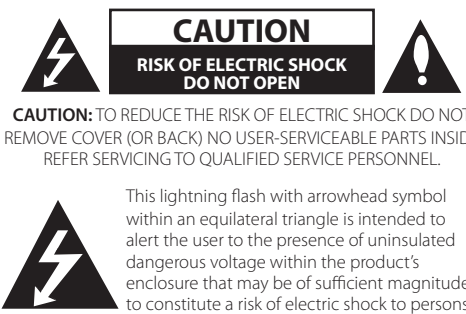

CAUTION: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION concerning the Power Cord
To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.