




OLED**C3PSA

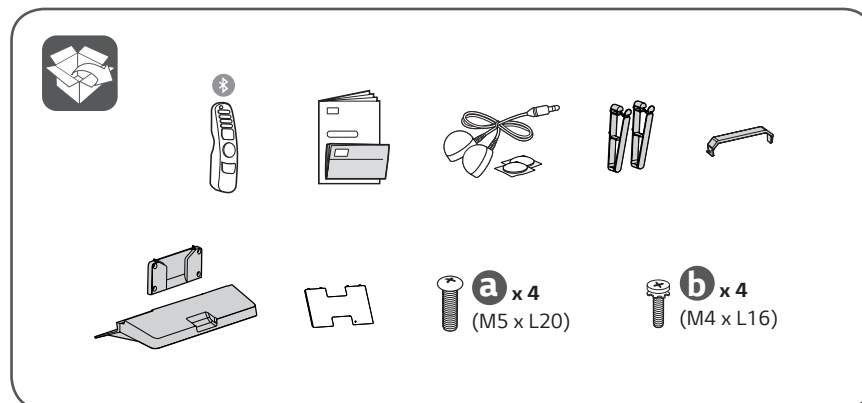


1-1

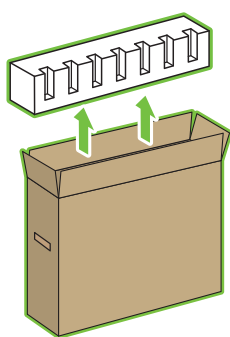


1-2

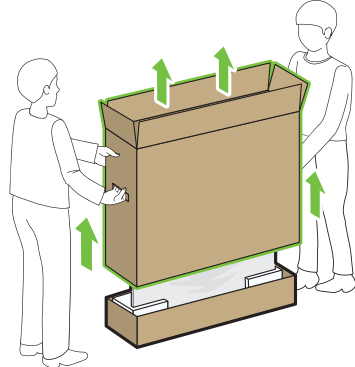


2

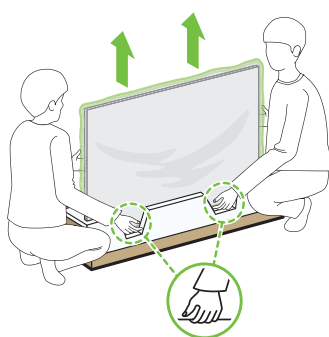


3

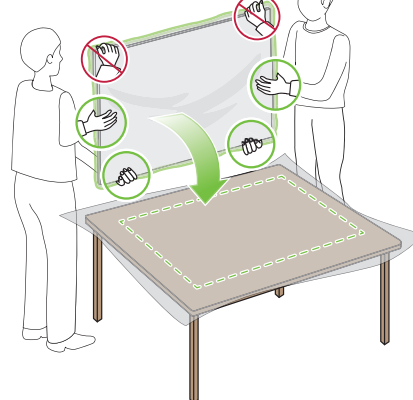


4

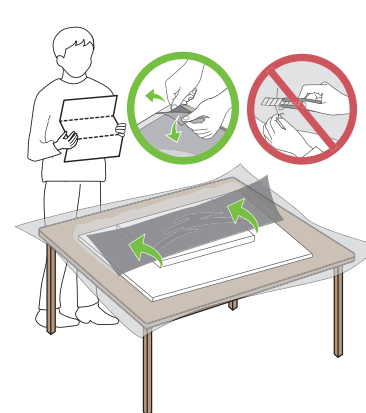


1

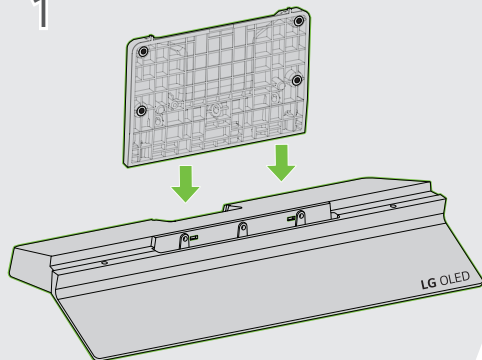


2

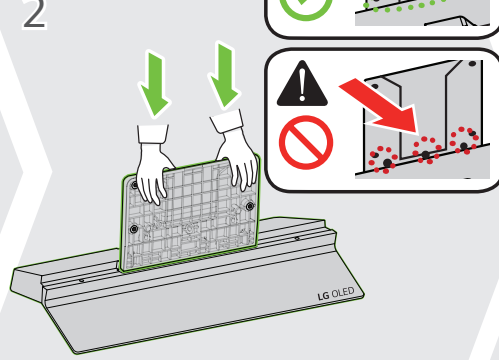


3

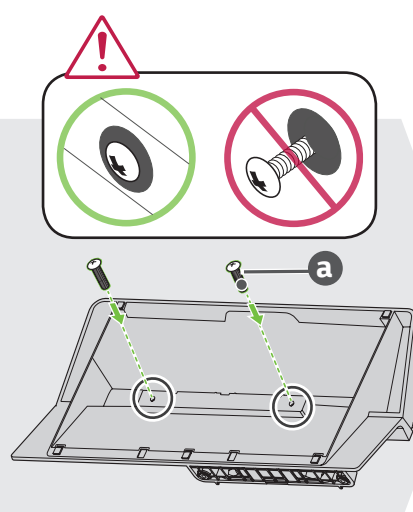


4

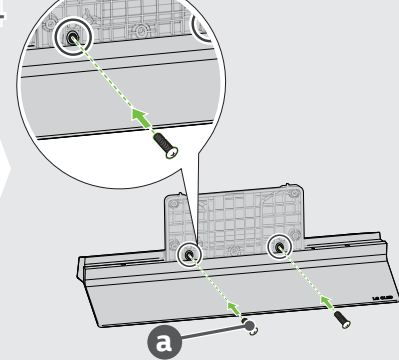


5



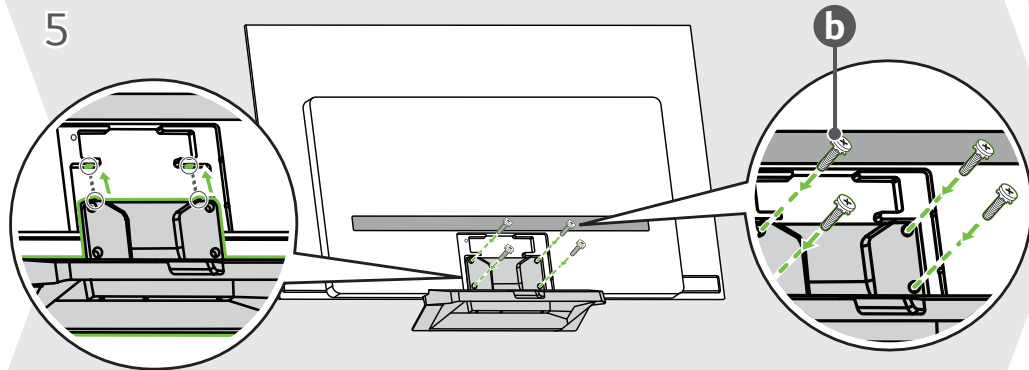


6

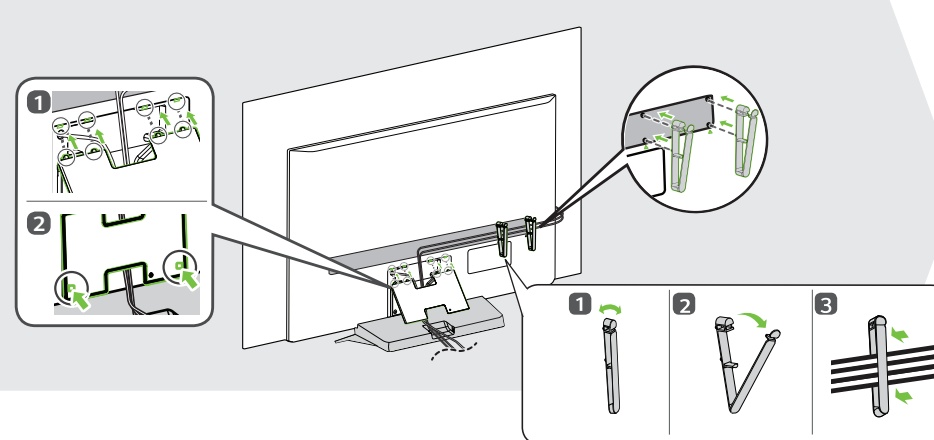


7

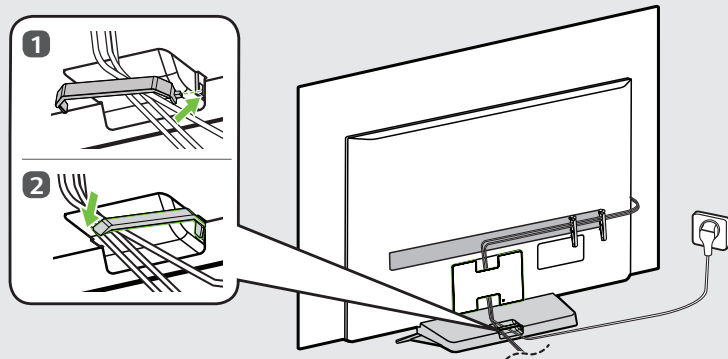


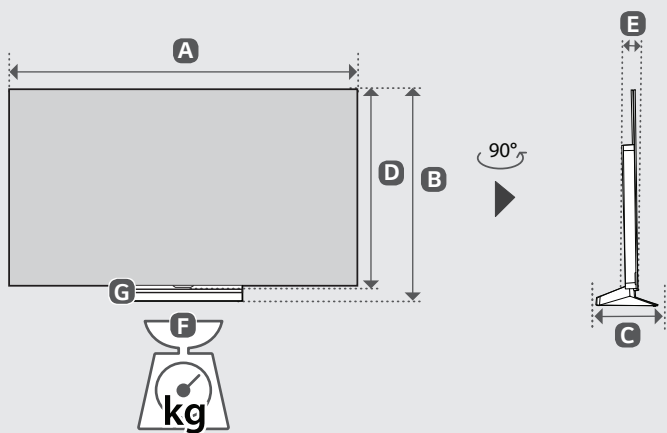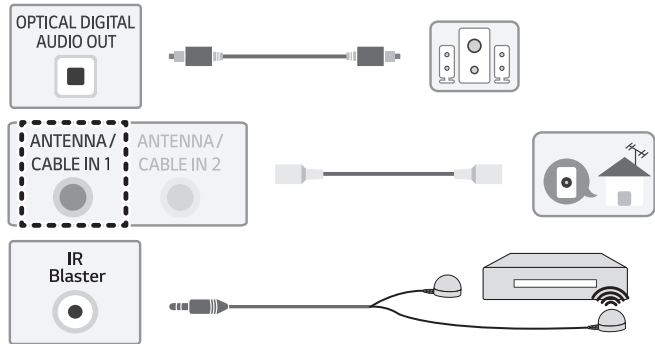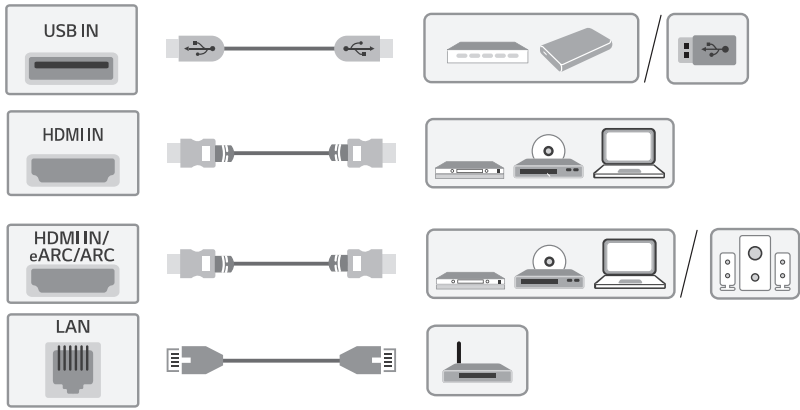

	A	B	C	D	E	F	F-G
	(公釐)					(公斤)	
OLED55C3PSA	1222	757	230	703	45.1	16.0	14.1
OLED65C3PSA	1441	880	230	826	45.1	18.5	16.6
OLED77C3PSA	1711	1035	267	982	47.1	27.1	23.5

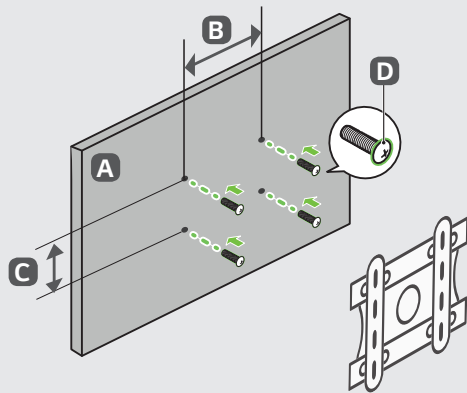

A	B x C (公釐)	D
OLED55/65/77C3*	300 x 200	M6

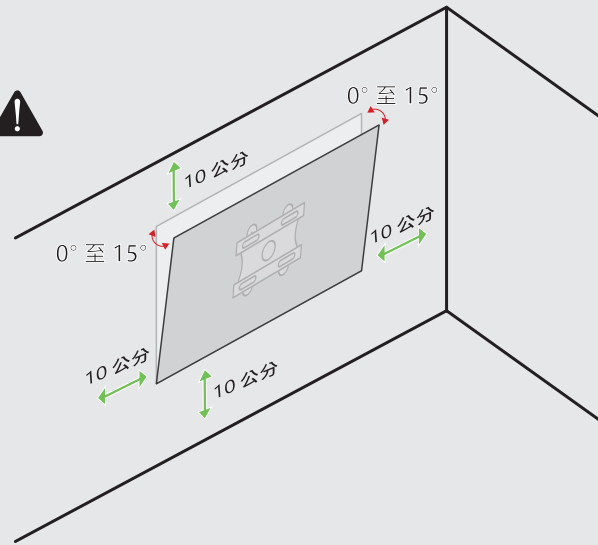

- 繁體中文
- 簡易設定指南
 - 操作電視機之前，請先詳細閱讀本手冊，並妥善保管手冊以供日後參考。
 - 請閱讀安全與相關資訊