

Additional Information

Specification

Power consumption	Refer to the main label.
AC adapter	<ul style="list-style-type: none"> Model : DA-50F25 Manufacturer : Asian Power Devices Inc. Input : 100 - 240 V ~ 50 - 60 Hz Output : 25 V \equiv 2 A
Dimensions (W x H x D)	Approx. 890.0 mm x 65.0 mm x 119.0 mm With foot
Bus Power Supply (USB)	5 V \equiv 500 mA
Amplifier (Total RMS Output power)	380 W RMS

Design and specifications are subject to change without notice.



Rear Speakers Ready

Ready for surround sound with Rear Speakers Kit sold separately. (SPK8-S)

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.



Life's Good

SIMPLE MANUAL

Wireless

Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

SN7Y




MFL71672250
2003_Rev01


www.lg.com

Copyright © 2020 LG Electronics Inc. All Rights Reserved.



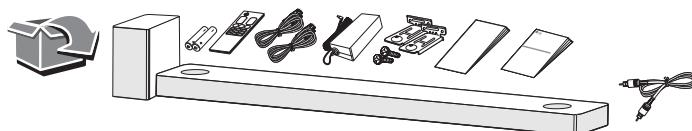


Front Panel

 

POWER (Standby) Switches the unit ON or OFF.
 F (Function) Selects function.
 -/+ (Volume) Adjusts volume.

Rear Panel

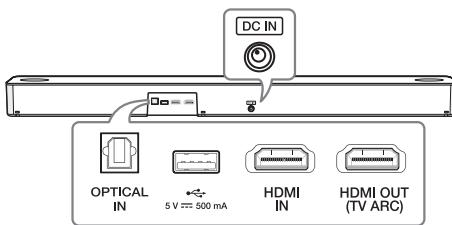

DC IN Connect to the AC adapter.
 OPTICAL IN Connect to an optical device.
 USB Port Connect to a USB device.
 HDMI IN Connect to device with HDMI OUT.
 HDMI OUT (TV ARC) Connect to a TV.



- It is recommended that you purchase a USB gender separately for the convenience of USB insertion and extraction. (Recommended USB gender type: USB 2.0 extension cable)
- Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

- Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
- Turn on the sound bar.
 - The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.


Manual Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.

- Press **PAIRING** on the rear of the wireless subwoofer.
 - The green LED on the rear of the wireless subwoofer blinks quickly.
(If the green LED does not blink, press and hold the **PAIRING**)
- Turn on the sound bar.
 - Pairing is completed. The green LED on the rear of the wireless subwoofer turns on.



Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

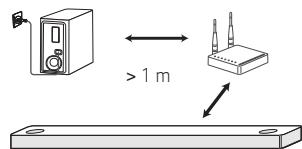


TV Connection

Connect the sound bar and TV using Optical (A) or HDMI ARC (B).


A Optical Connection

- Connect the sound bar to the TV using Optical cable.
- Set up [External Speaker (Optical)] on your TV setting menu.

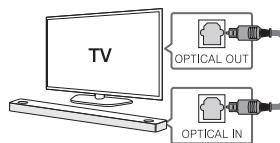

B HDMI (ARC) Connection


- Connect the sound bar to the TV using HDMI cable.
- Set up [External Speaker (HDMI ARC)] on your TV setting menu.

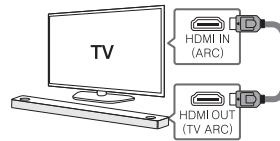

- HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal has a higher priority.

Additional Device Connection


- Connect to the external device like as follow.

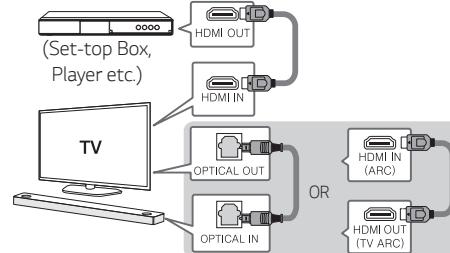

- Set the input source by pressing **F** repeatedly.

Remote control

Replacement of Battery

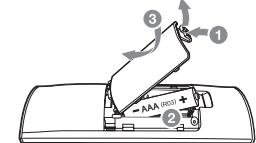

KK/**KK:** Skip/Search

II/**II:** Play/Pause

- Bluetooth connection lock (BT LOCK): Select the **Bluetooth** function by pressing **F** repeatedly. Long press **II** and press it again to limit Bluetooth connection to only BT and LG TV.

SOUND EFFECT: Selects a sound effect mode.

- TV remote: Long press **SOUND EFFECT** and press it again to use TV remote control.

FOLDER **^/****^:** Searches a folder.

INFO: Displays the information of a file, an input source or connected **Bluetooth** device name.

- Auto Power ON/OFF: Long press **INFO** and press it again.

LEVEL: Adjusts sound level of each speaker.

- Surround sound: Long press **LEVEL** and press it again.

REPEAT: Listens to your files repeatedly or randomly.