



SIMPLE MANUAL

# Mini Hi-Fi Audio

To view the instructions of advanced features,  
visit <http://www.lg.com> and then download Owner's Manual.  
Some of the content in this manual may differ from your unit.

MODEL  
OM7560



ENGLISH

DEUTSCH

FRANÇAIS

NEDERLANDS

SLOVENŠČINA

ITALIANO

ESPAÑOL

EMAHNIKA


PORTUGUÊS

[www.lg.com](http://www.lg.com)

Copyright © 2017 LG Electronics. All Rights Reserved




## Top panel

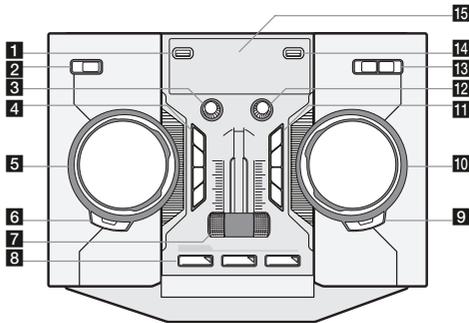


- 1** USB 1 Port  
You can play or record sound files by connecting the USB device.
- 2** **⏻/⏻** (Standby/On)
- 3** **MIC.** (Microphone volume)  
Controls microphone's volume.
- 4** **VOICE CANCELLER**  
- You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.  
Press to switch this mode on or off.
- KEY CHANGER (b/♯)**  
Changes the key to suit your vocal range.
- LIGHTING / PARTY LINK**  
- Turns on/off the lighting effects.  
- Press and hold to select the PARTY LINK.
- 5** **SCRATCH / LEVEL / SYNC SET**  
Turn clockwise or counterclockwise to make Scratch sound.  
/ Adjust DJ EFFECT level. / Sets Delay value in PARTY LINK mode.
- 6** **DJ EFFECT**  
Selects DJ EFFECT mode.
- USER EQ**  
Selects the sound effect created by your own.
- 7** **PARTY THRUSTER**  
Slide the lever to create a party atmosphere.
- 8** **CLUB, DRUM, USER (DJ PRO)**  
Selects CLUB, DRUM or USER sound effect to mix.  
(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)  
**1, 2, 3** (DJ PRO PAD)  
Press a desired sound pad.
- 9** **SEARCH**  
Moves to folder or file in selection mode.
- OK**  
Selects a folder when searching a file.
- 10** **⏮, ⏭ & SEARCH** (Skip/Search)  
- Searches a folder or a file.  
- Searches for a section within a track/file.  
- Selects the radio stations.
- 11** **⏸** (Play/Pause)  
- Starts or pauses playback.  
- Selects Stereo/Mono.
- ⏹** (Stop) / **RDS**  
- Stops playback or cancels DELETE function.  
- Radio Data System
- ⏪** (Open/Close)  
Opens and closes the disc tray.
- REGION EQ / BASS BLAST**  
- Chooses region equalizer.  
- Press and hold to select BASS effect directly.
- 12** **VOL.** (Volume)  
Adjusts speaker volume.
- 13** **USB REC / DEMO**  
Records to USB. / Shows Demo mode.
- F** (Function) / **WIRELESS LINK**  
- Selects the function and input source.  
- Press and hold for 3 seconds to select WIRELESS PARTY LINK mode.
- 14** **USB 2 Port**  
You can play or record sound files by connecting the USB device.
- 15** Display window

## Front panel / Rear panel

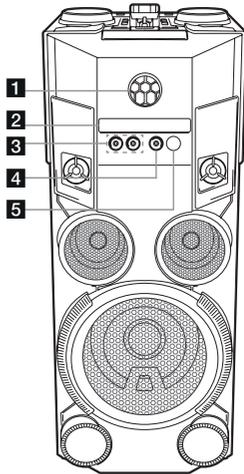

- 1 DANCE LIGHTING** (Lighting ball)
  - Shows the various lighting patterns and color.
  - You can control angle up and down with your finger.
- 2** Disc tray
- 3** MIC (Microphone) 1 / 2 jack
- 4** PORT. IN
- 5**  Remote sensor

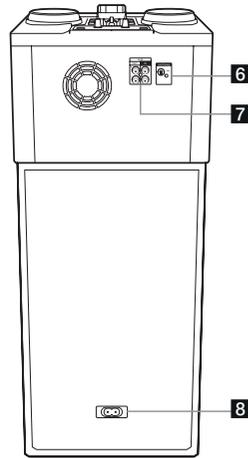

- 6** ANTENNA (FM)
- 7** AUX IN / OUT
- 8** AC in socket

### Controller App



Download the **Music Flow Bluetooth** App to your device.

### LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

## Additional Information

### Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 330 mm x 815 mm x 302 mm
Net Weight	Approx. 16.8 kg
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	1,000 W

Design and specifications are subject to change without notice.

### Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.


### Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

### How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

### Replacement of battery

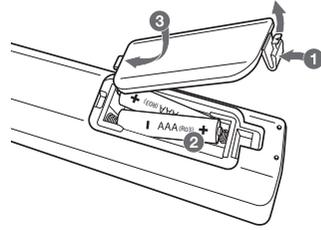

### Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type MINI HI-FI AUDIO is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm