



Life's Good

SIMPLE MANUAL

Mini Hi-Fi

Audio

Please read this manual carefully before operating your set and retain it for future reference.
 To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
OK75



MFL70403093

www.lg.com


Copyright © 2020 LG Electronics Inc. All Rights Reserved.

1807_Rev02

ENGLISH





Top panel

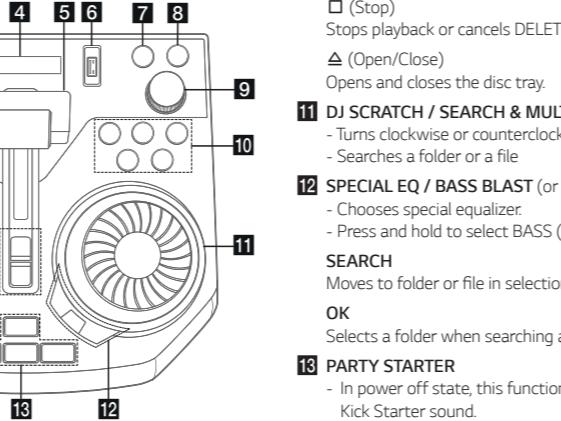

- 1** (Standby)
Turns the power on or off.
- 2** **USB REC / DEMO**
- Records to USB.
- To stop Recording, press and hold for 3 seconds.
- In power off status, if you press **USB REC / DEMO**, show demo mode.
- 3** **USB 1 Port**
You can play sound files by connecting the USB device.
- 4** **Display window**
- 5** **PARTY ACCELERATOR lever**
Slide the lever to create a party atmosphere.
- 6** **USB 2 Port**
You can play sound files by connecting the USB device.
- 7** **F (Function)**
Selects the function and input source.
- 8** **WIRELESS LINK**
- Selects MAIN or OTHER on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode.
- 9** **MASTER VOL. (Volume) -/+**
Adjusts speaker volume.
- 10** **KK (Skip/Search)**
- Skips backward.
- Searches for a section within a track/file.
- Selects the radio stations.
- II (Play/Pause)**
- Starts or pauses playback.
- Selects stereo/mono.
- FF (Skip/Search)**
- Skips forward.
- Searches for a section within a track/file.
- Selects the radio stations.
- 11** **DJ SCRATCH / SEARCH & MULTI**
- Turns clockwise or counterclockwise to make scratch sound.
- Searches a folder or a file
- 12** **SPECIAL EQ / BASS BLAST (or BASS BLAST+)**
- Chooses special equalizer.
- Press and hold to select BASS (or BASS+) effect directly.
- 13** **SEARCH**
Moves to folder or file in selection mode.
- OK**
Selects a folder when searching a file.
- 14** **PARTY STARTER**
- In power off state, this function turns on the unit with Party Kick Starter sound.
- In power on state, this function mixes the music with Party Kick Starter sound.
- 15** **CLUB, DRUM, USER (DJ PAD)**
Selects CLUB, DRUM or USER sound effect to mix.
(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)
- 16** **1, 2, 3 (DJ PAD)**
Press a desired sound pad.
- 17** **DJ EFFECT**
Selects a desired DJ effect.
- USER EQ**
Selects the equalizer created by your own.
- LIGHTING**
Selects the lighting mode.
- 18** **DJ SCRATCH / LEVEL CONTROL**
- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Adjust DJ EFFECT level.
- PARTY ACCELERATOR MODE**
Selects PARTY ACCELERATOR MODE.
- DJ LOOP**
Selects DJ LOOP mode.
(DJ LOOP mode can use during CD/USB playback.)
- KEY CHANGER (b / #)**
Changes the key to suit your vocal range.
- VOICE CANCELLER**
You can reduce the vocal tones during music playback from various input sources.
- VOCAL EFFECTS**
Selects VOCAL EFFECTS mode.
- MIC ECHO**
Selects ECHO mode.
- 18 MIC VOL. (Microphone Volume) -/+**
Adjust microphone volume.

Front panel / Rear panel

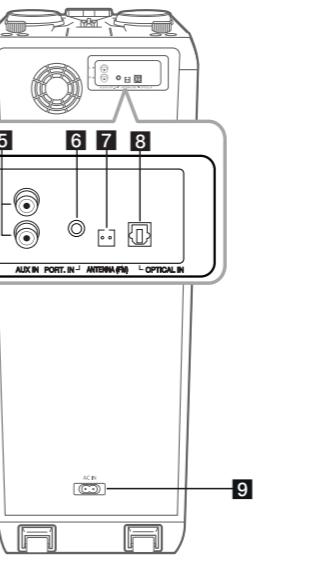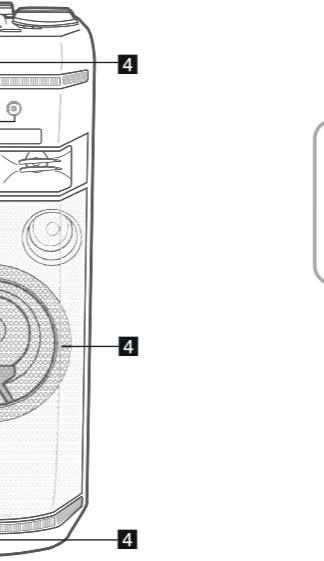

- 1** (Remote sensor)
- 2** MIC(Microphone) 1/2 jack
- 3** Disc tray
- 4** Lighting

- 5** **AUX IN (L/R)**: Connect an auxiliary device.
- 6** **PORT.(Portable) IN** : Connect a portable device.
- 7** **ANTENNA (FM)**
- 8** **OPTICAL IN** : Connect an optical device.
- 9** **AC IN socket**

Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

LG Sound Sync



For more information, download the online owner's manual. <http://www.lg.com>

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 330.0 mm x 925.0 mm x 360.0 mm
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS output power)	1,000 W RMS

 
Design and specifications are subject to change without notice.

Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.



The symbol indicating separate collection for electrical and electronic equipment consists of the crossed-out wheeled bin.

Contact office for compliance of this product:

LG Electronics (Levant) - Jordan
Abdali Project, Rafik Al-Hariri Avenue, The Boulevard,
Central Square, 5th Floor

