 


Mini Hi-Fi System

Model : CM4350

ENGLISH | SIMPLE MANUAL (1 of 2)

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

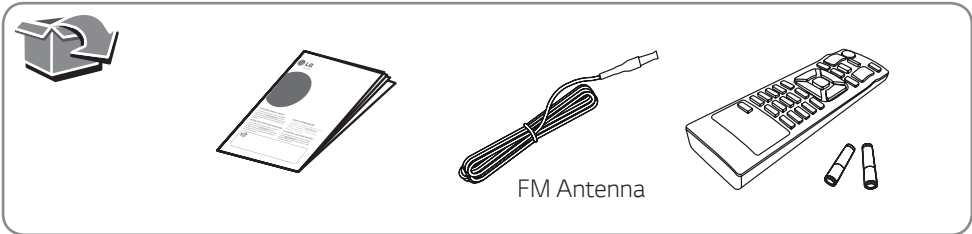 


* M F L 6 9 5 4 3 8 0 7 *

www.lg.com



Speaker connection

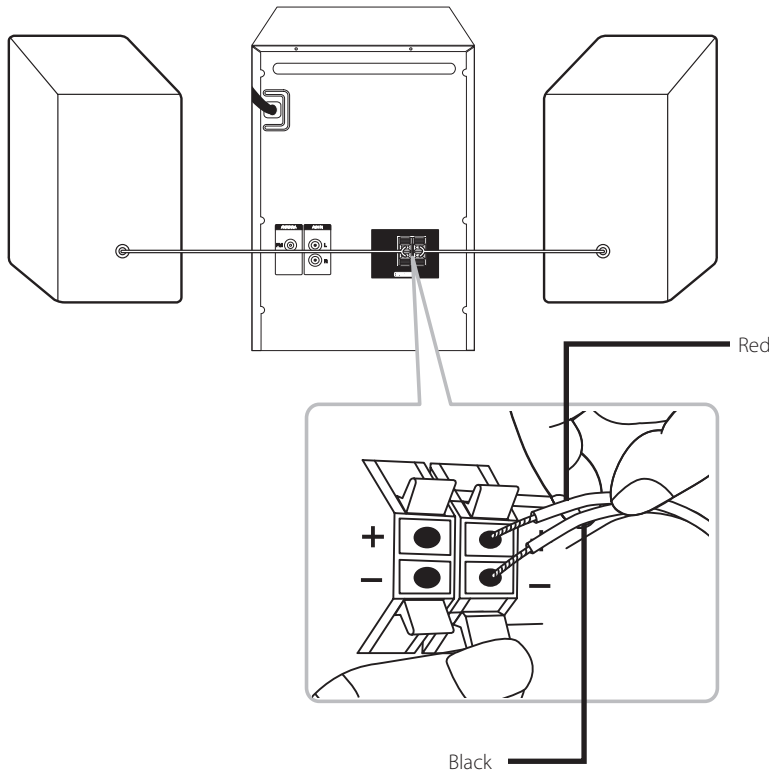


! Use the speakers far away from either TV screen or PC monitor.



Using External Device (ⓐ or, ⓑ)


1

 ⓐ AUX Connection

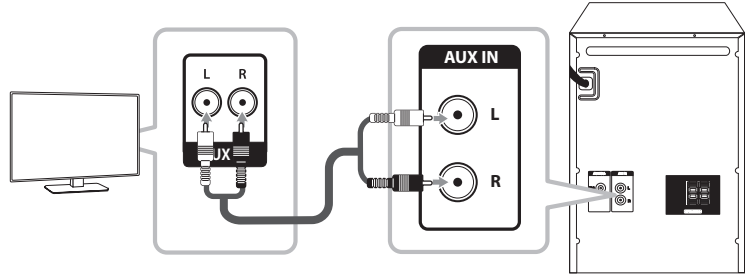


ⓑ

 
PORT. IN Connection

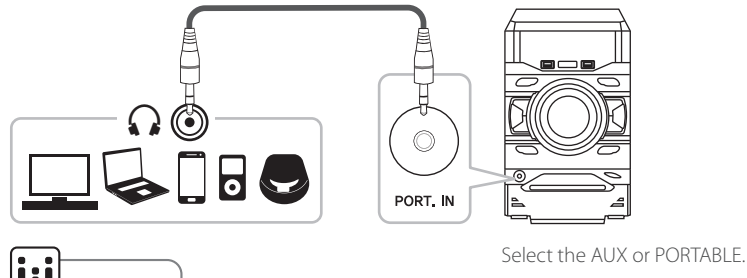

2

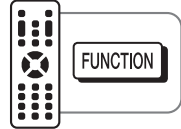 


3

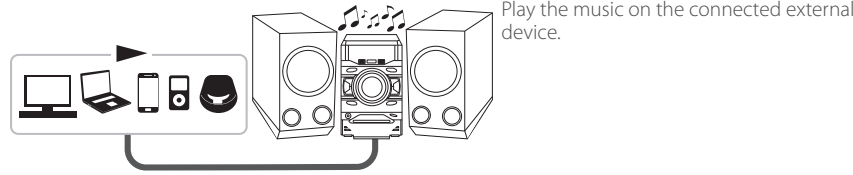 


Disc & Data Playback

 
1

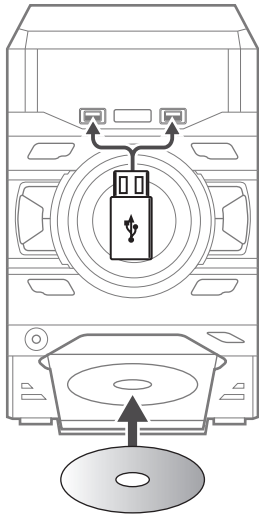

2

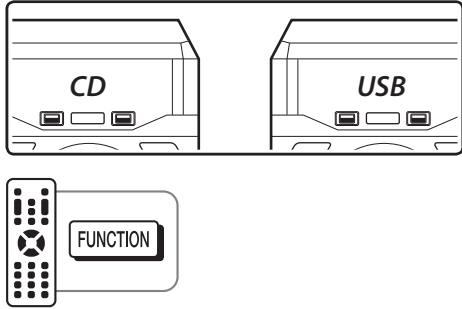 


3

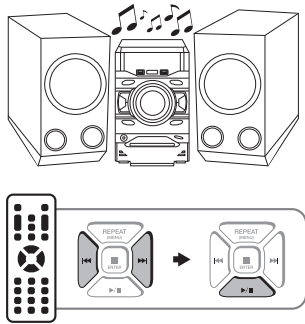 


Radio Operation

 1

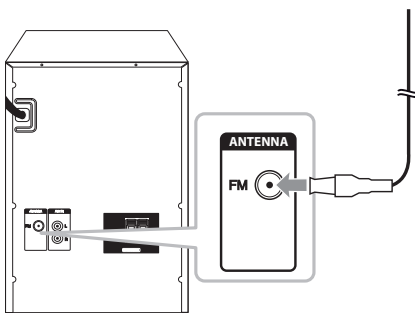

2

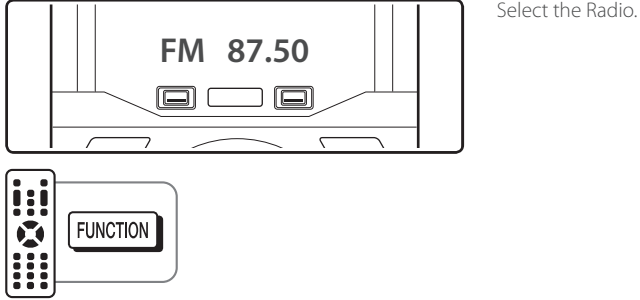 

3



 
! Auto tuning : Press and hold.

! Manual tuning : Press.




Presetting Radio Station

1

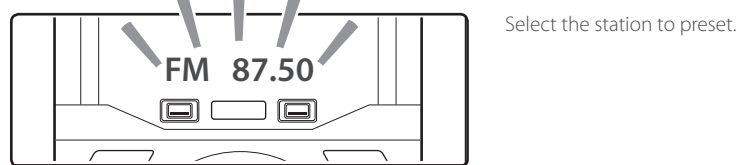

2

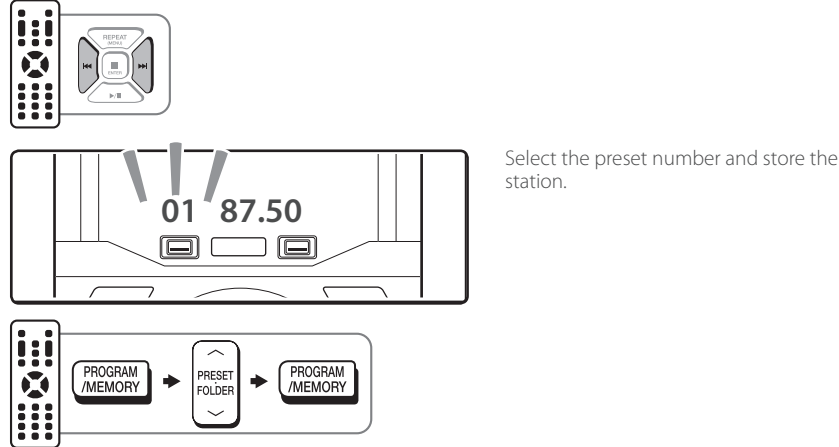 

3

 


To delete all the saved station

1




2

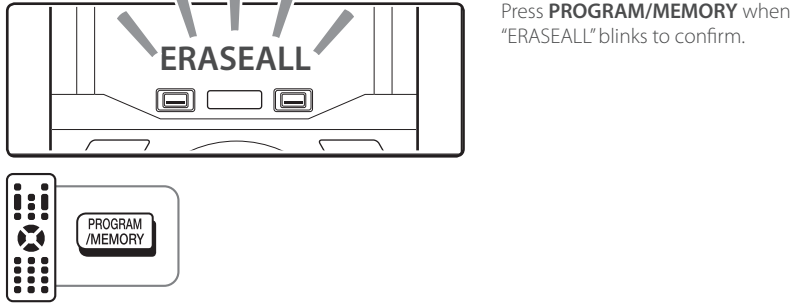




LG Sound Sync


 
LG Sound Sync enables you to control some functions of this unit by a remote control of your LG TV. Controllable functions are volume up/down and mute. Make sure that your TV has LG Sound Sync logo as shown above.

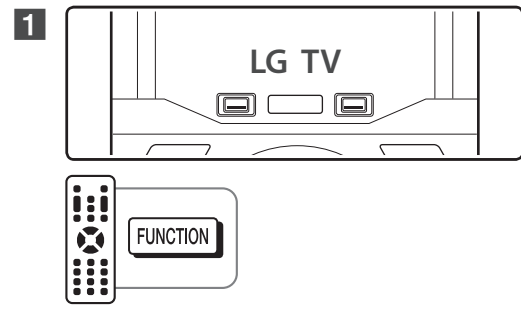

Select LG TV function.

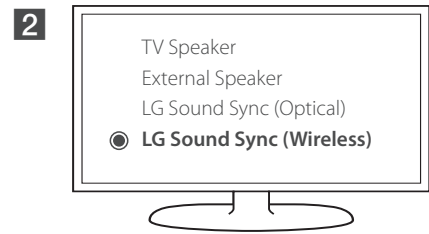 

  Set up the sound output of your TV : TV setting menu → [Sound] → [TV Sound output] → [LG Sound Sync (Wireless)]

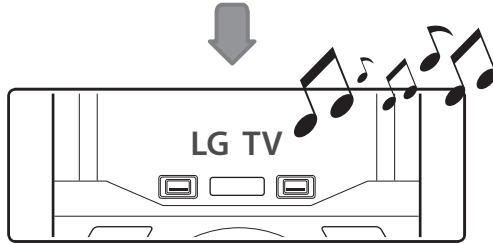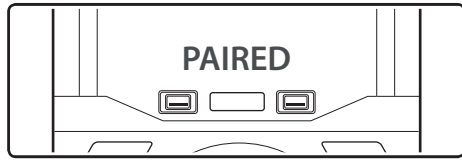


! For specific information of operating, refer to the instruction manual of your TV.

! If the connection fails, check the conditions of this unit and your TV : power, function.


! The amount of time to turn off this unit is different depending on your TV.



 
Using BLUETOOTH®

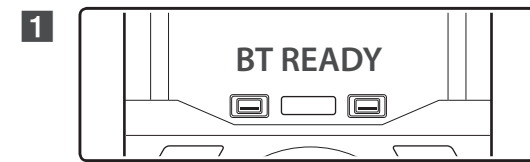

Select the **Bluetooth** function.

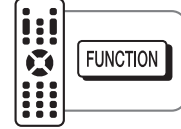 

 
Set on the **Bluetooth** and select "LG CM4350 (XX)" on your **Bluetooth** device.

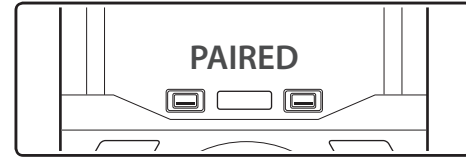

! Enter the PIN code (0000) as needed.

! When this unit is successfully connected with your **Bluetooth** device, "PAIRED" will be appear on the display window. The display will change to the **Bluetooth** device's name soon after.

 ! If the device name isn't available on the unit, " _ " will be displayed.

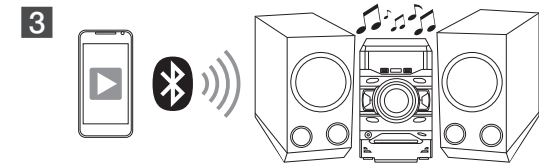

Play a music on your **Bluetooth** device.

! Even when this unit is connected to 3 **Bluetooth** devices in the **Bluetooth** mode, you can play and control music by using only one of the connected devices.

! The multi pairing connection is only supported on Android or iOS devices. (Multi pairing connection may not be supported depending on the connected device specifications.)

 
! A removable/detachable **Bluetooth** device (Ex : Dongle etc.) doesn't support multi pairing.

! Even when this unit is connected with multiple **Bluetooth** devices, only one device which is playing will keep the **Bluetooth** connection, even if you change the function of the other devices.




Using "Music Flow Bluetooth" App

To use this unit more comfortably, install "Music Flow Bluetooth" on your **Bluetooth** devices. Select a way of installation (a, b).

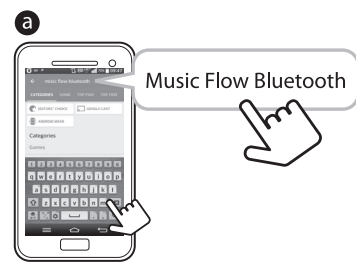

 Searching for "Music Flow Bluetooth" on the Google Play Store.

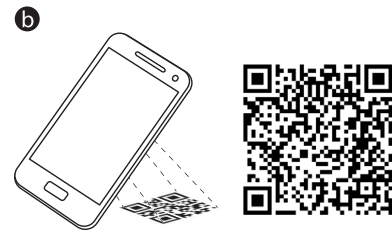


Scanning QR code.

! Android O/S : Ver 4.0.3 (or later)

! Refer to the guide from the "Music Flow Bluetooth" app on your smart device.



 Auto Power On

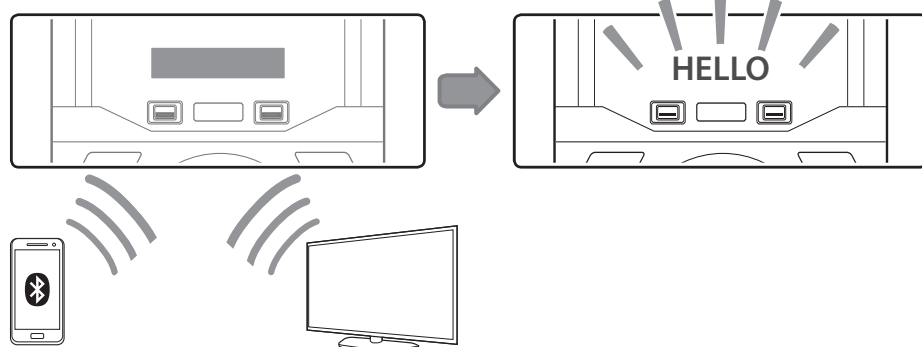

This unit automatically turns on by an input source : LG TV or **Bluetooth**
If you have already paired with this unit, automatically this unit can turn on by an input source when this unit is turned off.

 


Auto Function Change

This unit recognizes input signals such as **Bluetooth** and LG TV and then changes suitable function automatically.




Folder Searching

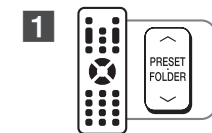

Press to move superior or subordinate folder from the root folder.

 ! Empty folders are not searched.

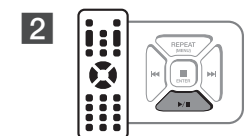


Select the folder to play. The first file of the folder is played.



AUTO DJ

 Auto DJ blends the end of one song into the beginning of another for seamless playback.

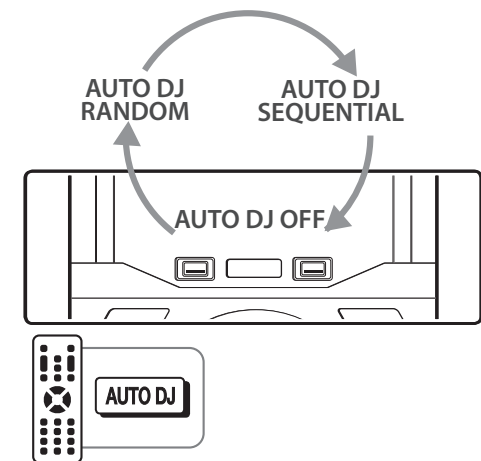

Press repeatedly to select the mode you want.

RANDOM (AUTO DJ RANDOM) -> RPT (AUTO DJ SEQUENTIAL) -> (AUTO DJ OFF)

! Only AUTO DJ SEQUENTIAL is selected when played Programmed list.

Mini Hi-Fi System

Model : CM4350

ENGLISH | SIMPLE MANUAL (2 of 2)

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.



MFJ08041410



Additional Feature

SOUND EFFECT

TRE/BASS
BOOST
FLAT
FOOTBALL
BASS
ROCK

STANDARD
NATURAL
POP
CLASSIC
JAZZ
BASS
ROCK

INFO

FILE-XXX_001

1 **CLOCK** Press and hold.

2 AM 12:00 ↔ 0:00

3 XX:00

4 00:XX

MUTE

SLEEP 180 150 120 ... 10 OFF

1 **ALARM** Press and hold.

2 XX:00

3 00:XX

4 TUNER CD
USB2 USB1

5 VOL XX

! Alarm function works only after clock is set.



Deleting file

! This function is supported only in stop status. (USB only)

1 **a** Select the file you want to delete.

b Select the folder you want to delete.

2 **FORMAT** **DEL FILE** **DEL DIR**

3 **DELETE** Press to delete file, folder or format.

! Press to exit the current mode.



USB Recording

1 Connect a USB storage and select the source (CD, AUX, PORTABLE, TUNER) to record.

2 **FUNCTION** **USB REC** Press to start recording. During recording, "REC" displayed.

Status	Recording (Only CD function)
Playback	One track/file
Programmed playback	Programmed the track(s)/file(s)
Full stop	All track(s)/file(s)

To select bitrate and recording speed

1 **USB REC** Press and hold for 3 seconds.

2 **USB REC** Select the bitrate and confirm.

3 **USB REC** Select the recording speed and confirm. (Only CD function)

! Press to stop the recording

Press to pause the recording. (Only TUNER, AUX, PORTABLE)

! It'll be stored as follows. * The other source : AUX and the like.

AUDIO CD	MP3/WMA	The other source*	TUNER
CD_REC - TRK_0001 - TRK_0002 ...	FILE_REC - ABC(File name) - DEF(File name) ...	OTHERS_REC - AUDIO_0001 - AUDIO_0002 ...	TUNER_REC - AUDIO_0001_107.7FM - AUDIO_0002_97.8FM ...

! A file is recorded by about 512 Mbyte when you record for a long term.

! When you stop recording during playback, the file that has recorded at that time will be stored. (Except MP3/WMA file)



USB copying

1 Connect USB devices to USB ports and select USB 1.

FUNCTION

2 **USB REC** Press **USB REC** to start recording. Audio files in USB 1 are copied to USB 2.

! Press to stop recording

Press to pause the recording. (Only TUNER, AUX, PORTABLE)

Status	Recording
Playback	One track/file
Programmed playback	Programmed the track(s)/file(s)
Full stop	All track(s)/file(s)



Programmed Playback

You can make a playlist of your favourite tracks/files from a disc or USB device using Programmed Playback.

This function is supported only on stop status.

To make Programmed Playback list

- 1

Press to enter the edit mode.
- 2

Select a track/file and confirm.
- 3

Press again to exit from the edit mode.

A playlist of up to 20 tracks/files can be entered for CD/USB1/USB2.

Repeat steps 2 to store other files.

To enjoy Programmed Playback

- 1

Press again after you make the list.
- 2

Press to play the list.
- Press twice to exit from Programmed Playback mode.

To delete Programmed Playback List

- 1

Press in stop status.
- 2

Press repeatedly to select a track/file.
- 3

Press to delete selected song.




Specification

ENGLISH	
Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.4 W (If all network ports are activated.)
Bus Power Supply (USB)	5 V 500 mA
Total Output	260 W

Design and specifications are subject to change without notice.



 Safety Information

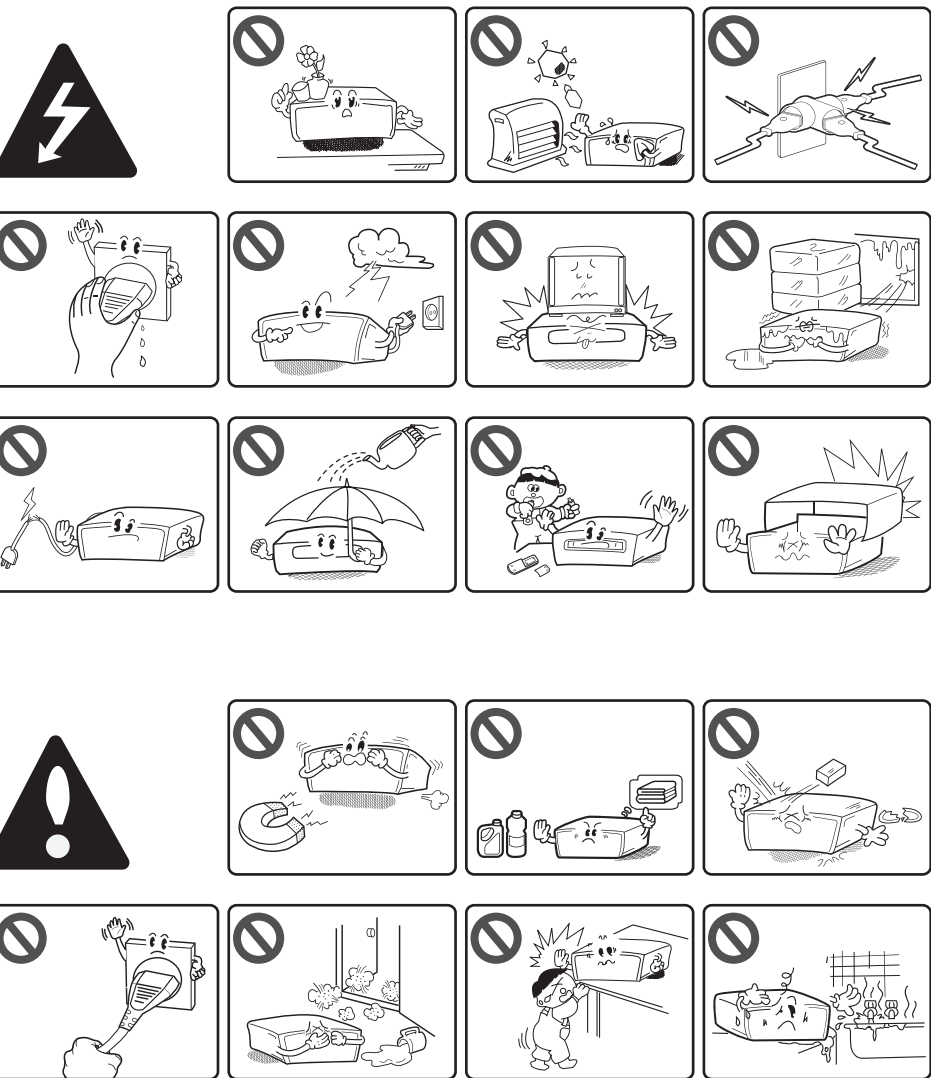

Additional Information

Music File Requirement		
Sampling frequency	• MP3 : 32 - 48 kHz • WMA : 32 - 48 kHz	
Bit rate	• MP3 : 32 - 320 kbps • WMA : 40 - 192 kbps	
Maximum files	Data CD : 999 / USB : 2000	
Maximum folders	Data CD : 99 / USB : 200	
File extensions	• ".mp3" • ".wma"	
CD-ROM file format	ISO9660+JOLIET	
USB Flash Drive	Devices that support USB2.0 or USB1.1.	
Bluetooth	Codec	SBC

The USB function of this unit does not support all USB devices.

Using NTFS file system is not supported. (Only FAT(16/ 32) file system is supported.)

External HDD, Card readers, Locked devices, or hard type USB devices are not supported.

The DTS is not supported. In case of DTS audio format, audio is not output.

How to disconnect the wireless network connection or the wireless device
Turn off the unit by pressing the power button for more than 5 seconds.



This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

POWER: This unit operates on a mains supply of 200 - 240 V ~, 50 / 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- BLUE: NEUTRAL, BROWN: LIVE - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



CAUTION: This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure.

CAUTION concerning the Power cord
The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.