



ENGLISH

SIMPLE MANUAL

# DVD Wireless Home Theater System

To view the instructions of advanced features,  
visit <http://www.lg.com> and then download Owner's Manual.  
Some of the content in this manual may differ from your unit.

MODEL  
LHD655W



\* M F L 6 9 4 0 0 8 5 0 \*

[www.lg.com](http://www.lg.com)



## Front Panel



**MIC 1/2** ..... Connect a microphone.  
**PORT. IN** ..... Connect to a Portable device.  
**USB Port** ..... Connect a USB device.  
**△** ..... Disc Tray Open / Close  
**>II** ..... Starts / Pauses playback.  
**□** ..... Stops playback.  
**F** ..... Changes the input source or function.  
**- / +** ..... Adjusts volume.  
**∅ / I** ..... Power On / Off


## Rear Panel



**SPEAKERS** ..... Connect to speakers.  
**HDMI OUT TO TV** ..... Connect to TV.  
**AUX (L/R) INPUT** ..... Connect to analogue device.  
**VIDEO OUT** ..... Connect to TV.  
**OPTICAL IN** ..... Connect to digital device.  
**ANTENNA FM** ..... Connect to radio antenna.

## 1


### Speaker Assembling

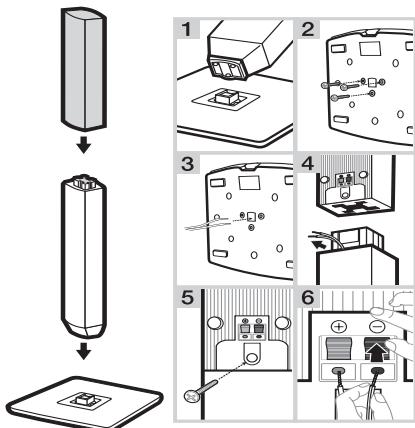


## 2

### Speaker Connection

! Speaker design and connection method may be different according to models.

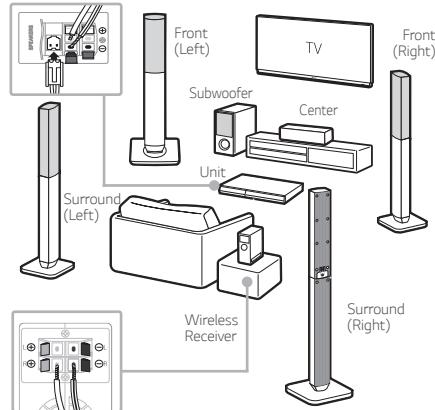

#### About Ferrite Core (Optional)

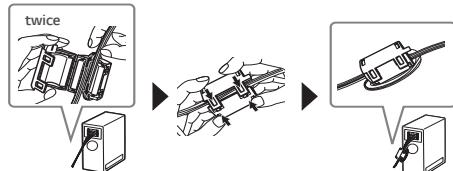

### 3 Pair Up with Wireless Receiver

- 1 Connect the rear speakers to the wireless receiver.
- 2 Connect the power cord of wireless receiver to the outlet.
- 3 Turn on the player:  
The player and wireless receiver will be **automatically** connected. A yellow-green LED on the wireless receiver will light on.




If no sound is heard from the rear speakers connected to wireless receiver, please follow as below.

- i. Adjust volume level of player to minimum. "VOL MIN" appears on display window.
- ii. Press and hold (Mute) button on the remote control about 3 seconds. The red LED will flicker.
- iii. Press and hold **PAIRING** on the rear of wireless receiver for more than 5 seconds using point of a pen.
- iv. Disconnect the power cord of the player and the wireless receiver. Connect them again.

### 4 TV Connection

#### HDMI & Optical Connection

- 1 Connect the Player to the TV using HDMI & Optical cable.
- 2 Set the input selector to HDMI on the TV.
- 3 Set up [External Speaker (Optical)] on your TV setting menu.
- 4 Follow the instructions on the TV screen using remote control.

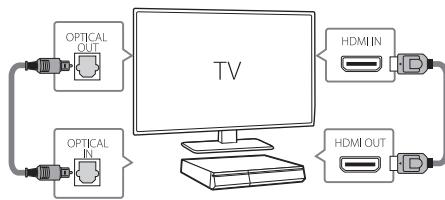

### 5 Home Menu

Home menu appears on the TV screen. Enjoy various functions on the player.



### LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

## Additional Information

### Specification

Power requirements	Refer to main label.
Power consumption	Networked standby : 0.4 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 360 mm x 60.5 mm x 299 mm
Net Weight	Approx. 2.69 kg
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	1,000 W

Design and specifications are subject to change without notice.

### How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

### Replacement of battery

