



Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL OK99




www.lg.com

Copyright © 2018-2022 LG Electronics Inc. All Rights Reserved. $1807_\text{Rev}02$



Top panel

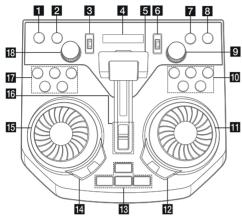

1 (Standby)
Turns the power on or off.

2 DEMO

In power off status, if you press **DEMO**, show demo mode.

3 USB 1 Port

You can play sound files by connecting the USB device.

4 Display window

5 PARTY ACCELERATOR lever

Slide the lever to create a party atmosphere.

6 USB 2 Port

You can play sound files by connecting the USB device.

7 F (Function)

Selects the function and input source.

8 AWIRELESS LINK

- Selects MAIN or OTHER on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode.

9 MASTER VOL. (Volume) -/+

Adjusts speaker volume.

10 KM (Skip/Search)

- Skips backward.
- Searches for a section within a track/file.
- Selects the radio stations.

Ⅺ (Play/Pause)

- Starts or pauses playback.
- Selects stereo/mono.

(Skip/Search)

- Skips forward.
- Searches for a section within a track/file.
- Selects the radio stations

☐ (Stop)

Stops playback or cancels DELETE function.

△ (Open/Close)

Opens and closes the disc tray.

11 DJ SCRATCH / SEARCH & MULTI

- Turns clockwise or counterclockwise to make scratch sound.
- Searches a folder or a file

12 SPECIAL EO / BASS BLAST (or BASS BLAST+)

- Chooses special equalizer.
- Press and hold to select BASS (or BASS+) effect directly.

SEARCH

Moves to folder or file in selection mode.

OΚ

Selects a folder when searching a file.

13 PARTY STARTER

- In power off state, this function turns on the unit with Party Kick Starter sound.
- In power on state, this function mixes the music with Party Kick Starter sound.

CLUB. DRUM. USER (DJ PAD)

Selects CLUB, DRUM or USER sound effect to mix.

(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)

1, 2, 3 (DJ PAD)

Press a desired sound pad.

14 DJ EFFECT

Selects a desired DJ effect.

USER EQ

Selects the equalizer created by your own.

LIGHTING

Selects the lighting mode.

15 DJ SCRATCH / LEVEL CONTROL

- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Adjust DJ EFFECT level.
- Selects the vocal effects.
- Selects the lighting effects.

16 PARTY ACCELERATOR MODE

Selects PARTY ACCELERATOR MODE.

DJ LOOP

Selects DJ LOOP mode.

(DJ LOOP mode can use during CD/USB playback.)

17 KEY CHANGER () /#)

Changes the key to suit your vocal range.

VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

VOCAL EFFECTS


Selects VOCAL EFFECTS mode.

MIC ECHO


Selects ECHO mode.

18 MIC VOL. (Microphone Volume) -/+ Adjust microphone volume.

Front panel / Rear panel

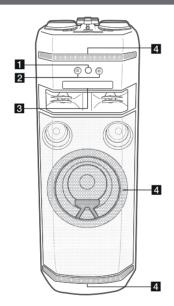

- 1 R (Remote sensor)
- 2 MIC(Microphone) 1/2 jack
- 3 Disc tray
- 4 Lighting

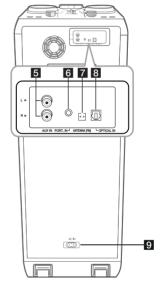

- **5** AUX IN (L/R): Connect an auxiliary device.
- 6 PORT.(Portable) IN : Connect a portable device.
- 7 ANTENNA (FM)
- 8 OPTICAL IN: Connect an optical device.
- 9 AC IN socket

Controller App





Download the **Music Flow Bluetooth** App to your device. (Android only)

LG Sound Sync



For more information, download the online owner's manual. http://www.lg.com

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
	Refer to the main label on the unit.
Power Consumption	Networked standby: 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 430.0 mm x 1054.0 mm x 400.0 mm
Bus Power Supply (USB)	5 V === 500 mA
Amplifier (Total RMS output power)	1,800 W RMS

Design and specifications are subject to change without notice.

Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.


Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

Replacement of battery

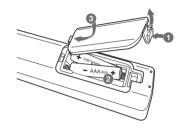

Declaration of Conformity





Hereby, LG Electronics declares that the radio equipment type MINI HI-FI AUDIO is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

http://www.lg.com/global/support/cedoc/cedoc#

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.



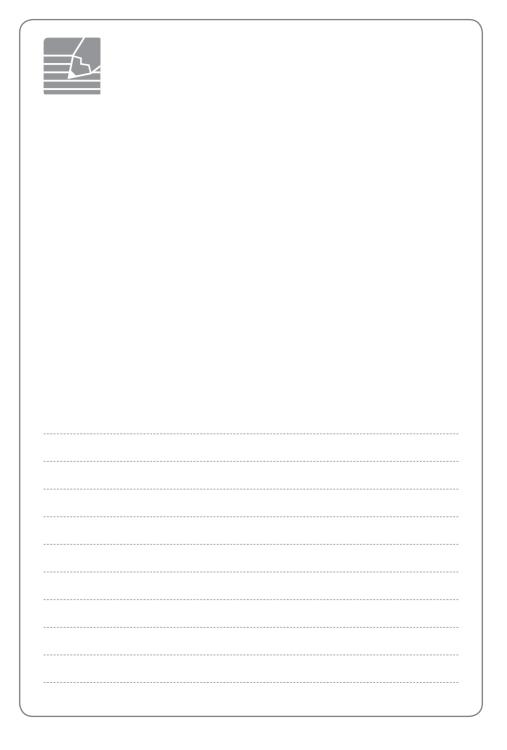

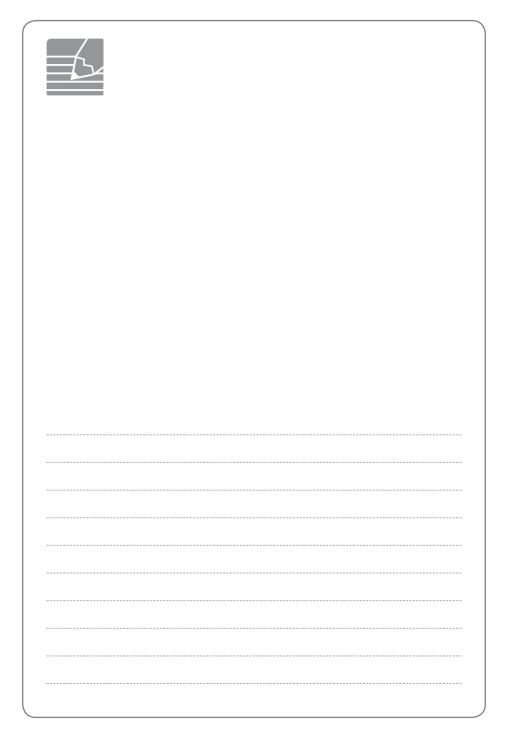



Российская Федерация

Импортер ООО "ЛГ Электроникс Рус"

Адрес импортера: 143160 Российская Федерация, Московская область, Рузский район, сельское поселение Дороховское, 86 км. Минского шоссе, д.9

Адрес производителя : ЛГ Электроникс (Хужоу) Инк., завод Хатаи

516006, Китай, пров. ГуанДонг, г. Хужоу, Промышленная зона Жонгкай, Индустриальный парк Хутаи, ХуФенг Донг Уи Роуд, 13.

Сделано в Китае

Україна

Вироблено в : ЛГ Електронікс (Хужоу) Інк., завод Хатай 516006, Китай, пров. ГуанДонг, м. Хужоу, Промислова зона Жонгкай, Індустріальний парк Хутай, ХуФенг Донг Уі Роуд, 13.

Қазақстан Республикасы

Импорттаушы АҚ "ЭЛ Джи Электроникс Алматы Қазақстан", 050061, Алматы қ., Көкорай көшесі, 2А/9

Өндірушінің мекенжайы: LG Electronics(Huizhou) Inc. Huitai Factory

516006, Қытай, ГуанДонг ауданы, Хужоу қаласы,

Жонгкай өнеркәсіптік аймағы, Хутай Индустриялық саябағы,

ХуФенг Донг Уи Роуд, 13.

Қазақстан Республикасы территориясында тұтынушылардан келіп түскен талаптар мен ұсыныстарды қарайтын және тауарды жөндеу мен техникалық қызмет көрсететін ұжым:

АҚ «Эл Джи Электроникс Алматы Казақстан», 050061, Қазақстан Республикасы, Алматы қ., Көкорай көшесі, 2А/9. Басқа сервис орталықтары жайында мағлұматты "Тұтынушыға қызмет көрсету орталығына" телефон шалу арқылы білуге болады.

Қытайда жасалған