



Scan the QR code to see the manual.



OWNER'S MANUAL

WASHING MACHINE



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

ENGLISH

WT28EGTX6



MFL71985822
Rev.02_100225

www.lg.com

Copyright © 2025 LG Electronics. All Rights Reserved

TABLE OF CONTENTS

This manual may contain images or content that may be different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE	3
WARNING	3
CARING FOR THE ENVIRONMENT	8

INSTALLATION

Parts and Specifications	9
Installation Place Requirements	11
Connecting the Water Inlet Hoses	12
Installing the Drain Hose	13
Levelling the Appliance	14

OPERATION

Operation Overview	16
Preparing the Wash Load	16
Adding Detergents, Softeners and Bleaches	18
Control Panel	23
Programme Table	25
Extra Options and Functions	31

SMART FUNCTIONS

LG ThinQ Application	34
Smart Diagnosis	36

MAINTENANCE

Cleaning after Every Wash	38
Cleaning the Appliance Periodically	38

TROUBLESHOOTING

Before Calling for Service	42
----------------------------------	----

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety Messages

⚠ This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

⚠ WARNING
This indicates that the failure to follow the instructions can cause serious injury or death.

⚠ CAUTION
This indicates that the failure to follow the instructions can cause minor injury or damage to the product.

WARNING

⚠ WARNING

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Technical Safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Ventilation openings must not be obstructed by a carpet.
- This appliance is intended to be used in household only.
- Use a new hose or hose-set supplied with the appliance. Reusing old hoses can cause a water leak and subsequent property damage.
- The inlet water pressure must be between 50 and 800 kPa.

Maximum Capacity

The maximum capacity in some cycles for dry clothes to be washed is **28 kg.**

Installation

- Never attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- This appliance should only be transported by two or more people holding the appliance securely.
- Do not install the appliance in a damp and dusty place. Do not install or store the appliance in any outdoor area, or any area that is subject to weathering conditions such as direct sunlight, wind, rain, or temperatures below freezing.
- Make sure the power plug is completely pushed into the power outlet.
- Do not plug the appliance into multiple outlet sockets or an extension power cable.

- Do not modify the power plug provided with the appliance. If it does not fit the power outlet, have a proper outlet installed by a qualified electrician.
- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a power cord having an equipment-grounding conductor and a grounding power plug. The power plug must be plugged into an appropriate outlet socket that is installed and grounded in accordance with all local codes and ordinances.
- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.
- Tighten and secure the drain hose at connecting ends to avoid separation.
- For models with only one inlet water supply valve, do not connect to hot water. Connect to cold water only.

Operation

- Do not apply any sharp objects to the control panel in order to operate the appliance.
- Do not attempt to separate any panels or disassemble the appliance.
- Do not repair or replace any part of the appliance. All repairs and servicing must be performed by qualified service personnel unless specifically recommended in this Owner's Manual. Use only authorized factory parts.
- Do not put animals, such as pets into the appliance.
- Keep the area underneath and around the appliance free of combustible materials such as lint, paper, rags, chemicals, etc.
- Do not leave the appliance door open. Children may hang on the door or crawl inside the appliance, causing damage or injury.
- Do not put in, wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances

(such as waxes, wax removers, oil, paint, gasoline, degreasers, drycleaning solvents, kerosene, petrol, spot removers, turpentine, vegetable oil, cooking oil, acetone, alcohol, etc.). Improper use can cause fire or explosion.

- Do not use or store flammable or combustible substances (ether, benzene, alcohol, chemical, LPG, combustible spray, insecticide, air freshener, cosmetics, etc.) near the appliance.
- Never reach into the appliance while it is operating. Wait until the drum has completely stopped.
- In case of a water leak from the appliance, disconnect the power plug and contact the LG Electronics customer information centre.
- Turn off water taps to relieve pressure on hoses and valves and to minimize leakage if a break or rupture should occur. Check the condition of the fill hoses; they may need replacement after 5 years.
- If there is a gas leakage (isobutane, propane, natural gas, etc.) within the home, do not touch the appliance or power plug and ventilate the area immediately.
- If the drain hose or inlet hose is frozen during winter, use it only after thawing.
- Keep all washing detergents, softener and bleach away from children.
- Do not touch the power plug or the appliance controls with wet hands.
- Do not bend the power cable excessively or place a heavy object on it.
- Do not put your hand, foot or anything under the appliance while the appliance is in operation.
- Avoid touching any water that is drained from the appliance during the wash.
- Make sure that drainage is working properly. If water is not drained properly, your floor may get flooded.
- If, during spinning, opening the door does not stop the drum within about 10 seconds, immediately discontinue operating the appliance and contact your dealer or LG Electronics service centre.

- Do not use a power outlet, wiring equipment and extension cord of which the electric capacity is lower than the appliance's rated capacity.
- When the air temperature is high and the water temperature is low, condensation may occur and thus wet the floor.
- Wipe off dirt or dust on the contacts of the power plug.

Maintenance

- Disconnect the appliance from the power supply before cleaning the appliance. Setting the controls to the OFF or stand by position does not disconnect this appliance from the power supply.
- Securely plug the power plug in the outlet socket after completely removing any moisture and dust.
- Do not spray water inside or outside the appliance to clean it.
- Never unplug the appliance by pulling on the power cable. Always grip the power plug firmly and pull straight out from the outlet socket.
- Only qualified service personnel from LG Electronics service centre should disassemble, repair, or modify the appliance. Contact an LG Electronics customer information centre if you move and install the appliance in a different location.

Disposal

- Before discarding an old appliance, unplug it. Cut off the cable directly behind the appliance to prevent misuse.
- Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.
- Remove the door before disposing of or discarding this appliance to avoid the danger of children or small animals getting trapped inside.

CARING FOR THE ENVIRONMENT

Disposal of Your Old Appliance



- This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream.
- Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.
- You can take your appliance to any of the authorised centres for collection. If you want to know an updated list of countries that have this service, visit the page <https://www.lg.com/global/take-back-recycling-global-network-south-america>.


INSTALLATION

Parts and Specifications

NOTE

- Appearance and specifications may change without notice to improve the quality of the appliance.


Front View

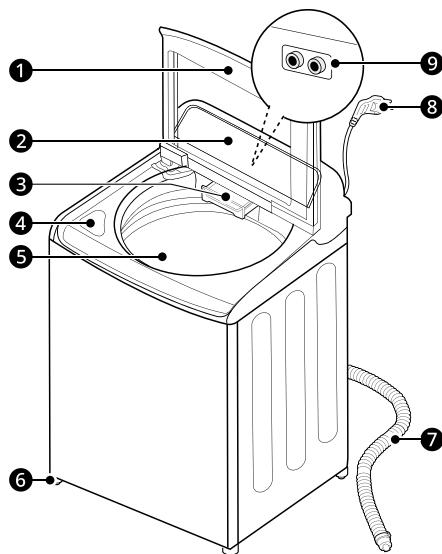

- ① Door
- ② Control Panel
- ③ Dispenser Drawer
- ④ Bleach Dispenser
- ⑤ Drum
- ⑥ Levelling Feet
- ⑦ Drain Hose^{*1}
- ⑧ Power Cord
- ⑨ Hot and Cold Water Inlets

Accessories

 *1 The included accessories vary depending on the model you purchased.




- ① Cold and Hot Water Inlet Hoses^{*1}
- ② Drain Hose^{*1}
- ③ Tie Strap^{*1}
- ④ Anti-Rat Cover^{*1}
- ⑤ Screw for Anti-Rat Cover^{*1}
- ⑥ Leg Holders^{*1}

*1 This feature is only available on some models.

Specifications

Model	WT28EGTX6
Power Supply	120 V~, 60 Hz
Product Weight	Approx. 59 kg

Dimension(mm)

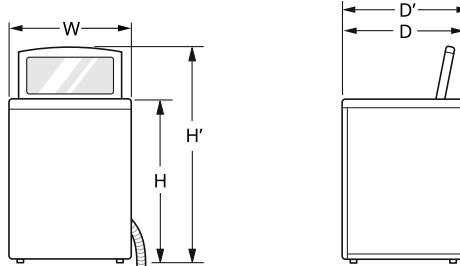


W	686	D	721	H	1092
D'	811	H'	1448		

Installation Place Requirements

Before installing the appliance, check the following information in order to install the appliance in a correct place.

Unpacking Shipping Material

- 1 Lift the appliance off of the foam base.
 - After removing the carton and shipping material, lift the appliance off the foam base.
 - Make sure the plastic tub support ① comes off with the base and is not stuck to the bottom of the appliance.
 - If you must lay the appliance down to remove the carton base ②, always protect the side of the appliance and lay it carefully on its side. Do not lay the appliance on its front or back.

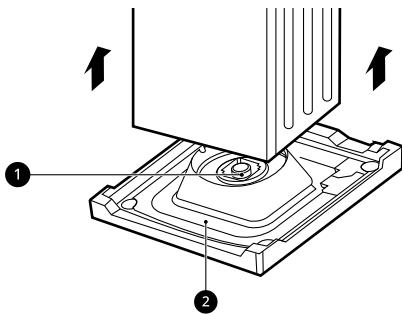


NOTE

- Do not use the appliance on carton base ②. Doing so may damage the appliance.

- 2 Remove the foam tub insert.


- To prevent damage, do not remove the foam insert ③ from the tub until the appliance is in the final location.

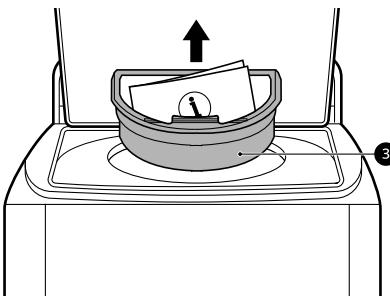

NOTE

- Once removed, save the foam insert for future use. If the appliance needs to be moved, the foam insert will help prevent damage during transportation.


- 3 Unfasten the power cord.
 - Unfasten the power cord from the back of the appliance.

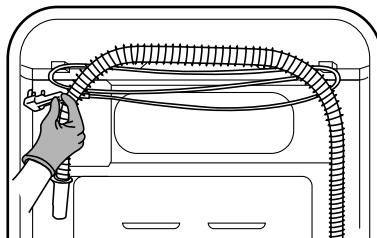

Installation Location

- Install the appliance on a flat floor of hard material that is strong enough to support a fully loaded appliance. (Allowable slope under the appliance: 1°)
- Never try to level any uneven floor by putting pieces of wood, cardboard or similar materials under the appliance.

- If it is impossible to avoid positioning the appliance next to a gas cooker or coal burning stove, an insulation (85 X 60 cm) covered with aluminium foil on the side facing the cooker or stove must be inserted between the two appliances.
- Ensure that when the appliance is installed, it is easily accessible for a service technician in the event of a breakdown.
- Additional clearance for the wall should have **10 cm** for the rear and **2 cm** for right and left side.

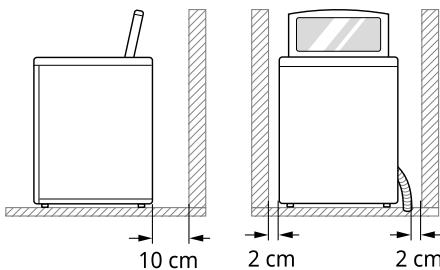

⚠ WARNING

- This appliance must only be used for domestic household purposes and should not be used with movable home or house.

NOTE

- Do not install this appliance on a raised surface or platform, plinth or stand. It may cause injury or serious malfunctioning.

Ventilation

- Make sure that air circulation around the appliance is not impeded by carpets, rugs, etc.

Ambient Temperature

- Do not install the appliance in rooms where freezing temperatures may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.

- If the appliance is delivered in winter and temperatures are below freezing, place the appliance at room temperature for a few hours before putting it into operation.

Electrical Connection

- Do not use an extension cord or double adapter.
- Always unplug the appliance and turn off the water supply after use.
- Connect the appliance to an earthed socket in accordance with current wiring regulations.
- The appliance must be positioned so that the plug is easily accessible.
- Power outlet must be within 1.5 meters of either side of the appliance.

⚠ WARNING

- Repairs to the appliance must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local authorised LG repairer.
- The power plug must be plugged into an appropriate outlet socket that is installed and grounded/earthed in accordance with all local codes and ordinances.

Connecting the Water Inlet Hoses

Before connecting the water inlet hose to the water tap, check the hose fitting type and follow the instructions for that hose fitting.

Note for Connection


- Water supply pressure must be between **50 kPa** and **800 kPa** (0.5 - 8.0 kgf / cm²). If the water supply pressure is more than **800 kPa**, a pressure reducing device should be installed.
- Do not overtighten the water inlet hose when connecting it to the valve.
- Periodically check the condition of the hose and replace the hose if necessary.

- The water supply hose supplied may vary from country to country. Make sure to connect the blue supply hose to the COLD water tap, and the orange supply hose to the HOT water tap.

Checking the Rubber Seals

Two rubber seals ① are supplied with the water inlet hoses. They are used to prevent leaks when the connections to the taps are properly tightened. Do not over tighten connections.


- Do not use mechanical devices such as multi grips to tighten the inlet hoses. Ensure that the curved end of the water inlet hose is connected to the appliance.

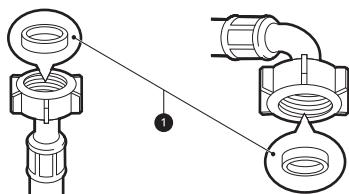

Connecting the Hose to the Water Tap

Connecting Screw-Type Hose to Tap with Thread

Screw the hose connector onto the water supply tap.

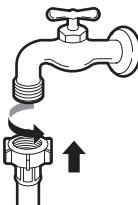


NOTE

- After connecting the water inlet hose to the water tap, turn on the water tap to flush out foreign substances (dirt, sand, sawdust, and etc.) in the water lines. Let the water drain into a bucket, and check the water temperature.

Connecting the Hose to the Appliance

Screw the water inlet hose to the water inlet valve on the back of the appliance.

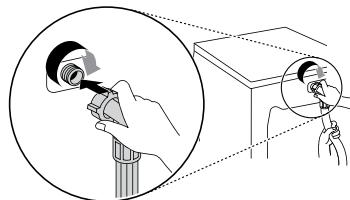

- On models with only one water inlet, do not connect the hose to the hot water supply. Connect to the cold water supply only.

NOTE


- After completing the connections, check for leaks and tighten or reassemble the connections if needed.

Installing the Drain Hose

Before connecting the drain hose, check your drain hose model and follow the instructions for that model.

For Models with Drain Pump

The discharge height should be approximately **90 - 120 cm** from the floor.

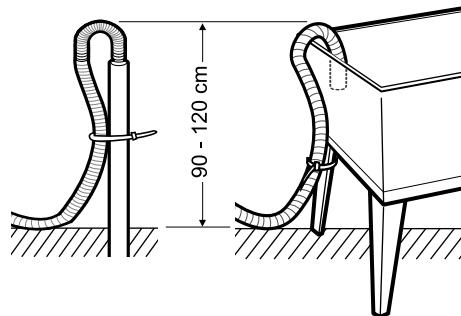

- Securing the drain hose correctly will protect the floor from damage due to water leakage.

- If the drain hose is too long, do not force the drain hose further into the drain outlet. This will cause abnormal noise.

NOTE

- The drain hose must not be placed higher than **120 cm** above the floor. Water in the appliance may not drain or may drain slowly.

Reinforcing or bracing the timber floor may be needed to stop or reduce excessive noise and vibration.

- Do not install the appliance on any elevated surface or platform, as it may become unstable and cause serious injury and damage.
- If the appliance is installed on a uneven, weak or tilted floor causing excessive vibration, spin failure error can occur. It must be placed on a firm and level floor to prevent spin failure.

Levelling the Appliance

Checking the Level


Levelling the appliance prevents unnecessary noise and vibration. Check whether the appliance is perfectly level after installation.

- If the appliance rocks when pushing the top plate of the appliance diagonally, adjust the feet again.

Adjusting and Levelling the Feet

When the appliance is not perfectly level, turn the adjustable feet until the appliance no longer wobbles.

- Turn the adjustable feet clockwise to raise or turn the adjustable feet counterclockwise to lower the appliance.

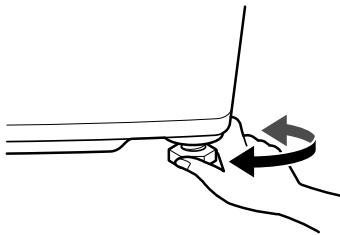

NOTE

- Do not insert pieces of wood etc. under the feet.
- Timber or suspended type flooring will contribute to excessive vibration and unbalance.

Assembling the Anti-Rat Cover

You can insert the anti-rat cover according to the type to protect the appliance from the rat.

Folding Type

- 1 Lay the appliance backwards.


CAUTION

- Be careful your feet or hands when you lay or raise the appliance.

- 2 Install the leg holder.

- The leg holder installation sheet is included in the leg holder package. Read this installation sheet for instruction on how to install the leg holder.

3 Insert the 7 screws ① into the holes to assemble the anti-rat cover to the appliance.

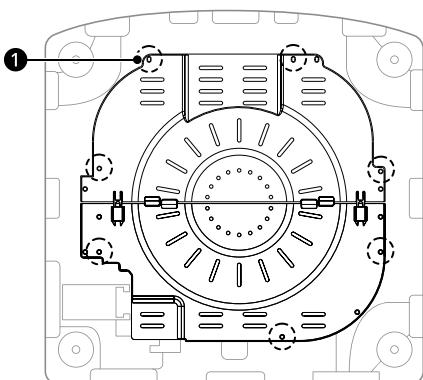

OPERATION

Operation Overview

Using the Appliance

Before the first wash, select the **Normal** programme and add a half amount of detergent. Start the appliance without clothes.

- This will remove residue and water from the drum that may have been left during manufacturing.

1 Sort clothes and load items.

- Sort clothes by fabric type, soil level, colour and item size as needed. Open the door and load items into the appliance.

2 Add detergent, fabric softener and/or bleach.

- Fill the larger **ezDispense** compartment with liquid detergent. Fill the smaller compartment with liquid fabric softener, if desired.
- If desired, add bleach to the bleach dispenser at the left front tub opening.
- If not using the **ezDispense** function, pour the detergent directly into the tub. When using powdered detergent, the detergent may clump up, so add the detergent first and then load the laundry.

3 Press the **POWER** button to turn on the appliance.

4 Choose the desired wash cycle.

- Turn the programme knob to select the desired programme.
- Select the option button to adjust water level, spin speed, etc. Refer to a fabric care label of your clothes for any warning or special instructions.

5 Adjust settings.

- Default settings for the selected cycle can be changed, if desired, using the cycle modifier and option buttons.

6 Begin cycle.

- Press the **START/PAUSE** button to begin the cycle.
- The appliance will agitate briefly without water to measure the weight of the clothes.
- If the **START/PAUSE** button is not pressed within a certain time, the appliance will shut off and all settings will be lost.

7 End of cycle.

- When the cycle is finished, a melody will sound. Immediately remove your clothing from the appliance to reduce wrinkling.

Preparing the Wash Load

Sort the wash load for best washing results, and then prepare the clothes according to the symbols on their care labels.

Sorting the Clothes

- For best washing results, sort your clothes according to a care label stating fabric type and washing temperature. Adjust the spin speed to wash them.
- Soil level (Heavy, Normal, Light): Separate clothes according to soil level. If possible, do not wash heavily soiled items with lightly soiled ones.
- Colour (White, Lights, Darks): Wash separately dark or dyed clothes from whites or light colours. Mixing dyed clothes with light clothes can result in dye transfer or discolouration of lighter clothes.
- Lint (Lint producers, Collectors): Wash separately lint producing fabrics from lint collecting fabrics. Lint producers can result in pilling and linting on the lint collectors.

Checking the Fabric Care Label

This will tell you about the fabric content of your clothes and how it should be washed.

Symbols on the Care Labels

Symbol	Wash / Fabric type
	<ul style="list-style-type: none"> Normal Wash Cotton, Mixed Fabrics
	<ul style="list-style-type: none"> Easy Care Synthetic, Mixed Fabrics
	<ul style="list-style-type: none"> Special Delicate Wash Delicates
	<ul style="list-style-type: none"> Hand Wash Only Wool, Silk
	<ul style="list-style-type: none"> Do not wash

NOTE

- The dashes under the symbol give you information about the type of fabric and the maximum allowance of mechanical stress.

Checking the Laundry before Loading

- Combine large and small items in a load. Load large items first. Large items should not be more than half of total load.
- Do not wash single small items. Add 1 - 2 similar items to the load to prevent an out-of-balance load.
- Make sure to empty all pockets. Items such as hair clips, lighters, pens, coins and keys can cause irreparable damage to both your appliance and clothes.



- Wash delicates (stockings, underwired bras) in a wash net.
- Close zippers, hooks and strings to make sure that these items do not snag other clothes.
- Pre-treat dirt and stains by saturating the dirt and stains with dissolved detergent and brushing them in order to remove dirt.

CAUTION

- Do not wash or spin any item labelled or known to be water-proof or water-resistant, even if the product care label on the item permits machine washing. Failure to follow these instructions could result in severe damage to your washing load, your appliance and/or property damage as a result of abnormal load friction or vibration of the appliance.
 - Examples of water-proof or water-resistant items include certain mattress pads, mattress covers, rain gear, camping gear, skiing apparel, outdoor gear and similar items.

Adding Detergents, Softeners and Bleaches

Detergent Dosage

- Detergent should be selected according to fabric type, colour, soil level and washing temperature and should be used according to the detergent manufacturer's instructions.
- Too much detergent results in excessive suds which cause poor washing.
- When you use liquid detergent, follow the guidelines provided by the detergent manufacturer.
- You can pour liquid detergent directly into the main detergent drawer if you are starting the wash cycle immediately. It is also recommended that it be added into the drum when loading the clothes.
- Do not use liquid detergent if you are using delay or pre-wash function as the liquid may harden.
- Reduce the amount of detergent if too many suds are formed.
- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the laundry. For best results, avoid oversudsing.
- Refer to the label of the clothes, before choosing the detergent and water temperature.
- Use only suitable detergents for the respective type of clothing:
 - General powdered detergents for all types of fabric
 - Powdered detergents for delicate fabric
 - Liquid detergents for all types of fabric or designated detergents only for wool
- For better washing performance and whitening, use detergent that contains general powdered bleach.
- Detergent is dispensed from the dispenser at the beginning of the cycle.
- Dilute liquid detergent with water, pour into the drum and start the cycle.

CAUTION

- Using liquid detergent without diluting, or leaving laundry for a long time after pouring diluted liquid detergent into the drum might cause the clothes to be damaged, bleached, discoloured.

NOTE


- Do not let the detergent harden. Doing so may lead to blockages, poor rinse performance or odour.
- Full load: According to manufacturer's recommendation.
- Part load: 3/4 of the normal amount
- Minimum load: 1/2 of full load

Using the ezDispense Function

When the **ezDispense** function is turned on, the liquid detergent and softener are dispensed in the set amounts, at the appropriate time during the cycle.


- A full detergent compartment will last for around 7-8 standard programme, with water level 1-3 (less about 5 kg of normally soiled laundry).
- The default settings are configured to dispense **60 ml** of detergent and **30 ml** of softener for **60 L** of water (less about 5 kg of normally soiled laundry). This can be changed using the **Default Det. Amount** or **Default Soft. Amount** setting. For more details, see “**More Settings**” in the More Options and Settings section.
- If you get a notification that there is not enough detergent or softener, refill the detergent dispenser immediately to avoid dispensing less than the default amount.

1 Slowly slide the detergent dispenser drawer out as far as it will go.

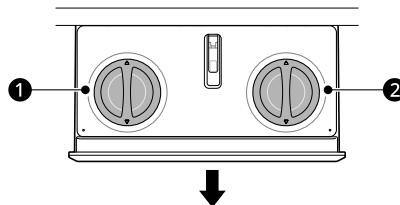

① Liquid fabric softener compartment
② Main wash liquid detergent compartment

2 Turn the lids on the **ezDispense** compartments counterclockwise to open them.

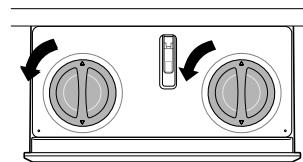


3 Pour the detergent and softener into their respective compartments, up to the **MAX** line.

- The **ezDispense** drawer has two compartments. Put the liquid detergent into the larger compartment and the fabric softener into the smaller compartment.
- Do not put liquid or powdered bleach, or powdered, gel or sheet type detergents into the **ezDispense** compartments.
- Do not use powdered detergent in the **ezDispense** compartments.
- Remove any residual detergent on the outside of the **ezDispense** drawer before inserting it.

20 OPERATION

- Do not try to fill the compartments too quickly. Add detergent and softener slowly to avoid overflows.

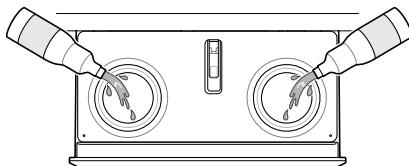

4 After filling the compartments, insert the lids and turn them to the right until they are tightly closed.

- Securely close the lids to the **ezDispense** compartments to minimize airflow which can harden cleaning products and prevent them from dispensing properly. Be careful not to lose the lids.
- If the compartment cover is not installed properly, the drawer may not close properly or water may get inside the compartments.

NOTE

- Close the covers properly.
 - If the compartment covers are not closed properly, you may not be able to reinstall the dispenser drawer.
 - If there is a gap between the covers and the compartment, detergent and softener may harden or water may enter the compartment.

5 Close the dispenser drawer slowly before starting the cycle.

- Make sure the dispenser drawer is fully closed. If the drawer is not completely closed, you may see an error code or the detergent or softener may not dispense properly.
- Be careful not to get a hand caught in the drawer while closing.

⚠ CAUTION

- Slide the detergent dispenser drawer out or in slowly and use both hands for safety. Failure to do so can damage the appliance or cause the detergent or softener to leak out of the ventilation holes.
- Detergent or fabric softener left in the **ezDispense** compartments for an extended period may harden and fail to dispense properly.
- Do not remove the dispenser drawer while the product is in operation.
- Remove detergent/softener in the **ezDispense** compartments before moving the appliance.

NOTE

- If not using the **ezDispense** function, pour the detergent directly into the tub. When using powdered detergent, the detergent may clump up, so add the detergent first and then load the laundry.
- You may get a detergent or softener low notification the first time you use the **ezDispense** function or if the detergent compartment is completely emptied and then filled with a new detergent.

Automatic Detergent/Softener Amount by Water Level

The below table shows the automatic amount of detergent and softener dosage at the default settings.

- The default setting is:

- Detergent Amount : Medium
- Softener Amount : Medium
- Default Det. Amount : 60 ml
- Default Soft. Amount : 30 ml

Water Level	Laundry Amount	Automatic Detergent/Softener Amount	
		Liquid Detergent (ml)	Liquid Softener (ml)
10	Over 15 kg	150	54
9	About 15 kg		
8	About 13 kg		
7	About 11 kg		
6	About 9 kg	108	48
5	About 8 kg		
4	About 6 kg		
3	About 5 kg	60	33
2	About 3 kg		
1	1 kg or less		


NOTE

- This model automatically detects the weight of the laundry, which sets the appropriate water level automatically if you do not select a water level (except for certain courses).
- Wet clothes may be detected as a higher load, resulting in a higher water level.
- Detergent and softener are automatically dispensed based on the load sensor or the set water level. Change the **Default Det. Amount** or **Default Soft. Amount** by following the manufacturer's instructions for **60 L** of water (less about 5 kg of normally soiled laundry) to change the automatic dispense amounts.
- The amount of detergent/fabric softener dispensed may vary depending on the type of detergent/fabric softener.

Adding Liquid Bleaches

- Before starting the appliance, pour the measured amount of bleach directly into the

bleach dispenser ①. Avoid splashing or overfilling.

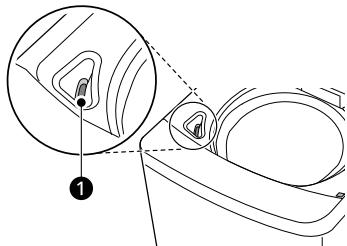


- Mix powdered bleach with water to a liquid consistency and pour it into the bleach dispenser.
- Check clothing care label for special instructions and separate the laundry to be bleached.
- Dilute liquid chlorine bleach with water.
- Measure the recommended amount of liquid bleach carefully according to instructions on the bottle.

⚠ CAUTION

- Never pour undiluted liquid bleach directly onto laundry or into the wash basket. This may cause change of colour or damage to the laundry.
- Do not pour powdered bleach into the bleach dispenser. Powdered bleach may harden, so it will block the bleach dispenser.

Control Panel

Control Panel Features

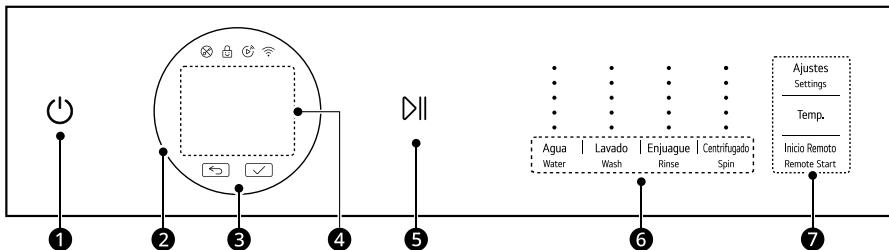

① POWER Button

- Press the **POWER** button to turn on or off the appliance.
- The appliance automatically turns off once a certain time has passed after the wash has completed.

② Programme Knob

- Programmes are available according to the laundry type.
- The lamp will light up to indicate the selected programme.

③ <(Previous) & >(OK) button

- Press the <(Previous) button to go to the previous screen.
- Press the >(OK) button to select a menu item or save the information.

④ Status Display

- The display shows the settings, estimated remaining time, options, and status messages.

⑤ START/PAUSE Button

- Press this button to start or pause the washing programme.

NOTE

- If the **START/PAUSE** button is not pressed within a certain time, the appliance will shut off and all settings will be lost.
- For customer safety, the door will be locked automatically during operation. If there is additional laundry to put in, press **START/PAUSE** to unlock.
- If there is a power blackout during operation, the washing machine door will not open. After the electricity supply is on, press the **POWER** and **START/PAUSE** buttons to open the door.


⑥ Cycle Modifier Buttons

- Use these buttons to adjust the water level, spin speed etc. settings for the selected cycle.
- The current settings are shown in the display.
- Press the button for the desired modifier to select other settings.

⑦ Option and Extra Function Buttons

- These buttons allow you to select additional programme options.

Time and Status Display

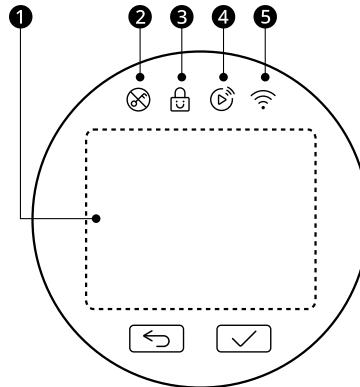

① Status Display

- The display shows the washing programme, settings, estimated time remaining, options, and status messages.

② Door Lock Indicator

- This indicator lights up when the cycle starts and the door is locked.
- The indicator light stays on until the cycle is paused, stopped or has finished.

③ Child Lock Indicator

- This indicator lights up when the **Child Lock** feature is activated.

④ Remote Start Indicator

- This indicator lights up when the **Remote Start** feature is activated.

⑤ Wi-Fi Indicator

- This indicator lights up when the product is connected to a home Wi-Fi network.

Programme Table

Washing Programme

Wash programmes are designed for the best wash performance for different types of clothes.

- Turn the knob to select the desired programme.

Default Washing Programme

These programmes are in the initial cycle list.

Normal	
Description	<p>Use this programme to wash normal laundry. The built-in sensor detects the weight of the laundry, calculating wash, rinse and, spin settings accordingly.</p> <ul style="list-style-type: none"> If water or wet laundry is already in the drum before the start, the water level will be increased. For lightweight and bulky items, the water level may be too low. Increase the water level manually.


AI Wash	
Description	<p>AI Wash provides the appropriate drum rotation actions after load sensing is completed. It washes softly for waterproof fabrics, and strongly for water permeable fabrics.</p> <ul style="list-style-type: none"> This programme's recommended laundry amount is under 5 kg. <p>NOTE</p> <ul style="list-style-type: none"> For best wash results, load the dry clothes for this programme.

Duvet

Description	<p>Use this programme to wash a blanket or bedclothes that have the hand wash sign on the care label.</p> <ul style="list-style-type: none"> • Cashmere bedclothes, acrylic blanket, mixed spinning blanket, woollen blanket, infilling (polyester 101), and bed sheets might be damaged if they are allowed to float. It is recommended to purchase a separate laundry net to wash. • Separate bed clothes from general clothes. It might cause laundry to be unbalanced, which results in abnormal washing. • Spin dry might take longer to redistribute the laundry evenly if bedclothes are lumped to a side. • Never wash an electric blanket, carpets, rugs, pet accessories, soft toys or shoes. It can cause damage to the appliance and other items in the wash. • Put bedclothes into a laundry net and then soak and sink them in water so that they are less likely to float. If the items float during the wash or spin, it may damage the appliance and the clothes. • Regardless of size, we recommend washing bedclothes individually. If two bedclothes with different materials are washed at the same time, it might cause a spin malfunction due to imbalance.
-------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

▲ CAUTION

- When putting a blanket into the drum, do not load it over the maximum line ①. The blanket must also be submerged in the water. Failure to do so or overloading the blanket in the appliance will result in damage to the wash load and the appliance.

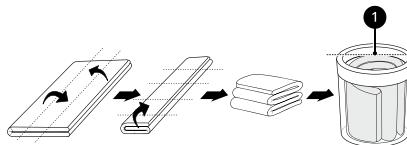**Pre Wash+Normal**

Description	<p>Use this programme to pretreat immediate stain without handwash.</p> <ul style="list-style-type: none"> • It is necessary for clothes which could smell bad if they are not washed promptly.
-------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Smart Rinse

Description	<p>Use this programme to improve rinsing results. This is suitable for underwear and baby clothes. If you have sensitive skin or skin trouble, use this programme.</p>
-------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Quick Wash

Description	Use this programme to wash lightly soiled clothes for a short time.
-------------	---------------------------------------------------------------------

Delicates

Description	<p>Use this programme to wash delicate fabrics such as lingerie and woolens. Before washing, check the care label for the washing instructions.</p> <ul style="list-style-type: none"> This programme uses a slow spin to extract water from laundry, so the laundry has more moisture than normal. <p>NOTE</p> <ul style="list-style-type: none"> Hang or lay flat to dry your delicates. Only cold water will be used for this programme as hot water may damage laundry.
-------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Rinse+Spin

Description	<p>Use this programme to rinse and spin laundry separately from a regular programme.</p> <ul style="list-style-type: none"> This can be helpful in preventing fresh stains from setting in fabrics. <hr/> <p>CAUTION</p> <ul style="list-style-type: none"> When you select this option, do not add the fabric softener into the softener dispenser. It may cause stain clothes. <hr/>
-------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Spin Only

Description	Use this programme to drain and spin laundry without washing or rinsing it.
-------------	-----------------------------------------------------------------------------

Tub Clean

Description	<p>This is a special function to clean inside the drum of your appliance.</p> <ul style="list-style-type: none"> To use this function, refer to the MAINTENANCE for details.
-------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Non-Default Washing Programme

Edit the list of programme using the **Cycle List Edit** option to use these cycles.

Towels

Description	<p>Use this programme to wash bath towels, bathrobes, hand towels etc.</p> <ul style="list-style-type: none"> Wash separately from other clothes.
-------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------

Activewear

Description	Use this programme to wash special garments like sports and outdoor wear. <ul style="list-style-type: none">• Use for water-repellent fabric laminate used on clothing.
-------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

School Uniforms

Description	Use this programme to wash school uniform. <ul style="list-style-type: none">• This programme has a longer washing time than the Normal programme.• To reduce noise in spinning, this programme uses a slow spin to prevent the clothes from being damaged, so the laundry has more moisture than normal.
-------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Strong Wash

Description	Use this programme to wash with strong wave motion.
-------------	-----------------------------------------------------

Color Care

Description	Use this programme to keep colors from fading.
-------------	------------------------------------------------

Silent Wash

Description	Use this programme to wash clothes quietly especially during late night and dawn. <ul style="list-style-type: none">• To reduce noise in spinning, this programme uses a slow spin to prevent the clothes from being damaged, so the clothes has more moisture than normal.
-------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Rainy Days

Description	Use this programme to spin strongly after washing.
-------------	----------------------------------------------------

Single Garments

Description	Use this programme to wash quickly light soil.
-------------	------------------------------------------------

Full Items

Description	Use this programme to wash and spin strongly.
-------------	-----------------------------------------------

Sweat Stains

Description	Use this programme to remove light stain with prewash.
-------------	--------------------------------------------------------

Jeans

Description	Use this programme to prevent jeans from discolouring.
-------------	--------------------------------------------------------

Swimwear

Description	Use this programme to gently removes chlorine or salt from swimwear.
-------------	----------------------------------------------------------------------

Food Stains

Description	Use this programme to remove food stains with soaking.
-------------	--------------------------------------------------------

Wash Only

Description	Use this programme to wash only, no rinsing and spinning.
-------------	-----------------------------------------------------------

Rinse Only

Description	Use this programme to rinse only, no washing and spinning.
-------------	------------------------------------------------------------

Microplastic Care

Description	This programme helps to reduce microplastic emissions with delicate motion.
-------------	-----------------------------------------------------------------------------

Extra Options

*1 This option is automatically included in the washing programme and cannot be deselected.

NOTE

- **Delay End** option can be selected for every washing programme in the table below.
- All extra options cannot be selected at the same time in the **Normal** programme.
- : Available / X: Not available

For Default Washing Programme

Programme	TurboWash	Scent+	Wash Wave
Normal	●	●	●
AI Wash	●	●	●
Duvet	X	X	●
Pre Wash+Normal	X	●	●
Smart Rinse	X	●	●
Quick Wash	X	X	●

Programme	TurboWash	Scent+	Wash Wave
Delicates	X	X	X
Rinse+Spin	X	●	●
Spin Only	X	X	X
Tub Clean	X	X	X

For Non-Default Washing Programme

Programme	TurboWash	Scent+	Wash Wave
Towels	X	●	●
Activewear	X	●	●
School Uniforms	X	●	●
Strong Wash	X	●	●
Color Care	X	●	●
Silent Wash	X	X	●
Rainy Days	X	●	●
Single Garments	X	X	●
Full Items	X	●	●
Sweat Stains	X	●	●
Jeans	X	●	●
Swimwear	X	X	X
Food Stains	X	●	●
Wash Only	X	X	●
Rinse Only	X	X	●
Microplastic Care	X	X	X

Extra Options and Functions

You can use the extra options and functions on some programmes to customize the cycle.

Customising a Washing Programme

Each programme has default settings that are selected automatically. You may also customise these settings using these buttons.

Water

This appliance detects the amount of laundry automatically, then sets the water level. However, manually increasing the water level may be required and recommended to avoid linting and unbalanced errors when the load is bulky but lightweight.

- Press **Water** option until the desired water level is selected. The water level is indicated on the display.
- When water level is automatically detected, it may differ depending on the amount of laundry even though the same water level is indicated on the control panel.

Wash

Adjusting the wash time setting modifies the cycle times and/or wash actions.

- Press **Wash** button until the desired wash time is selected. The wash time is indicated on the display.

Rinse

Use this option to change the number of rinses.

- Press **Rinse** button to change the number of rinses. The number of rinses is indicated on the display.

Spin

Use this option to change the spin level.

- Press **Spin** button until the desired spin level is selected. The spin level is indicated on the display.
- When you press the **START/PAUSE** button after selecting this option, the remaining time is indicated on the display.

Using Basic Options

You can customize the programmes by using the following basic options:

Remote Start

Use a smartphone to control your washer remotely.

- For more information, see **SMART FUNCTIONS** in this manual.

Delay End

Use this option to delay ending time.

- The appliance will start automatically and finish after a specified time interval.

NOTE

- This function is the time to the end of the programme, not the start. The actual running time may vary due to water temperature, wash laundry and other factors.
- Reservation can be made up to 19 hours;
 - 30 minutes interval up to 3 - 19 hours
- This function cannot be set for less than 3 hours.

Setting

- 1 Press the **Settings** button.
- 2 Turn the knob to select the desired setting and press the **✓ (OK)** button.
- 3 Turn the knob to select or change the setting and press the **✓ (OK)** button to save the setting.
- 4 To return to the previous screen, press the **Settings** button again or press the **↶ (Previous)** button.

NOTE

- If no action is taken for several minutes after pressing the **Settings** button, the display reverts to the previous screen.

Detergent Amount / Softener Amount

Turn the knob to adjust the dispense amount for the current cycle based on the fabric type and soil level.

- **Off:** Turns off the ezDispense function for that compartment
- **Minimum:** Decreases the default amount by 20%
- **Less:** Decreases the default amount by 10%
- **Medium:** Uses the default amount
- **More:** Increases the default amount by 10%
- **Maximum:** Increases the default amount by 20%

Child Lock

Use this option to disable the controls. This function can prevent children from changing cycles or operating this washer.

NOTE

- The function does not lock the door.
- Once this function is set, all buttons are locked except the **Power** button.
- When the controls are locked, the **Child Lock** indicator lights up and the wash cycle is shown on the display.
- Turning off the power will not reset this function. You must deactivate this function before you can access any other options and functions.

TurboWash

Adding this option reduces the programme time but the similar washing results will be provided.

NOTE

- If the water pressure of tap water is less than 100 kPa, water does not come out from the **JetSpray** nozzle on the top of the drum, but water comes out from the detergent drawer.

Wash Wave

Use this option to select the wash strength.

Soak

This option can be selected to wash heavily soiled clothes by soaking them in water for some time to loosen dirt and grime.

- This function can be set from between 30 to 180 minutes.

Scent+

Use when you want to leave a strong fragrance of the softener on the fabric.

NOTE

- If you want to use **Scent+** function in the following cases, pour the softener directly into the tub when final rising process.
 - If **Use of Dispenser 2** function selected **Link Detergents**, softener is not automatically injected.
 - If adjusted **Softener Amount** function to Off, softer is not automatically injected.

Cycle List Edit

Edit the list of washing programme as desired.

- 1) Turn the knob to select the desired washing programmes and press the **✓ (OK)** button to include or exclude washing programmes.
 - If a washing programme is added, a check mark is displayed by that washing programme.
 - If a washing programme is deleted, the check mark is not displayed by that washing programme.
- 2) Press the **↳ (Previous)** button to save the washing programme list.

NOTE

- The **Normal** and **Tub Clean** programmes cannot be deleted.
- The order of washing programme in the list can be changed. Change the order of the washing programmes in the list using **More Settings > Cycle Optimization** on the product.

More Settings

- 1 Press the **Settings** button.
- 2 Turn the knob to select **More Settings** and press the **✓ (OK)** button.
- 3 Turn the knob to select the desired setting and press the **✓ (OK)** button.
- 4 Turn the knob to select or change the setting and press the **✓ (OK)** button to save the setting.
- 5 To return to the previous screen, press the **Settings** button again or press the **◀ (Previous)** button.

NOTE

- If no action is taken for several minutes after pressing the **Settings** button, the display reverts to the previous screen.

Wi-Fi Connection

Use to set up the Wi-Fi connection. When Wi-Fi is turned on, the Wi-Fi icon appears in the display.

Cycle Optimization

When activated, this feature organizes the programme list and options automatically based on your usage patterns.

- On** is the default setting.
- Selecting **Off** retains the current list order.

Use of Dispenser 2

Switches the softener compartment to a secondary detergent compartment for those who don't use liquid fabric softener.

or the compartment may fail to dispense properly.

- Clean the detergent dispenser after the detergent is used up to prevent any detergent residue from hardening.

Default Det. Amount / Default Soft. Amount

Use this function to adjust the default detergent or softener dispense amount in **3 ml** increments, within a range of **9 ml** to **120 ml**.

- The default settings are configured to dispense **60 ml** of detergent and **30 ml** of softener for **60 L** of water (less about 5 kg of normally soiled laundry).

ezDispense Nozzle Clean

Use this function to periodically clean the ezDispense compartments or before changing the softener compartment to a detergent compartment.

⚠ CAUTION

- Before using the function, remove the ezDispense compartment, clean it, fill it with water and reassemble it in the dispenser drawer.

Sound

The volume of the notification sounds and button sounds can be set from quiet to very loud.

Language

Use this to change the language of the appliance.

Smart Diagnosis

Use this to help troubleshoot errors or malfunctions.

- See the Smart Diagnosis section for more details.

Factory Reset

Select this to delete all the stored data and initialize settings.

⚠ CAUTION

- Before using the softener compartment to dispense detergent, empty and clean the drawer and run the **ezDispense Nozzle Clean** function,

SMART FUNCTIONS

LG ThinQ Application

The **LG ThinQ** application allows you to communicate with the appliance using a smartphone.

- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.

LG ThinQ Application Features

Communicate with the appliance from a smartphone using the convenient smart features.

Remote Start

It allows you to control the appliance remotely from the **LG ThinQ** application.

Tub Clean Coach

This function shows how many cycles remain before running the **Tub Clean** function.

Energy Monitoring

This function checks the energy consumption of the recently used cycles and monthly average.

Smart Diagnosis

This function provides useful information for diagnosing and solving issues with the appliance based on the pattern of use.

Settings

Allows you to set various options on the appliance and in the application.

Push Alert

When the cycle is complete or the appliance has problems, you have the option of receiving push notifications on a smartphone. The notifications are triggered even if the **LG ThinQ** application is off.


NOTE

- In the following cases, you must update the network information for each appliance in the **LG ThinQ** application under **Device Cards > Settings > Change Network**.
 - wireless router is changed
 - wireless router password is changed
 - Internet service provider is changed

Installing LG ThinQ App and Connecting an LG Appliance

Models with QR Code

Scan the QR code attached to the product using the camera or a QR code reader app on your smartphone.

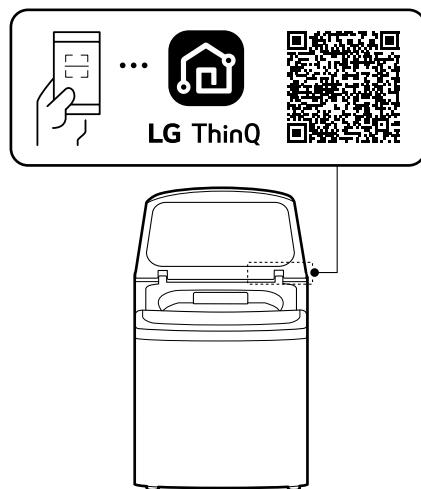

Models without QR Code

- Search for and install the **LG ThinQ** app from the Google Play Store or Apple App Store on a smartphone.
- Run the **LG ThinQ** app and sign in with your existing account or create an LG account to sign in.

3 Touch the add (+) button on the **LG ThinQ** app to connect your LG appliance. Follow the instructions in the app to complete the process.

NOTE

- You may be asked to provide a password to connect to the LG network (not your home network) during the Wi-Fi setup. The password is the last 4 characters of the network name, repeated twice, with no spaces. For example, if the network name appears as LG_XXXX_8b92, then you would enter 8b928b92 as your password. The password is case sensitive and the last 4 characters are unique to your appliance.
- To verify the Wi-Fi connection, check that the  icon on the control panel is lit.
- The appliance supports 2.4 GHz Wi-Fi networks only. To check your network frequency, contact your Internet service provider or refer to your wireless router manual.
- LG ThinQ** is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.
- The network connection may not work properly depending on the Internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- If the appliance cannot be connected due to problems with the wireless signal transmission, unplug the appliance and wait about a minute before trying again.
- If the firewall on your wireless router is enabled, disable the firewall or add an exception to it.
- The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)

- Smartphone user interface (UI) may vary depending on the mobile operating system (OS) and the manufacturer.
- If the security protocol of the router is set to **WEP**, network setup may fail. Change the security protocol (**WPA2** is recommended) and connect the product again.

Using the Appliance Remotely

Remote Start

To start the washing programme remotely in the **LG ThinQ** application, set the **Remote Start** function. You can also monitor your cycle operation so you know how much time is left in the cycle.

Using this function

- Put the laundry in the tub. If using **ezDispense**, make sure that there is sufficient detergent and softener in the compartments. If not using the **ezDispense** function, pour the detergent directly into the tub. When using powdered detergent, the detergent may clump up, so add the detergent first and then load the laundry.
 - If desired, add bleach or fabric softener to the appropriate areas of the dispenser.
- Press the **POWER** button.
- Press the **Remote Start** button.
- Turn the knob to select **On** and press the  button to enable the remote control function.
- Start a cycle from the **LG ThinQ** application on your smartphone.

NOTE

- Once this function is enabled, you can start a cycle from either the **LG ThinQ** smartphone application or the product. If the cycle is not started, the appliance will wait to start the cycle until it is turned off remotely from the application or this function is disabled.
- If the door has been opened, you can not start a cycle remotely.

Disable this function manually

When this function is activated, press the **Remote Start** button. Turn the knob to select **Off** and press the **✓(OK)** button.

Wireless LAN Module Regulation

NCC Warning

The low-power RF equipment which has been certified for examination shall not be subject to change of frequency, increase of power or alter the characteristics and functions of the original design without approval.

The use of low-power RF equipment shall not affect the safety of flight and the interference of legitimate communication; if any interference is detected, it shall be discontinued immediately and improved to the extent that no interference is detected before continuing.

The aforementioned legal communication refers to radio communication operating in accordance with the provisions of the Telecommunications Management Law. Low-power radio-frequency equipment shall be subjected to interference from legitimate communications or radio wave radiating electrical equipment for industrial, scientific and medical use.

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license

terms, copyright notices and other relevant documents, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

Smart Diagnosis

Use this feature to help you diagnose and solve problems with your appliance.

NOTE

- The feature may be subject to change without prior notice and may have a different form depending on where you are located.

Using LG ThinQ to Diagnose Issues

If you experience a problem with your Wi-Fi equipped appliance, it can transmit troubleshooting data to a smartphone using the **LG ThinQ** application.

- Launch the **LG ThinQ** application and select the **Smart Diagnosis** feature in the menu. Follow the instructions provided in the **LG ThinQ** application.

NOTE

- For reasons not attributable to LGE's negligence, the service may not operate due to external factors such as, but not limited to, Wi-Fi unavailability, Wi-Fi disconnection, local app store policy, or app unavailability.


Using Audible Diagnosis to Diagnose Issues

Follow the instructions below to use the audible diagnosis method.

- Launch the **LG ThinQ** application and select the **Smart Diagnosis** feature in the menu. Follow the instructions for audible diagnosis provided in the **LG ThinQ** application.

- 1 Press the **POWER** button to turn on the appliance.
- 2 Press the **Settings** button.
- 3 Turn the knob to select **More Settings** and press the **✓(OK)** button.
- 4 Turn the knob to select **Smart Diagnosis** and press the **✓(OK)** button.

- 5 Place the mouthpiece of your smartphone close to the **POWER** button and press the **✓(OK)** button.
 - Hold the smartphone mouthpiece to the **POWER** button until the data transfer is complete.

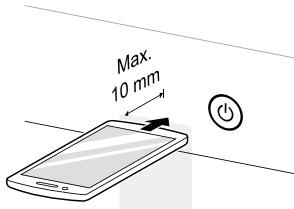

- 6 After the data transfer is complete, the washing machine will turn off.

NOTE

- For best results, do not move the smartphone while the tones are being transmitted.

MAINTENANCE

⚠ WARNING

- Unplug the appliance before cleaning to avoid the risk of electric shock. Failure to follow this warning may result in serious injury, fire, electric shock, or death.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the appliance. They may damage the finish.

Cleaning after Every Wash

What to Clean

- If you always use cold water, we recommend that a warm or hot wash be used at regular intervals e.g. every 5th wash should be at least a warm one.
- Turn off taps after use to prevent the chance of flooding, otherwise an inlet hose may burst.
- Always unplug the power cord after use.
- After the cycle, wipe the door and inside the door to remove any moisture. Also wipe the inside of the tub thoroughly to prevent stains in the upper part of the tub.
- Clean around the bleach dispenser with water to flush any residual bleach from the dispenser opening as bleach can be corrosive if left undiluted.

⚠ WARNING

- Leave the door open to dry the drum interior but only if it is safe and any children are supervised.

- Wipe with a damp cloth.
- Do not press on the surface or the display with sharp objects.
- To remove fingerprints, wipe with a soft cloth.

Dispenser Drawer

Detergent or fabric softener may build up in the dispenser drawer. Remove the drawer and inserts from the dispenser drawer and clean any buildup once or twice a month.

Cleaning the Appliance Periodically

Cleaning the Tub

This is a special function to help clean the inside of the appliance by soaking, washing, rinsing and spinning.

Run this function **once a month** (or more often if needed) to reduce build-up of detergent and softener and other residue.

- If there is a bad smell or mildew inside the appliance, run this function once a week for 3 weeks in addition to the regularly prompted intervals.

NOTE

- The **Time to clean the tub** message will be displayed to alert to the recommendation of operating the **Tub Clean** function.
- For models with a lint filter, remove lint or dirt from the inside of the lint filter before and after using this programme.

Cleaning the Exterior

Proper care of the appliance can extend the service life.

Lid

Wash with a damp cloth on the outside and inside and then dry with a soft cloth.

Exterior

- Immediately wipe off any spills.

- For models without a lint filter, the lint is discharged when the water drains during washing.
- Washing small loads regularly (less than half a tub). This may result in stains being left on the edge of the tub that do not reach the top of the tub. To avoid stains at the top of the tub, wash larger amounts of laundry or use the **Tub Clean** function regularly.

1 Remove any clothing or items from the appliance.

2 Open the dispenser drawer and add anti-limescale to the main wash compartment.

⚠ WARNING

- Do not add any detergent to the detergent dispenser drawer for this function. Doing so may generate excessive suds and leak out from the appliance and cause damage to property.

3 Close the dispenser drawer slowly and close the door.

4 Press the **POWER** button.

5 Turn the knob to select **Tub Clean**.

6 Press the **START/PAUSE** button to start.

7 Leave the door open to dry the inside of the appliance completely.

- When the inside of the appliance is not dried completely, it may cause a bad smell or mildew.

⚠ WARNING

- Leave the door open to dry the drum interior but only if it is safe and any children are supervised.

Cleaning the ezDispense Drawer

Remove and clean the **ezDispense** compartment **every time** you refill the detergent/softener or change to a new type of detergent/softener.


Remove and clean the detergent dispenser drawer **once or twice a month**. Leaving detergent in the detergent dispenser drawer for an extended period or using the washing machine for a long time may cause the build-up of residue in the detergent dispenser drawer.

⚠ WARNING

- Do not spray water inside the washing machine. Doing so may cause fire or electric shock.

1 Turn off the washing machine, and unplug the power cord.


2 Pull out the dispenser drawer until it stops, and then press the disengage button down to completely remove the drawer.

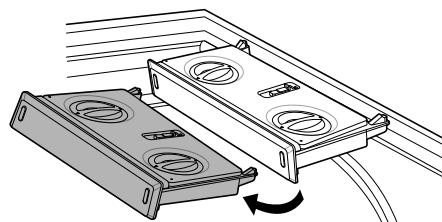

3 Open the compartment lids.

40 MAINTENANCE

- Rinse the drawer in warm water to dissolve the detergent or softener scale.

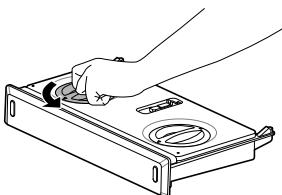


4 Clean the outsides of the **ezDispense** compartments and inserts with warm water.


- Use a soft cloth or brush to remove any residue.
- Do not use soap when cleaning the drawer and inserts.

5 If the detergent or softener is hardened inside the **ezDispense** compartment, remove the cover on the compartments, and clean the insides of the compartments with warm water.

- Use a soft cloth or brush to clean and to remove any residue.
- Do not use soap when cleaning the compartments.

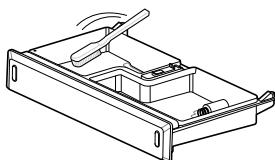

6 Securely close the cover on the **ezDispense** compartments.

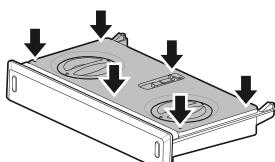


CAUTION

- Close the cover properly.
 - If the compartment cover is not closed properly, you may not be able to reinstall the dispenser drawer.
 - If there is a gap between the cover and the compartment, detergent and softener may harden or water may enter the compartment.

7 Wipe off any moisture with a dry towel or cloth after cleaning.

8 Reassemble the compartments and reinstall the dispenser drawer.

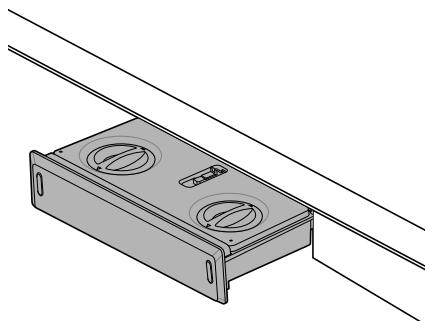


Cleaning the Water Inlet Filter


Water inlet filter collects lime or any small objects that may be in water supplied to the appliance. Clean the water inlet filter regularly.

- Turn off the water taps to the appliance if the appliance is to be left for any length of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.
- Water supply error message will be displayed on the control panel when water is not entering the detergent drawer.
- If the water is very hard or contains traces of limescale, the filter on the water inlet may be clogged.

- 1 Turn off the power and the water tap and then unscrew the water inlet hose.

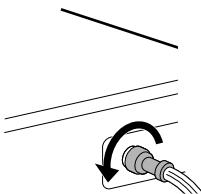

- 2 Remove the water inlet filter with small pliers and then clean the filter using a medium bristle tooth brush.

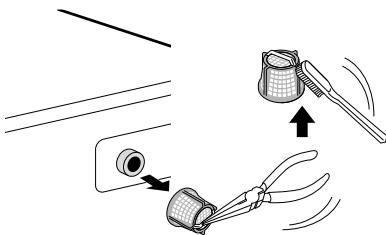

TROUBLESHOOTING

Before Calling for Service

Operation of the appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. You can remedy most of the problems by yourself, consequently save time and money, since you do not need to call LG Electronics service centre. The following table should assist you by troubleshooting.

Error Messages

The appliance is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If this appliance does not function properly or does not function at all, check the following before you call LG Electronics service centre.

Symptoms	Possible Cause & Solution
Door open	<p>The door is not closed properly.</p> <ul style="list-style-type: none"> Close the door completely. If the error code is still displayed, call for service.
	<p>The door is opened while the washing machine is operating.</p> <ul style="list-style-type: none"> Press Start/Pause to cancel the door error. Press Start/Pause again to start the washing programme.
Door unlocked	<p>Door is not locked properly.</p> <ul style="list-style-type: none"> Check nothing is caught under the door, including shipping materials or clothing. Close the door completely. If the error code is still displayed, call for service.
Water supply	<p>Water supply tap(s) are not completely open.</p> <ul style="list-style-type: none"> Fully open tap.
	<p>Water supply hose(s) are kinked, pinched, or crushed.</p> <ul style="list-style-type: none"> Straighten or reinstall the water supply hose(s).
	<p>The filter of the supply hose(s) are clogged.</p> <ul style="list-style-type: none"> Check and clean the filter of the supply hose(s).
	<p>Water supply pressure to tap or house is too low or too high.</p> <ul style="list-style-type: none"> Contact a plumber to have the water pressure checked or restored to the operating requirements.
	<p>Water supply is connected with leak limiting hose(s).</p> <ul style="list-style-type: none"> Do not use leak limiting hose(s).
Drainage	<p>Drain hose is kinked.</p> <ul style="list-style-type: none"> Ensure that the drain hose is not kinked.

Symptoms	Possible Cause & Solution
Unbalance	Rebalancing operation is not successful. <ul style="list-style-type: none"> The automatic attempt to rebalance the laundry was not successful. The cycle has been paused to allow the laundry to be manually adjusted.
	The load is too small. <ul style="list-style-type: none"> Add more items to allow the appliance to balance the laundry.
	Heavy items are mixed with lighter items. <ul style="list-style-type: none"> Wash items of somewhat similar weight.
	The load is out of balance. <ul style="list-style-type: none"> Manually redistribute the laundry if laundry have become tangled.
Freeze error	Inlet / drain hose or drain pump is frozen. <ul style="list-style-type: none"> Thaw the hoses or pump.
No water detected	The water level sensor is not working correctly. <ul style="list-style-type: none"> Close the water taps, unplug the appliance, and call for service.
Motor error	A motor error has occurred. <ul style="list-style-type: none"> Remove some of the load and start washing again. If the error code is still displayed, call for service.
Water too high	Water overfills due to the faulty water valve. <ul style="list-style-type: none"> Close the water taps, unplug the appliance, and call for service.
Clutch error	Clutch error. <ul style="list-style-type: none"> Unplug the appliance and call for service.
No temp detected	Control error. <ul style="list-style-type: none"> Unplug the appliance and wait 60 seconds. Reconnect power and try again. If the error code is still displayed, call for service.
Drain motor error	A motor error has occurred. <ul style="list-style-type: none"> Unplug the appliance and call for service.
Voltage abnormality	Supply voltage is not correct. <ul style="list-style-type: none"> Unplug the appliance and call for service.

ezDispense Error Messages

Symptoms	Possible Cause & Solution
Check det. Tank	<p>The amount of liquid detergent in the detergent compartment did not decrease.</p> <p>After putting the detergent into the detergent compartment, it was left for a long time and the detergent hardened.</p> <ul style="list-style-type: none"> • Clean the detergent compartment thoroughly, fill it with liquid detergent, install it in the drawer, and run a wash cycle. If the error is displayed continuously, call for service.
Check soft. Tank	<p>The amount of fabric softener in the softener compartment did not decrease.</p> <p>After putting the fabric softener into the softener compartment, it was left for a long time and the fabric softener hardened.</p> <ul style="list-style-type: none"> • Clean the softener compartment thoroughly, fill it with liquid fabric softener, install it in the drawer, and run a wash cycle. If the error is displayed continuously, call for service.
No detergent	<p>The automatic detergent injection function does not work properly.</p> <ul style="list-style-type: none"> • Call for service.
No softener	<p>The automatic softener injection function does not work properly.</p> <ul style="list-style-type: none"> • Call for service.
ezDispense open	<p>The appliance was operated without completely closing the drawer.</p> <p>The drawer was opened during the appliance operation.</p> <ul style="list-style-type: none"> • Push the drawer completely closed. If the error is displayed continuously, call for service.
ezDispense error	<p>The ezDispense did not work properly.</p> <ul style="list-style-type: none"> • Call for service.

Noises

Symptoms	Possible Cause & Solution
Rattling and clanking noise	<p>Foreign objects, such as keys, coins, or safety pins may be in the drum.</p> <ul style="list-style-type: none"> • Stop the appliance, check the drum for foreign objects. If noise continues after the appliance is restarted, call for service.
Thumping sound	<p>Heavy laundry may produce a thumping sound. This is usually normal.</p> <ul style="list-style-type: none"> • If the sound continues, the appliance is probably out of balance. Stop and redistribute the laundry.
	<p>The laundry may be out of balance.</p> <ul style="list-style-type: none"> • Pause the cycle and redistribute the laundry after the door unlocks.

Symptoms	Possible Cause & Solution
Vibrating noise	<p>Packaging materials are not removed.</p> <ul style="list-style-type: none"> Remove packing materials. <p>The laundry may be unevenly distributed in the drum.</p> <ul style="list-style-type: none"> Pause the cycle and redistribute the laundry after the door unlocks. <p>Not all levelling feet are resting firmly and evenly on the floor.</p> <ul style="list-style-type: none"> See the section Levelling the Appliance to adjust and level the feet. <p>Floor is not rigid enough.</p> <ul style="list-style-type: none"> Check if the floor is solid and does not flex. See the section Installation Place Requirements to select the proper location.

Operation

Symptoms	Possible Cause & Solution
Appliance will not operate.	<p>Control panel has powered off due to inactivity.</p> <ul style="list-style-type: none"> This is normal. Press the POWER button to turn on the appliance. <p>Appliance is unplugged.</p> <ul style="list-style-type: none"> Make sure that the cord is plugged securely into a working outlet. <p>Water supply is turned off.</p> <ul style="list-style-type: none"> Turn on the water supply tap completely. <p>Controls are not set properly.</p> <ul style="list-style-type: none"> Make sure the cycle is correctly set. Close the door and press the START/PAUSE button. <p>Circuit breaker/fuse is tripped/blown.</p> <ul style="list-style-type: none"> Check house circuit breakers/fuses. Replace fuses or reset breaker. The appliance should be on a dedicated branch circuit. The appliance will resume the cycle where it stopped once power is restored. <p>Control needs to be reset.</p> <ul style="list-style-type: none"> Press the POWER button, then reselect the desired programme and press the START/PAUSE button. <p>START/PAUSE was not pressed after a cycle was set.</p> <ul style="list-style-type: none"> Press the POWER button, then reselect the desired cycle and press the START/PAUSE button. If the START/PAUSE button is not pressed within a certain time, the appliance will be turned off. <p>Extremely low water pressure.</p> <ul style="list-style-type: none"> Check another tap in the house to make sure that household water pressure is adequate.

Symptoms	Possible Cause & Solution
Appliance will not operate.	<p>Appliance is too cold.</p> <ul style="list-style-type: none"> • If the appliance has been exposed to temperatures below freezing for an extended period of time, allow it to warm up before pressing the POWER button. <p>Appliance is heating the water or making steam. (some models only)</p> <ul style="list-style-type: none"> • The drum in the appliance may stop operating temporarily during certain cycles, while water is safely heated to a set temperature.
Detergent is not dispensed completely or not dispensed at all.	<p>Too much detergent is used.</p> <ul style="list-style-type: none"> • Follow the guidelines provided by the detergent manufacturer.
Water leaking	<p>Water inlet hose connection is loose at tap or appliance.</p> <ul style="list-style-type: none"> • Check hoses for leaks, cracks and splits. • Tighten hose connections.
	<p>House drain pipes are clogged.</p> <ul style="list-style-type: none"> • The appliance pumps out water very rapidly. Check for water backing up out of the drain pipe during drain. If water is seen coming out of the drain, check for proper drain hose installation and check for restrictions in the drain. Contact a plumber to repair drain pipe.
	<p>A large item such as a pillow or blanket is above the top of the drum.</p> <ul style="list-style-type: none"> • Stop the appliance and check the item. Make sure the item does not crest above the top edge of the drum.
Appliance is not filling properly.	<p>Filter is clogged.</p> <ul style="list-style-type: none"> • Make sure the inlet filters on the fill valves are not clogged.
	<p>Supply hoses may be kinked.</p> <ul style="list-style-type: none"> • Check that supply hoses are not kinked or clogged.
	<p>Insufficient water supply.</p> <ul style="list-style-type: none"> • Make sure that both hot and cold water taps are turned on all the way.
	<p>Hot and cold supply hoses are reversed.</p> <ul style="list-style-type: none"> • Check supply hose connections.
Appliance will not drain water.	<p>Drain hose is kinked.</p> <ul style="list-style-type: none"> • Ensure that the drain hose is not kinked.
	<p>The drain hose is located higher than 6 cm above the floor.</p> <ul style="list-style-type: none"> • Place the drain hose less than 6 cm above the floor.
Cycle time is longer than usual.	<p>The load is too small.</p> <ul style="list-style-type: none"> • Add more items to allow the appliance to balance the laundry.

Symptoms	Possible Cause & Solution
Cycle time is longer than usual.	<p>Heavy items are mixed with lighter items.</p> <ul style="list-style-type: none"> Always try to wash items of somewhat similar weight to allow the appliance to evenly distribute the weight of the laundry for spinning.
	<p>The load is out of balance.</p> <ul style="list-style-type: none"> Manually redistribute the laundry if laundry have become tangled.

Performance

Symptoms	Possible Cause & Solution
Poor stain removal	<p>Proper options are not selected.</p> <ul style="list-style-type: none"> Heavier soils and tougher stains may require extra cleaning power. Select the Soak option to boost the cleaning power of the selected cycle.
	<p>Previously set stains.</p> <ul style="list-style-type: none"> Items that have previously been washed may have stains that have been set. These stains may be difficult to remove and may require hand washing or pretreating to aid in stain removal.
Staining	<p>Bleach or softener dispensed too soon.</p> <ul style="list-style-type: none"> Dispenser compartment is overfilled causing bleach or softener to dispense immediately. ALWAYS measure bleach to prevent overfilling. Close the dispenser drawer gently.
	<p>Bleach or softener was added directly to the laundry in the drum.</p> <ul style="list-style-type: none"> Always use the dispensers to ensure that laundry products are properly dispensed at the right time in the cycle.
	<p>Clothes were not properly sorted.</p> <ul style="list-style-type: none"> Always wash dark colours separately from light colours and whites to prevent discolouration. Never wash heavily soiled items with lightly soiled items.
Wrinkling	<p>Appliance is not unloaded promptly.</p> <ul style="list-style-type: none"> Always remove items from the appliance as soon as the cycle is complete.
	<p>Appliance is overloaded.</p> <ul style="list-style-type: none"> The appliance can be fully loaded, but the drum should not be tightly packed with items. The door of the appliance should be closed easily.
	<p>Hot and cold water supply hoses are reversed.</p> <ul style="list-style-type: none"> Hot water rinse can set wrinkles in clothes. Check the supply hose connections.
Musty or mildewy odour in the appliance	<p>Inside of drum was not cleaned properly.</p> <ul style="list-style-type: none"> Run the Tub Clean function regularly.

Wi-Fi

Symptoms	Possible Cause & Solution
Your home appliance and smartphone are not connected to the Wi-Fi network.	The password for the Wi-Fi that you are trying to connect to is incorrect. <ul data-bbox="316 255 1049 303" style="list-style-type: none"><li data-bbox="316 255 1049 303">Find the Wi-Fi network connected to your smartphone and remove it, then register your appliance on LG ThinQ.
	Mobile data for your smartphone is turned on. <ul data-bbox="316 361 1049 409" style="list-style-type: none"><li data-bbox="316 361 1049 409">Turn off the Mobile data of your smartphone and register the appliance using the Wi-Fi network.
	The wireless network name (SSID) is set incorrectly. <ul data-bbox="316 469 1049 517" style="list-style-type: none"><li data-bbox="316 469 1049 517">The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
	The router frequency is not 2.4 GHz. <ul data-bbox="316 577 1049 668" style="list-style-type: none"><li data-bbox="316 577 1049 668">Only a 2.4 GHz router frequency is supported. Set the wireless router to 2.4 GHz and connect the appliance to the wireless router. To check the router frequency, check with your Internet service provider or the router manufacturer.
	The distance between the appliance and the router is too far. <ul data-bbox="316 742 1049 810" style="list-style-type: none"><li data-bbox="316 742 1049 810">If the distance between the appliance and the router is too far, the signal may be weak and the connection may not be configured correctly. Move the location of the router so that it is closer to the appliance.

Memo

Memo

Memo

