



ENGLISH

FRANÇAIS

PORTUGUÊS

## SIMPLE MANUAL

# MINI HI-FI SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual.

Some of the content in this manual may differ from your unit.

### MODEL

CL65



This product has no disc drive.



MFL72142309


2407\_Rev01

[www.lg.com](http://www.lg.com)

Copyright © 2024 LG Electronics Inc. All Rights Reserved.



## Front Panel

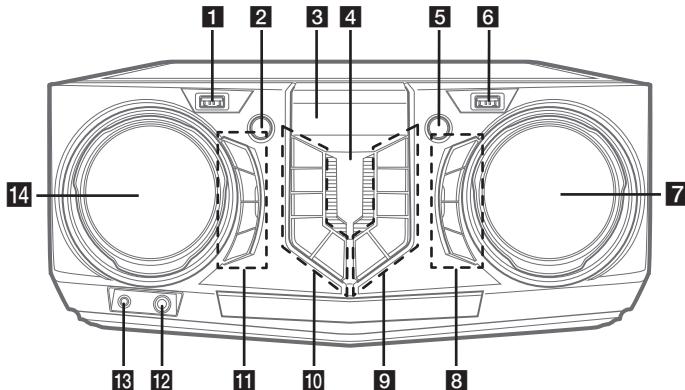

### 1 USB 1 Port

You can play sound files by connecting the USB device.

### 2 ⏻ (Standby)

Turns the power on or off.

### 3 Display window

### 4 ⌂ (Remote sensor)

### 5 Ⓜ TWIN

Connects two speakers for TWIN mode in WIRELESS PARTY LINK.

### 6 USB 2 Port

You can play sound files by connecting the USB device.

### 7 VOLUME

- Adjust speaker volume.
- Adjusts microphone volume.

### 8 MIC VOL (Microphone volume)

Selects microphone volume mode.

#### MIC (Microphone) ECHO

Selects ECHO mode.

#### VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

#### VOCAL EFFECTS

Selects various vocal effects mode.

### 9 F (Function)

Selects the function and input source.

#### ▷ (Play/Pause)

- Starts or pauses playback.
- Selects stereo/mono.

#### ▷▷ (Skip/Search)

- Skips forward.
- Searches for a section within a file.
- Selects the radio stations.

#### KEY CHANGER (#/b)

Changes the key to suit your vocal range.

### 10 USB REC / DEMO

- Records to USB.
- Stops Recording.
- In power off status, if you press **USB REC / DEMO**, show DEMO mode.

#### □ (Stop)

Stops playback or cancels DELETE function.

#### KK (Skip/Search)

- Skips backward.
- Searches for a section within a file.
- Selects the radio stations.

#### ① (Information)

- Sees information about your music. An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
- Sees **Bluetooth** device name of the unit in BT READY.
- Sees the name of connected all **Bluetooth** device in **Bluetooth** mode.
- When these units are successfully connected each other in WIRELESS PARTY LINK mode, each of connected device names appears in the each unit.

#### AUTO DJ

Selects the AUTO DJ mode.

**11 LIGHTING**

Selects the lighting mode.

**SPECIAL EQ / BASS BLAST (or BASS BLAST+)**

- Chooses special equalizer.
- Press and hold to select BASS (or BASS+) effect directly.

**SEARCH**


Moves to folder or file in selection mode.

**OK**

Selects a folder when searching a file.

**12 MIC (Microphone) jack****13 AUX IN 1 jack****14 EQUALIZER / SEARCH & MULTI**


- Chooses sound impressions.
- Searches a folder or a file.
- Selects the lighting effects.

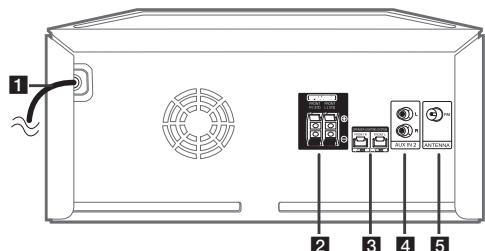**Rear Panel****1 Power cord****2 SPEAKERS terminals****3 SPEAKER LIGHTING SYSTEM**

Connect the speaker lighting cables.

**4 AUX IN 2 (L/R)**

Connect an auxiliary device.

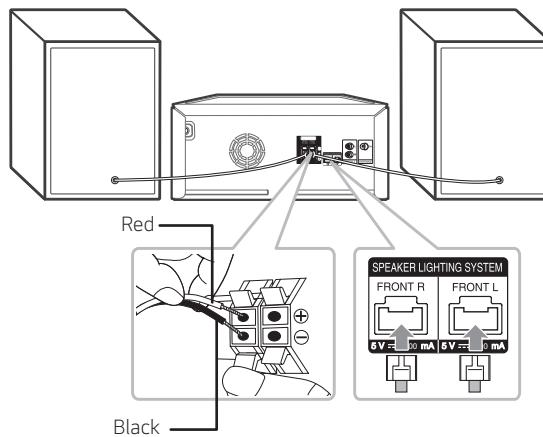**5 ANTENNA (FM)****Speaker Connection****Controller App**

Download the **LG XBOOM** App to your device.  
(Android only)

**LG Sound Sync (Wireless)**

For more information, download the online owner's manual. <http://www.lg.com>


## Additional Information

### Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 350.0 mm x 163.0 mm x 251.0 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	950 W RMS

Design and specifications are subject to change without notice.

### Replacement of battery

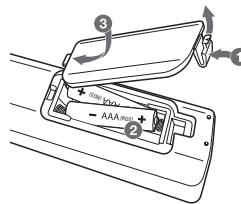

### Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.