

## Additional Information


### Specification

Power consumption	Refer to the main label.
AC adapter	<ul style="list-style-type: none"> <li>Model : DA-50F25</li> <li>Manufacturer : Asian Power Devices Inc.</li> <li>Input : 100 - 240 V ~ 50 - 60 Hz 1.5 A Max.</li> <li>Output : 25 V <math>\frac{1}{2}</math> 2 A</li> </ul>
Dimensions (W x H x D)	Approx. 1446.0 mm x 150.0 mm x 32.5 mm
Bus Power Supply (USB)	5 V $\frac{1}{2}$ 500 mA
Amplifier (Total RMS Output power)	420 W RMS

Design and specifications are subject to change without notice.

### Installing the stand

Fix the hooks of the unit on the stands as shown below.

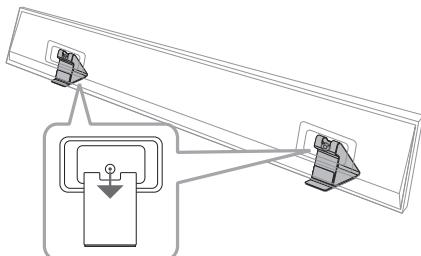

When installing the sound bar with a stand, install it so that it does not cover the TV's remote sensor or screen.

To enjoy content containing Dolby Atmos® and DTS:X®, the connected device and content must support Dolby Atmos® and DTS:X®.

### OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com).

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

**POWER:** This unit operates on a mains supply of 100 - 240 V ~ 50 - 60 Hz.

**Wiring:** This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below.

**Warning:** A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  $\frac{1}{2}$  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

**Important:** The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



# SIMPLE MANUAL

# Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

### MODEL


GX




MFL71771617  
2012\_Rev03

[www.lg.com](http://www.lg.com)

Copyright © 2020 LG Electronics Inc. All Rights Reserved.

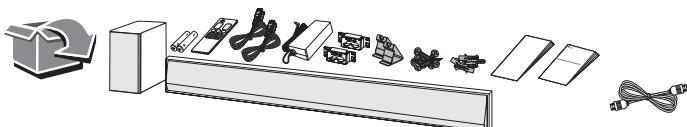


## Front Panel

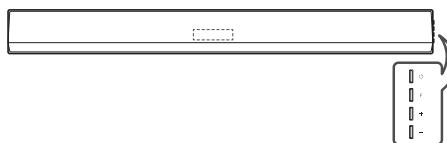

① (Standby) .....Switches the unit ON or OFF.  
 F (Function) .....Selects function.  
 +/− (Volume) .....Adjusts volume.

## Rear Panel

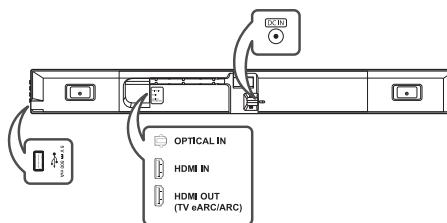

DC IN .....Connect to the AC adapter.  
 USB Port .....Connect to a USB device.  
 OPTICAL IN .....Connect to an optical device.  
 HDMI IN .....Connect to device with HDMI OUT.  
 HDMI OUT (TV eARC/ARC) .....Connect to a TV.

! Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

## Rear Speakers Ready

Ready for surround sound with Rear Speakers Kit sold separately. (SPK8-S)

## Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.


- ① Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
- ② Turn on the sound bar.
  - The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.

## Manual Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.

- ① Press **PAIRING** on the rear of the wireless subwoofer.
  - The green LED on the rear of the wireless subwoofer blinks quickly.
  - (If the green LED does not blink, press and hold the **PAIRING**)
- ② Turn on the sound bar.
  - Pairing is completed. The green LED on the rear of the wireless subwoofer turns on.

! Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

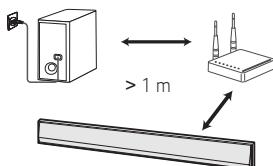


## TV Connection

Connect the sound bar and TV using Optical (A) or HDMI ARC (B).


### A Optical Connection

- ① Connect the sound bar to the TV using Optical cable.
- ② Set up [External Speaker (Optical)] on your TV setting menu.

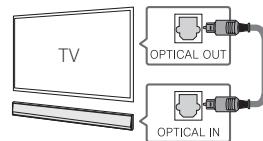

### B HDMI (ARC) Connection


- ① Connect the sound bar to the TV using HDMI cable.
- ② Set up [External Speaker (HDMI ARC)] on your TV setting menu.

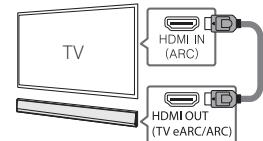

- HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal has a higher priority.

## Additional Device Connection


- ① Connect to the external device like as follow.

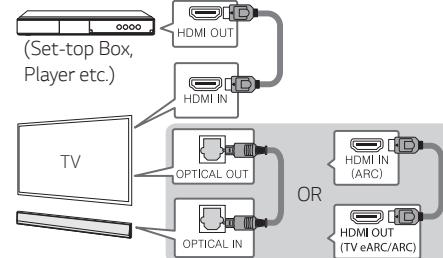

- ② Set the input source by pressing F repeatedly.

## Remote control

### Replacement of Battery

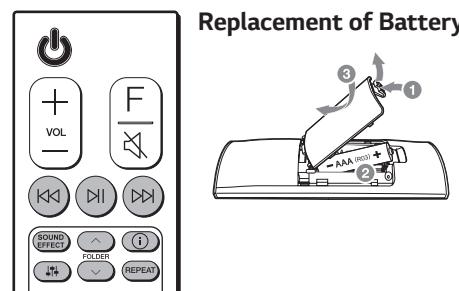

KK/ΔΔ: Skip/Search

▷▷: Play/Pause

- **Bluetooth connection lock (BT LOCK):** Select the **Bluetooth** function by pressing F repeatedly. Long press ▷▷ and press it again to limit Bluetooth connection to only BT and LG TV.

**SOUND EFFECT:** Selects a sound effect mode.

- **TV remote:** Long press **SOUND EFFECT** and press it again to use TV remote control.

**FOLDER** ▲/▼: Searches a folder.

①: Displays the information of a file, an input source or connected **Bluetooth** device name.

- **Auto Power ON/OFF:** Long press ① and press it again.

■■: Adjusts sound level of each speaker.

- **Surround sound:** Long press ■■ and press it again.

**REPEAT:** Listens to your files repeatedly or randomly.

! This product provides screws and wall plugs to fix the wall bracket to the wall. Please check the installation method through Owner's manual on the website ([www.lg.com](http://www.lg.com)).