


## Additional Information

### Specifications

 
Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 345 mm X 650 mm X 345 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	550 W RMS

Design and specifications are subject to change without notice.

### Note


- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

### Replacement of battery

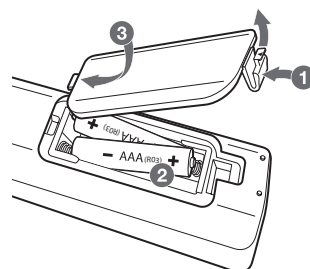

**POWER:** This unit operates on a mains supply of 200 - 240 V ~, 50 / 60 Hz.

**Wiring:** This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

**Warning:** A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

**Important:** The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE:** As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



# SIMPLE MANUAL HIGH POWER SPEAKER SYSTEM

Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL  
RK7




MFL69941730

[www.lg.com](http://www.lg.com)

Copyright © 2019 LG Electronics Inc. All Rights Reserved.  
1905\_Rev01


 
## Top panel

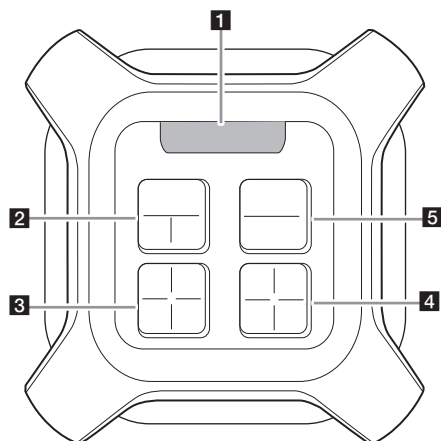

**1** Display window

**2** (Standby)  
Turns the power on or off.

**DUAL**  
Connects two speakers for DUAL mode in WIRELESS PARTY LINK.

**MULTI**  
Connects multiple speakers for MULTI mode in WIRELESS PARTY LINK.



The unit might not synchronize between audio and video in DUAL/MULTI mode.

**3** F (Function)

- Selects the function and input source.
- Press and hold to select the PARTY LINK with AUX.

**II** (Play/Pause)

- Starts or pauses playback.
- Selects stereo/mono (Horizon mode only).

**II/II** (Skip/Search)

- Skips backward or forward.
- Searches for a section within a file.
- Selects the radio stations.

**4** AUTO DJ

Selects the AUTO DJ mode.

**USER EQ / DEMO**

- Selects the sound effect created by your own.
- In power off status, if you press **USER EQ / DEMO**, show DEMO mode.

**SOUND EFFECT / BASS BLAST** (or **BASS BLAST+**)

- Chooses sound impressions.
- Press and hold to select BASS (or BASS+) effect directly.

 
**LIGHTING**

Selects lighting mode.

**5** +/- (Volume)

Adjusts speaker volume.

## Front panel / Rear panel

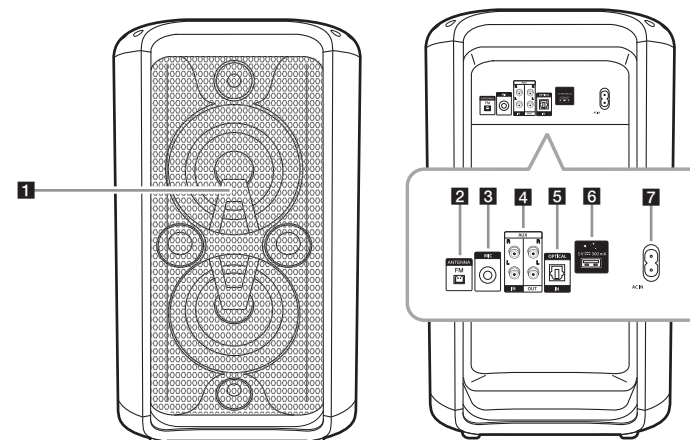

**1** Remote sensor

**2** FM ANTENNA

**3** MIC (Microphone) jack

**4** AUX IN / OUT (L/R)


**5** OPTICAL IN

**6** USB port


**7** AC IN socket

## How to place the unit

 **Vertical**

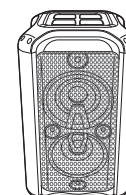

**Horizon**

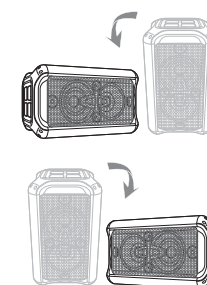 

### Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

### LG Sound Sync



For more information, download the online owner's manual. <http://www.lg.com>