



SIMPLE MANUAL

Mini Hi-Fi Audio

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

OL100



MFL70941304

1902_Rev01

 
www.lg.com

Copyright © 2019 LG Electronics Inc. All Rights Reserved.

ENGLISH	DEUTSCH	FRANÇAIS	NEDERLANDS	ITALIANO	ESPAÑOL	ΕΛΛΗΝΙΚΑ	PORTUGUÊS	MAGYAR
ČESKY	SLOVENČINA	POLSKI	ROMÂNĂ	LATVIEŠU	HRVATSKI	SRPSKI	БЪЛГАРСКИ	МАКЕДОНСКИ
SLOVENŠČINA	SHQIP	BOSANSKI	SVENSKA	DANSK	NORSK	SUOMI		



Top panel

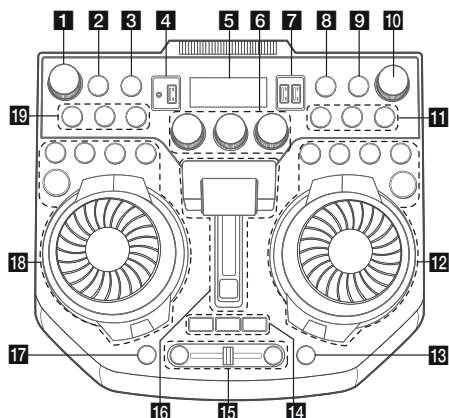

1 H/P (Headphone) VOLUME +/-

Adjusts headphone volume.

2 (Standby)

Turns the power on or off.

3 F (Function)

Selects the function and input source.

4 HEADPHONE IN jack

USB 1 Port

You can play sound files by connecting the USB device.

5 Display window

6 TEMPO A +/-

Adjusts TEMPO in USB 1 function.

MASTER VOLUME +/-

Adjusts speaker volume.

TEMPO B +/-

Adjusts TEMPO in USB 2 function.

7 USB 2 Port

You can play sound files by connecting the USB device.

RECORD PORT

You can record files from various sources.

8 USB REC / DEMO

- Records to USB.

- Stops recording.

- In power off status, if you press **USB REC / DEMO**, show demo mode.

9 MIC (Microphone) ECHO

Selects ECHO mode.

10 MIC (Microphone) VOLUME +/-

Adjusts microphone volume.

11 VOCAL EFFECTS

Selects various vocal effects mode.

VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

KEY CHANGER

Changes the key to suit your vocal range with rotating **MIC VOLUME**.

12 Side 2 / Basic controls (USB 2 only)

□ (Stop)

Stops playback or cancels DELETE function.

⏮/⏭ (Skip/Search)

- Skips backward or forward.

- Searches for a section within a track/file.

⏸ (Play/Pause)

Starts or pauses playback.

CUE

Sets cue point on DJ STAR mode.

SEARCH

Moves to folder or file in selection mode.

OK

Selects a folder when searching a file.

REAL SCRATCHER / SEARCH & MULTI

- Turns clockwise or counterclockwise to make scratch sound.

- Turns clockwise or counterclockwise to control playback point on DJ STAR mode.

- Searches a folder or a file.

- Selects the lighting effects.

SPECIAL EQ / BASS BLAST (or BASS BLAST+)

- Chooses special equalizer.

- Press and hold to select BASS BLAST (or BASS BLAST+) effect directly.

DJ LOOP

Selects DJ LOOP mode.

(DJ LOOP mode can use during USB playback.)

LIGHTING

Selects the lighting mode.

13 (Open/Close)

Opens and closes the disc tray.

14 CLUB, DRUM, USER (DJ PAD)

Selects CLUB, DRUM or USER sound effect to mix.

(If you want to use USER, you have to register a source with "LG XBOOM" app.)

1, 2, 3 (DJ PAD)

Press a desired sound pad.

15 AUTO SYNC

When using MIX/DJ STAR, you can synchronize the tempo of audio files being played in USB 1 and USB 2 by pressing **AUTO SYNC**.

MIX

Mixes audio sound.

Cross fader

Move the cross fader to adjust the sound volume of mixed sound when using MIXER/DJ STAR ON.

16 PARTY ACCELERATOR lever

Slide the lever to create a party atmosphere.

PARTY ACCELERATOR MODE

Selects PARTY ACCELERATOR MODE.

17 MERIDIAN EQ

You can directly select premium MERIDIAN equalizer.

18 Side 1 / Basic controls (CD / USB 1 / BLUETOOTH / RADIO only)

□ (Stop) / RDS

- Stops playback or cancels DELETE function.
- Radio Data System

⏮/⏭ (Skip/Search)

- Skips backward or forward.
- Searches for a section within a track/file.
- Selects the radio stations.

⏸ (Play/Pause)

- Starts or pauses playback.
- Selects stereo/mono.

CUE

Sets cue point on DJ STAR mode.

SEARCH

Moves to folder or file in selection mode.

OK

Selects a folder when searching a file.

REAL SCRATCHER / SEARCH & LEVEL CONTROL

- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control playback point on DJ STAR mode.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Searches a folder or a file.
- Adjusts DJ EFFECT level.
- Selects vocal effects.

DJ EFFECT

Selects a desired DJ EFFECT.

DJ LOOP

Selects DJ LOOP mode.

(DJ LOOP mode can use during CD/USB playback.)

USER EQ

Selects the equalizer created by your own.

19 H/P (Headphone) MODE

Press to select a headphone monitor mode.

 
ⓉTWIN

Connects two speakers for TWIN mode in WIRELESS PARTY LINK.


DJ STAR

Turns on or off the DJ STAR mode.

Front panel / Rear panel

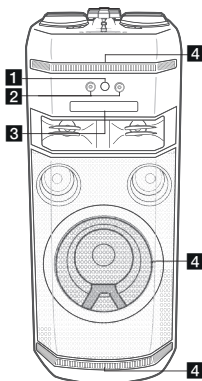

 
- 1 **R** (Remote sensor)
- 2 **MIC**(Microphone) 1/2 jack
- 3 Disc tray
- 4 Lighting

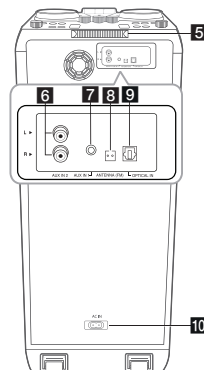

- 5 Lighting
- 6 **AUX IN 2** (L/R) : Connect an auxiliary device.
- 7 **AUX IN 1** : Connect a portable device.
- 8 **ANTENNA** (FM)
- 9 **OPTICAL IN** : Connect an optical device.
- 10 **AC IN** socket

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
	Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 430.0 mm x 1,050.0 mm x 400.0 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	2,000 W RMS

Design and specifications are subject to change without notice.

Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

 
Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

Replacement of battery

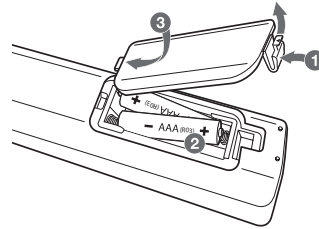

Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type MINI HI-FI AUDIO is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.


Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm

Controller App



Download the **LG XBOOM** App to your device.
(Android only)

 LG Sound Sync



For more information, download the online owner's manual. <http://www.lg.com>