



SIMPLE MANUAL

Mini Hi-Fi Audio

ENGLISH

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download
Owner's Manual. Some of the content in this manual may differ from your unit.

 
MODEL
OJ98



www.lg.com



Top panel

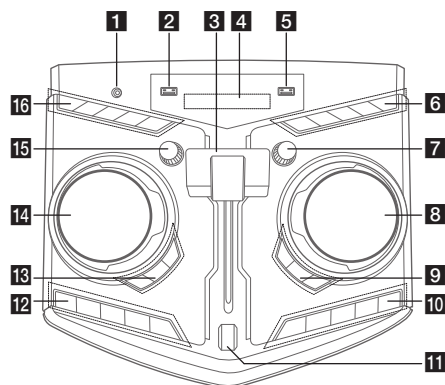

1 PORT(Portable). IN jack

2 USB 1 Port

You can play sound files by connecting the USB device.

3 PARTY THRUSTER lever

Slide the lever to create a party atmosphere.

4 Display window

5 USB 2 Port

You can play sound files by connecting the USB device.

6 F (Function)

Selects the function and input source.

DEMO

In power off status, if you press **DEMO**, show demo mode.

LIGHTING MODE

Selects the lighting effects.

LIGHTING ON/OFF

Turns on/off the lighting effects.

PARTY LINK

Press and hold to select the PARTY LINK.

WIRELESS LINK

- Selects MASTER or SLAVE on WIRELESS PARTY LINK mode.

- Enable or disable WIRELESS PARTY LINK mode.

7 MASTER VOLUME

Adjust speaker volume.

8 SCRATCH / SEARCH & MULTI JOG

- Turns clockwise or counterclockwise to make scratch sound.
- Searches a folder or a file
- Selects lighting mode.

9 SEARCH

Moves to folder or file in selection mode.

OK

Selects a folder when searching a file.

REGION EQ / BASS BLAST

- Chooses region equalizer.
- Press and hold to select BASS effect directly.

10 I<< (Skip/Search)

- Skips backward.
- Searches for a section within a track/file.
- Selects the radio stations.

>II (Play/Pause)

- Starts or pauses playback.
- Selects stereo/mono.

>>I (Skip/Search)

- Skips forward.
- Searches for a section within a track/file.
- Selects the radio stations.

□ (Stop)

Stops playback or cancels DELETE function.

△ (Open/Close)

Opens and closes the disc tray.

11 PARTY THRUSTER mode

Selects PARTY THRUSTER mode.

12 CLUB, DRUM, USER (DJ PRO)

Selects CLUB, DRUM or USER sound effect to mix. (If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)

1, 2, 3 (DJ PRO PAD)

Press a desired sound pad.

PARTY STARTER

- In power off state, this function turns on the unit with Party Kick Starter sound.
- In power on state, this function mixes the music with Party Kick Starter sound.

DJ LOOP

Selects DJ LOOP mode. (DJ LOOP mode can use during CD/USB playback.)

13 USER EQ

Selects the sound effect created by your own.

DJ EFFECT

Selects a desired DJ effect.

VOCAL EFFECTS

Selects VOCAL EFFECTS mode.

14 SCRATCH / LEVEL CONTROL

- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Adjust DJ EFFECT level.
- Selects vocal effects mode.

15 MIC (Microphone) VOLUME

Adjust microphone volume.

16 (Standby)

Turns the power on or off.

VOICE CANCELLER

You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.

 
KEY CHANGER (♭ / #)

Changes the key to suit your vocal range.

ECHO

Selects ECHO mode.


Front panel / Rear panel

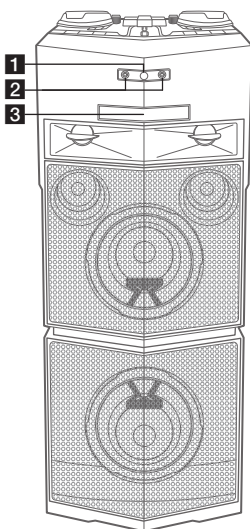

1  (Remote sensor)

2 MIC(Microphone) 1/2 jack

 3 Disc tray

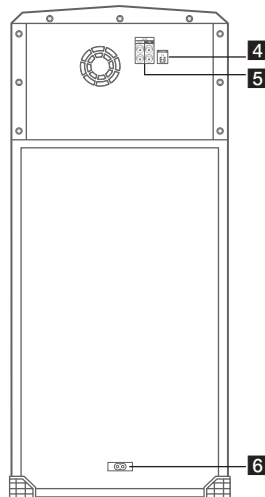

4 ANTENNA (FM)

5 AUX IN / OUT

Connect an auxiliary device.

6 AC in socket

Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

Additional Information

Specifications


Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 380 mm x 1099 mm x 400 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	1,800 W RMS

Design and specifications are subject to change without notice.

Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

 Replacement of battery

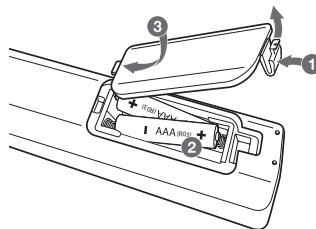









Российская Федерация

Импортер ООО "ЛГ Электроникс Рус"

Адрес импортера: 143160 Российская Федерация, Московская область, Рузский район, сельское поселение Дороховское, 86 км. Минского шоссе, д.9

Адрес производителя : ЛГ Электроникс (Хужоу) Инк., завод Хатаи
516006, Китай, пров. Гуандонг, г. Хужоу, Промышленная зона
Жонгкай, Индустриальный парк Хутай, ХуФенг Донг Уи Роуд, 13.

Сделано в Китае

Україна

Вироблено в : ЛГ Електронікс (Хужоу) Інк., завод Хатай
516006, Китай, пров. Гуандонг, м. Хужоу, Промислова зона Жонгкай,
Індустріальний парк Хутай, ХуФенг Донг Уі Роуд, 13.

Қазақстан Республикасы

Импорттаушы АҚ "ЭЛ Джи Электроникс Алматы Қазақстан", 050061, Алматы қ., к. Көкөрай, 2А

Өндірушінің мекенжайы: LG Electronics(Huizhou) Inc. Huitai Factory
516006, Қытай, Гуандонг ауданы, Хужоу қаласы,
Жонгкай өнеркәсіптік аймағы, Хутай Индустриялық саябағы,
ХуФенг Донг Уи Роуд, 13.

Қазақстан Республикасы территориясында тұтынушылардан келіп түскен талаптар мен ұсыныстарды қарайтын және тауарды жөндеу мен техникалық қызмет көрсететін ұжым:

АҚ «Эл Джи Электроникс Алматы Казахстан», 050061, Қазақстан Республикасы, Алматы қ., Көкөрай, 2А. Басқа сервис орталықтары жайында мағлұматты "Тұтынушыға қызмет көрсету орталығына" телефон шалу арқылы білуге болады.

Қытайда жасалған



032