


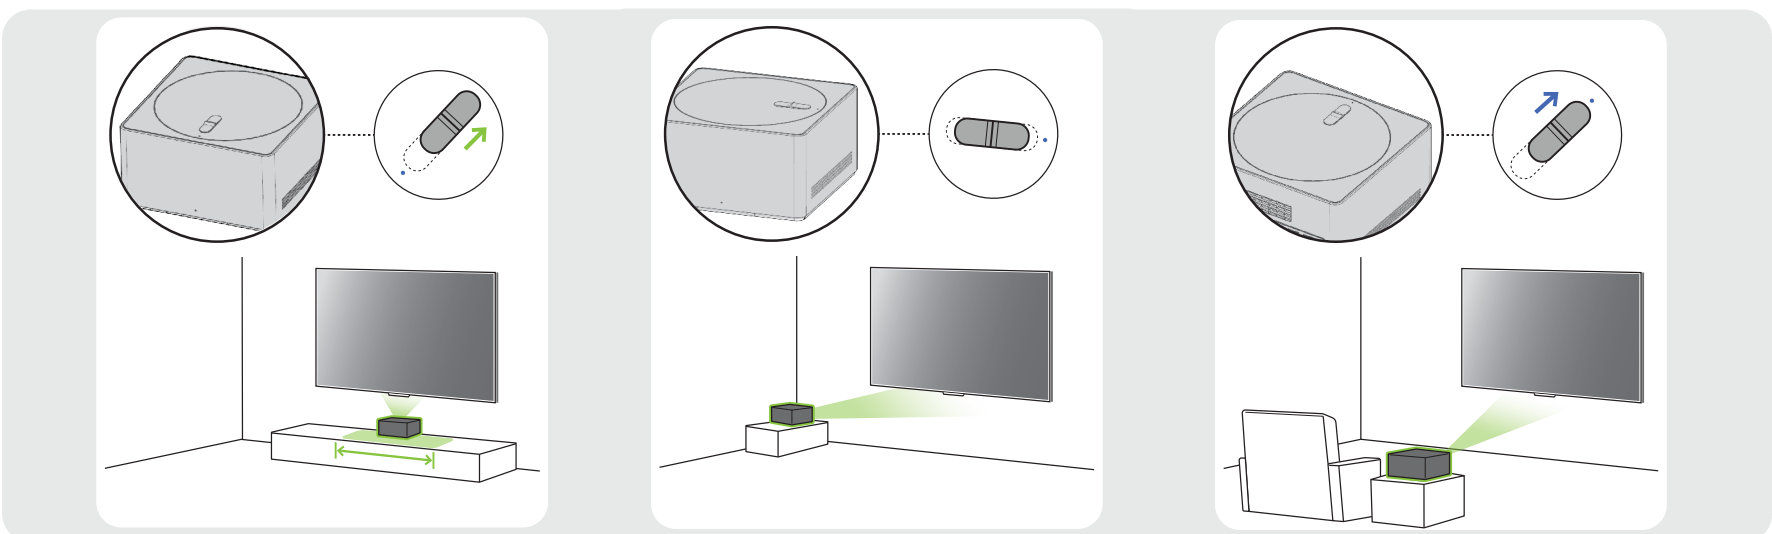
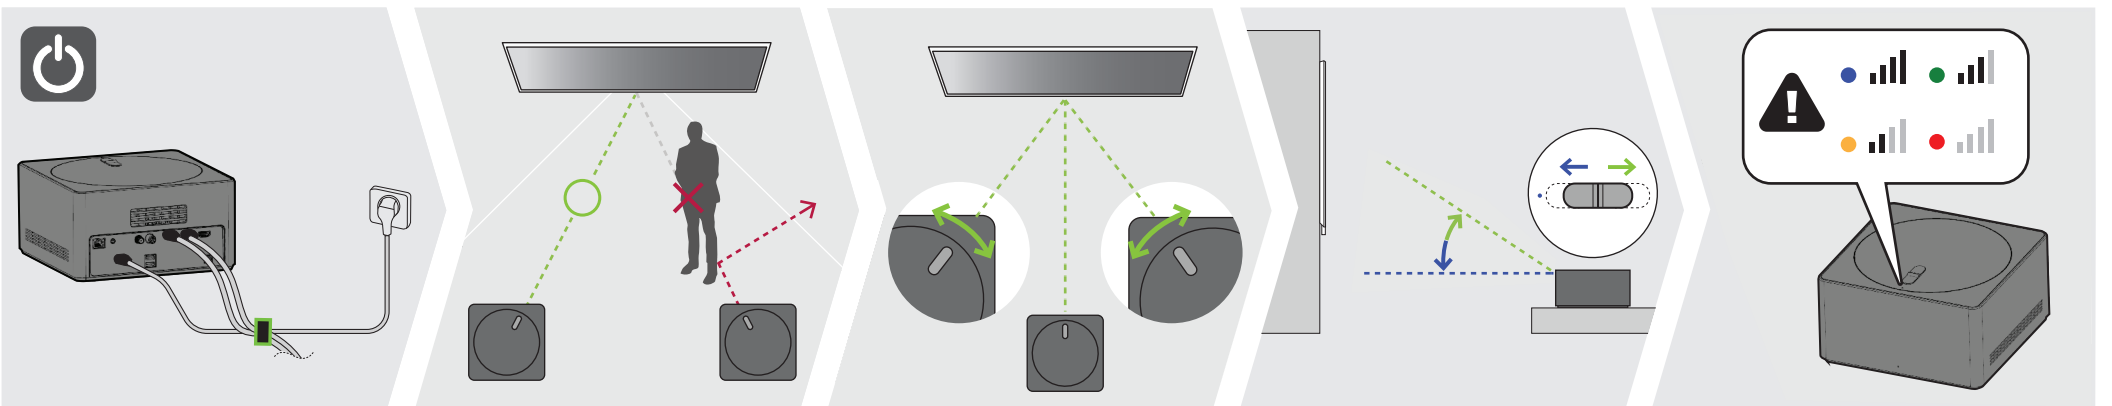
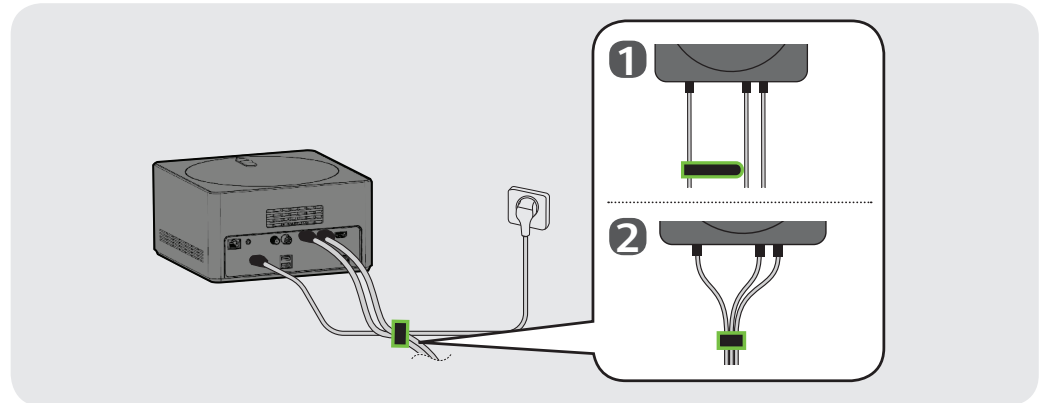
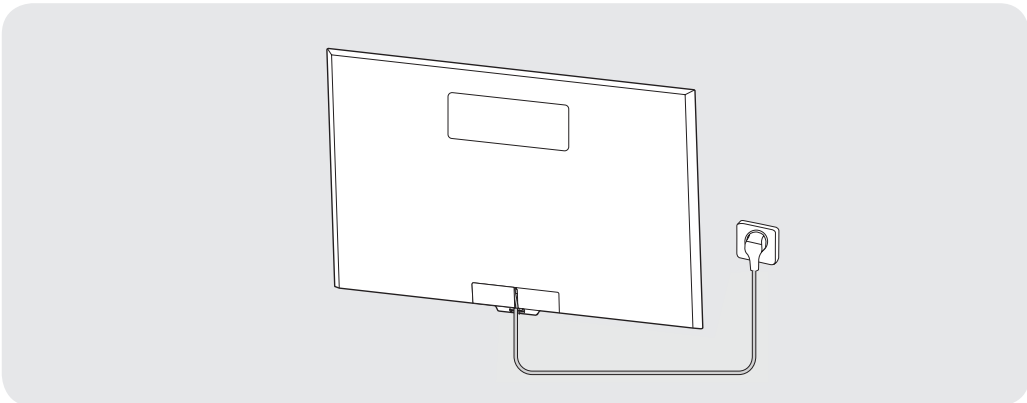
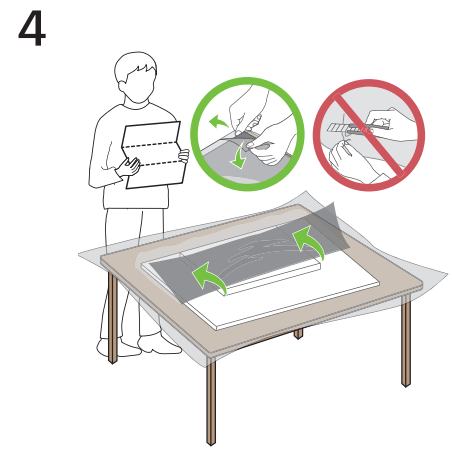
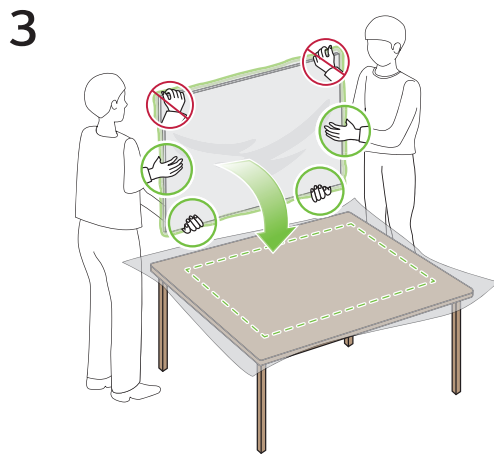
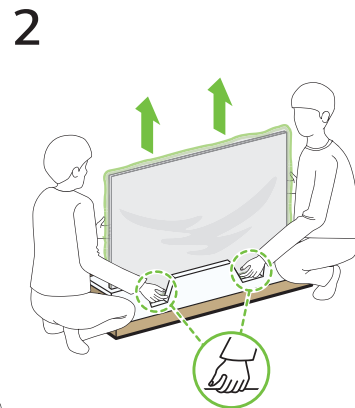
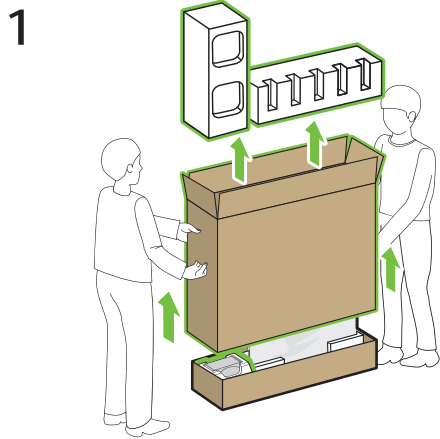
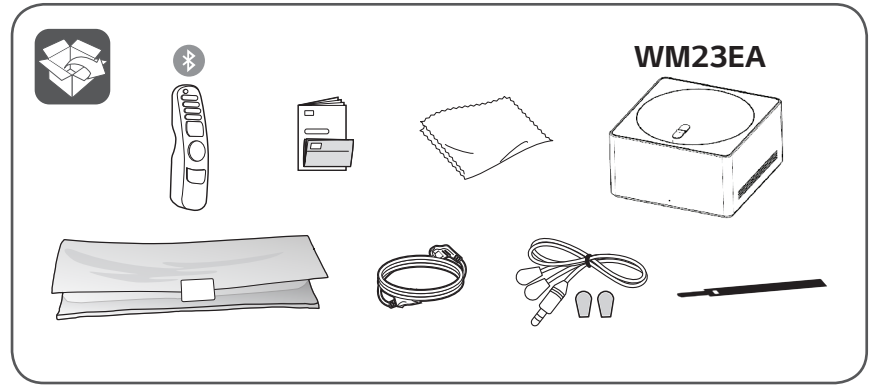
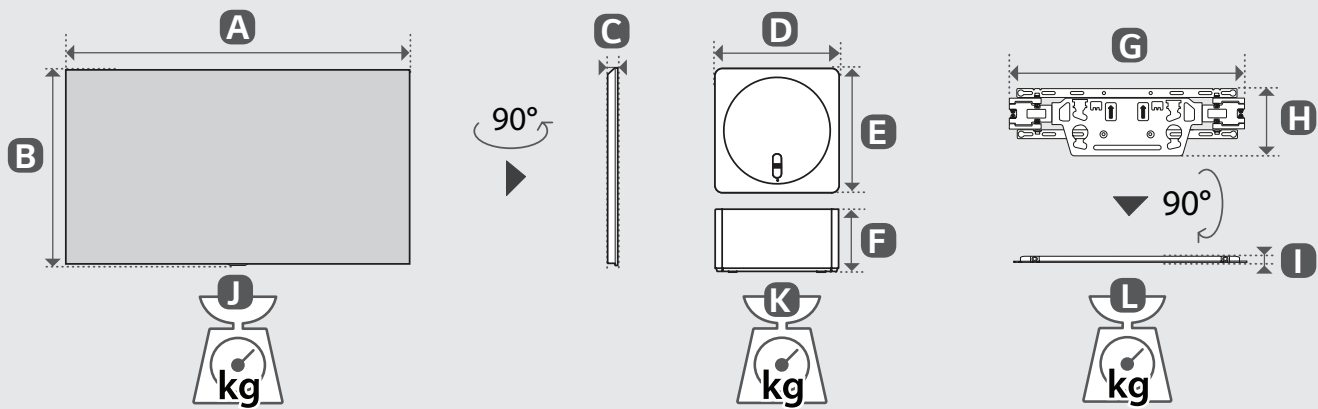


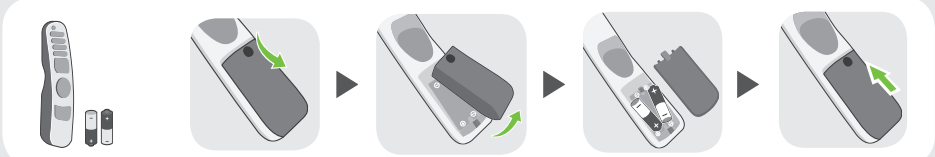


OLED77M3PSA

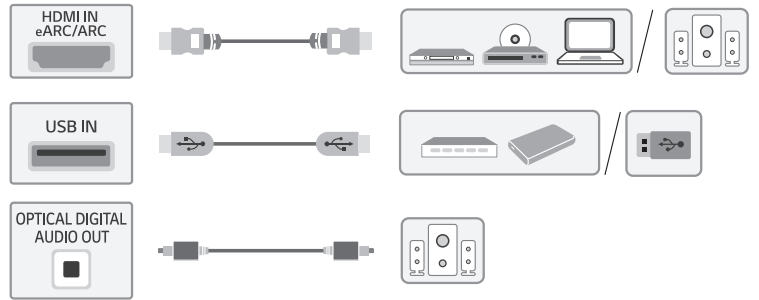


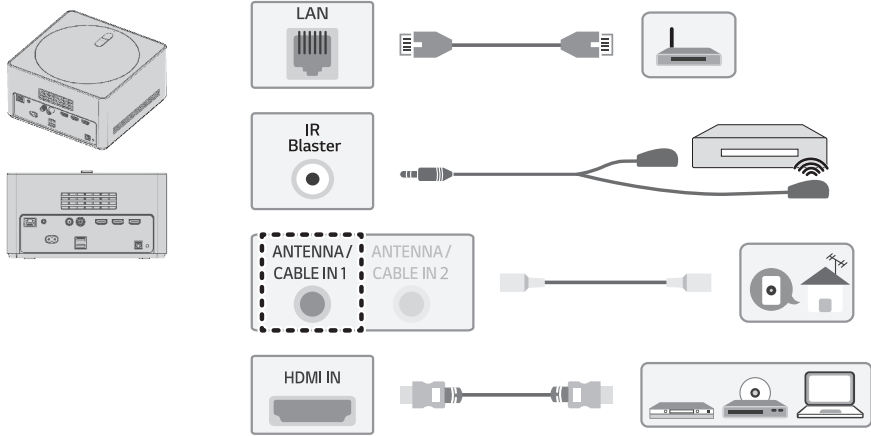

	A	B	C	D	E	F	G	H	I	J	K	L
	(公釐)									(公斤)		
OLED77M3PSA	1712	992	24.8	230	230	121.7	452	129	13	36.5	3.0	1.2

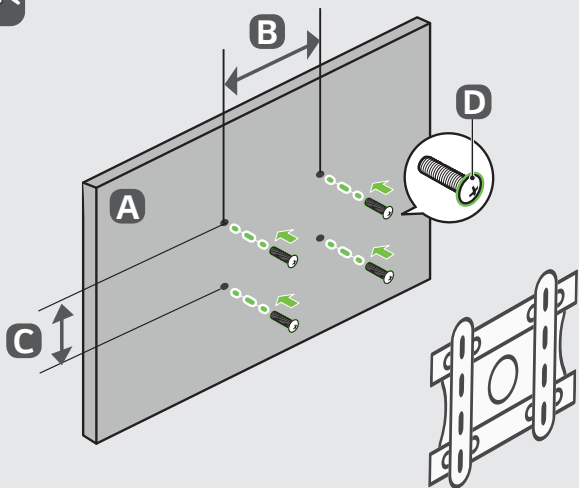

A	B x C (公釐)	D
OLED77M3*	300 x 300	M6

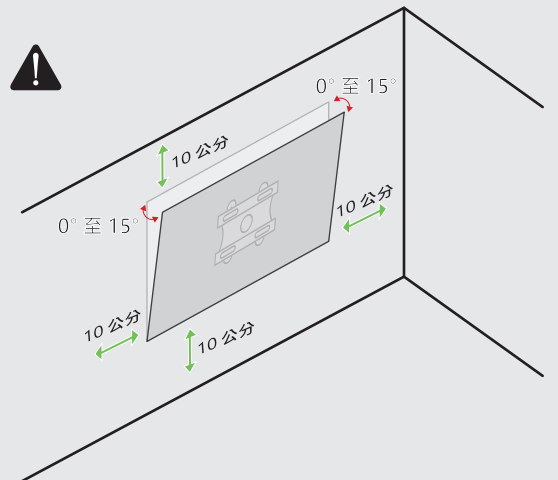

繁體中文

- 簡易設定指南
- 操作電視機之前，請先詳細閱讀本手冊，並妥善保管手冊以供日後參考。
- 請閱讀安全與相關資訊