

# **OWNER'S MANUAL**

# **VACUUM CLEANER**



Make sure to read the "SAFETY INSTRUCTIONS" carefully before starting to use this product. Please keep this Owner's Manual within easy reach of the user. As the product is only intended for domestic use such as household cleaning, it must not be used for commercial, experimental or industrial purposes. Make sure to fully charge the product's battery before first use of the product after purchasing it.

**ENGLISH** 

A9\*\*\*\*\*\*



MFL69883625 Rev.11 102221



www.lg.com

# **TABLE OF CONTENTS**

This manual may contain images or content different from the model you purchased. This manual is subject to revision by the manufacturer.

SAFETY		
Safety Messages	3	
INSTALLATION	11	
Parts and Specifications		
Installing the Charging Station		
Storing the Accessories		
OPERATION	21	
Getting Started	21	
Charging the Battery	23	
Using the Mop Nozzle	24	
Using the Nozzles	28	
Using the Tools	29	
MAINTENANCE	31	
Cleaning the Appliance	31	
TROUBLESHOOTING	37	
Before Calling for Service		

# Safety Messages

# **Reading Safety Messages**

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below



This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.



## WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



# CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.



# WARNING

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

# **Technical Safety**

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If the power supply cord is damaged, it must be replaced by an LG Electronics service center or dealer in order to avoid a potential hazard.
- Do not allow children to play with or hang on the appliance.
- Do not use the appliance on a wet surface.
- Place the cords from other appliances out of the area to be cleaned.

# **Battery**

- Never use the battery, adapter, and the charging station from other appliances with this appliance. Use only the battery and the charging station provided by LG Electronics.
- Never use the battery, adapter, and the charging station from this appliance with other appliances.
- Do not use the battery if it is leaking or has changed shape. If skin or eyes come into contact with battery fluid, thoroughly wash the affected area immediately with clean water and seek medical attention.
- Replace the battery when it is no longer able to hold a charge.
- Refer to the Charging section instructions for the method of replacing the battery.
- When disposing of the battery or the appliance, remove the battery from the appliance and safely dispose of it.
- Follow all local ordinances and regulations when handling or disposing of the battery.
- In the event that some kind of liquid come from the battery, make sure
  that it does not get into contact with the skin or the eye. It may cause fire
  or severely damage the eye. If the liquid from the battery got into contact
  with a part of skin, immediately wash off with ample amount of water and
  seek medical advice.
- Do not use modified or damaged batteries.

# **Battery Specifications**

 One or two batteries are provided, the number of batteries varies depending on the model purchased.

\* This accessory is only available on some models.

Model Name	EAC63382201*
Туре	Rechargeable Lithium-ion Battery
Rated Capacity	25.55 V===, 2000 mAh
Model Name	EAC63382208*
Туре	Rechargeable Lithium-ion Battery
Rated Capacity	25.9 V=== , 2400 mAh

### Installation

- To avoid an electrical shock or fire, do not install, charge or store the appliance where it may be exposed to water, rainfall or high humidity.
- Install, charge and store the appliance in a well-ventilated place.
- Avoid operating the appliance in areas where there is a risk of leakage of flammable gas, industrial oil or metallic dust.
- Do not store or install the appliance, power cord or plug near heating devices or open flames.
- Install the charging station on a firm, level surface.
- To prevent tipping, floor standing mode installations should be anchored to the wall using the provided stand anchoring screw, anchoring block and double-sided tape.
- In wall-mounted mode installations, the charging station should be secured tightly to the wall using the provided wall anchoring screws.
- Use the anchoring screws only when attaching to concrete or similar solid surfaces.
- Never drill into a wall without first checking that the area behind it is free from power conduits, plumbing, vents, or cables.
- Do not use or store the appliance at temperatures below 5 °C or above 38 °C.
- Do not store or install the appliance where it is exposed to temperatures below freezing or exposed to outdoor weather conditions.
- When installing or moving the appliance, be careful not to pinch, crush, or damage the power cord or plug.

# Operation

- Read all instructions before using the appliance, and save these instructions.
- Use only as described in this manual. Use only manufacturer's recommended attachment.
- This appliance is designed for normal indoor domestic use only. It is not to be used for any non-residential, commercial, or industrial application.

- Do not use or store the appliance in any outdoor location, garage environment or on wet surface.
- This product should only be used with a 100 V 240 V~ 50/60 Hz. Make sure to check the power specifications of the place where you intend to use the appliance.
- Do not handle the power cord, plug, or appliance controls with wet hands.
- Wipe any moisture or dirt off the cord or plug with a dry cloth.
- Unplug the power cord using the plug, not the cord. Pulling on the cord can damage it and result in electric shock or fire.
- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug. Take it to an authorized LG Electronics service center or dealer for assistance.
- Do not apply excessive force to the power cord to bend it, or place it under a heavy object as this will damage it.
- Do not use multiple-outlet adapters with this appliance. Make sure to use a power socket with a capacity of 10 A.
- Do not plug the appliance into a damaged or loose outlet.
- Make sure to unplug the power cord and remove the battery if the appliance will not be used for an extended period of time.
- Do not damage, alter, excessively bend, twist, pull, pinch or heat the power cord.
- Before using the appliance, remove any wire or string on the floor.
- Avoid touching the prongs of the power plug with your finger(s) when unplugging the power cord.
- Do not cover the power cord with a rug or carpeting.
- Push the power plug firmly into the wall outlet so that it is not loose.
- If the product has been submerged, contact an LG Electronics service center or dealer for instructions before resuming use.
- If the product makes a strange noise or emits an odor or smoke, discontinue use and contact an LG Electronics customer information center.
- Only qualified technicians or service personnel from LG Electronics may disassemble, repair or modify the appliance.

- Never insert a sharp metallic object such as a pin, nail or knife in a hole or gap in the appliance or the charging station.
- Do not vacuum liquids with this appliance. Make sure that no water, beverage or detergent gets inside the appliance or the charging station.
- Do not allow the appliance to sweep up blades, thumb tacks, sawdust, sharp objects, or hot or cold ashes.
- Do not allow children to use the appliance.
- Do not let children or pets get close to the appliance when using, charging or storing.
- Do not insert the nozzle or tools in your mouth.
- Keep clothing and hair, fingers, or other parts of the body away from openings and moving parts.
- Do not operate the appliance with the suction inlet or outlet blocked.
- Do not use in an enclosed space where vapors are present from paint thinner, mothproofing substances, flammable dust or other explosive or toxic materials.
- Make sure that the filter is installed before use.
- Do not use with the dust bin opened.
- Do not touch the charging terminals on the appliance or the charging station, or insert an electrified object inside the appliance or the station.
- Always store the appliance on the floor standing or wall-mounted charging station when it is not in use.
- Do not lean the appliance on walls, chairs or tables.
- If the earth leakage breaker is tripped when the product is put on the charging station, immediately remove the appliance from the charging station. Contact an LG Electronics customer service center.
- Use extra care when cleaning on stairs.
- Do not use or store a heating device or flammable substance (ether, benzene, alcohol, chemicals, combustible sprays, insecticide, air freshener or cosmetics) in close proximity to the appliance.
- Do not attempt to clean up a liquid substance (water, beverage), odorous substances (candy, chocolate, pet excrement), metallic objects (blades, pins), flammable substances, surfactants, or glass shards with this appliance.

- In the event of a gas leak (natural gas, propane gas, etc.) do not operate this or any other appliance. Open a window or door to ventilate the area immediately.
- Do not hold the charging station upside down with the battery in the charging station.
- Do not disassemble, remove or short-circuit the battery.
- Do not expose the appliance, and the battery in particular, to heat, a heating device or direct sunlight.
- Do not keep the appliance or its battery inside a vehicle which is exposed to direct sunlight.
- Never allow any water, beverage or detergent to get inside the battery
- Do not apply physical impacts to the battery.

#### **Maintenance**

- Make sure to unplug the power cord when cleaning or maintaining the charging station.
- Do not wash the inlet port or the dust bin with water or detergent.
- Do not use detergents, polishes or air fresheners to clean the dust bin.
- Do not apply or spray a flammable substance (gasoline or thinner) or surfactants (detergent or bath soap) on the appliance.
- Wash hands after handling nozzles. The nozzles contain carbon fiber, and contact may cause minor skin irritation.

# **Disposal**

- Keep packing materials out of the reach of children. Packaging materials can pose a suffocation risk for children.
- Destroy the carton, plastic bag, and other packing materials after the appliance is unpacked. Children might use them for play. Cartons covered with rugs, bedspreads, or plastic sheets can become airtight chambers.
- Dispose of this appliance according to local, state, and regional laws and regulations.
- Contact your local city council or the related government authority before disposing of this appliance.

# Mop Nozzle

• Do not vacuum sharp objects (glass pieces, wire, blades, pins, etc.) with the mop nozzle attached. When cleaning the mop pads after mopping, you could be injured by a sharp object embedded in the mop.

# **A** CAUTION

To reduce the risk of injury to persons, malfunction, or damage to the product or property when using the appliance, follow basic safety precautions, including the following:

# Operation

- This appliance has a built-in safety device to prevent damage from overheating. If the appliance becomes overheated after extended use, it may automatically turn off. If this occurs, leave the appliance in a cool, well-ventilated area for about an hour before turning on the power again.
- Do not subject the product to shocks or drop it.
- Secure the appliance in the charging station when not in use, to avoid it falling over.
- Do not install wet or damp filters.
- Make sure to wipe up any liquid such as water or oil or pet excrement from the floor before using the appliance.
- Do not clean the product with a volatile or organic solvent (thinner or acetone).
- Always use a soft cloth to clean the appliance.
- Remain aware of your surroundings while using the appliance to avoid colliding with people or animals.
- Do not kick or apply force to the appliance.
- Do not put any object other than the appliance, especially a metallic or magnetic object, on the charging station.
- Do not clean the same spot repeatedly for an extended period of time.
- Vibration from the inlet port or rotating brush may damage the floor or the carpet.
- Keep fingers away from pinch points when assembling the appliance or the charging station.


- Do not let a child or a pet hang onto the charging station.
- Follow all applicable state and local codes and regulations when installing the mounting station.
- Do not use the double-sided tape to anchor the charging station on wallpaper. Use the provided screws to anchor the charging station. The weight of the charging station and the appliance could damage the paper.
- Do not apply force or any impact to the Cyclonic Mesh Filter.
- Do not remove the battery during operation.

# Mop Nozzle

- Do not store the appliance by attaching the water tank filled with water to the mop nozzle.
- Do not store the water tank where the temperature is 0 °C or lower.
- Do not use the mop nozzle to clean the same spot repeatedly for an extended period of time. The water injection at the mop nozzle may cause water to get into the dust inlet and damage the appliance.
- Do not use the mop nozzle for any purpose (for example, polishing a car, cleaning windows) other than domestic floor cleaning.
- Do not step on the mop nozzle. Doing so may result in product damage.
- Do not use the mop nozzle to vacuum up liquids (water, beverage).
- When using the mop nozzle, always attach the mop pads. Failure to do so may cause damage to the floor or carpet.
- Do not clean carpets with the mop nozzle. The carpet may get wet or stick to the Velcro, causing damage to the carpet.
- Do not clean a coated floor with the mop nozzle. Cleaning a coated floor repeatedly could cause the coating to peel off.
- Do not clean delicate floating floors with the mop nozzle. The floors could absorb moisture and become deformed.
- Do not clean a rough floor with the mop nozzle.
- Wet floors can pose a slip hazard. Allow floors to dry completely before allowing anyone to walk on them.


# **Parts and Specifications**

# Floor Standing Mode

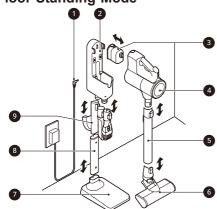


- Adapter
- 2 Charging Station with Tool Holders
- Battery
- Product Body

# **Wall-Mount Mode**

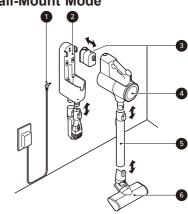

- **5** Extension Pipe
- 6 Nozzle
- 7 Floor Stand Dock
- 8 Floor Stand Pipe
- O Detachable Nozzle Storage

# **Product Body**

 


- 1 Exhaust Filter
- 2 Pre-filter
- 3 Cyclonic Mesh Filter

### **Accessories**


#### **Included Accessories**

\* This accessory is only available on some models.

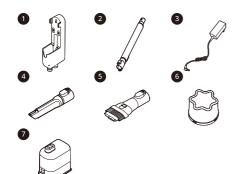


- 1 Charging Station
- 2 Extension Pipe
- Adapter
- 4 Crevice Tool
- Combination Tool\*
- 6 Pre-filter
- Battery (Dual Battery\*)

#### **Nozzles**

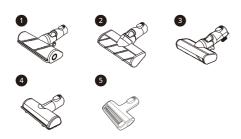

- Power Drive Carpet Nozzle\*
- 2 Power Drive Floor Nozzle\*
- 3 Power Drive Slim Floor Nozzle\*
- 4 Bedding Power Punch\*
- 6 Power Drive Mini Nozzle\*

#### **Installation Kit**

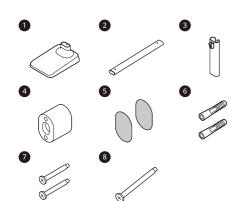

- Floor Stand Dock\*
- 2 Floor Stand Pipe\*
- 3 Detachable Nozzle Storage\*
- Wall Anchoring Block\*
- 6 Double-Sided Tape\*
- 6 Drywall Anchor\*
- Wall Anchoring Screw\*
- Stand Anchoring Screw\*

## **Tools and Accessory Bag**











- 1 Hard Dirt Tool\*
- Mattress Tool\*
- Multi-angle Tool\*
- 4 Flexible Crevice Tool\*
- 6 Flexible Hose Extension\*
- 6 Accessory Bag\*

# Mop Kit







- Mop Nozzle\*
- Detachable Nozzle and Mop Pads Storage\*
- Mop Pads for General Cleaning\*
- Measuring Cup\*



The mop pads, batteries, exhaust filter and the pre-filter will eventually need to be replaced. Contact the customer service department of LG Electronics if the problem persists.

# **Specifications**

# **Appliance**

Model	A9******
Dimensions	260 mm (W) x 270 mm (D) x 1120 mm (H)
Weight	Approximately 2.7 kg
Power Consumption	400 W in Turbo Mode (Maximum 450 W)
	250 W in Power Mode
	80 W in Normal Mode
Battery Run Time	Up to 6 minutes in Turbo Mode
	Up to 9 minutes in Power Mode
	Up to 30 minutes in Normal Mode (with the Power Drive Nozzle)
	Up to 40 minutes in Normal Mode (without the Power Drive Nozzle)
	Up to 80 minutes in Only Mopping Mode (Recommended duration of use)

# **Charger Adaptor**

Input	100 V - 240 V~ 50/60 Hz
Output	29.4 V <del>===</del>
	For indoor use only

- Dimensions are given for the assembled product body, extension pipe and nozzle.
- Battery run time is the result of using a fully charged battery according to the LG Electronics test standard. Results may be different depending on actual use environment and period of use.
- The Power Drive Nozzle contains the direct drive motor that rotates the nozzle cleaning head directly.

# Installing the Charging Station

# Floor Standing Installation

Install the charging station on a hard and level floor.




#### WARNING

 To prevent tipping, floor standing mode installations should be anchored to the wall using the provided stand anchoring screw, anchoring block and double-sided tape.




#### CAUTION

 Keep fingers away from pinch points when assembling the appliance or the charging station.

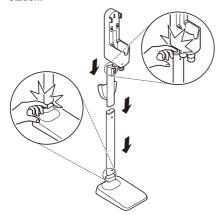


- Do not allow children or pets to hang onto the charging station. They could be injured or cause damage to the appliance.
- Take care not to drop the product parts while unpacking them to avoid appliance damage or personal injury.
- Do not use double-sided tape to attach the charging station to wallpaper. The weight of the charging station and the product body could damage the paper.

 
- 1 Remove the protective film attached to the charging station, the product body, and the nozzle.
  - Failure to remove the film may affect product performance.
- Place the floor stand dock ② on a hard and level floor and assemble the floor stand pipe
  - Once assembled, the floor stand dock and the floor stand pipe cannot be disassembled.




3 Clip the power cord tidily into the cord keeper 9 on the back of the floor stand pipe.

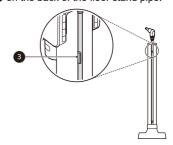


- 4 Slide the detachable nozzle storage 4 or detachable nozzle and mop pads storage 5 onto the floor stand pipe.
  - This accessory is only available on some models
  - Attach the detachable mop pads storage
     module onto the detachable nozzle storage module, if they did not come pre-assembled. Once assembled, the two modules may be difficult to be disassembled.
  - Make sure not to pinch or tangle the power cord behind the mop pads storage.

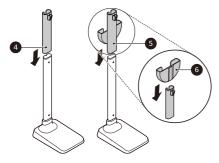


- Semble the charging station onto the top of the floor stand pipe.
  - The charging station can be removed as needed. To remove it, hold the floor stand dock steady and pull up on the charging station.

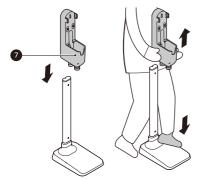


6 Connect the power adapter 3 to the port on the back of the charging station.

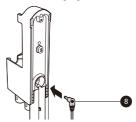

- 7 Drill a hole and insert the drywall anchor **9**.
  - Before drilling, make sure that there are no pipes or electrical wires inside the wall at the desired location.
  - For drywall anchor: use 6.5 mm drill bit
  - Recommended diameter of hole: 6.5 mm
  - Recommended depth: 60 mm
  - If screwing into drywall, the drywall anchor should be used.

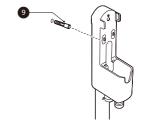

Anchor the charging station to the wall with the stand anchoring screw **(0)**.

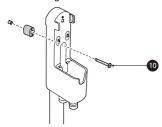


9 Plug the power cord into the power outlet.

#### Use double-sided tape

Use double-sided tape to attach the wall anchoring block **1** to the charging station and the wall.


- Do not use double-sided tape on wallpaper.
- Remove the center section of double-sided tape. Attach the wall anchoring block to the charging station by using the tape.
- Attach the second piece of double-sided tape to the other side of the wall anchoring block, and use it to temporarily anchor the charging station to the wall in the desired location.

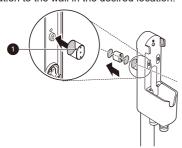


#### Wall-Mounted Installation

For wall-mounted installations, the charging station must be attached securely to the wall using the provided (short) wall anchoring screws.

- Connect the power adapter to the port on the back of the charging station.
- 2 Before drilling, make sure that there are no pipes or electrical wires inside the wall at the desired location.
- 3 Hold the charging station at least 1 m from the floor and near enough to easily reach a power outlet. Mark the positions of the screw holes on the wall.
- 4 Drill 2 holes at the marked positions and insert the drywall anchor.
  - Before drilling, make sure that there are no pipes or electrical wires inside the wall at the desired location
  - For drywall anchor: use 6.5 mm drill bit
  - · Recommended diameter of hole: 6.5 mm
  - Recommended depth: 60 mm
  - If screwing into drywall, the drywall anchor should be used.

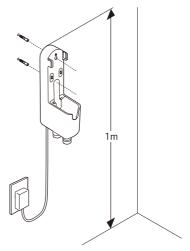

5 Attach the charging station to the wall with the wall anchoring screws.

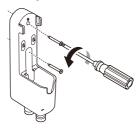

6 Plug the power cord into the power outlet.



#### CAUTION

 Do not allow children or pets to hang onto the charging station. They could be injured or cause damage to the appliance.


#### NOTE

- The cost of a service call to install or reinstall the charging station is not covered under the warranty.
- The detachable nozzle storage cannot be attached to the charging station in a wallmounted installation

# **Compact Installation**

For safety and convenience, install the charging station using the floor standing or wall-mounted installation methods. If you choose not to install the charging station, place it on a level floor for charging or storage.

- 1 Connect the power adapter to the port on the back of the charging station.
- 2 Place the charging station on a hard and level floor
- 3 Separate the extension pipe and nozzle from the product body before charging or storing the appliance.

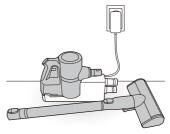


4 Plug the power cord into the power outlet.



#### **CAUTION**


 Leaving the appliance on a level floor for a long time with the extension pipe and nozzle attached may damage the appliance.

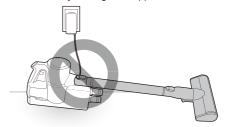


# **Assembling the Appliance**

Follow these steps to safely assemble the appliance.

- 1 Firmly attach the extension pipe 3, nozzle 4, or tool onto the product body 1.
  - To detach the extension pipe, press the extension pipe release button **2**.

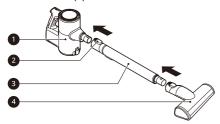

2 Put the product body on the charging station.

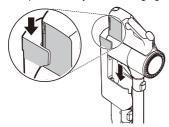



#### CAUTION


 Keep fingers away from pinch points when assembling the appliance or the charging station

# **Storing the Accessories**


# **Storing the Tools**

Store the frequently used tools such as the combination tool and crevice tool at the bottom of the charging station.

 1 Attach the combination tool and crevice tool to the tool holders 1.



 - 2 Press and hold the inlet release button ② and pull downward to remove the combination tool or crevice tool.
  - Store auxiliary nozzles or tools in the accessory bag.





#### CAUTION

- Do not store the product body or battery in the accessory bag. If the appliance or battery are damaged, it could cause an explosion or fire.
- Do not throw or drop the accessory bag containing accessories. It may damage the appliance or cause personal injury.


#### NOTE

• Do not use the accessory bag for purposes other than for storage of nozzles or tools.

# **Storing the Nozzles**

When a nozzle is not in use, store it in the convenient detachable nozzle storage so you can easily find it.

1 To store, slide the hook 1 on the nozzle into the nozzle storage cradle 2.

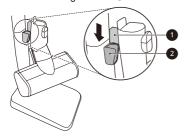

2 Lift the nozzle to remove it from the cradle.



# **Storing the Mop Pads**

Up to 2 mop pads can be stored in the detachable mop pads storage.



# **Getting Started**

 
# **Before Using the Appliance**

- Close the dust bin cover properly before using the appliance. If the dust bin cover is left open, the suction strength may deteriorate and affect the cleaning performance.
- Support the bottom of the appliance when cleaning an elevated surface.
- Store the appliance in the charging station or place it flat on the floor when not in use.
   Leaning the appliance against a wall or chair can result in product damage or personal injury if the appliance falls.
- Make sure that the exhaust filter or pre-filter is properly assembled before using the appliance.
- Environmental conditions such as temperature and humidity may cause static electricity to accumulate on the appliance. Please contact LG Electronics customer information center if the problem persists.
- Make sure to remove any foreign object such as a sock or stocking before using the appliance. Any foreign object on the inlet port or extension pipe will prevent the appliance from functioning properly.
- Please use the product at normal room temperatures as the battery runtime may deteriorate severely if used at temperatures lower than 5 °C or higher than 38 °C for an extended period of time.
- The battery runtime is dependent on the surface type and the suction power.
- Follow manufacturer's recommendations when cleaning flooring, carpets, and rugs.
- To avoid scratches on polished floors, keep the brushes of the nozzles and tools free from grit, sand, or abrasive objects.
- Refer to the Parts and Specifications section for battery runtime details.

# Assembling Attachments

Nozzles and tools can be attached to either the product body or the end of the extension pipe.


Insert the fully charged battery into the cavity at the bottom of the handle on the product body.



- 2 Attach the nozzles, tools, or extension pipe by sliding them onto the inlet 2 on the body until they click into place. The nozzles and tools can also be attached to the end of the extension pipe 2.
  - Detach the accessories by pressing the release button **3**.



- 3 Adjust the extension pipe by pressing the length adjustment button 4 on the back of the pipe and sliding until it clicks into place at the desired length.
  - The extension pipe extends in four steps.

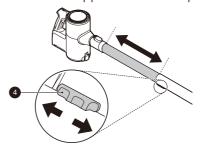

- 4 Press the Power button to activate the Normal mode
  - To turn off the appliance, press the Power button again.




#### CAUTION

 - Running the appliance for a long period of time with a tool connected may cause the motor to overheat.
- This appliance has a built-in safety device to prevent overheating. If the appliance becomes overheated after extended use, it may automatically turn off. If this occurs, leave the appliance in a cool, well-ventilated area for about an hour before turning on the power again.

# **Adjusting the Suction Power**

Adjust the suction power using the suction power adjustment button on the handle.



- Press the power On/Off button 1 to turn the appliance on or off.
- Normal Mode: Press the power On/Off button
   to activate the Normal mode.
- Power Mode: Press suction power up button 2 to increase the suction power.
- Turbo Mode: Press and hold the suction power up button 2 for more than 3 seconds.
- Press the suction power down button 3 to decrease the suction power by a step.
- You cannot select Turbo mode directly from Normal mode. You must switch to the Power mode first. (Normal → Power → Turbo)

# Adjusting the Suction Power with Mop Nozzle

- Press the power On/Off button 1 to turn the appliance on or off.
- Only Mopping Mode: Press the power On/Off button 1 to activate the Only Mopping Mode.
- Normal Mode: Press suction power up button
   to increase the suction power.
- Power Mode: Press suction power up button 2 to increase the suction power.
- Turbo Mode: Press and hold the suction power up button 2 for more than 3 seconds.
- Press the suction power down button 3 to decrease the suction power by a step.
- You cannot select Turbo mode directly from Normal mode. You must switch to the Power mode first. (Only Mopping → Normal → Power → Turbo)

# **Charging the Battery**

 
# **Before Charging the Battery**

- Make sure that the adapter is connected to both the charging station and the power outlet.
- Fully charging a single battery usually takes 4 hours. It will take twice as long to charge both the main and auxiliary batteries.
- The battery will not be charged if the indoor temperature is below 5 °C. Only charge the battery when indoor temperatures are between 5 °C and 38 °C.
- The battery will eventually need to be replaced.
   Due to the battery characteristics, runtime is shortened after using the appliance repeatedly for an extended period.
- The last bar on the battery indicator begins to flash when the battery needs to be recharged.
   Use the appliance with a fully charged the battery.
- To maintain battery life on dual-battery models, swap the positions of the two batteries periodically, between the main body and the auxiliary charging station.

# **Battery Level Indicator**

The remaining battery level is shown on the battery level indicator **1** above the handle of the product body.


- The remaining battery level is displayed in 3 stages according to the remaining battery power.
- The battery level indicator flashes when the battery needs to be charged.
- As the product is charging, 3 bars light up on the battery level indicator to indicate the level of charge.
- Once the battery is fully recharged, 3 bars will remain lighted on the battery level indicator.



# **Charging the Product Body**

Storing the appliance on the charging station automatically recharges the battery.

- Press the Power button to turn the appliance off.
- Put the product body onto the charging station by aligning it to the hook • of the charging station.
  - The battery level indicator starts to flash and begins charging the battery.

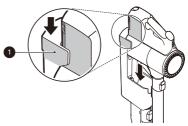




#### CAUTION

 Make sure to securely fit the product body onto the charging station. If the appliance falls off the charging station, it could cause injuries, property damage or product damage.


# Charging the Auxiliary Battery

An auxiliary battery can be stored and charged in the base of the charging station.


- If the main battery is charging on the charging station, the auxiliary battery will only start charging once the main battery is fully charged.
- Remove the discharged battery from the product body by pressing the battery release button on either side of the battery and pulling.

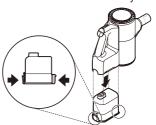

 
2 Remove the battery in the charging station by pressing the button at the rear of the battery and lifting the battery.



 - 3 Insert the fully charged battery into the cavity at the bottom of the handle on the product body.
  - The battery will only fit into the cavity if aligned properly.



 - Insert the discharged battery into the auxiliary charging station.
  - The battery will only fit into the cavity if aligned properly.
  - The auxiliary charging indicator **3** flashes while recharging is in progress.
  - When charging is complete, the auxiliary charging indicator 3 stays lit.



# **Using the Mop Nozzle**

This feature is only available on some models.

 
# **Before Using the Mop Nozzle**

- The mop pads only rotate at one speed regardless of what suction power setting the product body is set to.
- Do not use a soiled mop pad to clean floors.
- To prevent product damage, the mop attachment plate will automatically stop if there are foreign objects stuck in the plate or if it is subjected to a strong impact. Turn the appliance off immediately and remove the foreign objects or obstructions before resuming use.
- If you hear a noise while mopping, the mop pad may have dropped off the mop attachment plate. Turn off the product immediately and reattach the mop to the attachment plate before resuming use.
- Use only authorized LG Electronics mop pads.
- Empty the dust bin and clean the exhaust filter and the pre-filter after using the mop nozzle.

# **Using the Mop Nozzle**

When you attach the mop nozzle, the product will operate initially in only mop mode with suction OFF.

- Press the "+" button if you wish to carry out both dust cleaning and mop cleaning at the same time in only mop mode.
- Press the "-" button in normal mode if you wish to use the only mop mode.




#### NOTE


- When you replace the mop nozzle during product operation, the product will operate in only mop mode with suction OFF.
- Set the water adjustment button to the STOP position when not using the appliance for an extended period of time. Failure to do so may result in product failure.
- If you use mop cleaning with suction OFF for a long period of time, the safety device (motor overheating prevention device) will operate, stopping product operation, in order to protect the mop nozzle. (Recommended duration of use: 80 minutes) It is not a sign of malfunction. Use the product after allowing the mop nozzle to cool for 1 hour.
- Do not use this nozzle on PVC play mats for children. Friction can cause the motor to overheat
- Do not slam down or throw the mop nozzle onto the floor. Doing so may result in an injury or product damage. Do not step on the mop nozzle. Doing so may result in product damage.

#### Filling the Water Tank

 Press the PUSH button to remove the water tank from the mop nozzle.



 
- Open the water inlet cap ② on the side of the water tank and fill the tank with water using the measuring cup ③ before MAX line ④.
  - Open only one water inlet cap to fill the water. Opening both caps may cause the water to flush.
  - Do not put liquid other than water and hot water in the water tank.



- 3 Close the water inlet cap tightly.
  - If the water inlet cap is not closed properly, water may leak.




 - 4 Attach the water tank to the mop nozzle again.
  - Insert the 2 tabs § at the front of the water tank into the slots § on the top of the mop nozzle. Press down at the center 7 to lock the tank in place.




### Attaching the Mop Pads

 - Wet both sides of the mop pads with water then squeeze out any excess water before attaching the pads.
  - Attaching and using mop pads in a dry state may affect the cleaning performance.
  - Do not attach pads while they are dripping wet.



Place the mop nozzle upside down on the floor.

 - 3 Align and attach the center of the mop pad with the center of the mop attachment plate.
  - Attach the mop pad's velcro to the mop attachment plate, align and attach the centre of the mop pad with the centre of the mop attachment plate.



4 Attach the mop nozzle to the appliance.



#### WARNING

 To avoid injury, do not attach the mop pad while the mop attachment plate is rotating.

 


#### **CAUTION**

 Do not let the appliance stand on the floor while the wet mop pads are attached. Doing so may result in damage or swelling to wood flooring.

#### Adjusting the Amount of Water

Press the water adjustment buttons to adjust the amount of water released onto the mop pad to either **High Mode** or **Low Mode**.



- High Mode: Press the High Mode button 
   all the way down to clean ingrained dirt or supply a large amount of water.
- Low Mode: Press the Low Mode button all the way down to supply a small amount of water for cleaning wood or other flooring that can be damaged by too much water.
- STOP: Press the Low Mode or High Mode button halfway to toggle back to the STOP position. This stops the supply of water so you can go over areas that are already wet.

### Cleaning with the Mop Nozzle

- 1 Attach the water tank and mop pads to the mop nozzle.
- 2 Set the water adjustment button to the STOP position.
- 3 Press the Power button to start cleaning.

# **Drying the Water Tank and Mop Pads**

 
#### **Drying the Water Tank**

When cleaning is completed, make sure to empty the water and dry it before storing the mop nozzle. Otherwise the water may be contaminated and give off a bad smell.

Open the 2 water inlet caps ① on the side of the water tank and empty the water in the water tank. Shake the water tank to remove the remaining water.



- 2 Leave the 2 water inlet caps open and allow the water tank to dry in a well-ventilated area out of direct sunlight for at least 24 hours.
  - Keep the water tank after water is completely empty and dry. Moisture or residual water in the tank may cause odour.





#### **CAUTION**

 
- Turn the water inlet caps to make sure they remain open. If caps are closed and not properly dried, it may cause odour.
- Do not remove the water inlet caps from the water tank. Doing so could tear or damage the rubber.

 Do not add detergent, vinegar or baking soda to the water tank when washing. It is not easily removed in the water tank, which may soil the floor.

## **Drying the Mop Pads**

After using the mop pads, hand wash them and allow them to dry before storing them.


- 1 Separate the mop pads from the mop attachment plate.
- 2 Hand wash the pads with a neutral detergent.
  - Storing mop pads in a damp state can result in an unpleasant odor. Set the pads in a well-ventilated area out of direct sunlight for at least 24 hours or until completely dry.





#### CAUTION

  After cleaning, wipe off any remaining water on the water supply inlet ① on the mop nozzle with a soft cloth. The water could drip onto the floor and damage it.



- Do not pull or stretch the rubber gasket on the water supply inlet on the mop nozzle. Doing so could tear or damage the rubber.
- Do not use as follows, as it may become deformed.
  - Do not use bleach or fabric softener when washing the mop pads.
  - Do not dry the pads in a clothes dryer.
  - Do not boil the mop pad. The mop pad may become deformed

# **Using the Nozzles**

This feature is only available on some models.

# **Before Using the Nozzles**

- Specialized attachments can help you clean more effectively.
- Nozzles can be attached to the product body or the extension pipe.
- Adjust the suction power if the inlet gets stuck on the floor, carpet, or bedding.

# **Power Drive Carpet Nozzle**

Use this nozzle to clean carpets or rugs.

• If used on hard flooring, this nozzle will be noisy.



#### **CAUTION**

 Do not use this nozzle on PVC play mats for children. Doing so may cause static electricity to accumulate on the appliance.

#### Power Drive Floor Nozzle

Use this nozzle to clean hard floor surfaces

#### Power Drive Slim Floor Nozzle


Use this nozzle to clean hard floor surfaces.

 While cleaning, it was not intended, but pressing the PUSH button on the nozzle may remove the brush. Please attach the brush again.

# **Bedding Power Punch Nozzle**

The Bedding Power Punch Nozzle lets you clean sheets and bedding more effectively. It removes dust in bedding using strong suction and a punching motion.

 Lower the suction level when vacuuming bedding such as duvet covers to avoid the thin fabric getting sucked into the nozzle.

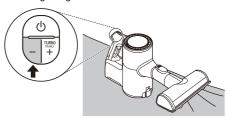

### **Power Drive Mini Nozzle**

It is suitable for soft surfaces and pet hair removal.





#### CAUTION

- Do not use the nozzle following surface. It may cause scratch or damage. Especially, do not clean a coated or lacquered floor. If used repeatedly, the coating may wear off.
  - Clothing, bedding
  - Leather cushioned sofas, cushions
  - Carpet
  - Vinyl flooring, tiles, marble, etc.

# **Using the Tools**

This feature is only available on some models.

# **Before Using the Tools**

- Specialized attachments can help you clean more effectively.
- Tools can be attached to the product body or the extension pipe.
- Adjust the suction power if the inlet gets stuck on the floor, carpet, or bedding.

#### **Total Care Tools**

#### **Combination Tool**

Can be used in either basic mode or brush mode for cleaning corners or small gaps where dust and dirt gather.

#### Basic Mode

 
Use the tool in the basic mode to clean flat surfaces such as sofas or mattresses.



#### Brush Mode


Use the tool in the brush mode to clean delicate surfaces such as frames or furniture.

 To convert modes, press the adjustment button • and push forward.




#### **Crevice Tool**

Use this tool to remove dust from corners or narrow spaces.

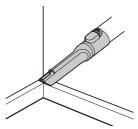

#### **Hard Dirt Tool**

  Firm bristles remove solidified dirt from hard surfaces. Clean up hair or foreign objects that are entangled in carpets or rugs.




#### **Mattress Tool**

Use this tool to clean up dust and foreign objects from mattresses, delicate fabrics, and upholstery.



#### Flexible Crevice Tool

 
This tool is flexible and its length can be adjusted, making it especially useful for cleaning inside vehicles or in narrow spaces under and behind furniture where an angled tool is needed.



#### . Using the Brush


To convert the tool from crevice to brush mode, grab the sides of the brush head **1** and pull the brush down.

  To convert back to the crevice mode, press in on the brush release button 2 and slide the brush up.



#### · Adjusting the Length

  To adjust the length of the tool, press and hold the release button 3 on the side of the tool. Pull or push on the brush head 4 to extend or retract the extension tube.



### **Multi-angle Tool**

 
This tool has a soft brush that can be adjusted to a variety of angles, making it especially useful for cleaning vehicle consoles or the tops of furniture.



#### Flexible Hose Extension

Connect this flexible, extendable hose between the product body and the tools to clean hard to reach areas

 The flexible hose extension cannot be used with the Power Drive Nozzle.





#### CAUTION

- Do not use the appliance for any purpose other than domestic household cleaning.
- Keep fingers away from pinch points when assembling the appliance or the charging station
- Using the appliance for a long time with a tool connected may overheat the motor.
- If any foreign object is sucked into the inlet during cleaning, the appliance might stop in order to prevent damage to the product body or motor. Immediately stop using the appliance and remove the foreign object before resuming cleaning.
- Do not use tools to clean a TV, monitor or LCD display as they may scratch these surfaces.

# **Cleaning the Appliance**


# **Before Cleaning the Appliance**

- Turn off the power before cleaning the appliance.
- To maintain the optimum suction power, the Cyclonic Mesh Filter, the exhaust filter and the pre-filter should be cleaned at least once a month.
- The pre-filter will wear out with time and use and will eventually need to be replaced.
   Contact the customer service department of LG Electronics if the problem persists.

# **Removing Foreign Objects**

In order to maintain product performance, be sure to remove any foreign objects and dust from inside the product body, extension pipe or air inlets.


- Foreign materials inside the product can cause noise, have poor suction, or shut down during operation.
- If the inside of the product body, extension pipe, inlets, pre-filter, or exhaust filter is clogged with foreign objects, the power automatically turns off to protect the appliance.
   Separate the battery from the product body and remove the foreign objects before resuming use of the appliance.

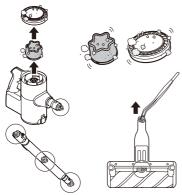

### Cleaning the Dust Bin

Empty and clean the dust bin after every use.

- If the dust bin is completely full of dust or the filter is clogged, the suction power may be reduced.
- 1 Remove the battery from the product body before cleaning the dust bin.
- Press the dust bin cover release button to open the dust bin cover. Empty the dust bin by shaking.
  - Be careful as dust or foreign objects may spill out when opening the dust bin. Empty the dust bin into a wastebasket or where dust and foreign objects can be easily removed.
  - The dust bin can be wrapped in a plastic bag to contain the dust when emptying the dust bin.

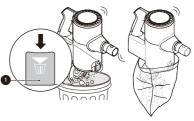


3 Insert the crevice tool 9 into the Cyclonic Mesh Filter 2 and turn it counterclockwise to remove the filter.



- 4 Wash the Cyclonic Mesh Filter under running water
  - To avoid odor, allow the Cyclonic Mesh Filter to dry completely in a well-ventilated area out of direct sunlight for at least 24 hours before reassembling.



5 Use the combination tool to clean out dust or foreign objects inside the dust bin.

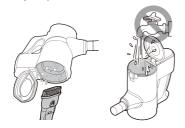

# A

#### WARNING

- Never wash the product body with water. Water could reach the motor and cause electric shock or fire.
- Do not use the product body to suck up oils or any liquids, including water.
- Do not use the appliance without the Cyclonic Mesh Filter installed. Doing so could damage the product.
- Do not insert fingers or sharp objects into the motor to avoid product damage, personal injury, or electric shock.
- Do not allow foreign objects to reach the motor to avoid product damage, explosion or fire.




#### **CAUTION**

 Do not apply force or allow impacts to the Cyclonic Mesh Filter. Doing so could deform the filter, compromise product performance, or cause the product to malfunction.


# **Cleaning the Filters**

Clean the pre-filter and exhaust filter at least once a month to maintain the optimum suction power of the appliance.

- Clean the filters more frequently if the appliance is used regularly or in areas with a lot of dust.
- Rotate the exhaust filter 1 to the unlocked position 2 to separate it from the product body.

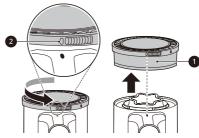

 2 Lift out the pre-filter 3 from the product body.



- 3 Use the combination tool 4 to clean any dust off the motor.
  - . Do not wash the motor with water.



- 4 Clean the exhaust filter by brushing the dust off or by washing it in running water.
  - To avoid odor, allow the exhaust filter to dry completely in a well-ventilated area out of direct sunlight for at least 24 hours before reassembling.



- 5 Clean the pre-filter by brushing the dust off or by washing it in running water.
  - As a spare pre-filter is provided for your convenience, use two pre-filters alternatively if necessary.
  - To avoid odor, allow the pre-filter to dry completely in a well-ventilated area out of direct sunlight for at least 24 hours before reassembling.



6 Insert the clean, dry pre-filter and rotate the exhaust filter to the locked position **9** to reassemble it on the product body.





#### CAUTION

 Do not use the appliance without the exhaust filter and pre-filter installed. Doing so could result in product damage.


# Cleaning the Power Drive Carpet Nozzle/Power Drive Floor Nozzle

Clean the brush and roller heads before each use.


- If the brush contains foreign objects, the brush may not spin or a noise may occur during operation.
- Press the nozzle release button 1 to remove the nozzle from the extension pipe or product body.




2 Turn the nozzle upside down and rotate the cover lock slot 2 counterclockwise.

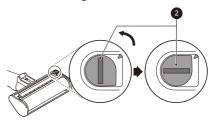

 
3 Pull the brush cover forward and pull the brush out.



4 Attach the crevice tool to the product body and use the vacuum to remove foreign objects and dust from the brush and the bottom of the nozzle.

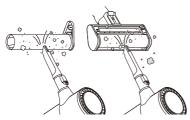

 - Use a damp towel or cloth to remove any remaining foreign objects and dust from the brush and the bottom of the nozzle.
  - Do not rinse or submerge the rotating brush or nozzle in water.



6 Slide the brush back into the nozzle and rotate the cover back into place. Turn the cover lock clockwise to lock the cover.



#### **WARNING**

- Never wash the rotating brush and the nozzle with water. Water could reach the motor and cause electric shock or fire.
- Do not use the rotating brush and the nozzle to suck up oils or any liquids, including water.

 


#### CAUTION


- Keep fingers away from pinch points when assembling the appliance or the charging station.
- Do not use the rotating brush as a wet mop.

# Cleaning the Power Drive slim Floor Nozzle


Press the nozzle release button to remove the nozzle from the extension pipe or product body.



 
Turn the nozzle upside down and remove the rotating brush while holding down the PUSH button on the nozzle.



3 Attach the crevice tool to the product body and use the vacuum to remove foreign objects and dust from the brush and the bottom of the nozzle.

 

 4 Use a damp towel or cloth to remove any remaining foreign objects and dust from the brush and the bottom of the nozzle. Remove foreign objects, debris and hair from all Rollers of the nozzles using tweezers.



5 Slide the brush back into the nozzle until it clicks into place.

# Cleaning the Bedding Power Punch Nozzle

- Separate the Bedding Power Punch Nozzle from the product body and turn the nozzle upside down.
- 2 Attach the crevice tool to the product body and use the vacuum to remove foreign objects and dust from the bottom of the Bedding Power Punch Nozzle



- 3 Use a damp towel or cloth to remove any remaining foreign objects and dust from the bottom of the Bedding Power Punch Nozzle. After cleaning, wipe the nozzle dry.
  - Do not rinse or submerge the Bedding Power Punch Nozzle in water.



# A

### **WARNING**

- Never wash the Bedding Power Punch Nozzle with water. Water could reach the motor and cause electric shock or fire.
- Do not use the Bedding Power Punch Nozzle to suck up oils or any liquids, including water.

# Cleaning the Power Drive Mini Nozzle

 
1 Remove the nozzle from the product **1**.




2 Push the button to separate the brush.




- 3 Attach the crevice tool to the unit and use the vacuum to remove dust/foreign objects from the brush and the bottom of the nozzle.
  - Use a damp towel or tissue to remove any remaining foreign matter and dust from the brush and the bottom of the nozzle.



 
Insert the end of the brush 2 into the groove on the nozzle at the end.



 - 5 Press the brush end cap to secure it. To lock the cover, Push until a clicking sound is heard.
  - If you have a hard time assembling it, check that 'Groove' and 'End of the brush' are aligned.



 - 2 Use a damp towel or cloth to remove any remaining foreign objects and dust from the bottom of the mop nozzle.
  - Foreign objects remaining on the nozzle may result in a bad smell.



#### NOTE

 Always check the nozzle's jockey wheel for build up of debris such as hair or dust which can cause it not to rotate freely. If this occurs it can damage hard floors. It should be cleaned regularly.



#### CAUTION

 Empty the bin after cleaning any pet hair. Not doing so may cause a bad smell. Regularly clean the jockey wheel on the power drive nozzle so the wheel rotates freely.

# Cleaning the Mop Nozzle

1 Press the nozzle release button 1 to remove the mop nozzle from the extension pipe.



# A

#### WARNING

- Always separate the mop nozzle from the product body or remove the battery before cleaning. If the mop attachment plate starts to rotate during cleaning, it could cause an injury.
- Never wash the mop nozzle with water. Water could reach the motor and cause electric shock or fire
- Do not use the mop nozzle to suck up oils or any liquids, including water.

# **Before Calling for Service**

# **Troubleshooting Guide**

Save time and money by checking the following before calling for service.

Symptoms	Possible Causes & Solution
The appliance does not operate.	Battery is fully discharged.
	Charge the battery.
	Appliance is turned off.
	Press the power button to turn on the appliance.
	Dust bin is full of dust.
	Empty the dust bin.
	Filters are clogged.
Suction power is	Clean the pre-filter and the exhaust filter.
too weak.	Inlet is clogged.
	Remove any foreign objects from inside the product body or the extension pipe.
	Foreign object is on rotating brush, or in inlet port.
	Remove any foreign objects (thread, hair) from the rotating brush or the inlet port.
	Power adapter is not connected to the charging station.
The product	Plug the adapter firmly into the charging station.
body does not	Power cord is unplugged.
appear to be	Plug the power cord securely into the charging station.
charging.	Foreign object is on the charging terminals.
	Remove dirt or foreign objects from the charging terminals with a dry cloth.
	Appliance was purchased within the last 3 months.
	The cleaner may emit a smell of rubber for about 3 months after purchase.
	Dust bin is full of dust.
	The dust in the bin may cause some odor. Empty the bin and clean it.
	Foreign object is on the filter.
	The filter may emit an odor if it has not been cleaned for some time. Clean the pre-filter and exhaust filter regularly.
A strange odor is	Pre-filter was installed while damp or wet.
coming from the appliance.	Wash the pre-filter with running water. To avoid odor, allow the pre-filter to dry completely in a well-ventilated area out of direct sunlight for at least 24 hours before reassembling.
	Exhaust filter was installed while damp or wet.
	Wash the exhaust filter with running water. To avoid odor, allow the exhaust filter to dry completely in a well-ventilated area out of direct sunlight for at least 24 hours before reassembling.
	Foreign object is on the dust inlet of the mop nozzle.
	Wet dust in the mop nozzle may result in odor. Make sure to wipe the dust inlet of the mop nozzle with a wet wipe after each use.

Symptoms	Possible Causes & Solution
Hot air is	Appliance is operating.
expelled from the appliance.	The hot air originates from cooling of the motor and is not a sign of malfunction.
The appliance	Vacuum cleaner operates in Turbo mode.
makes too much noise.	The motor may be louder at the higher suction power settings. This is normal.
	Battery is not fully charged.
The appliance turns off unexpectedly	The battery must be fully charged before cleaning. If the problem persists when the battery is fully charged and the pipes and attachments are clear from obstructions, contact an LG customer information center for service.
or by itself	Foreign object is in the product body, extension pipe, inlet port or nozzle.
after the motor speed fluctuates	Remove any foreign objects from the product body, extension pipe, inlet port or nozzle.
repeatedly.	Filters are clogged.
	Clean the pre-filter and the exhaust filter.
The netetine	Brush is improperly installed.
The rotating brush does not	Remove the brush, clean it if necessary and attach it again.
rotate.	Foreign object is on rotating brush.
	Remove any foreign objects from the rotating brush.
	Mop pads are improperly installed.
	Remove the mop pads, clean it if necessary and attach it again.
The	Mop nozzle is strongly pressed.
The mop pad attachment plate does not rotate.	<ul> <li>The mop attachment plate stops automatically to protect the product. This is not a failure. Attach the mop pads securely to the mop attachment plate and press the power button to resume use.</li> </ul>
	Foreign object is between mop attachment plate and mop pads.
	Remove foreign objects from the mop nozzle attachment plate and press the power button to resume use.
	Water tank is empty.
	Fill the water tank. Remove the battery or detach the nozzle before filling the water tank.
There is no water	Water tank is improperly attached to mop nozzle.
coming out of the mop nozzle.	Properly attach the water tank to the mop nozzle. Remove the battery or detach the nozzle before properly securing the water tank to the nozzle.
	Water supply adjustment button is set to STOP.
	<ul> <li>Press the High or Low water adjustment button all the way down. The water will not come out if the button is set to STOP.</li> </ul>
There is moisture in the water tank.	Water tank is not allowed to dry completely after use.
	Empty the water tank, set it out of direct sunlight, and allow it to dry completely after use.
Using the mop	Mop pads is not cleaned properly after use.
nozzle makes the floor dirtier.	Clean the mop pads thoroughly after each use. Cleaning with a soiled mop may make the floor dirtier.

## **System Standards Information**

#### **EAC - Eurasian Conformity Mark**



The Eurasian Conformity mark (EAC) is a certification mark to indicate that the product conforms to all technical regulations of the Eurasian Customs Union procedures

#### Information of the Packaging Materials



The symbol "not for food products" is applied in accordance with the technical regulations of the Customs Union "On the safety of packaging" 005/2011 and indicates that the packaging of this product is not intended for reuse and is recyclable. It is prohibited to use the packaging of this product for storage of food products.



The symbol "Moebius loop" indicates the possibility of recycling the package. The symbol can be supplemented by the designation of the packaging material in the form of a digital and / or letter designation.

#### Information of the Production Date

"Production date indicated on the label located inside the battery cavity at the bottom of the handle on the product body. • Format of Date: YYYY/MM"

#### **LG Customer Support Service**

Information on certification of our devices, data on the certificate number and its validity period, you can get in the LG Customer Support Service by free phones.

