

INSTALLATION MANUAL

LED TV*

Please read this manual carefully before operating your set and retain it for future reference.

UV76**

TABLE OF CONTENTS

3 LOCATION AND FUNCTION OF CONTROLS

- 3 Parts and Button

4 EZMANAGER

- 4 INTRODUCTION
4 EZ-MANAGER WIZARD
5 LANGUAGE & COUNTRY SELECTION
6 - Automatically for Setup
9 - Manually for Setup
13 - USB LG Smart Install Utility

16 INSTALLATION MENU

- 16 INTRODUCTION
17 LG HOTEL MODE
17 - Hotel Mode Operation
17 - Power On Status
18 - Volume
18 - Key Management
19 - Limited Mode
19 - DTV Programme Update
20 - Power On Default
20 - Aux Source Setting
20 - Power Management
20 - Radio Video Blank
20 - Factory Reset
21 NETWORK
21 - MAC Address
21 - Network Setting
22 - LG Connect
22 - Wake On LAN
23 PRO:CENTRIC
23 - Mode
23 - WOF
23 - Room Number Setting
24 - Media Type
24 - Receive Data
24 - Native EPG

- 25 GENERAL
25 - Configuration Setup
29 - External Speaker
30 - Set ID Setup
30 - Power Saving
30 - HCEC Setup
31 - Clock Setup
32 - Password Change
32 - PreLoaded App
32 - Lock Mode
33 MEDIA SHARE
33 - SmartShare
33 - Screen Share
33 - Media Renderer
34 - DIAL
34 - TV Name
34 - SoftAP
35 TV MANAGER
35 - USB Download Menu


43 KEY CODES

46 EXTERNAL CONTROL DEVICE SETUP

- 46 USB to Serial converter with USB Cable
46 RS-232C With RS-232C Cable
47 - Type of connector : D-Sub 9-Pin male
47 - RS-232C Configurations
48 IR OUT Using Guide
49 Communication Parameters
49 Command reference list
50 Transmission / Receiving Protocol

LOCATION AND FUNCTION OF CONTROLS

Parts and Button

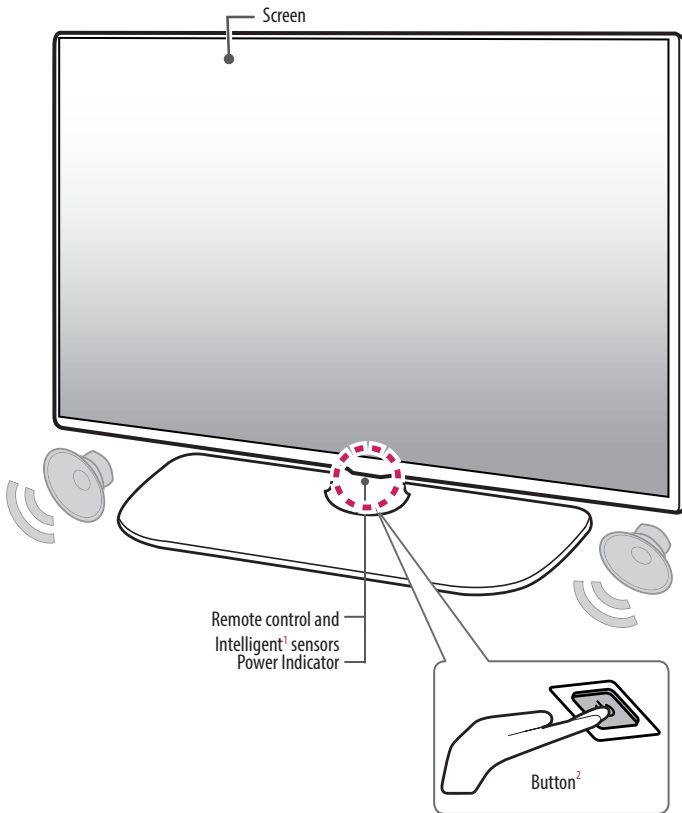

- 1 Intelligent sensor - Adjusts the image quality and brightness based on the surrounding environment.
- 2 Button - This button is located below the TV screen.



NOTE

- You can set the power indicator light to on or off by selecting **General** in the main menus.

EZMANAGER

- Image shown may differ from your TV.

INTRODUCTION

The Pro:Centric Platform enables you to simply install, manage and use guest-centric solutions. The default Domain “procentric.local” and IP Server Address are needed to be registered in DNS TV will contact the IP Server using the default Domain “procentric.local” via IP on server search page. If TV doesn’t contact the Server, TV will search the pre-defined channel earlier than all channels. (Only DVB-C)


The frequencies of pre-defined channels are below.

Germany: ‘51000, 858000, 778000, 698000, 618000, 538000, 458000, 378000, 298000, 218000, 138000 khz’.

Philippines 6Mhz: ‘57000, 651000, 591000, 531000, 471000, 411000, 351000, 291000, 231000, 171000, 111000 khz’.

Other Country: ‘50000, 842000, 762000, 682000, 602000, 522000, 442000, 362000, 282000, 202000, 122000 khz’.

EZ-MANAGER WIZARD

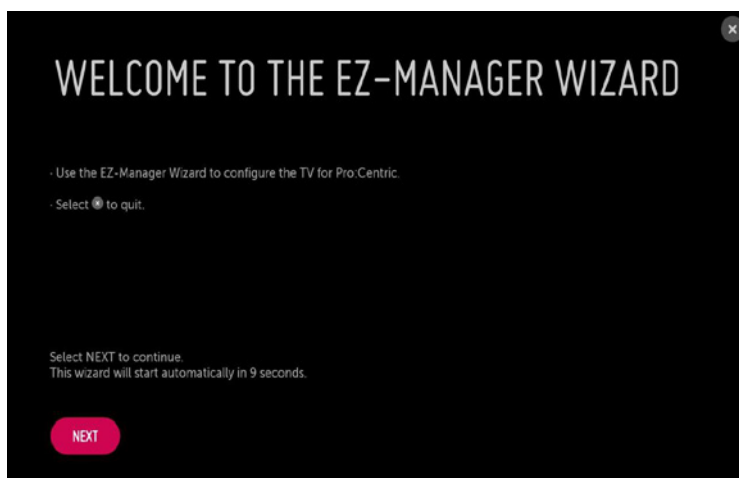

- If you are using Pro:Centric, this setup wizard will help you easily set up the TV. Select '**NEXT**' to continue.
- Otherwise, if you will not be installing a Pro:Centric Server, select '**X**' to quit.


LANGUAGE & COUNTRY SELECTION




- Please select the **Language** and **Country**. Some countries need to select the **Time Zone**.

Automatically for Setup



- 1 From the TV Configuration Options screen, you can choose how to proceed with the configuration of this TV. Whether you will configure the TV for Pro:Centric operation via the wizard or use a USB memory device to configure the TV, you may first wish to set the Room Number on the TV.

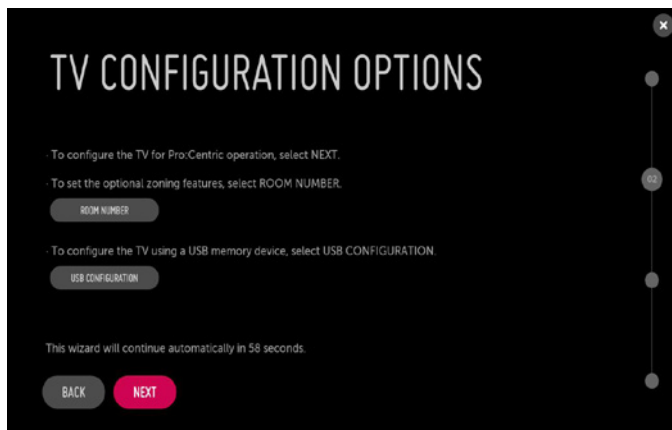

- If you intend to set Room Number as part of the TV configuration, use the Room Number option to assign the Room # for this TV before you continue with additional configuration.
- In the Label field, use the Left/Right arrow keys to specify a North, South, East, or West designation for this TV.
- In the Room Number field, you can use the number keys on the Installer Remote to direct enter a room number or use the virtual keyboard on the TV screen.
- To continue, move and select '**NEXT**'.

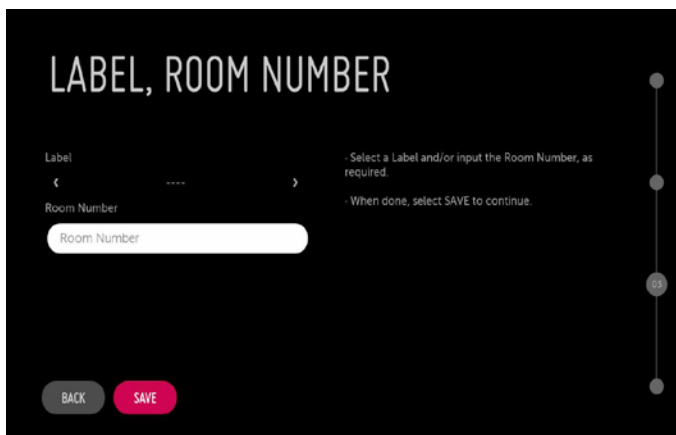


- 2 This step automatically searches for the Pro:Centric Server. If was found the Pro:Centric data channel, select the '**NEXT**'.

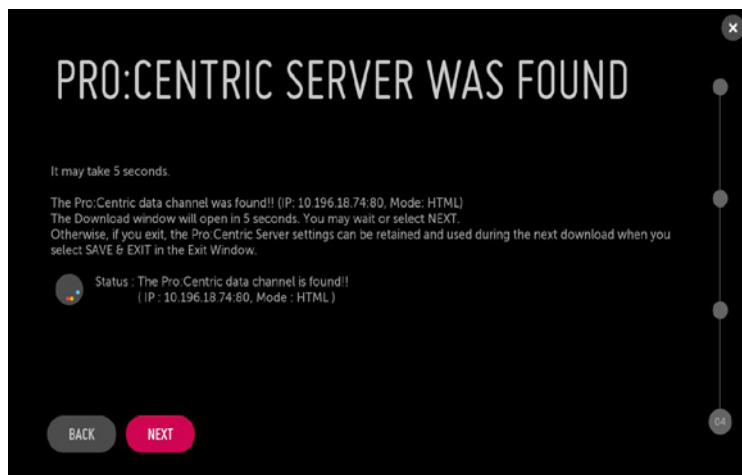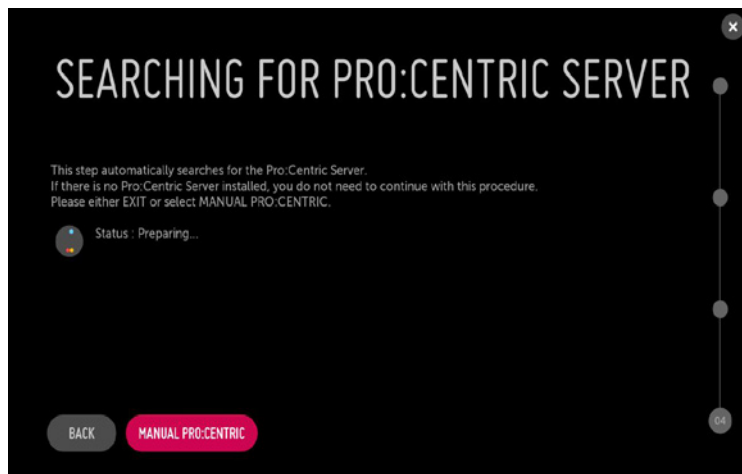

- 3 Downloading the Pro:Centric application files takes few minutes.




- 4 After the installation is completed, the following screen will be displayed.

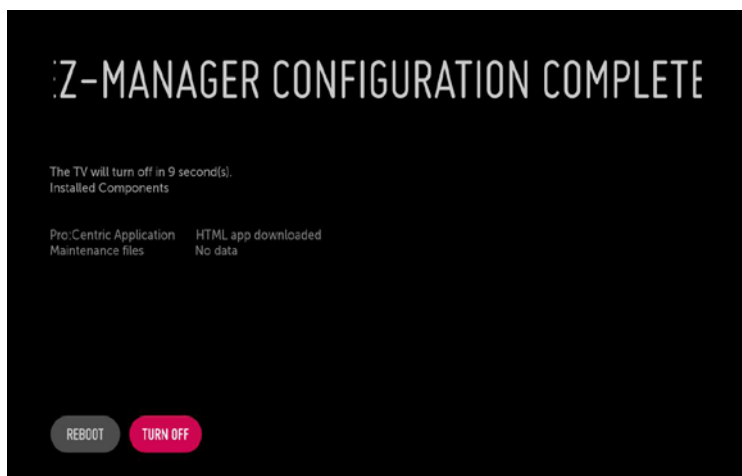


Manually for Setup


- 1 Select a Label and/or enter the Room Number using the numeric keypad on the remotes or using the virtual keyboard on the TV screen. To continue, move and select '**NEXT**'.

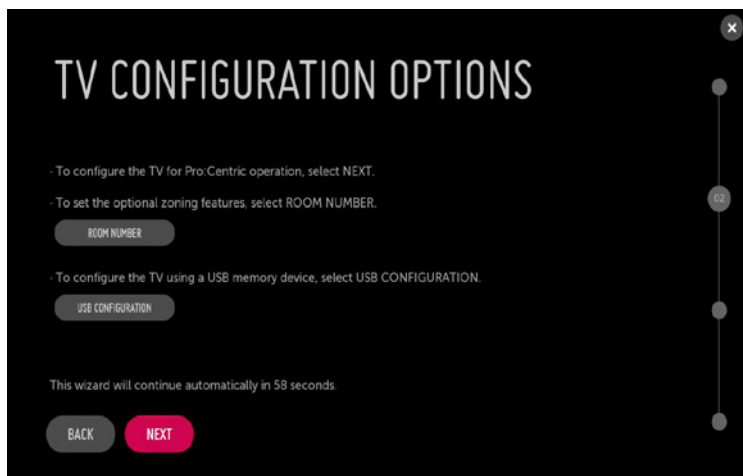

- 2 Please select the **'MANUAL PRO:CENTRIC'**.

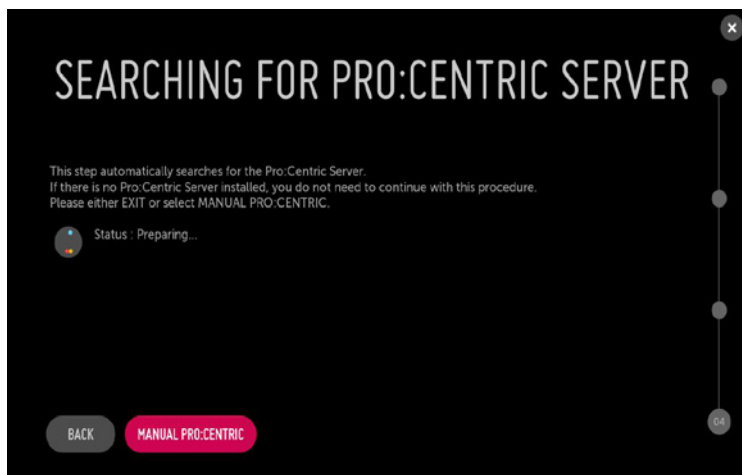

- 3 Configure the appropriate Pro:Centric settings in the TV. (Depending on model)

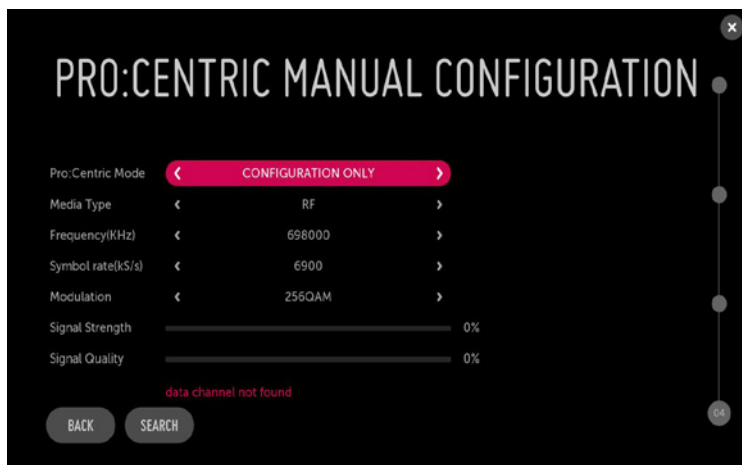

PRO:CENTRIC MANUAL CONFIGURATION

Pro:Centric Mode < CONFIGURATION ONLY >

Media Type < IP >

Server Address < Domain Name >

Domain Name ProCentric.Local

IP Port 0

IP server not found

BACK SEARCH

PRO:CENTRIC MANUAL CONFIGURATION

Pro:Centric Mode < CONFIGURATION ONLY >

Media Type < IP >

Server Address < IP Address >


IP Address 10 196 18 74

IP Port 80


IP server not found

BACK SEARCH

- 4 Downloading the Pro:Centric application files takes few minutes.

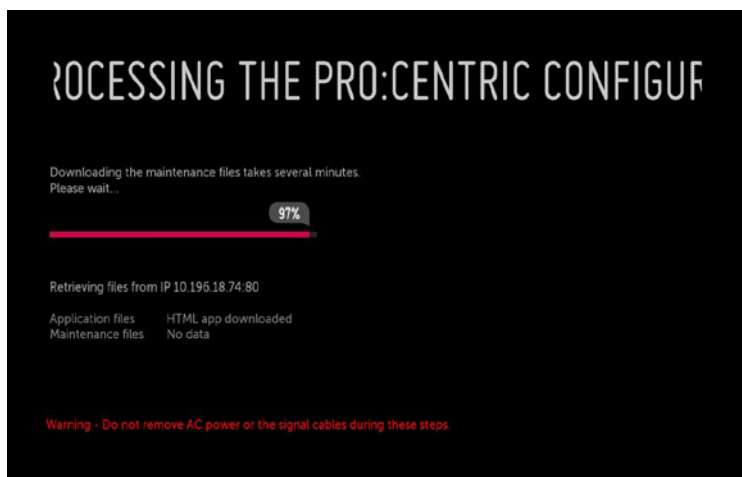


- 5 After the installation is completed, the following screen will be displayed.

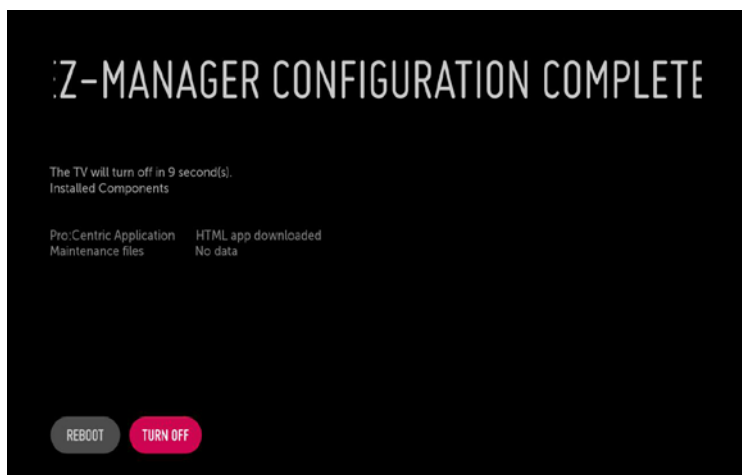


USB LG Smart Install Utility


- 1 Select the '**USB CONFIGURATION**' → '**TV MANAGER**'.

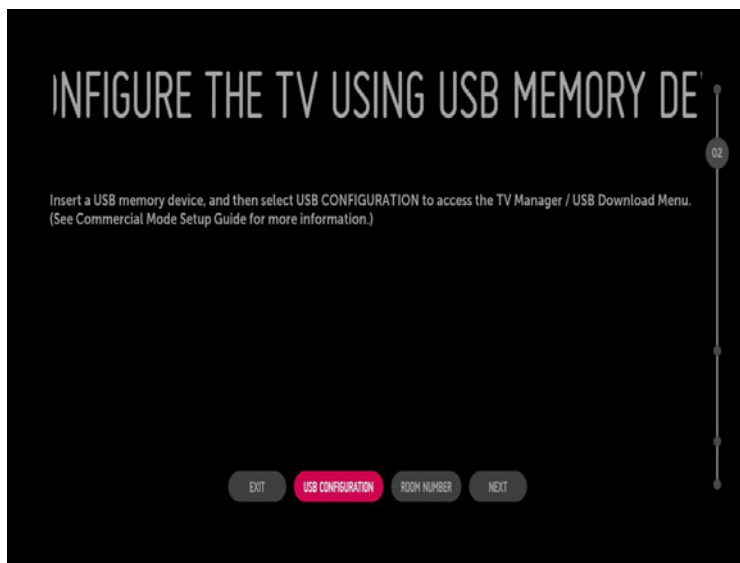


- If you have USB Memory for "LG_DTV" or "lg_dtv" folder, this step shows the USB file list for downloading the items.

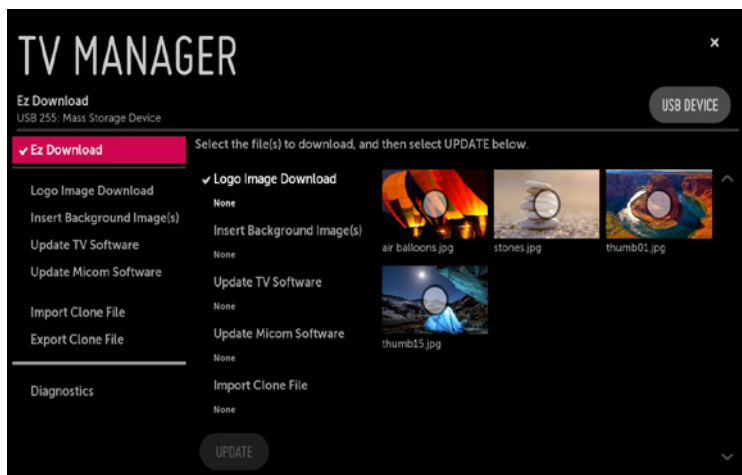

- Detail information is described in TV Manager chapter of Installation Menu.
- 2 Downloading the files takes few minutes.

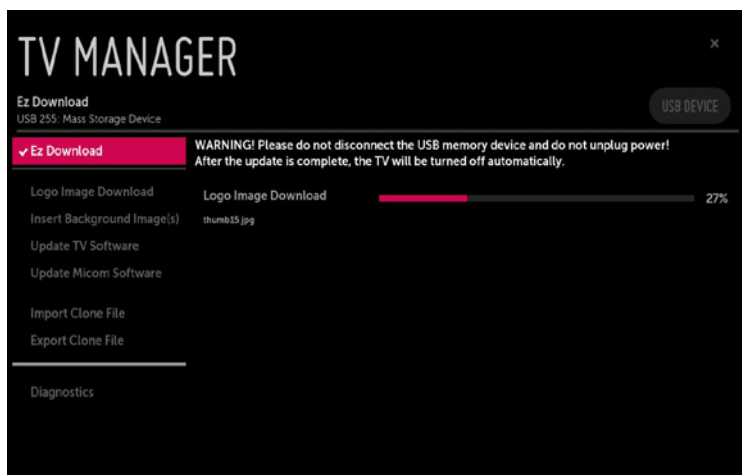

- 3 After the installation is completed, the following screen will be displayed.

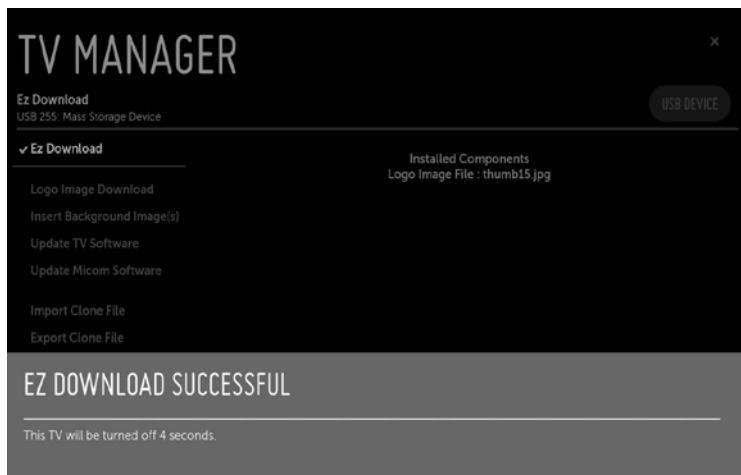


INSTALLATION MENU

- Image shown may differ from your TV.

INTRODUCTION


The abundant functions for Hotel TV linked with software installation can be projected on OSD as 'Installation Menu'.

The wide range of hotel features can be performed simply on additional window to enhance the LG hotel TV's easy installation and convenient operation for Hotelier and System Integrators.

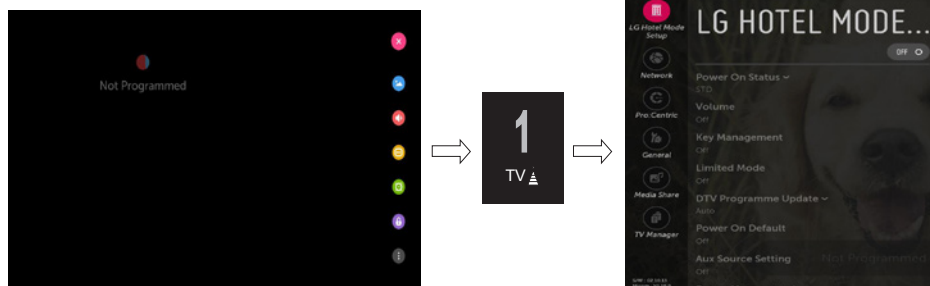

- 1 Press the Setting button for more than 5 seconds using the user remote control, programme information will appear at top left on the screen.
- 2 Enter a four digit password and press 'OK' button.
 - The TV is set with the initial password "1-1-0-5".
- 3 Use the $\vee$ $\wedge$ button to select the desired menu.

LG HOTEL MODE

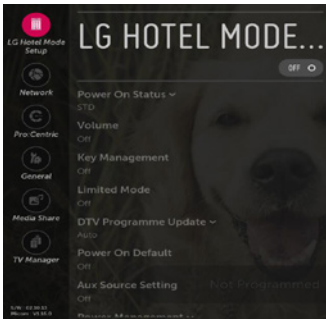

- 1 Use the $\vee$ $\wedge$ button to select the **LG HOTEL MODE SETUP**.
- 2 Use the '**OK**' button and then $\vee$ $\wedge$ button to select Hotel Mode Operation.
 - When 'Hotel Mode Operation' is set to On (Work), all functions of Hotel Mode apply.

Hotel Mode Operation

- Decide to work all functions of 'Hotel Mode Operation' or not by setting 'Hotel Mode Operation' as On(Work) or Off(Do Not Work)
- When 'Hotel Mode Operation' is set to On(Work), all functions of Hotel Mode apply.
- When 'Hotel Mode Operation' is set to Off(Do Not Work), all functions of Hotel Mode Do Not apply.
- When it is set to 'On', all items reserved at the Schedule list are deleted and the reservation function is not supported.(applied for the model offering the reservation function)
- The TV triggered by the external device (ex: SIMPLINK, TVLink-Tuner, etc.) operates separately from the Hotel mode.
- When it is set to 'On', User Menu $\rightarrow$ General $\rightarrow$ 'Reset to Initial Settings and Home/Store Mode' are disabled.
- When 'Hotel Mode Operation' is set to On(Work), all skipped programs are not tuned by number keys.
- When 'Hotel Mode Operation' is set to On(Work), Detailed Information about the programme is not available in the EPG.
- When 'Hotel Mode Operation' is set to On(Work), User Menu -> Timer->'Auto Power Off' is disabled.
- When 'Hotel Mode Operation' is set to On(Work), User Menu -> Timer->'2 Hour Auto Power Off' is disabled.

Power On Status

- Decide to select working status of TV Set when turn on main power.
- You can set with PWR, STD, LST.
- PWR always make TV set On status when turn on main power .
- STD make Stand-by status when turn on main power.
- LST make TVSet work like previous power status. As same concept as Power Backup mode; If main power were turned off in Power On status, TVSet would work in On status. If main power were turned off in Stand-by status, TVSet would work in Stand-by status.
- If there Block All is both IR Operation and Local Key Operation from Key Management, In order to provide the Option that must be able to turn on the TV in the TV turned off situation, change the value of the PWR. (Reference the Key Management)

Volume

- Decide to apply volume policy of 'Start Volume', 'Maximum Volume' and 'Minimum Volume' as On(Work) or Off(Do Not Work).
- $(0 \leq \text{Min} \leq \text{Start} \leq \text{Max} \leq 100)$

Start Volume

- This entry sets the start volume level when is power on.
 - The level is specified as a number between minimum volume to maximum value. ($\text{Min} \leq \text{Start} \leq \text{Max}$)
 - The default setting is 'Off' (disabled).
 - When enabled, if the value is lower then the minimum specified in the minimum volume entry, the minimum volume entry must be used.
 - When enabled, if the value is larger then the maximum specified in the maximum volume entry, the maximum volume value must be used.
 - Access to a volume in 'On Timer' must be fixed to start volume when 'Hotel Mode Operation' (On) and 'Start Volume' (Off, 0 ~ 100) were set simultaneously.

Maximum Volume

- This entry sets the maximum volume level the set. The level is specified as a number between 'Minimum Volume' to 100. ($\text{Min} \leq \text{Max} \leq 100$).
 - If the command volume up to higher than maximum volume' is received, that should be ignored.
 - The default value is 100.

Minimum Volume

- This entry sets the minimum volume level the set will produce.
 - The level is specified as a number between 0 to 'Maximum Volume'. ($0 \leq \text{Min} \leq \text{Max}$)
 - If the command volume down to lower than minimum volume is received, that should be ignored.
 - The default value is 0.

Key Management

- Manage key usability of Local(Front) Key and Remote Control. When selected to 'On', following 'IR Operation' and 'Local Key Operation' will be worked by below.

IR Operation

- Decide whether work the LG remote control or not.
 - When 'IR Operation' is set to 'Normal', all remote keys are available.
 - 'Use PWR Only' makes block all remote keys except power key.
 - When 'IR Operation' is set to 'Block All', all normal remote keys don't work.

Local Key Operation

- Decide to operate 'Local/Front Key' working behavior by setting 'Local Key Operation' as 'Normal', 'Use PWR Only' and 'Block All'.
 - When 'Local Key Operation' is set to 'Normal', all local keys are available.
 - 'Use PWR Only' makes block all local keys except power key.
 - When 'Local Key Operation' is set to 'Block All', all local keys don't work.

Limited Mode

- Configure TV function's limitation. When selected to 'On', following sub-menus will be worked by below.

Setup Menu

- Permit to tune and manage programmes as 'On'(permitted) or 'Off'(not permitted).

Programme Change

- Decide to change channel or not by setting 'Program Change' as 'On'(Change Possible) or 'Off'(Change Impossible) when present source is TV.
 - When 'Programme Change' is set to Off (Change Impossible)
 - » Program Key, Numeral Key, List Key, Q.View Key don't work and entering 'Channel Menu' in the Main Menu OSD is impossible.
 - » 'Programme' item in 'On Time' menu will be fixed.
 - » Entering 'Programmes' in the 'Main Menu' OSD is impossible regardless of 'Programmes' item.
 - When 'Program Change' is set to On(Change Possible), 'Program Key', 'Numeric Key', 'List Key', 'Q.View' Key, 'TV/RAD Key' does work and entering 'Channel Menu' in the Main Menu OSD is possible.

Menu Display

- Function to decide whether work with menu (including relevant menus too) of control key (On – Enter possible) or not (Off – Enter Impossible).
 - Although select Off(Enter impossible), the action that press a Menu button for 5 seconds to enter 'Installation Menu' is available.
 - When select On(Enter possible), Menu works.

OSD Display

- Decide to display OSD or not by setting 'OSD Display' as On(Display) or Off(Do not Display).
 - When 'OSD Display' is set to 'Off'(Do not Display), all OSD is not displayed except some exception.
 - Although select 'Off' (Do not Display), the action that press a Menu button for 5 seconds to enter 'Installation Menu' and entering service menu are available. (In-Start, Power-Only, Adjust, Installation Menu . . .)

System Provider Mode

- 'System Provider Mode' allows access to the menu system from the front panel or remote control but access is controlled as follows:
 - When value is 'On', Accessible Items on the menu system, others are not permissible.
 - » Input select screens
 - » Sleep timer
 - » Aspect Ratio
 - » Subtitles
 - » Programmes (Except for Programme Tuning & Settings and Programme Manager)
 - » 'Safety' / 'Photo & Video' / 'Music' / 'Network' / 'Bluetooth' Menu
 - If the channel map is empty, 'Auto-tuning' guide dialog should be blocked by pressing 'List', 'CH+', 'CH-' keys.

DTV Programme Update

- It is a mode to set whether to update dtv Programme automatically or not.
- When DTV Programme Update is set to 'Auto', the function to update TV's programme map according to dtv programme's stream information.
- DTV Programme Update is set to 'Manual', the function to keep TV's programme map even though dtv programme's information is changed.

Power On Default

- Set the channel to display and Volume Level, etc. when turn on power in AC Power On or Stand-by status.
- Set to On(Work) or Off(Do Not Work).
- When 'Power On Default' is set to Off, it is not applied to the subordinate Input, Programme, A/V Setting, Aspect Ratio menu.
- When Power On Default is set to On, it can set by entering the subordinate menu.

Input

- Set whether it is turned on by the set input source or by the last stored input source.

Programme

- Select start channel number if Input source's value is TV.

A/V Setting

- If 'A/V Setting' is changed from 'Off' to 'On', A/V parameters that are set before entering 'Installation Menu' are applied whenever turn on power.

Aspect Ratio

- The aspect ratio determines the default aspect ratio that the set returns to on power up.

Aux Source Setting

- Set to On(Work) or Off(Do Not Work).
- The Auxiliary (Input) Source Setting feature will enable or disable for each external input.
- User cannot disable the current input's 'Aux Source Setting'.

Power Management

- The Power Management feature will turn off the television receiver if no input control command is received from either the Local or IR Key within a selected hours.
 - Activity on either of these inputs shall reset the 'Power Management' timer and prevent interruption of TV viewing.
 - This entry can be set to a value which is corresponding to the desired hours (1Hour to 7Hours).
 - Default value is 'Off(disabled)'.

Radio Video Blank

- Set to On(Work) or Off(Do Not Work).
- Programme that is set to 'Radio Programme' and only has Sound should decide whether to set 'Video Blank' or not.
- When 'Radio Video Blank' is set to On(Work), 'Video Blank' works only in case of Radio Programme.
- Although set to On(Work), if there are Video signal, 'Video Blank' wouldn't work. In consideration of case that display background screen and broadcast only with Radio, 'Video Blank' works only when there is no Video signal.
- When set to Off(Do Not Work), 'Video Blank' do not work although it is the Radio Programme.
- This operates only in the Analog TV Mode.

Factory Reset

- Change all settings to their default values.

NETWORK



1 Use the ∇ $\blacktriangle$ button to select the **NETWORK**.

MAC Address

- Displays the MAC address (not customizable).

Network Setting

One-click network connection

- Connects easily to a wired/wireless network.
- Network Connection to connect to an available network automatically. Follow the prompts on the TV.

To connect to a network through Set Expert

- For use in special circumstances such as in offices (in cases where a static IP is used).
- 1 Select a network connection, either Wired or Wireless.
 - 2 When connecting via Wired, Configures the IP settings of the TV set. You can set the IP address, subnet mask, gateway and DNS server.
 - 3 When connecting via Wi-Fi, use the one of the following network connection methods.

AP List	Connects to the network selected from the AP List.
Enter the SSID	Connects to the wireless AP typed in.
WPS-PBC	Connects easily when the button of a wireless AP supporting PBC is pressed.
WPS-PIN	Connects easily when the PIN of the wireless AP that you wish to connect to is entered in to the AP website.
Advanced Wi-Fi Settings	After connects Wi-Fi, you can set the IP address, subnet mask, gateway and DNS server.

LG Connect

- Sets the LG Connect function to on or off.
 - You can connect TV via LG TV Plus app in smart device.
 - Default setting is on.

IP Stream Control

Audio PTS Offset

- Controlling output stream timing of audio.
- You can set the '-500~500' (Change step is -10 or +10)

Video PTS Offset

- Controlling output stream timing of video.
- You can set the '-500~500' (Change step is -10 or +10)


IGMP

- You can set IGMP version. (2 or 3)

Wake On LAN

- Sets the Wake On LAN function to Enable or Disable.
 - The Wake On LAN feature enables the TV to receive software updates and/or be powered ON upon receipt of Wake Up Frame packets and/or Magic Packet data via the wired LAN. To facilitate use of this feature, note that the appropriate wired connection must be made.

PRO:CENTRIC

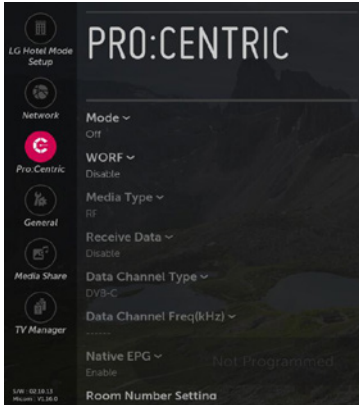

- 1 Use the $\vee$ $\wedge$ button to select the **PRO:CENTRIC**.

Mode

- Sets whether or not enable Pro:Centric and the service method.
- You can set to Off, Configuration Only, Flash(Except for Iran), GEM or HTML using the $\vee$ $\wedge$ button. The default value is Off; when it is set to Off, all the sub items are disabled. (Except for WORF, Room Number Setting)
- In case of LV641*, launching Pro:Centric may require a minute or more depending on the operating environment.

WORF

- Press the '**OK**' button in 'WORF Setting' item to go to the 'WORF' menu.
- When WORF is set to 'Enable', Hour and Minute items are enabled and then the WORF function is enabled.
- When WORF is set to 'Disable', 'Hour' and 'Minute' items are disabled and then the WORF function is disabled.

Room Number Setting

- Press the '**OK**' button in Room Number Setting item to go to the 'Change a room number' menu.
- You can set or change Label and Room Number using the Room Number Setting.

Media Type

(Depending on model)

- Sets the medium type to RF or IP.
The default value is RF.

RF

- Data Channel Freq(KHz)
 - Sets the RF frequency at which the Pro:Centric data is received.
- Data Channel Type
 - Sets the RF modulation type to DVB-T or DVB-C.
The default value is DVB-C.

IP

- P:C IP Setting
 - Server Address is set to IP Address

(IP Address)	Set IPv4 address in 4 octets.
(Port Number)	Sets the actual port or number where the Pro:Centric server is running.

- Server Address is set to Domain Name

(Domain Name)	Sets the domain name where the Pro:Centric server is running.
(Port Number)	Sets the actual port or number where the Pro:Centric server is running.

- The default value of IP a/b/c/d is 0 and the range is between 0 and 255. The default value of Port is 0 and the range is between 0 and 65535.


Receive Data

- Sets Enable or Disable. When it is set to Disable, all the sub items are disable.

Native EPG

- When Pro:Centric Mode is set to 'Off' or 'Configuration Only', 'Native EPG' is forced to be 'Enable' and unable to change.
- Disable
- Enable
 - You can use the TV Guide Application in Pro:Centric.

GENERAL

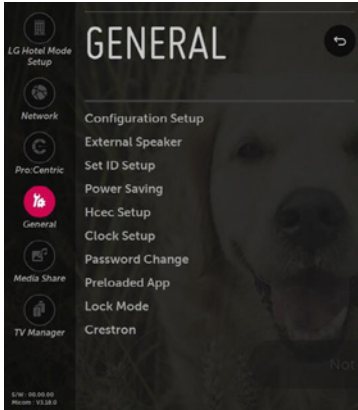

Configuration Setup

Select RCU


- It is a mode to set whether to use Select RCU or not. When 'Select RCU' is set to 'Enable', You can adjust 'Number of RCU' menu.

Number of RCU


- It is a mode to set Number of RCU.
Number of RCU value range 1~9. (When 'Select RCU' is set to 'Enable')
Number of RCU value range 0. (When 'Select RCU' is set to 'Disable')
- * RCU(Remote Control Unit) : It is special RCU that operates only setted number of RCU in TV.

RS232 DC Power Outlet

- It is a mode to decide whether to output DC or not for power supply to IB Box in Installation Menu. We offer a output terminal in one Pin of RS232C Jack for the use of communication.
 - 5 V DC Power Outlet and 12 V DC Power Outlet must operate mutually exclusively. That is, only one of the two sides must be turned on.
- You can select '**OFF**', '5 V' or '12 V' by pressing $\wedge \vee$ button.
- When select '5 V' the 5 V is forwarded through the port. when select '12 V' the 12 V is forwarded through the port.

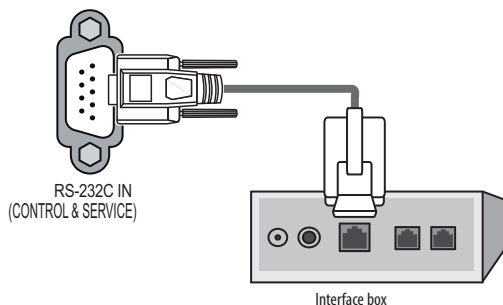

- Type of Connector: D-Sub 9-Pin Male

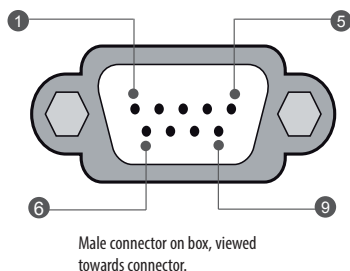

No.	Signal	Signal requirements
1	VCC	
2	RX RS232	Standard RS232 specification
3	TX RS232	Standard RS232 specification
4	IR from TV	
5	GND	Power ground
6, 8	Not connected	
7	2 A	+5VDC 10%, max 100mV ripple
9	1.5 A	+12VDC 10%, max 100mV ripple

One Channel Map

- If 'One Channel Map' is 'Enable', the TV will operate as below.
 - A. When the TV is auto-scanning, it searches both air and cable channels.
 - B. User can assign a channel number him/herself by manual scan.
 - C. In 'Programme Edit' window, all channels are shown in a single list regardless of input source.
 - D. Automatically scanned channels may not have the user-desired channel numbers.
- If user change the 'Enable/Disable' value, an pop-up window will be displayed to warn that all channel information will be deleted. The Default value is 'Enable'.

DTV Programme Update

- It is a mode to set whether to update DTV programme automatically or not.
When DTV Programme Update is set to 'Auto', the function to update TV's programme map according to dtv programme's stream information.
DTV Programme Update is set to 'Manual', the function to keep TV's programme map even though DTV programme's information is changed.

On Timer Operation

- It is a mode to select 'On Timer Operation' working one time or repeatedly.
'Once': 'On Time' in the user menu operates only one time when the 'On Time' menu is set to 'ON'.
'Repeat': 'On Time' operates repeatedly when the 'On Time' menu is set to 'ON'.

Radio Name Display

- Instead of "Audio Only", the name of a radio channel is displayed on the screen when a radio broadcast is playing.
- Set to On(Work) or Off(Do Not Work).
- If the setting is "On", the name of a radio channel is displayed for the radio channel.
- If the setting is "Off", the text "Audio Only" is displayed for the radio channel.

15Min Auto Off

- When '15Min Auto Off' is set to 'Enable', TV will turn off if there is no signal in 15Min.

DVB-C (Depending on model)

- DVB-T/C programmes (channels) are searchable and selectable like following if DVB-C is "Enable".

DVB-C Bandwidth (Depending on model)

- If country is 'Philippines', 'DVB-C Bandwidth' menu will be shown.
- Select the bandwidth of cable tuning.(6Mhz/8Mhz). The default is 6Mhz.

Auto Sensing

- If 'Auto Sensing' is set to 'On', the input is automatically switched when the input signal that you set to "ON" is received.
- If 'Auto Sensing' is set to 'Disable', the input is not switched when the input signal is received.
- * SIMPLINK and Auto Sensing cannot work simultaneously. If SIMPLINK is set to On, Auto Sensing is automatically set to Disable.
- * If the signal is removed while Auto Sensing (automatic input switch) is enabled, the input returns to the previous setting. If the several input are connected by enabling Auto Sensing and the automatic input returns to the previous setting. If the several inputs are connected by enabling Auto Sensing and the automatic input switch is performed several times, the input returns to the previous setting only for the last input and does not repeat the operation for the rest.

Instant On

- Set to 'Instant On Mute Mode' or 'Instant On Reboot mode' to enable the Instant On feature. The Instant ON feature allows the TV to turn ON when AC power is applied, but with video and audio muted (Muted ON). The TV retains its ON status while appearing to be OFF. Pressing the POWER button toggles Off/On the video and audio mutes, so that the TV appears to turn ON instantly.
- * If this item is set to Instant On Mute Mode, the TV will not reboot to check for and download updates at turn OFF. TV seems to be turned off to user(panel is off), but both micom and chipset are on.
- * If this item is set to Instant On Reboot mode, the TV will reboot to check for and download updates from the Pro:Centric server at every turn OFF.
- * If this item is set to Instant On Mute mode or Instant On Reboot mode when 'WORF' is 'Disable', 'WORF' is set to 'Enable' and 'Update Time' is set to auto(random) time. (Depending on model)

Insert Image

- Set to Enable(Work) or Disable(Do Not Work).
- It is a mode to decide whether to display background image when using Bluetooth Sound Sync app or watching Radio channel.
- You can download the background image at TV Manager app.

No Signal Image

- Set to On or Off.
- It is a mode to decide whether to use no signal image when there is no signal.

External Speaker**Volume Control**

- Selects the volume control method of an external speaker.
You can select 'Off', 'Int Variable', 'Fixed', 'Ext Variable' by $\wedge \vee$ pressing button.
Ext Variable uses the External Vol Up/Down Control Line to change the volume up to 1 Watts.
Int variable is linked to the main volume OSD and change the volume 0 - 1 Watts.
Fixed produces a fixed output. The default is Off.

Output

- This item is enabled when Volume Control is set to Fixed. You can choose one of 7 steps.(0.01/0.03/0.05/0.1/0.2/0.5/1 Watts). The Default is 1 Watt.

Set ID Setup

Set ID Lock

- Set the 'Set ID' item in 'GENERAL' Menu whether to activate or not.
- Set to On(Work) or Off(Do Not Work).

Set ID

- Set the 'Set ID' of TV Set with 1~99.

Power Saving

Static Saving

- It is the item for setting the level to reduce the backlight control from the items for saving the consuming power, which is increased or decreased by 10 steps from 0 to 100. 100 makes the consuming power set to the same one from the TV. 0 reduces the consuming power to the minimum. The default value is 100.
- * The value displayed at the OSD is not changed and only the actual setting value is converted to percentage based on the static saving value to set.
- * 0 ~ 30: HIGH, 40 ~ 60: MID, 70 ~ 90: LOW, 100: OFF

Keyless Off Hours

- Automatically TV will be turned off if there is no key input for the preset time period.
- When it is set to 'Enable', User Menu -> Timer -> 'Auto Power Off' is disabled.
- When it is set to 'Enable', User Menu -> Timer -> '2Hour Auto Power Off' is disabled.

HCEC Setup

CEC Mode

- You will have 3 modes to choose [Default], [HCEC] and [TVLink-CEC].
- If [Default] is selected, you can use SIMPLINK which is provided in LG TV. Also you can enable and disable SIMPLINK through SIMPLINK MENU.
- If [HCEC] is selected, you can use TVLink-HCEC Protocol. For more detailed information, please refer to TVLink-HCEC Protocol document)
- If [TVLink-CEC] is selected, TV will not directly work for key input except for power key. And volume related keys will work just in case of Follower volume control mode. (for more detailed information regarding the scenario of volume control, please refer to "TVLink-CEC protocol" document)

IR Decoding

- When 'IR Decoding' is set to 'Enable', the TV decodes and changes it into a CEC Message and sends it to Command via the HDMI CEC Line. The default value is Disable.

Device ID

- Sets the ID of a device(Logical Address) connected to the CEC Line. You can choose between 'All' and 'E'.
- The default value is 'All'.

StandBy

- Set the sending and receiving scenario of OpStandBy(0x0c) command.
- This detailed scenario is described on the table below.

	Send	Receive
Send Only	0	X
Receive Only	X	0
All	0	0
Off	X	X

Forced Initialize

- This setting will be enabled When CEC mode is set as 'TVLink-CEC'
- If 'Enable' is selected, TV will change its input source to HDMI1 by any HDMI-CEC simulation from a device.

HTNG Hotel Mode

- If you use following functions via TVLink-HCEC, HTNG Hotel mode will be set as "Yes" automatically. (*Power On Default, Start Volume, Maximum Volume, Minimum Volume, or Start Volume)
- Even if 'Hotel Mode Operation' is set as No, above settings are still effective.

Clock Setup

Clock Source

- You can select 'Off', 'Pro:Centric', 'TV', 'NTP', 'Admin' by pressing $\vee$ $\wedge$ button.
- NTP : Clock is synchronized using Network Time Protocol. It's only enabled when network cable is connected.
- Admin : It's automatically set to Admin when clock is updated by commercial protocols like TVLink-HCEC, TVLink-Interactive, or HCAP API.
- Off : Clock is synchronized using any available clock source.
- Pro:Centric : Clock is synchronized using Pro:Centric server.
- TV : Clock is synchronized using particular TV program.

- **Input (Depending on model)**
 - You can select 'Input' according to 'Clock Source'.
 - You can select 'RF' or 'IP' when Clock Source is 'Pro:Centric'.
 - You can select TV source when Clock Source is 'TV'.
 - Input is set to 'None', 'HCAP', 'Protocol', 'HTNG' automatically when Clock Source is 'Admin'.
- **Program/Frequency (Depending on model)**
 - Sets the Frequency to get the time information when Clock Source is 'Pro:Centric'.
 - You can select Program when Clock Source is 'TV'
- **Timezone(City) /Timezone(Custom) /Timezone(Offset) (Depending on model)**
 - In the case when there is difference between the time information received from the Teletext and the time of the current area, it can be set up to correct this. The initial value is 0, and it can be changed in the range of -12Hrs ~ +14Hrs. (Timezone(Offset) range is -12Hrs ~ +12Hrs)

Password Change

- To ensure more security, Password can be changed by installers' own design.

- 1 Change password by using virtual keyboard.
- 2 Input the password again for confirmation.


PreLoaded App

- 1 If you want to use a particular app, you can choose from the menu. you can setting each apps activation.
- 2 You can check or uncheck by pressing '**OK**' button.

Lock Mode

- If 'Lock Mode' is 'Yes', the following features will be unavailable.
 - * USB
 - If it is set to 'Enable', USB devices do not work in relative features. (Exclude S/W update).
 - * Factory Reset
 - If it is set to 'Enable', User Menu -> General -> 'Reset to Initial Settings' is disabled.

MEDIA SHARE

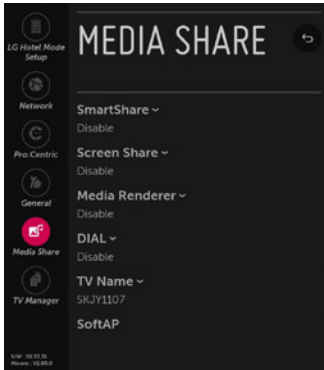

- You can setting Whether to use for “SmartShare”

SmartShare

- Smart Share enables DLNA function. If this value is enabled, TV act as Digital Media Player (DMP) and display Digital Media Service(DMS) contents through Smart Share app.

Screen Share

- Screen Share enables WiFi p2p functions such as Miracast and WiDi. If this value is enabled, Screen Share app is displayed at launcher bar and User can connect to TV by user's Miracast enabled mobile phone or WiDi enabled laptop

Media Renderer

- Media Renderer enables the TV to act as a Media Renderer device to receive content from DLNA Certified devices on the same network.

DIAL

- With this DIAL service, you can launch the target app at Smart Home Launcher bar without select the target app by remote controller. The target app should be already selected at Installer Menu > General > Preloaded App.

TV Name

- When other media device(ex: smart phone, desktop, laptop) searching TV, this string was displayed.

SoftAP

- If you want to use SoftAP menu on **MEDIA SHARE** menu, you must select 'On' in this item.
A SoftAP is a function of TV which is used like Access Point.
- Regardless of the Instant On mode, the SoftAP setting stays unchanged after power off/on. (Depending on model)

Use Default

- If you want to use default password(this password was generated randomly), you must select 'Enable' in this item.

Security Key

- When guests want to use TV's SoftAP function, they need this password. If you want to change this default password, you need to Change 'Use Default' value into 'Disable'.

Wi-Fi Signal Strength

- You can control wireless signal strength on SoftAP mode. This is controlled by 5 step. If you select 'Not Used', wireless signal strength will be set to Max value.

Wi-Fi Channel

- You can control wireless channel on SoftAP mode. This is controlled from 1 to 11 channel. If you select 'Auto', wireless channel of SoftAP will be set to random channel.

TV MANAGER

USB Download Menu

- * **USB Cloning** : An Installer can quickly set up and clone multiple TV sets at a property. These cloned TVs will all have the same Master TV Setup: Public Display Mode Installation Menu settings, User A/V settings and the Channel Map. This newer procedure significantly decreases the installation time that would be necessary if the standard RS-232C method were used instead.

1 Overview USB Cloning Procedure

: Commercial TVs have the capability to support cloning internal TV data and programme information with an external clone device called "USB Cloning", in order to copy TV data accurately and quickly. The clone internal functions use slightly different internal processes for the two types of commercial TVs. However, the UI of cloning feature remains the same in both. Regarding the demands over the current cloning feature for quicker cloning, better portability and etc, we would like to announce the cloning process via USB port, named as USB Cloning. USB cloning process is divided into 2 main processes. One is writing the previously saved TV data into the TV, and one another is reading of current TV data into USB memory card. To avoid any confusion due to the words, it is clearly specified as "Import Clone File" and "Export Clone File" in the whole process.

2 Data To Be Cloned

: The data cloned are the same data cloned by previous USB Cloning. Details are explained in the following:

- TV data includes :
 - A. Installer Menu settings
 - B. Main menu settings (Audio, Picture etc)
- Analog / Digital Channel information includes:
 - A. Channel numbers
 - B. Channel label
 - C. Channel attributes including channel type, skipping status and etc.

3 Input Source


: The user needs a USB memory card with FAT formatted to make successive cloning via USB port.



NOTE

- Currently, support the preceding USB file system for FAT file format only. Other file formats including NTFS is not currently supported. Microsoft Windows officially supports FAT for the USB memory card.
- Only a USB storage device is recognizable.

Ez Download

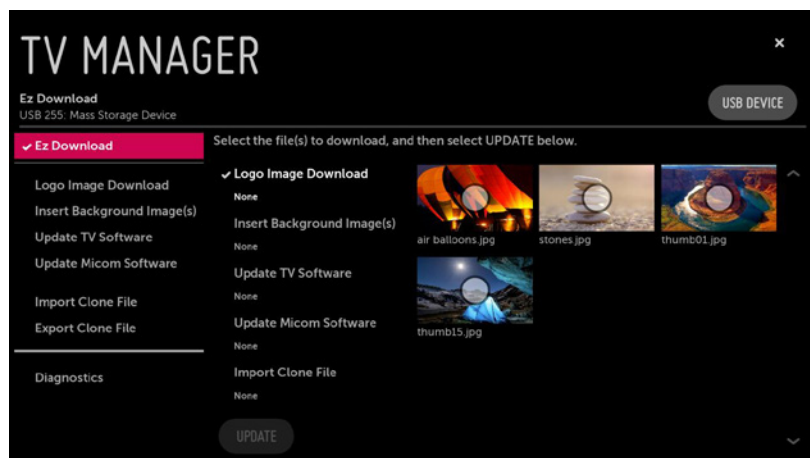


- Ez Download is a function that enables users to download the desired items all at once, such as EPK (software update file), TLL, Logo Image, Background Images, Micom.
- * Images and EPK files should be copied into the folder named LG_DTV on the USB.
- TLL files should be copied to the root folder of the USB.
- If you press 'EZ Download' menu, EZ Download is launched.
- If .DZM file exist file will be selected previously download file.

**NOTE**

- If the DZM file is still in the USB after the download is complete:
An Ez Download pop-up window will appear and list the file types, such as TLL, Logo Image, Background Images, EPK or Micom with the previously downloaded lists checked automatically.
- If the global TLL and model TLL files exist in the same USB root directory, then only the global TLL will be shown.
If the global TLL has been deleted, then the model TLL will be shown.

Logo Image Download

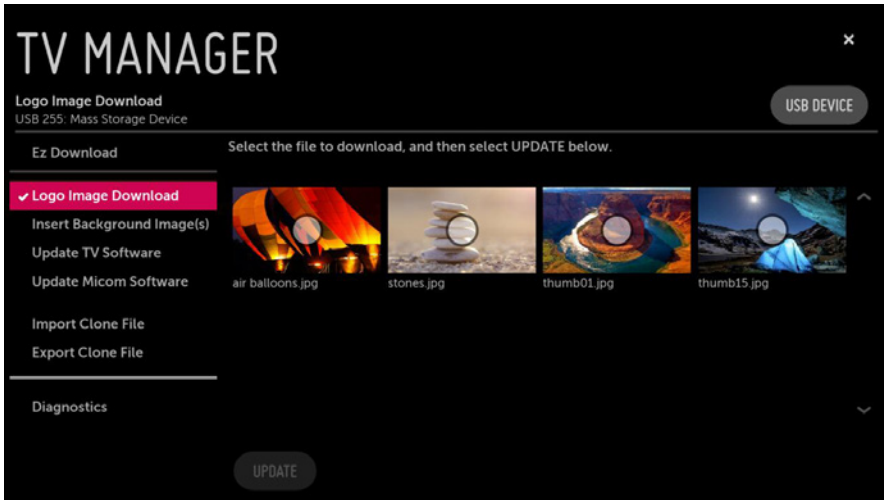


- If there are more than two USB Memory Device, It is possible to select the USB.
- The download sequence is Logo Image Download -> Select Image -> UPDATE.

**NOTE**

- Splash Image update function supports only JPEG,BMP format file of less than 8 MB filesize.
- We recommend you that splash image resolution match the TV's panel resolution.
- Max resolution of splash image : Full HD → 1920 x 1080, HD → 1360 x 768.
- Min resolution of splash image : Full HD → 64 x 64, HD → 64 x 64.
- TV keep splash image until you change a new splash image.
- The target file is located in \WLG_DTV folder.

Insert Background Image(s)

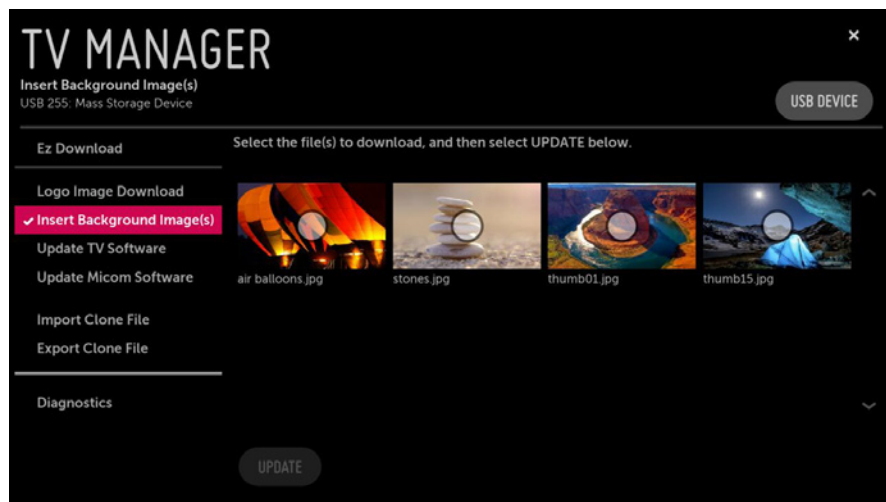


- This feature downloads Insert Background Image(s) from USB.
- Images should be copied to Ψ LG_DTV of the USB.
- The download sequence is Insert Background Image(s) -> Select Images -> UPDATE.

NOTE


- Maximum number of images that you can update at once are 12.
- If you updates the images, original images will be removed.
- Insert Background Image update function supports only JPEG,BMP format file of less than 10 MB filesize.
- Max resolution of splash image : Full HD $\rightarrow$ 1920 x 1080, HD $\rightarrow$ 1360 x 768.
- Min resolution of splash image : Full HD $\rightarrow$ 64 x 64, HD $\rightarrow$ 64 x 64.
- If you want to use inserted image in Bluetooth Sound Sync app and Live TV's Radio Programme, please change the value of 'Insert Image' property to enable ('Insert Image' in Installation > General > Configuration Setup).

Update TV Software

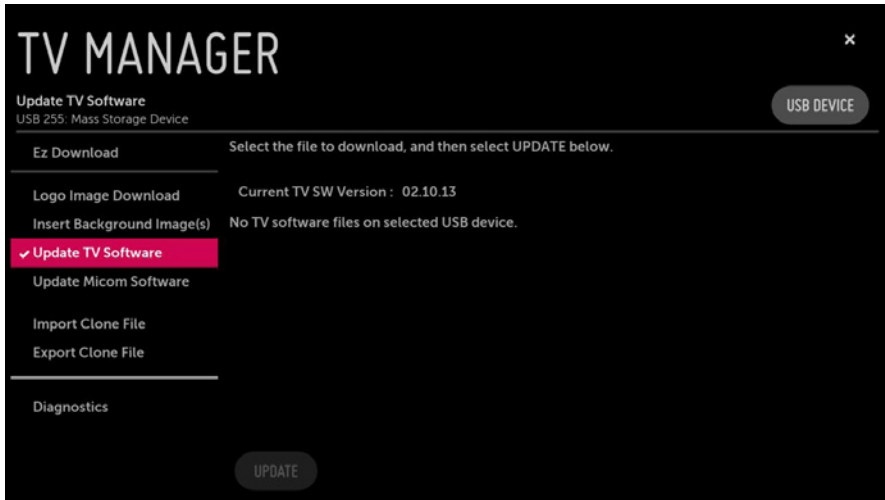


- This feature update EPK of TV through the hex file in USB. The target file is located in \LG_DTV folder.
- If there are more than two USB memory Device, It is possible to select the USB.
- The download sequence is Update TV Software -> Select file(EPK) -> UPDATE.

Update Micom Software

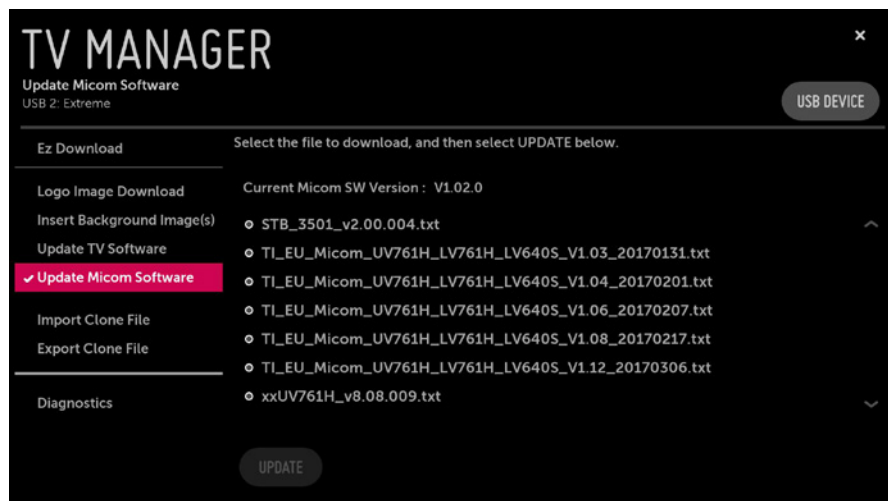


- This feature update MICOM of TV through the txt file in USB. The target file is located in \LG_DTV folder
- If there are more than two USB memory Device, It is possible to select the USB.
- The download sequence is Update Micom Software -> Select file(Micom) -> UPDATE.

Import Clone File

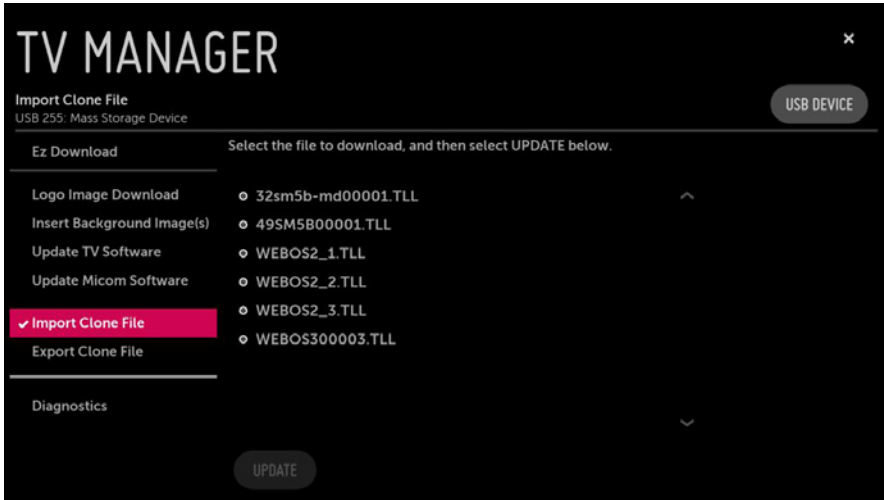

- Once the internal TV data and its channel map information is written to the USB memory card, the user can start "Import Clone File" process with the data file generated and stored in USB memory card. As previously warned in "Export Clone File" process, the user should not turn TV off nor unplug the USB memory card. The following images might be slightly different than the OSD image.

Export Clone File

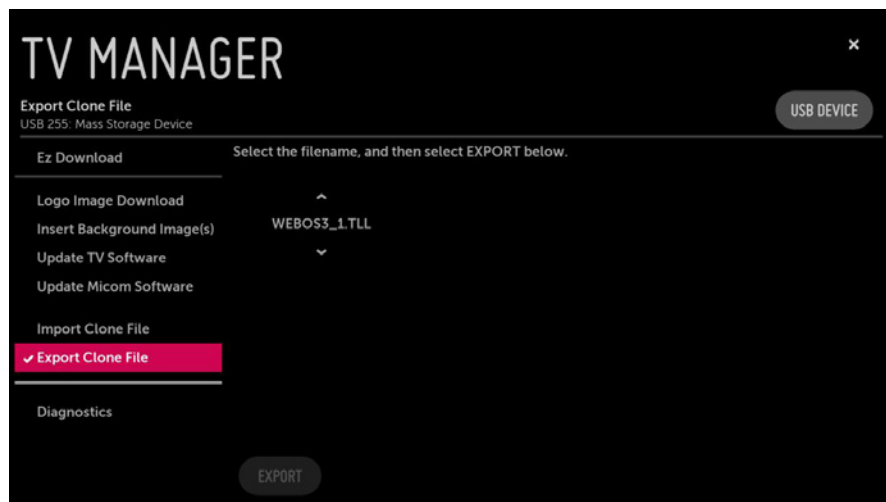

- "Export Clone File" must be done first before "Import Clone File" process, as it generate the file to be used in "Export Clone File". While writing is in process, the user must not turn TV off nor unplug the USB memory card. The following images might be slightly different than the OSD image.

KEY CODES

Hongkong only

- This feature is not available for all models.

Code (Hexa)	Function	Note	Code (Hexa)	Function	Note
00	頻道P [△] 翻頁	R/C Button	44	OK 確認	R/C Button
01	頻道P [▽] 翻頁	R/C Button	53	所有頻道LIST	R/C Button
02	音量	R/C Button	5B	離開 EXIT	R/C Button
03	音量	R/C Button	61	(Blue)	R/C Button
06	(Arrow Key / Right Key)	R/C Button	63	(Yellow)	R/C Button
07	(Arrow Key / Left Key)	R/C Button	71	(Green)	R/C Button
7C	主頁SMART	R/C Button	72	(Red)	R/C Button
08	(POWER)	R/C Button	8E	(Forward)	R/C Button
09	靜音 MUTE	R/C Button	8F	(Rewind)	R/C Button
0B	輸入 INPUT	R/C Button	AA	節目資訊 INFO	R/C Button
0C	門戶PORTAL	R/C Button	AB	節目導覽GUIDE	R/C Button
10 - 19	* Number Key 0 - 9	R/C Button	AF	LIVE ZOOM	R/C Button
1A	頻道返回Q.VIEW	R/C Button	B0	(Play)	R/C Button
28	返 回BACK	R/C Button	B1	(Stop / File List)	R/C Button
39	字 幕SUBTITLE	R/C Button	B5	最近紀錄 APP	R/C Button
40	(Arrow Key / Cursor Up)	R/C Button	BA	(Freeze / Slow Play / Pause)	R/C Button
41	(Arrow Key / Cursor Down)	R/C Button	F0	TV / RAD	R/C Button
43	選 單SETTINGS	R/C Button	95	節能模式 ENERGY SAVING	R/C Button

China only

- This feature is not available for all models.

Code (Hexa)	Function	Note	Code (Hexa)	Function	Note
00	节目 P  翻页 ↑	R/C Button	71	●● (GREEN)	R/C Button
01	节目 P  翻页 ↓	R/C Button	72	● (RED)	R/C Button
02	音量  +	R/C Button	95	节能模式  ENERGY SAVING	R/C Button
03	音量  -	R/C Button	0B	输入  INPUT	R/C Button
06	➤ (Arrow Key / Right Key)	R/C Button	0C	PORTAL 门户	R/C Button
07	➤ (Arrow Key / Left Key)	R/C Button	1A	回看 Q.VIEW	R/C Button
08	 (POWER)	R/C Button	5B	退出  EXIT	R/C Button
09	静音  MUTE	R/C Button	7C	主页 SMART	R/C Button
10 - 19	* Number Key 0 - 9	R/C Button	8E	▶▶ (Forward)	R/C Button
28	 BACK (返回)	R/C Button	8F	◀◀ (Rewind)	R/C Button
39	字幕 SUBTITLE	R/C Button	AA	INFO 节目信息 	R/C Button
40	^ (Arrow Key / Cursor Up)	R/C Button	AB	GUIDE 节目指南	R/C Button
41	v (Arrow Key / Cursor Down)	R/C Button	AF	实时缩放 LIVE ZOOM	R/C Button
43	菜单 SETTINGS	R/C Button	B0	▶ (Play)	R/C Button
44	OK 确定 	R/C Button	B1	■ (Stop / File List)	R/C Button
53	节目列表 LIST	R/C Button	BA	(Freeze / Slow Play / Pause)	R/C Button
61	●● (BLUE)	R/C Button	B5	最近列表  APP	R/C Button
63	●● (YELLOW)	R/C Button	F0	 TV/RAD	R/C Button

Taiwan only

- This feature is not available for all models.

Code (Hexa)	Function	Note	Code (Hexa)	Function	Note
08	⏻ (Power)	R/C Button	40	⤴	R/C Button
95	節能模式 ENERGY SAVING	R/C Button	07	⤵	R/C Button
B5	最近紀錄 APP	R/C Button	44	OK 確認	R/C Button
0B	輸入 INPUT	R/C Button	06	⤶	R/C Button
F0	/ TV/RAD	R/C Button	41	⤷	R/C Button
10 - 19	Number Key 0 - 9	R/C Button	43	選單 SETTINGS	R/C Button
53	所有頻道 LIST	R/C Button	28	↶ 返回 BACK	R/C Button
1A	頻道返回 Q.VIEW	R/C Button	5B	離開 EXIT	R/C Button
02	音量 VOL +	R/C Button	72	(Red)	R/C Button
7C	主頁 SMART	R/C Button	71	(Green)	R/C Button
00	頻道 CH ⤴ 翻頁 ⤵	R/C Button	63	(Yellow)	R/C Button
AF	LIVE ZOOM	R/C Button	61	(Blue)	R/C Button
03	音量 VOL -	R/C Button	B1	■	R/C Button
09	靜音 MUTE	R/C Button	B0	▶	R/C Button
01	頻道 CH ⤷ 翻頁 ⤶	R/C Button	BA	⏸	R/C Button
AB	GUIDE 節目導覽	R/C Button	8F	◀◀	R/C Button
0C	PORTAL 門戶	R/C Button	8E	▶▶	R/C Button
AA	INFO 節目資訊 ①	R/C Button	39	字幕 SUBTITLE	R/C Button

EXTERNAL CONTROL DEVICE SETUP

- Image shown may differ from your TV.


Connect the USB to Serial converter/RS-232C input jack to an external control device (such as a computer or an A/V control system) to control the product's functions externally.

Note: The type of control port on the TV can be different between model series.

- * Please be advised that not all models support this type of connectivity.
- * Cable is not provided.

USB to Serial converter with USB Cable

USB Type

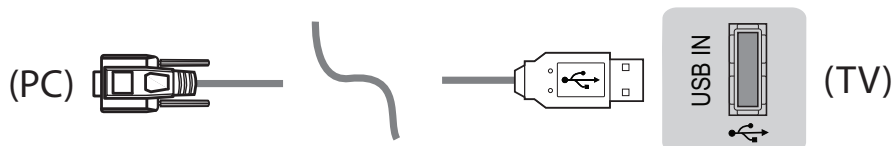


- LGTV supports PL2303 chip-based (Vendor ID : 0x0557, Product ID : 0x2008) USB to serial converter which is not made nor provided by LG.
- It can be purchased from computer stores that carry accessories for IT support professionals.

RS-232C With RS-232C Cable

DE9 (D-Sub 9pin) Type


- You need to purchase the RS-232C (DE9, D-Sub 9pin female-to-female type) to RS-232C cable required for the connection between the PC and the TV, which is specified in the manual.

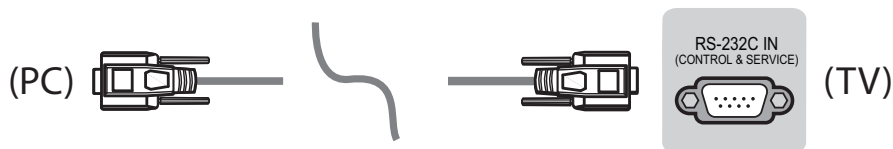


- * The connection interface may differ from your TV.

Phone jack Type

- You need to purchase the phone-jack to RS-232C cable required for the connection between the PC and the TV, which is specified in the manual.
- * For other models, connect to the USB port.
- * The connection interface may differ from your TV.

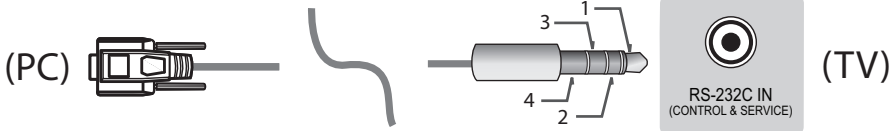

Type of connector : D-Sub 9-Pin male

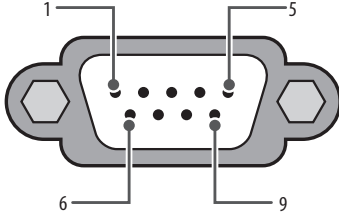

RS-232C
(Serial port)

RS-232C Configurations

7-Wire Configurations
(Standard RS-232C cable)

	PC	TV	
RXD	2	3	TXD
TXD	3	2	RXD
GND	5	5	GND
DTR	4	6	DTR
DSR	6	4	DSR
RTS	7	8	RTS
CTS	8	7	CTS
	D-Sub 9	D-Sub 9	

3-Wire Configurations
(Not standard)

	PC	TV	
RXD	2	3	TXD
TXD	3	2	RXD
GND	5	5	GND
DTR	4	6	DTR
DSR	6	4	DSR
RTS	7	8	RTS
CTS	8	7	CTS
	D-Sub 9	D-Sub 9	

Set ID

For Set ID number, see "Real Data Mapping".

- Press 選單 **SETTINGS** to access the main menus.
- Press the Navigation buttons to scroll to **General** and press **OK** 確認.
- Press the Navigation buttons to scroll to **Set ID** and press **OK** 確認.
- Scroll left or right to select a set ID number and press **OK** 確認. The adjustment range is 1-99.
- When you are finished, press 離開 **EXIT**.

* (Depending on model)

IR OUT Using Guide

Suitable / Not Recommend remote-controller data format

Item	Formats
Suitable data format	NEC, RCS, Toshiba
Not recommend data format	Continuous data format (short burst/gap signal)

IR Receiver specifications

Carrier frequency	38 KHz
Peak Wavelength	940 nm
Minimum burst length	16 cycles (420 μ s)
Minimum gap time is required of	21 cycles (550 μ s)
Data word length	Max. 100 ms
Minimum gap time in the data stream is needed of	30 ms

Parameter	Symbol	Conditions	Min	Typ	Max	Unit
High Level Out Pulse Width	T_{WH}	Burst Wave = 600 μ s Period = 1.2 ms	400	-	800	μ s
Low Level Out Pulse Width	T_{WL}		400	-	800	μ s



CAUTION

- If not use the remote-controller with data formats recommended, IR output signals will be suppressed automatically by IR receiver.
- In this case, LG does not guarantee IR working function.
- To make sure of this matter, here are two methods as below.
 - Use the remote-controller with suitable data formats.
 - Use the IR dongle receiver of the set-top box.

Communication Parameters

- Baud rate : 9600 bps (UART)
- Data length : 8 bits
- Parity : None
- Stop bit : 1 bit
- Communication code : ASCII code
- Use a crossed (reverse) cable.

Command reference list

(Depending on model)

	COMMAND1	COMMAND2	DATA (Hexadecimal)		COMMAND1	COMMAND2	DATA (Hexadecimal)
01. Power*	k	a	00 to 01	12. Remote Control Lock Mode	k	m	00 to 01
02. Aspect Ratio	k	c	(page 51)	13. Balance	k	t	00 to 64
03. Screen Mute	k	d	(page 51)	14. Color (Colour) Temperature	x	u	00 to 64
04. Volume Mute	k	e	00 to 01	15. Equalizer	j	v	(page 53)
05. Volume Control	k	f	00 to 64	16. Energy Saving	j	q	00 to 05
06. Contrast	k	g	00 to 64	17. Tune Command	m	a	(page 53)
07. Brightness	k	h	00 to 64	18. Channel (Programme) Add/Del(Skip)	m	b	00 to 01
08. Color/Colour	k	i	00 to 64	19. Key	m	c	Key Codes
09. Tint	k	j	00 to 64	20. Control Backlight	m	g	00 to 64
10. Sharpness	k	k	00 to 32	21. Input select (Main)	x	b	(page 56)
11. OSD Select	k	l	00 to 01	22. Auto Configure	j	u	(page 56)

* Note: During playing or recording media, all commands except Power (ka) and Key (mc) are not executed and treated as NG.

With RS232C cable, TV can communicate ka command in power-on or power-off status. but with USB-to-Serial converter cable, the command works only if TV is on.

Transmission / Receiving Protocol

Transmission

[Command1][Command2][][Set ID][][Data][Cr]

[Command 1] First command to control the TV. (j, k, m or x)

[Command 2] Second command to control the TV.

[Set ID] You can adjust the [Set ID] to choose desired monitor ID number in option menu.
Adjustment range in TV is 1 to 99. If [Set ID] value is selected to '0', every connected set can be controlled.
* [Set ID] is indicated as decimal (1 to 99) on menu and as Hexadecimal (0 x 00 to 0 x 63) on transmission/receiving protocol.

[DATA] To transmit command data (hexadecimal). Transmit 'FF' data to read status of command.

[Cr] Carriage Return - ASCII code '0 x 0D'

[] Space - ASCII code '0 x 20'

OK Acknowledgement

[Command2][][Set ID][][OK][Data][x]

* The set transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

Error Acknowledgement

[Command2][][Set ID][][NG][Data][x]

* The set transmits ACK (acknowledgement) based on this format when receiving abnormal data from non-viable functions or communication errors.

Data 00: Illegal Code

Real data mapping (Hexadecimal : Decimal)

* When you enter the [data] in hexadecimal, refer to following conversion table.

* Channel Tune (ma) Command uses two-byte hexadecimal value([data]) to select channel number.

00 : Step 0	32 : Step 50 (Set ID 50)	FE : Step 254
01 : Step 1 (Set ID 1)	33 : Step 51 (Set ID 51)	FF : Step 255
...	...	...
0A : Step 10 (Set ID 10)	63 : Step 99 (Set ID 99)	01 00 : Step 256
...	...	...
0F : Step 15 (Set ID 15)	C7 : Step 199	27 0E : Step 9998
10 : Step 16 (Set ID 16)	C8 : Step 200	27 0F : Step 9999
...	...	...

* Commands may work differently depending on model and signal.

01 Power (Command: k a)

- To control Power *On or Off of the set.

Transmission

[k][a][][Set ID][][Data][Cr]

Data 00 : Power Off 01 : *Power On

Ack

[a][][Set ID][][OK/NG][Data][x]

- ▶ To Show TV is Power On or *Off

Transmission

[k][a][][Set ID][][FF][Cr]

Ack

[a][][Set ID][][OK][Data][x]

* Similarly, if other functions transmit 'FF' data based on this format, Acknowledgement feedback presents status about each function.

02 Aspect Ratio (Command: k c)
(Main Picture Size)

- To adjust the screen format. (Main picture format)
You can also adjust the screen format using the Aspect Ratio in the PICTURE menu.

Transmission

[k][c][][Set ID][][Data][Cr]

Data 01 : Normal screen (4:3)
(Just Scan Off)
02 : Wide screen (16:9)
(Just Scan Off)
09 : Just Scan
06 : Original (Just
Scan Off)

Ack

[c][][Set ID][][OK/NG][Data][x]

* Using the PC input, you select either 16:9 or 4:3 screen aspect ratio.

03 Screen Mute (Command: k d)

- ▶ To select screen mute on/off.

Transmission

[k][d][][Set ID][][Data][Cr]

Data	00 : Screen mute off (Picture on) Video mute off
	01 : Screen mute on (Picture off)
	10 : Video mute on

Ack

[d][][Set ID][][OK/NG][Data][x]

* In case of video mute on only, TV will display On Screen Display (OSD). But, in case of Screen mute on, TV will not display OSD.

04 Volume Mute (Command: k e)

- To control volume mute on/off.
You can also adjust mute using the MUTE button on remote control.

Transmission

[k][e][][Set ID][][Data][Cr]

Data	00 : Volume mute on (Volume off)
	01 : Volume mute off (Volume on)

Ack

[e][][Set ID][][OK/NG][Data][x]

05 Volume Control (Command: k f)

- To adjust volume.
You can also adjust volume with the volume buttons on remote control.

Transmission

[k][f][][Set ID][][Data][Cr]

Data Min : 00 to Max : 64

Ack

[f][][Set ID][][OK/NG][Data][x]

06 Contrast (Command: k g)

- ▶ To adjust screen contrast.
You can also adjust contrast in the PICTURE menu.

Transmission

`[k][g][ ][Set ID][ ][Data][Cr]`

Data Min : 00 to Max : 64

Ack

`[g][ ][Set ID][ ][OK/NG][Data][x]`

07 Brightness (Command: k h)

- ▶ To adjust screen brightness.
You can also adjust brightness in the PICTURE menu.

Transmission

`[k][h][ ][Set ID][ ][Data][Cr]`

Data Min : 00 to Max : 64

Ack

`[h][ ][Set ID][ ][OK/NG][Data][x]`

08 Color/Colour (Command: k i)

- ▶ To adjust the screen Color (Colour).
You can also adjust colour in the PICTURE menu.

Transmission

`[k][i][ ][Set ID][ ][Data][Cr]`

Data Min : 00 to Max : 64

Ack

`[i][ ][Set ID][ ][OK/NG][Data][x]`

09 Tint (Command: k j)

- ▶ To adjust the screen tint.
You can also adjust tint in the PICTURE menu.

Transmission

`[k][j][ ][Set ID][ ][Data][Cr]`

Data Red : 00 to Green : 64

Ack

`[j][ ][Set ID][ ][OK/NG][Data][x]`

10 Sharpness (Command: k k)

- ▶ To adjust the screen sharpness.
You can also adjust sharpness in the PICTURE menu.

Transmission

`[k][k][ ][Set ID][ ][Data][Cr]`

Data Min : 00 to Max : 32

Ack

`[k][ ][Set ID][ ][OK/NG][Data][x]`

11 OSD Select (Command: k l)

- ▶ To select OSD (On Screen Display) on/off when controlling remotely.

Transmission

`[k][l][ ][Set ID][ ][Data][Cr]`

Data 00 : OSD off

01 : OSD on

Ack

`[l][ ][Set ID][ ][OK/NG][Data][x]`

12 Remote control lock mode (Command: k m)

- ▶ To lock the front panel controls on the monitor and remote control.

Transmission

`[k][m][ ][Set ID][ ][Data][Cr]`

Data 00 : Lock off

01 : Lock on

Ack

`[m][ ][Set ID][ ][OK/NG][Data][x]`

- * If you are not using the remote control, use this mode.
When main power is off and on (plug-off and plug-in, after 20 - 30 seconds), external control lock is released.
- * In the standby mode (DC off by off timer or ka, mc command), and if key lock is on, TV will not turn on by power on key of IR & Local Key.

13 Balance (Command: k t)

- To adjust balance.

You can also adjust balance in the AUDIO menu.

Transmission

[k][t][][Set ID][][Data][Cr]

Data Min : 00 to Max : 64

Ack

[t][][Set ID][][OK/NG][Data][x]

14 Color (Colour) Temperature (Command: x u)

- To adjust colour temperature. You can also adjust Color (Colour) Temperature in the PICTURE menu.

Transmission

[x][u][][Set ID][][Data][Cr]

Data Min : 00 to Max : 64

Ack


[u][][Set ID][][OK/NG][Data][x]

15 Equalizer (Command : j v)

- Adjust EQ of the set.

Transmission

[j][v][][Set ID][][Data][Cr]

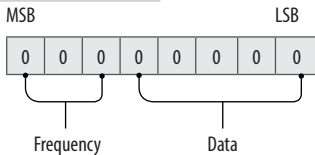

7	6	5	Fre- quency	4	3	2	1	0	Step
0	0	0	1st Band	0	0	0	0	0	0 (decimal)
0	0	1	2nd Band	0	0	0	0	1	1 (decimal)
0	1	0	3rd Band	...	...	...	...	...	...
0	1	1	4th Band	1	0	0	1	1	19 (decimal)
1	0	0	5th Band	1	0	1	0	1	20 (decimal)

Ack

[v][][Set ID][][OK/NG][Data][x]

- * It depends on model, and can adjust when sound mode is EQ adjustable value.

16 Energy Saving (Command: j q)

- To reduce the power consumption of the TV. You can also adjust Energy Saving in PICTURE menu.

Transmission

[j][q][][Set ID][][Data][Cr]

Data

- 00 : Off
- 01 : Minimum
- 02 : Medium
- 03 : Maximum
- 04 : Auto (For LCD TV / LED TV) /
Intelligent sensor (For PDP TV)
- 05 : Screen off

- * (Depending upon model)

Ack

[q][][Set ID][][OK/NG][Data][x]

17 Tune Command (Command: m a)

- * This command may work differently depending on model and signal.

- For Europe, Mid-East, Colombia, Asia except South Korea and Japan Model

- Select channel to following physical number.

Transmission

[m][a][][Set ID][][Data 00][][Data 01][][Data 02][Cr]

- * Analog Antenna/Cable

[Data 00][Data 01] Channel Data

Data 00 : High byte channel data

Data 01 : Low byte channel data

- 00 00 ~ 00 C7 (Decimal : 0 ~ 199)

Data 02 : Input Source (Analog)

- 00 : Antenna TV (ATV)

- 80 : Cable TV (CATV)

- * Digital Antenna/Cable/Satellite

[Data 00][Data 01]: Channel Data

Data 00 : High Channel data

Data 01 : Low Channel data

- 00 00 ~ 27 0F (Decimal: 0 ~ 9999)

Data 02 : Input Source (Digital)

- 10 : Antenna TV (DTV)
- 20 : Antenna Radio (Radio)
- 40 : Satellite TV (SDTV)
- 50 : Satellite Radio (S-Radio)
- 90 : Cable TV (CADTV)
- a0 : Cable Radio (CA-Radio)

* Tune Command Examples:

1. Tune to the Analog antenna (PAL) Channel 10.
Set ID = All = 00
Data 00 & 01 = Channel Data is 10 = 00 0a
Data 02 = Analog Antenna TV = 00
Result = ma 00 00 0a 00
2. Tune to the digital antenna (DVB-T) Channel 01.
Set ID = All = 00
Data 00 & 01 = Channel Data is 1 = 00 01
Data 02 = Digital Antenna TV = 10
Result = ma 00 00 01 10
3. Tune to the satellite (DVB-S) Channel 1000.
Set ID = All = 00
Data 00 & 01 = Channel Data is 1000 = 03 E8
Data 02 = Digital Satellite TV = 40
Result = ma 00 03 E8 40

Ack

```
[a][ ][Set ID][ ][OK][Data 00][Data 01]
[Data 02][x][a][ ][Set ID][ ][NG][Data 00][x]
```

- For South Korea, North/Latin America except Colombia Model

- ▶ To tune channel to following physical/major/minor number.

Transmission

```
[m][a][ ][0][ ][Data00][ ][Data01]
[ ][Data02][ ][Data03][ ][Data04][ ][Data05][Cr]
```

Digital channels have a Physical, Major, and Minor channel number. The Physical number is the actual digital channel number, the Major is the number that the channel should be mapped to, and the Minor is the sub-channel. Since the ATSC tuner automatically maps the channel from the Major / Minor number, the Physical number is not required when sending a command in Digital.

* Analog Antenna/Cable

Data 00 : Physical Channel Number

- Antenna (ATV) : 02~45 (Decimal: 2 ~ 69)
- Cable (CATV) : 01, 0E~7D (Decimal : 1, 14~125)

[Data 01 ~ 04]: Major/Minor Channel Number

Data 01 and 02: xx (Don't care)

Data 03 and 04: xx (Don't care)

Data 05: Input Source (Analog)

- 00 : Antenna TV (ATV)
- 01 : Cable TV (CATV)

* Digital Antenna/Cable

Data 00 : xx (Don't care)

[Data 01][Data 02]: Major Channel Number

Data 01 : High byte Channel Data

Data 02 : Low byte Channel Data

- 00 01 ~ 27 0F (Decimal: 1 ~ 9999)

[Data 03][Data 04]: Minor Channel Number

Data 03 : High byte Channel Data

Data 04 : Low byte Channel Data

Data 05 : Input Source (Digital)

- 02 : Antenna TV (DTV) – Use Physical Channel Number
- 06 : Cable TV (CADTV) – Use Physical Channel Number
- 22 : Antenna TV (DTV) – Don't Use Physical Channel Number
- 26 : Cable TV (CADTV) - Don't Use Physical Channel Number
- 46 : Cable TV (CADTV) – Use Physical/Major Channel Number Only (One Part Channel)
- 66 : Cable TV (CADTV) – Use Major Channel Number Only (One Part Channel)

Two bytes are available for each major and minor channel data, but usually the low byte is used alone (high byte is 0).

* Tune Command Examples:

1. Tune to the Analog cable (NTSC) channel 35.
Set ID = All = 00
Data 00 = Channel Data is 35 = 23
Data 01 & 02 = No Major = 00 00
Data 03 & 04 = No Minor = 00 00
Data 05 = Analog Cable TV = 01
Total = ma 00 23 00 00 00 01
2. Tune to the digital antenna (ATSC) channel 30-3.
Set ID = All = 00
Data 00 = Don't know Physical = 00
Data 01 & 02 = Major is 30 = 00 1E
Data 03 & 04 = Minor is 3 = 00 03
Data 05 = Digital Antenna TV = 22
Total = ma 00 00 00 1E 00 03 22

Ack

```
[a][ ][Set ID][ ][OK][Data 00][Data 01]
[Data 02][Data 03][Data 04][Data 05]
[x][a][ ][Set ID][ ][NG][Data 00][x]
```

• For Japan Model

- ▶ To tune channel to following physical/major/minor number.

Transmission

```
[m][a][ ][0][ ][Data00][ ][Data01]
[ ][Data02][ ][Data03][ ][Data04][ ][Data05][Cr]
```

* Digital Antenna/Satellite

Data 00: xx (Don't care)

[Data 01][Data 02]: Major Channel Number

Data 01: High byte Channel Data

Data 02: Low byte Channel Data

- 00 01 ~ 27 0F (Decimal: 1 ~ 9999)

[Data 03][Data 04]: Minor/Branch Channel Number
(Don't care in Satellite)

Data 03: High byte Channel Data

Data 04: Low byte Channel Data

Data 05 : Input Source (Digital/Satellite for Japan)

- 02 : Antenna TV (DTV)

- 07 : BS (Broadcasting Satellite)

- 08 : CS1 (Communication Satellite 1)

- 09 : CS2 (Communication Satellite 2)

* Tune Command Examples:

1. Tune to the digital antenna (ISDB-T) channel 17-1.

Set ID = All = 00

Data 00 = Don't know Physical = 00

Data 01 & 02 = Major is 17 = 00 11

Data 03 & 04 = Minor/Branch is 1 = 00 01

Data 05 = Digital Antenna TV = 02

Total = ma 00 00 00 11 00 01 02

2. Tune to the BS (ISDB-BS) channel 30.

Set ID = All = 00

Data 00 = Don't know Physical = 00

Data 01 & 02 = Major is 30 = 00 1E

Data 03 & 04 = Don't Care = 00 00

Data 05 = Digital BS TV = 07

Total = ma 00 00 00 1E 00 00 07

* This feature is varied based on the model.

Ack

```
[a][ ][Set ID][ ][OK][Data 00][Data 01]
[Data 02][Data 03][Data 04][Data 05]
[x][a][ ][Set ID][ ][NG][Data 00][x]
```

18 Channel (Programme) Add/Del(Skip) (Command: m b)

- ▶ To skip current channel(programme) for next time.

Transmission

```
[m][b][ ][Set ID][ ][Data][Cr]
```

Data 00 : Del(ATSC,ISDB)/
Skip(DVB)

01 : Add

Ack

```
[b][ ][Set ID][ ][OK/NG][Data][x]
```

* Set the saved channel status to del(ATSC, ISDB)/
skip(DVB) or add.

19 Key (Command: m c)

- ▶ To send IR remote key code.

Transmission

```
[m][c][ ][Set ID][ ][Data][Cr]
```

Data Key code - page 43.

Ack

```
[c][ ][Set ID][ ][OK/NG][Data][x]
```

20 Control Backlight (Command: m g)

* For LCD TV / LED TV

- ▶ To control the backlight.

Transmission

```
[m][g][ ][Set ID][ ][Data][Cr]
```

Data Min : 00 to Max : 64

Ack

```
[g][ ][Set ID][ ][OK/NG][Data][x]
```

21 Input select (Command: x b) (Main Picture Input)

- To select input source for main picture.

Transmission

[x][b][][Set ID][][Data][Cr]

Data

00 : DTV	01 : CADTV
02 : Satellite DTV	10 : ATV
ISDB-BS (Japan)	
03 : ISDB-CS1	
(Japan)	
04 : ISDB-CS2	
(Japan)	
11 : CATV	
20 : AV or AV1	21 : AV2
40 : Component1	41 : Component2
60 : RGB	
90 : HDMI1	91 : HDMI2
92 : HDMI3	93 : HDMI4

Ack

[b][][Set ID][][OK/NG][Data][x]

* This function depends on model and signal.

22 Auto Configure (Command: j u) (Depending upon model)

- To adjust picture position and minimize image shaking automatically. It works only in RGB (PC) mode.

Transmission

[j][u][][Set ID][][Data][Cr]

Data 01 : To set

Ack

[u][][Set ID][][OK/NG][Data][x]

