



LG

Life's Good

LED LCD TV OWNER'S MANUAL

42LH90QD
47LH90QD
55LH90QD

42SL90QD
47SL90QD

LCD TV | PLASMA TV OWNER'S MANUAL

32LH70YD
42LH70YD
47LH70YD
32LH35FD
37LH35FD
42LH35FD
42LH50YD
47LH50YD
55LH50YD
32SL80YD
42SL80YD
47SL80YD
55SL80YD

42PQ60D
50PQ60D
50PS80BD
60PS80BD

Please read this manual carefully before operating your set and retain it for future reference.

The model and serial number of the TV is located on the back and one side of the TV.

Record it below should you ever need service.

Model:

Serial:


SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

Read these instructions.
Keep these instructions.
Heed all warnings.
Follow all instructions.



- 1** Do not use this apparatus near water.

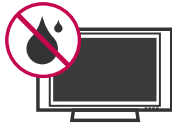

- 2** Clean only with dry cloth.



- 3** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.



- 4** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



- 5** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A

grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



- 6** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



- 7** Only use attachments/accessories specified by the manufacturer.

 


- 8** Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



S3125A

- 9** Unplug this apparatus during lighting storms or when unused for long periods of time.

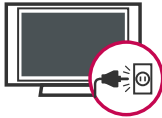

- 10** Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



- 11** Never touch this apparatus or antenna during a thunder or lighting storm.

- 12** When mounting a TV on the wall, make sure not to install the TV by the hanging power and signal cables on the back of the TV.

- 13** Do not allow an impact shock or any objects to fall into the product, and do not drop onto the screen with something.

- 14** CAUTION concerning the Power Cord:
It is recommend that appliances be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.
Do not connect too many appliances to the

same AC power outlet as this could result in fire or electric shock.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

Do not make the TV with the power cord plugged in. Do not use a damaged or loose power cord. Be sure do grasp the plug when unplugging the power cord. Do not pull on the power cord to unplug the TV.



- 15** WARNING - To reduce the risk of fire or electrical shock, do not expose this product to rain, moisture or other liquids. Do not touch the TV with wet hands. Do not install this product near flammable objects such as gasoline or candles or expose the TV to direct air conditioning.



SAFETY INSTRUCTIONS

 
- 16** Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g. on shelves above the unit).



17 GROUNDING

Ensure that you connect the earth ground wire to prevent possible electric shock (i.e. a TV with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet). If grounding methods are not possible, have a qualified electrician install a separate circuit breaker.

Do not try to ground the unit by connecting it to telephone wires, lightning rods, or gas pipes.

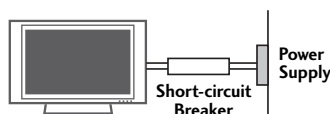

18 DISCONNECTING DEVICE FROM MAINS

Mains plug is the disconnecting device. The plug must remain readily operable.

- 19** As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if you turn off this unit by SWITCH.

20 Cleaning

When cleaning, unplug the power cord and scrub gently with a soft cloth to prevent scratching. Do not spray water or other liquids directly on the TV as electric shock may occur. Do not clean with chemicals such as alcohol, thinners or benzene.

21 Moving


Make sure the product is turned off, unplugged and all cables have been removed. It may take 2 or more people to carry larger TVs. Do not press against or put stress on the front panel of the TV.

22 Ventilation

Install your TV where there is proper ventilation. Do not install in a confined space such as a bookcase. Do not cover the product with cloth or other materials (e.g.) plastic while plugged in. Do not install in excessively dusty places.

- 23** If you smell smoke or other odors coming from the TV or hear strange sounds, unplug the power cord contact an authorized service center.

- 24** Do not press strongly upon the panel with hand or sharp object such as nail, pencil or pen, or make a scratch on it.

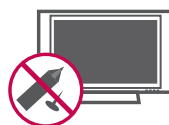

- 25** Keep the product away from direct sunlight.

26 For LCD TV

If the TV feels cold to the touch, there may be a small “flicker” when it is turned on. This is normal, there is nothing wrong with TV.

Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However, they have no adverse effect on the monitor’s performance.

Avoid touching the LCD screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effects on the screen.

ON DISPOSAL

(Only Hg lamp used LCD TV)

The fluorescent lamp used in this product contains a small amount of mercury. Do not dispose of this product with general household waste. Disposal of this product must be carried out in accordance to the regulations of your local authority.

CONTENTS

SAFETY INSTRUCTIONS	2
----------------------------------	---

FEATURE OF THIS TV	8
---------------------------------	---

PREPARATION

Accessories	9
Front Panel Information	10
Back Panel Information	16
Stand Instruction	19
VESA Wall Mounting	27
Cable Management	28
Attaching the TV to a Desk	32
Desktop Pedestal Installation	33
Swivel Stand	33
Securing the TV to the wall to prevent falling when the TV is used on a stand	34
Antenna or Cable Connection	35

EXTERNAL EQUIPMENT SETUP

HD Receiver Setup	36
DVD Setup	39
VCR Setup	41
Other A/V Source Setup	42
PC Setup	43
USB Connection	49
Audio Out Connection	49

WATCHING TV / CHANNEL CONTROL

Remote Control Functions	50
Turning On the TV	56
Channel Selection	56
Volume Adjustment	56
Initial Setting	57
On-Screen Menus Selection	58
Quick Menu	60
Channel Setup	
- Auto Scan (Auto Tuning)	61
- Add / Delete Channel (Manual Tuning)	62
- Channel Editing	63
Channel List	64

Favorite Channel Setup	65
Favorite Channel List	65
Brief Information	66
Scan Option	67
System Color	68
Input List	69
Input Label	70
AV Mode	71
Simple Manual	71
SIMPLINK	72
EPG	74

BLUETOOTH

Bluetooth	77
Setting the Bluetooth	78
Setting TV Pin	79
Connecting the Bluetooth Headset	80
Managing Registered Bluetooth Device	82
My Bluetooth Information	83
Viewing the Photos with Bluetooth Device	84
Listening the Musics with Bluetooth Device	85

TIME MACHINE

Precautions when using the USB Device	86
Time Machine (Pause & Replay of Live TV)	87
Recording	91
Schedule	95
Recorded TV	97

MULTIMEDIA

Entry Modes	100
Photo List	101
Music List	105
Movie List	108
DivX Registration Code	113
Deactivation	114

PICTURE CONTROL

Picture Size (Aspect Ratio) Control	115
Picture Wizard	118
Preset Picture Settings(Picture Mode)	120
Manual Picture Adjustment - User Mode	121
Picture Improvement Technology	122
Expert Picture Control	123
 Energy Saving	126
Picture Reset	127
Image Sticking Minimization(ISM) Method	128
Power Indicator	129
LED Local Dimming	129
Demo Mode	130

SOUND & LANGUAGE CONTROL

Auto Volume Leveler (Auto Volume)	131
Clear Voice II	132
Preset Sound Settings (Sound Mode)	133
Sound Setting Adjustment - User Mode	134
Balance	135
TV Speakers On/Off Setup	136
Digital Audio Out	137
Audio Reset	138
Stereo/SAP Broadcast Setup	139
Audio Language	140
On-Screen Menus Language Selection	141
Caption Mode	
- Analog Broadcasting System Captions	142
- Digital Broadcasting System Captions	143

TIME SETTING

Clock Setting	
- Auto Clock Setup	144
- Manual Clock Setup	145
Auto On/Off Time Setting	146
Sleep Timer Setting	147

PARENTAL CONTROL / RATINGS

Set Password & Lock System	148
Channel Blocking	151
Rating(Movie Rating)	152
External Input Blocking	153
Key lock	154

APPENDIX

Troubleshooting	155
Maintenance	156
Product Specifications	157
Programming the Remote Control	159
IR Codes	162
External Control Through RS-232C	164
Open Source License	172

FEATURE OF THIS TV

- This feature is not available for all models.



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



Automatically enhances and amplifies the sound of human voice frequency range to help keep dialogue audible when background noise swells.



SRS is a trademark of SRS Labs, Inc. TruSurround XT technology is incorporated under license from SRS Labs, Inc.



LG TV include a unique invisible speaker system, tuned by renowned audio expert, Mr. Mark Levinson. Speakers are embedded in strategic spots behind the front cabinet and use minute vibrations to turn the entire front bezel into the speaker system. The result is a clean, polished look, and enhanced audio by increasing the "sweet spot", giving a wider and richer sound field.



High-definition television. High-resolution digital television broadcast and playback system composed of roughly a million or more pixels, 16:9 aspect-ratio screens. A subset of digital television, HDTV formats include 1080i and 720p resolutions.



Displays HDTV programs in full 1920 x 1080p resolution for a more detailed picture. (This feature is not available for all models.)



The AV Mode optimizes the picture into Cinema, Sports, and game Mode according to the video and audio content. The viewer has the ability to quickly choose the correct mode for the picture they are viewing.



THX Cinema mode is recommended for watching movies. Designed for use in a dark room. (This feature is not available for all models.)



Listen to TV with wireless headset, or enjoy viewing your mobile phone photos on your TV. (This feature is not available for all models.)



"DivX Certified to play DivX video up to HD 1080p, including premium content"



Advance 120Hz panel provides clearer, smoother images, even during fast action scenes creating a more stable structure for a crisper picture.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.






TruMotion 240Hz displays 240 scenes per second by combining advanced 120Hz technology with scanning backlight. This technology is verified from Intertek & TÜV Rheinland.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.



IMPORTANT INFORMATION TO PREVENT "IMAGE BURN / BURN-IN" ON YOUR TV SCREEN

- When a fixed image (e.g. logos, screen menus, video game, and computer display) is displayed on the TV for an extended period, it can become permanently imprinted on the screen. This phenomenon is known as "image burn" or "burn-in." Image burn is not covered under the manufacturer's warranty.
- In order to prevent image burn, avoid displaying a fixed image on your TV screen for a prolonged period (2 or more hours for LCD, 1 or more hours for Plasma).
- Image burn can also occur on the letterboxed areas of your TV if you use the 4:3 aspect ratio setting for an extended period.

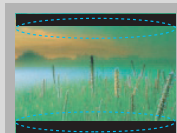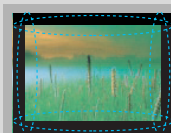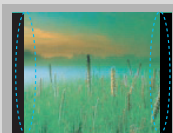


PREPARATION

ACCESSORIES


Ensure that the following accessories are included with your TV. If an accessory is missing, please contact the dealer where you purchased the TV.

The accessories included may differ from the images below.

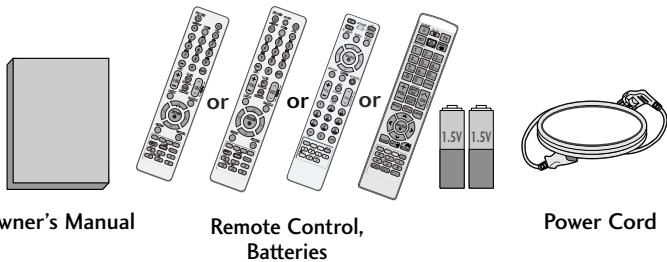

Not included with all models

 - * Wipe spots on the exterior only with the polishing cloth.
- * Do not wipe roughly when removing stain. Excessive pressure may cause scratch or discoloration.



Polishing Cloth

LCD TV models

For 32/42/47LH70**

 


USB Extension Cable

* Make sure to use the provided USB extension cable, which is specially designed for a slim fit.



Cable Management Clip
(Refer to p.29)




Protective Bracket and Bolt for Power Cord
(Refer to P.28)

(For 42/47LH70**)




Stand Rear Cover
(Refer to p.19, 20)

 (For 32LH70**)



x 7

 (For 42LH70**, 42/47SL90**)



x 3



x 4

(For 47LH70**)

 


x 8


Bolts for stand assembly (Refer to p. 19, p. 25)

(For 42/47LH70**, 32/42/47SL80**, 42/47SL90**)

Use screws 12mm (±0.5) long on the SET assembly side. (sold separately)



12mm

 


12mm

(For 32/42/47/55SL80**, 42/47SL90**)



Cable Holder

 (Except 42/47SL90**)



Protection Cover

(Except 55LH50**, 55LH90**, 32/42/47LH70**)



x 4

(For 32/42/47SL80**)



x 8

Bolts for stand assembly
(Refer to P.21, P.23, P.24)



Cable Management Clip
(Refer to P.29, P.30)

(For 32/42/47/55SL80**, 42/47SL90**)

(Except 42/47LH70**, 47/55LH50**, 47/55LH90**)



 
Screw for stand fixing
(Refer to P.32)

PLASMA TV models




x 2

Cable Holder



Protection Cover
(Refer to P.26)

 (Except 60PS80**)



x 4

Bolts for stand assembly
(Refer to P.26)

(For 50/60PS80**)




Cable management clip
(Refer to P.31)

PREPARATION

FRONT PANEL INFORMATION

■ Image shown may differ from your TV.



LCD TV Models - 32/42/47LH70**

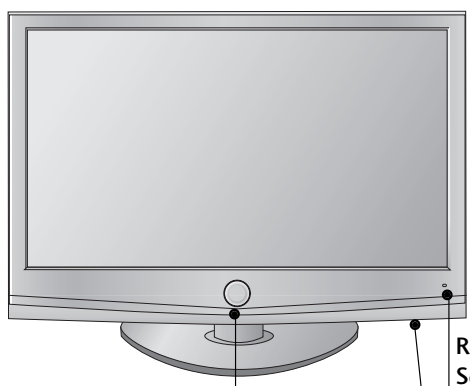

Remote Control
Sensor,
Intelligent Sensor
Adjusts picture
according to the
surrounding condi-
tions




POWER Button (Touch Sensor) ,
Power/Standby Indicator
Illuminates red in standby mode.
Illuminates white when the TV is
switched on.

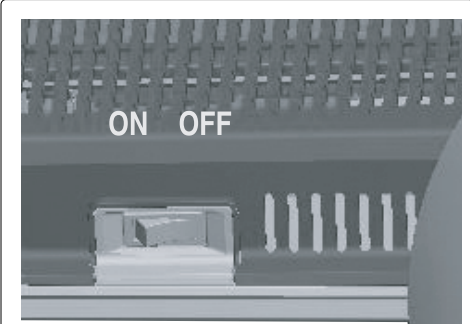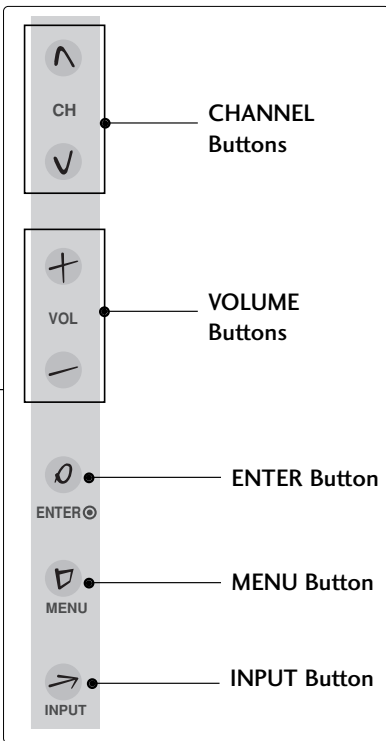


AC power control switch

32/37/42LH35**

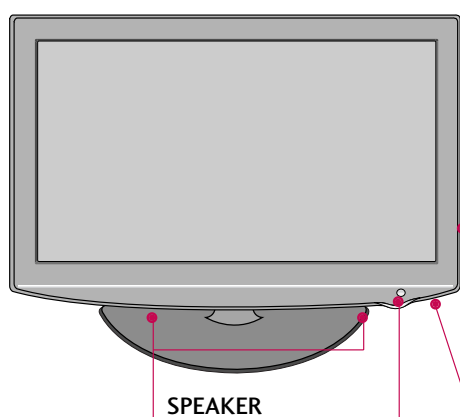


Remote Control Sensor,
Power/Standby Indicator
Illuminates red in standby mode.
Illuminates blue when the TV is switched on.

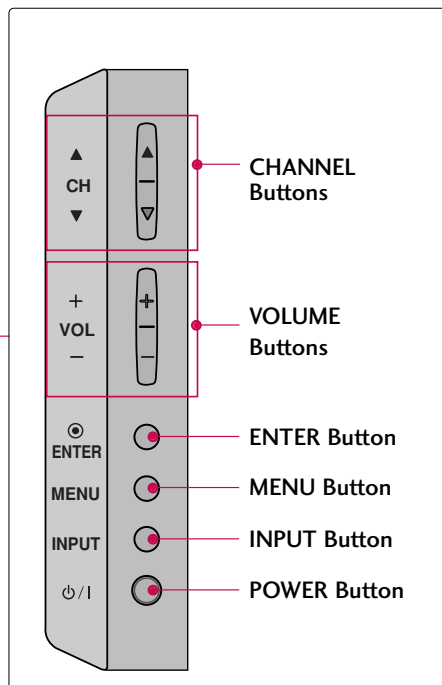


AC power control switch

PREPARATION


42/47/55LH50**

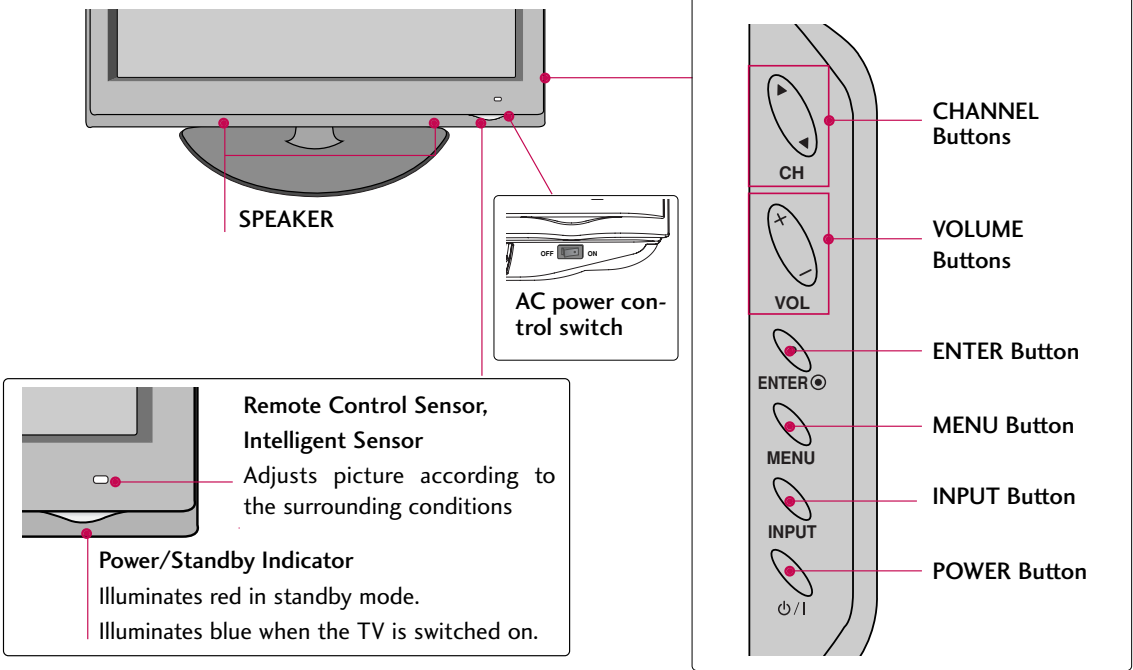


42/47SL90**

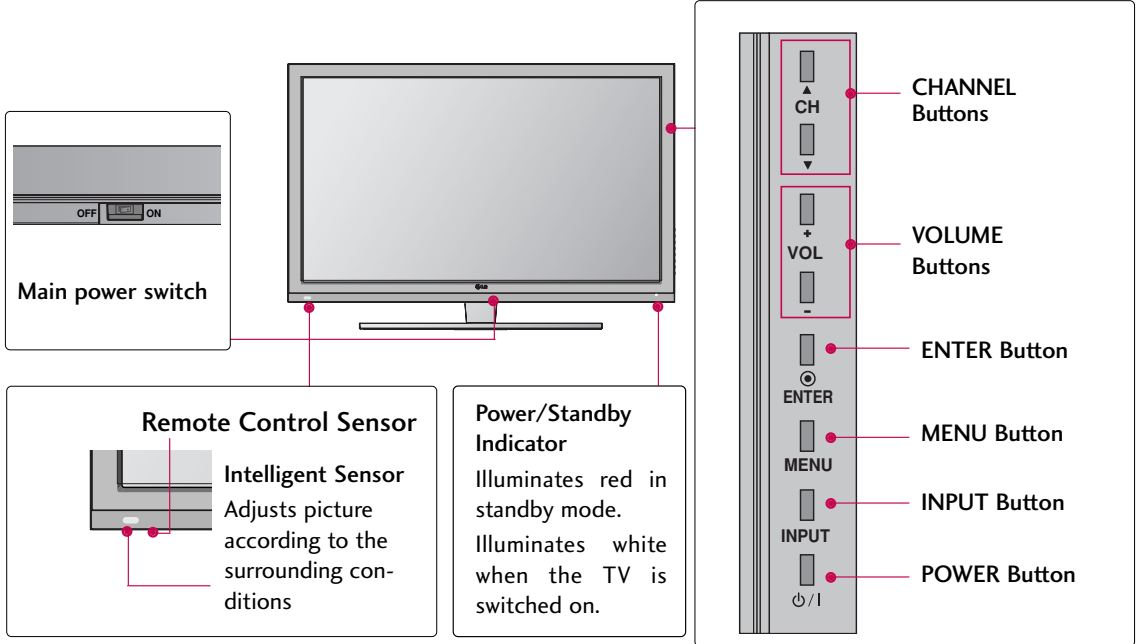

42/47/55LH90**

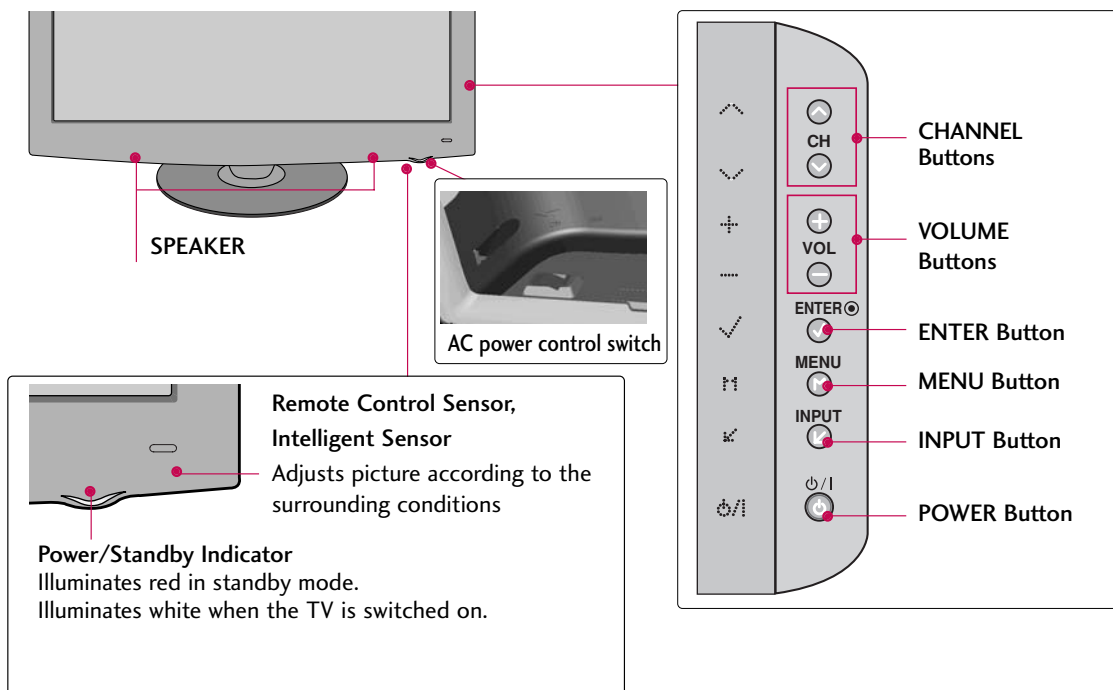

32/42/47/55SL80**

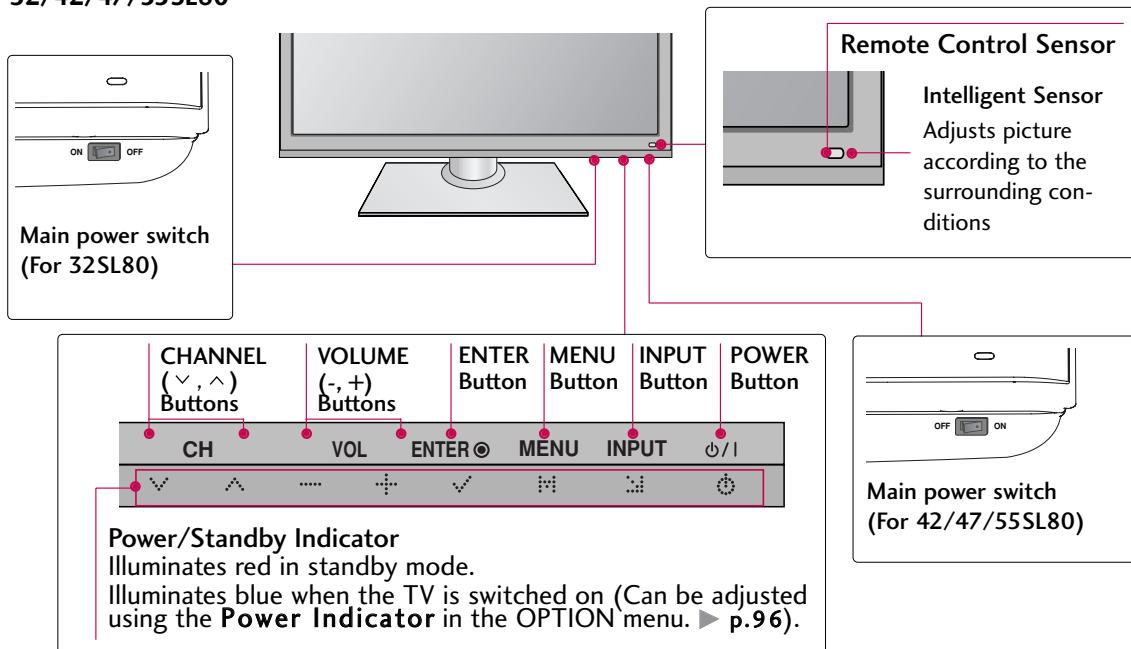


PREPARATION

PLASMA TV Models -


⚠ CAUTION

- ▶ When the TV cannot be turned on with the remote control, press the ϕ/I (power) button on the TV. (The remote control will not work when the ϕ/I (power) button on the TV is switched off.)

42/50PQ60

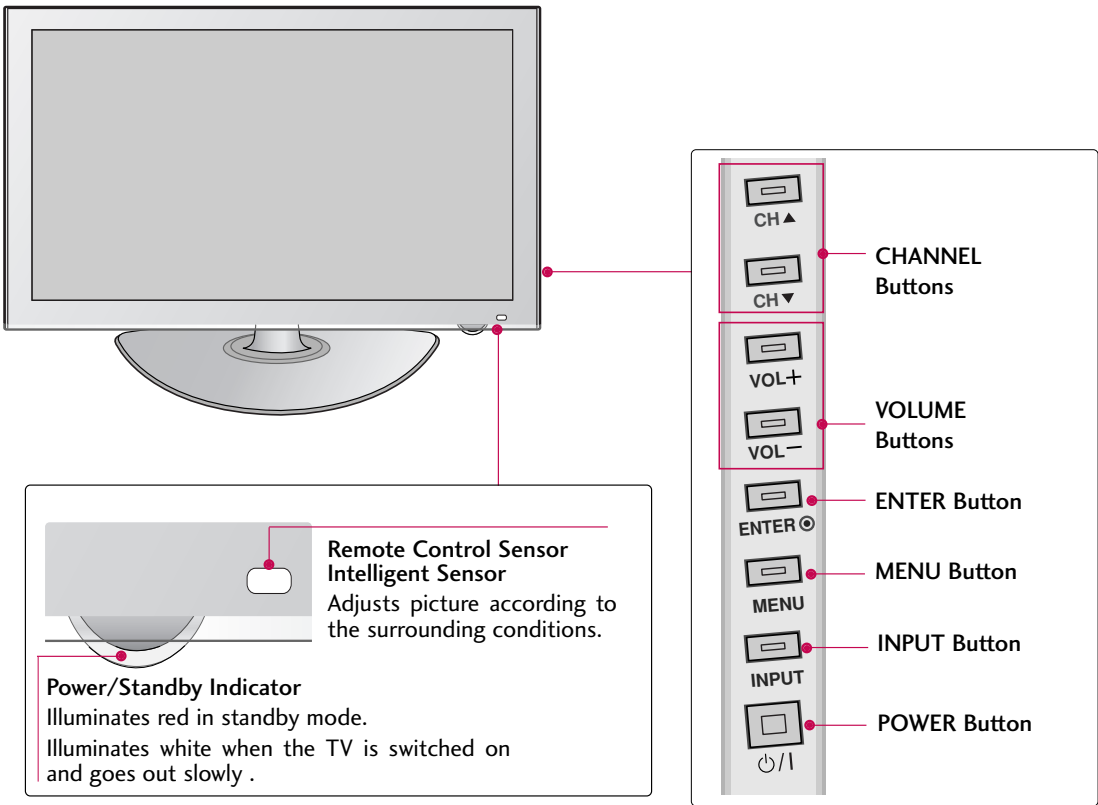

42/50PS80**

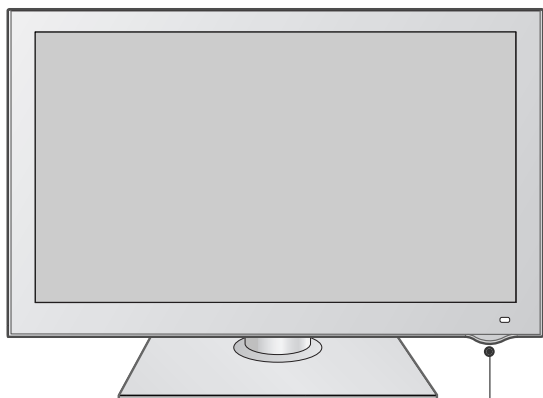


- Do not step on the glass stand or subject it to any impact. It may break, causing possible injury from fragments of glass, or the TV may fall.
- Do not drag the TV. The floor or the product may be damaged.



**Remote Control Sensor
Intelligent Sensor**
Adjusts picture according to
the surrounding conditions.

Power/Standby Indicator
Illuminates red in standby mode.
The LED is off while the TV remains on.


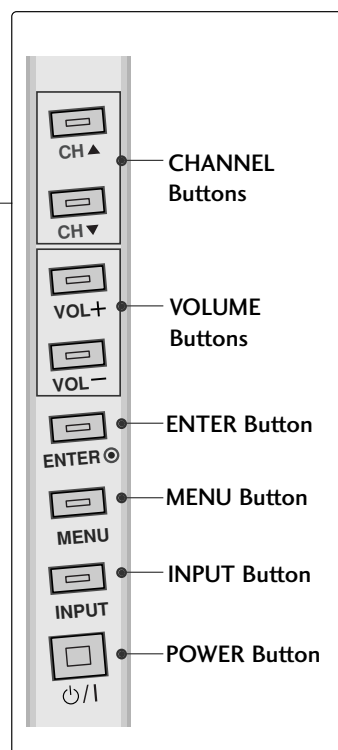


PREPARATION


BACK PANEL INFORMATION

■ Image shown may differ from your TV.


LCD TV Models -
32/42/47LH70**

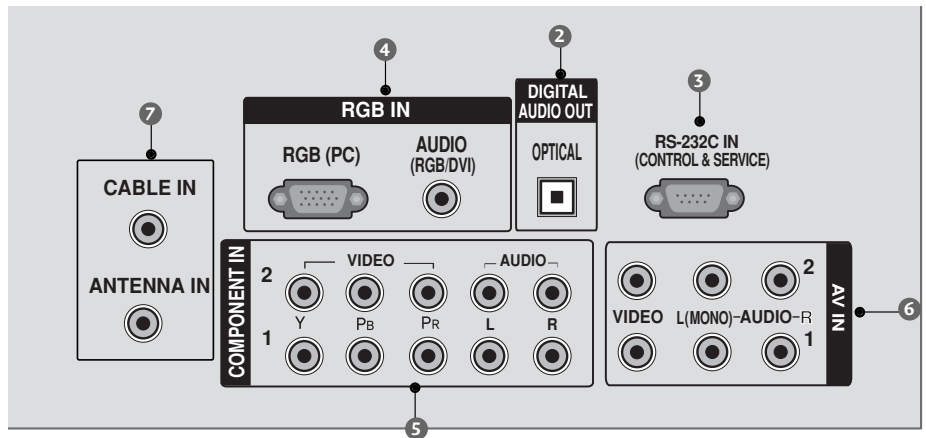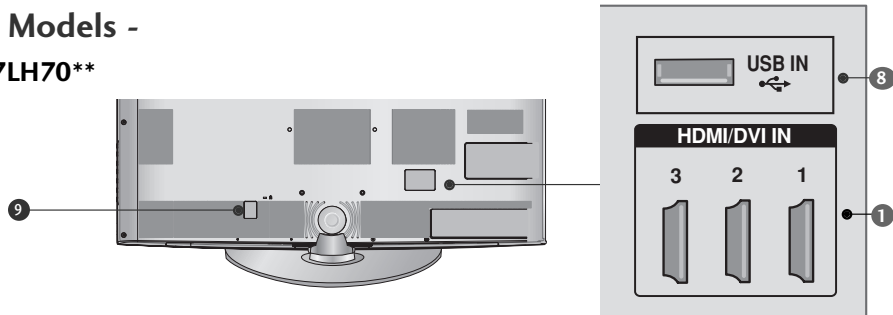



32/37/42/47/55SL80**

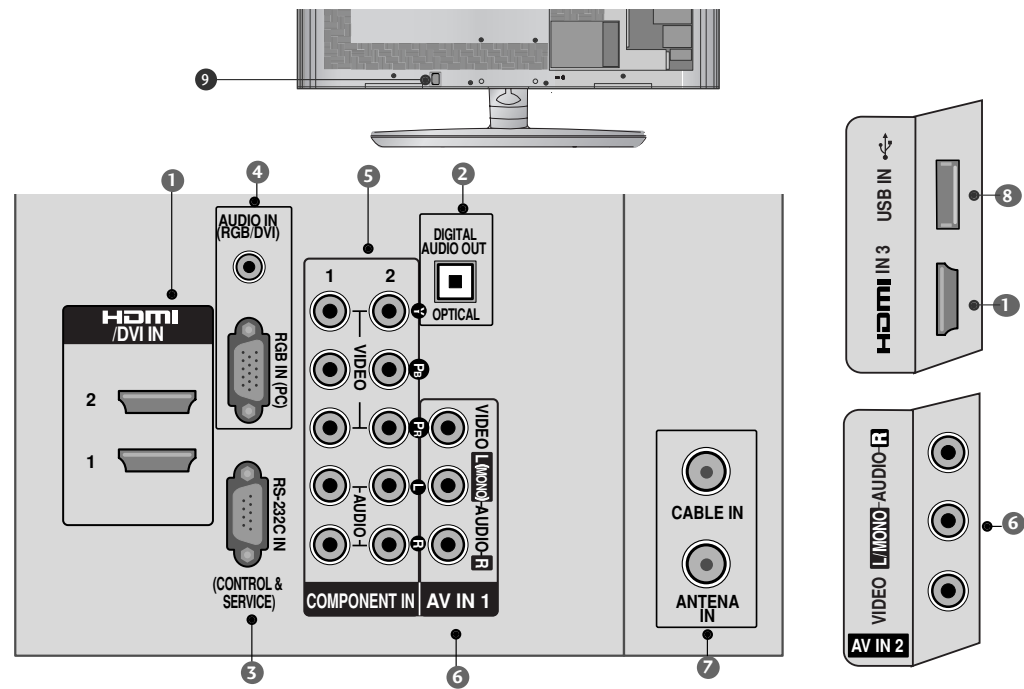




32/37/42LH35**, 42/47/55LH50**

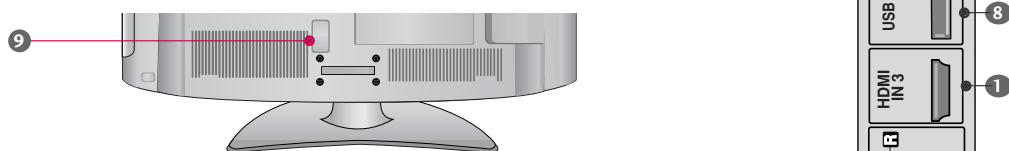

42/47/55LH90**

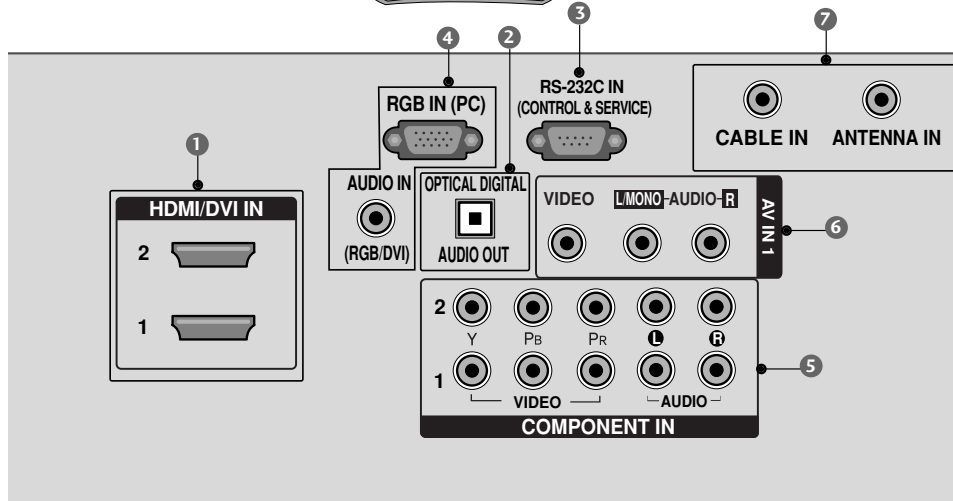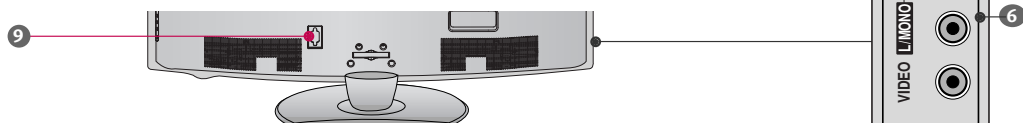

42/47SL90**

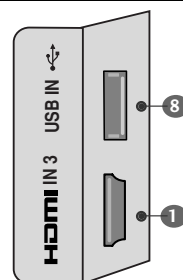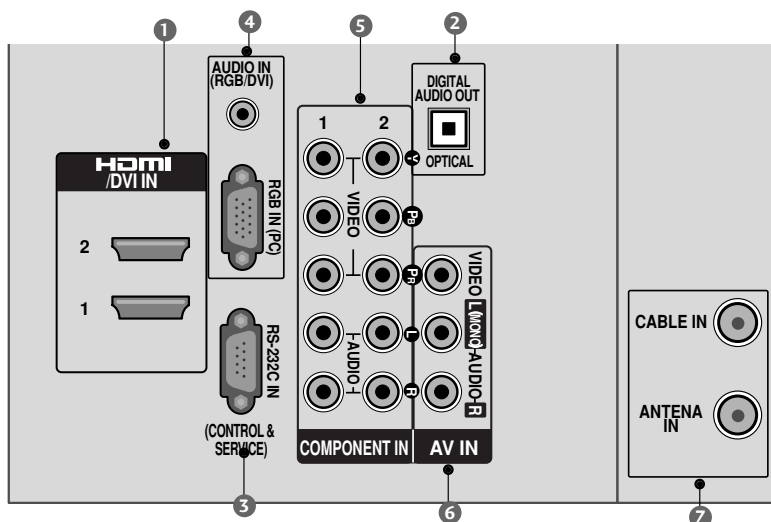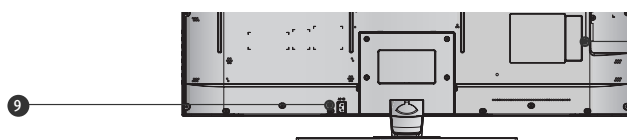


CAUTION

For HDMI IN 3 and USB IN


- For an optimal connection, HDMI cables and USB devices should have bezels less than 0.39 inches (10mm) thick.

 *A ≤ 0.39 inches (10mm)



PREPARATION

PLASMA TV Models

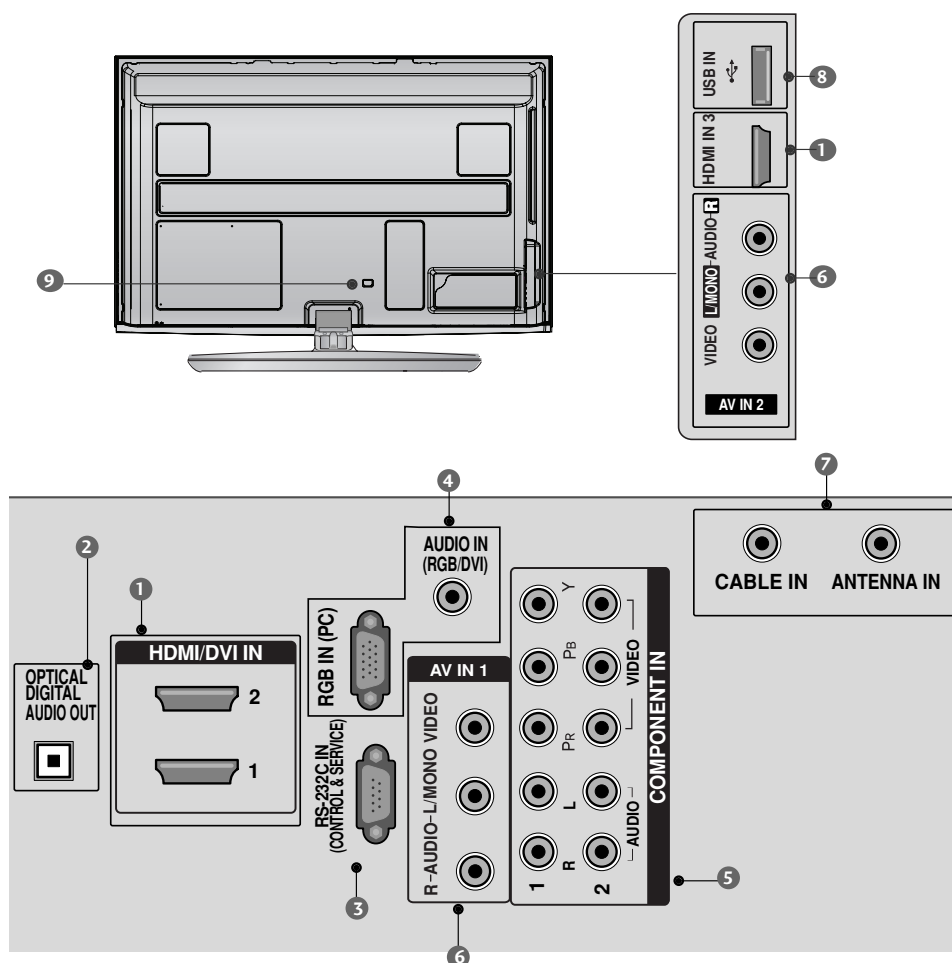

1 HDMI/DVI IN, HDMI IN

Digital Connection.

Supports HD video and Digital audio. Doesn't support 480i.

Accepts DVI video using an adapter or HDMI to DVI cable (not included).

2 OPTICAL DIGITAL AUDIO OUT

Digital optical audio output for use with amps and home theater systems.

Note: In standby mode, this port doesn't work.

3 RS-232C IN (CONTROL & SERVICE) PORT

Used by third party devices.

4 AUDIO IN (RGB/DVI)

1/8" (0.32 cm) headphone jack for analog PC audio input.

RGB IN (PC)

Analog PC Connection. Uses a D-sub 15 pin cable (VGA cable).

5 COMPONENT IN

Analog Connection. Supports HD.

Uses a red, green, and blue cable for video & red and white for audio.

6 AV (Audio/Video) IN

Analog composite connection. Supports standard definition video only.

7 ANTENNA/CABLE IN

Connect over-the air signals to this jack.

Connect cable signals to this jack.

8 USB IN

Used for viewing photos and listening to MP3 and playing movies.

9 Power Cord Socket

For operation with AC power.

Caution: Never attempt to operate the TV on DC power.

STAND INSTRUCTION



■ Image shown may differ from your TV.

LCD TV Models -


32/42/47LH70**

INSTALLATION


- 1 Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.
- 2 Assemble the parts of the **STAND BODY** with the **COVER BASE** of the TV.

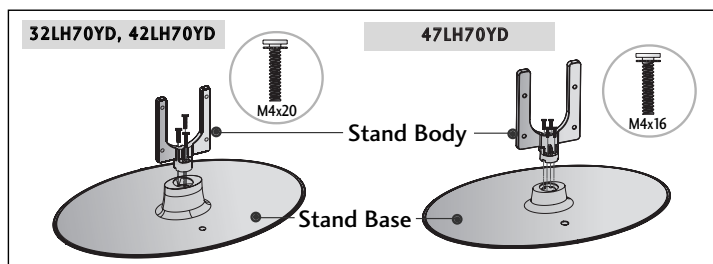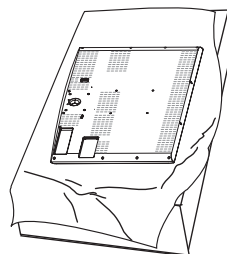


- 3 Assemble the TV as shown.

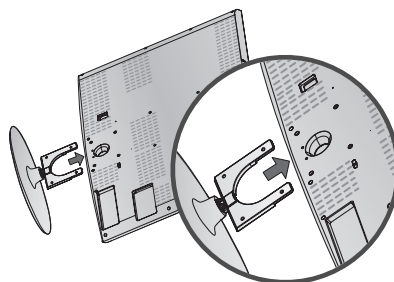

- 4 Fix the 4 bolts securely using the holes in the back of the TV.

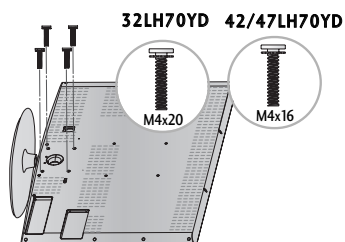

- 5 Install the **STAND REAR COVER** as shown.

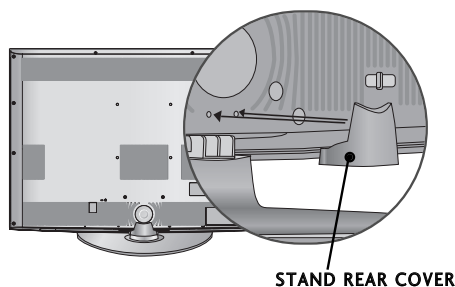


! NOTE

- When assembling the desk type stand, make sure the bolt is fully tightened (If not tightened fully, the TV can tilt forward after the product installation). Do not over tighten.


PREPARATION

DETACHMENT


- 1 Detach the **STAND REAR COVER** as shown. Grip the knob in your fingers and pull it.

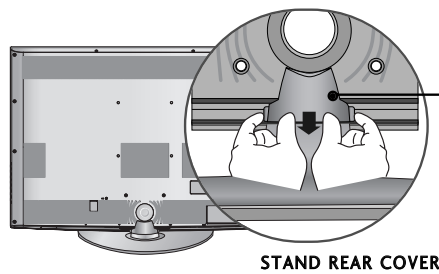


- 2 Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.

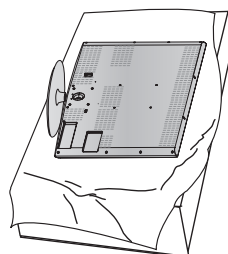

- 3 Loosen the bolts from TV.

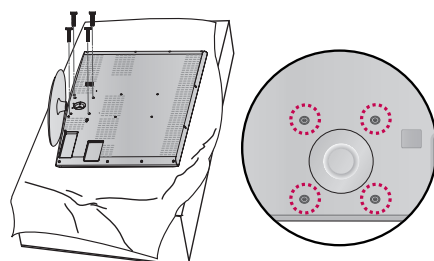


- 4 Detach the stand from TV.

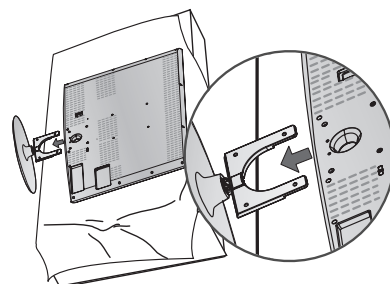

PROTECTION COVER


After removing the protection paper from the protection cover, adhere it to the TV as shown.

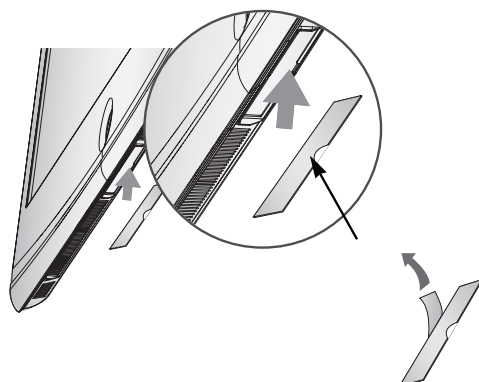


32/37/42LH35**, 42/47/55LH50**

INSTALLATION (Except 55LH50**)


- 1 Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.

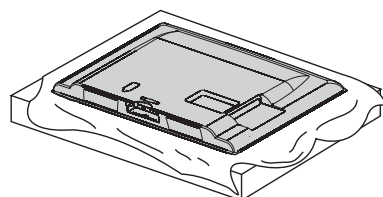

- 2 Assemble the TV as shown.

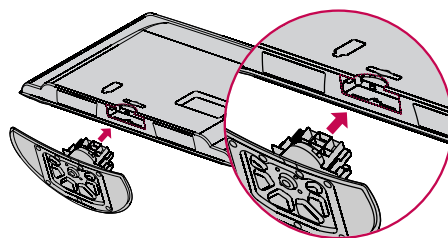

- 3 Fix the 4 bolts securely using the holes in the back of the TV.

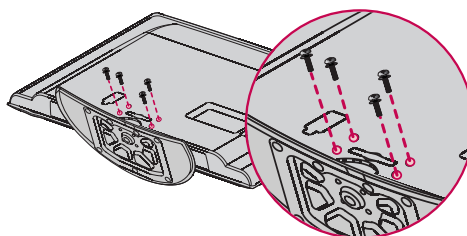


! NOTE

- When assembling the desk type stand, make sure the bolt is fully tightened (If not tightened fully, the TV can tilt forward after the product installation). Do not over tighten.


PREPARATION

DETACHMENT


- 1 Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.

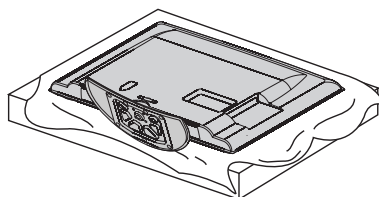

- 2 Loosen the bolts from TV.

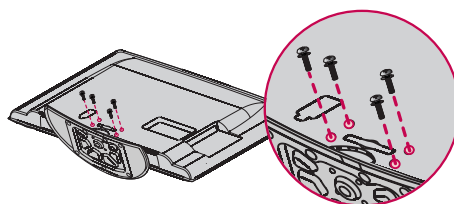


- 3 Detach the stand from TV.

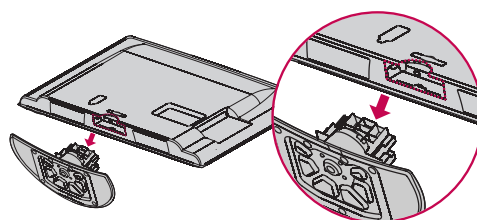

PROTECTION COVER


After removing the stand, install the included **protection cover** over the hole for the stand. Press the **PROTECTION COVER** into the TV until you hear it click.

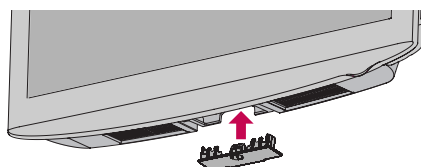


42/47/55LH90**

INSTALLATION (Except 55LH90**)


- 1 Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.

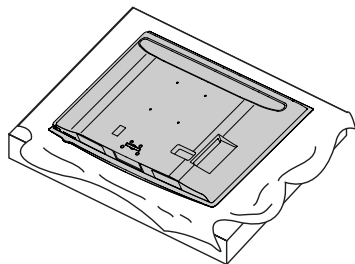

- 2 Assemble the TV as shown.

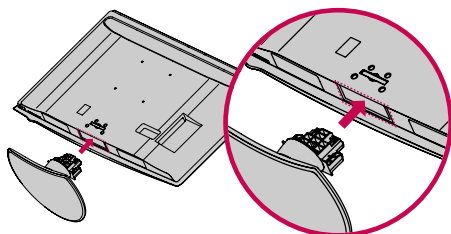

- 3 Fix the 4 bolts securely using the holes in the back of the TV.

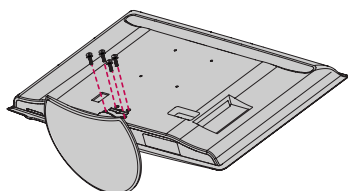


! NOTE


- When assembling the desk type stand, make sure the bolt is fully tightened (If not tightened fully, the TV can tilt forward after the product installation). Do not over tighten.

DETACHMENT


- 1 Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.

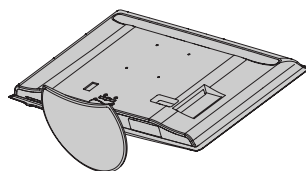

- 2 Loosen the bolts from TV.

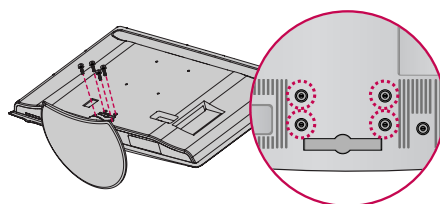


- 3 Detach the stand from TV.

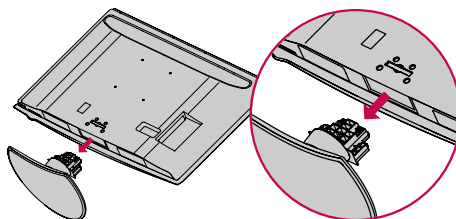

PROTECTION COVER

- 4 Insert the **PROTECTION COVER** into the TV. After removing the protection paper from the protection cover, adhere it to the TV as shown.

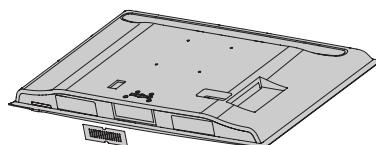


PREPARATION


For 32/42/47/55SL80**

INSTALLATION (Except 55SL80**)


- 1 Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.

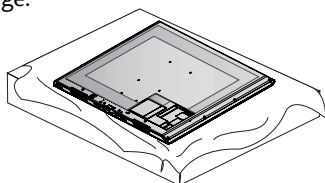


- 2 Assemble the parts of the **Stand Body** with the **Stand Base** of the TV.

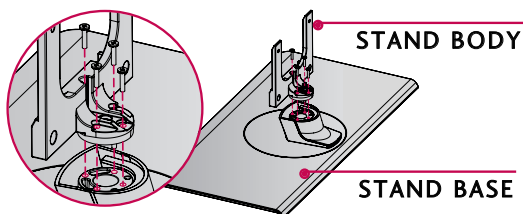

- 3 Assemble the TV as shown.

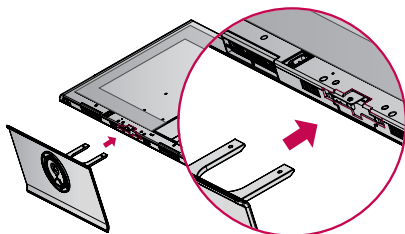

- 4 Fix the 4 screws securely using the holes in the back of the TV.

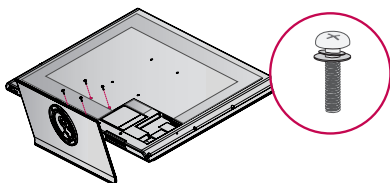


! NOTE


- ▶ When assembling the desk type stand, make sure the screws are fully tightened (If not tightened fully, the TV can tilt forward after the product installation). Do not over tighten.

DETACHMENT


- 1 Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.

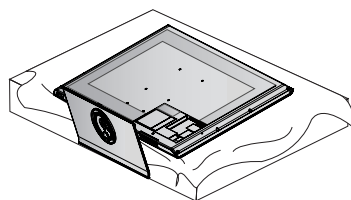

- 2 Remove the screws from the TV.

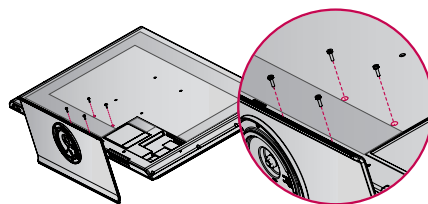


- 3 Detach the stand from TV.

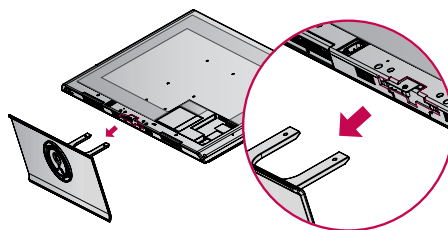

PROTECTION COVER


- 4 After removing the stand, install the included **protection cover** over the hole for the stand. Press the **PROTECTION COVER** into the TV until you hear it click.

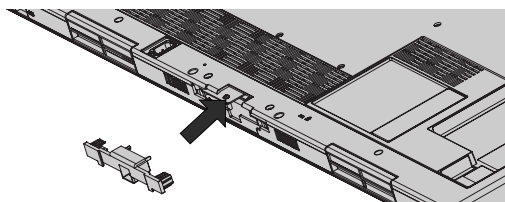


For 42/47SL90**

INSTALLATION


- 1 Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.

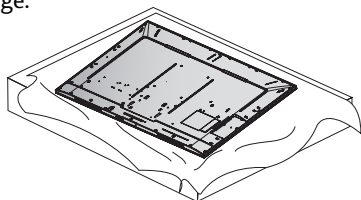


- 2 Assemble the parts of the **Stand Body** with the **Stand Base** of the TV.

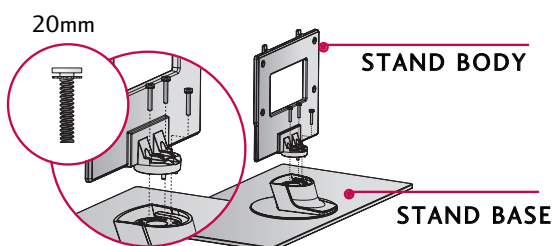

- 3 Assemble the TV as shown.

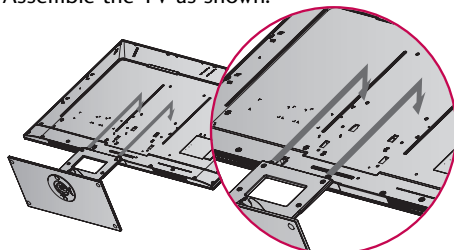

- 4 Fix the 4 screws securely using the holes in the back of the TV.

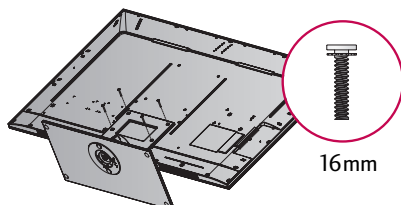


! NOTE


- When assembling the desk type stand, make sure the screws are fully tightened (If not tightened fully, the TV can tilt forward after the product installation). Do not over tighten.

DETACHMENT


- 1 Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.

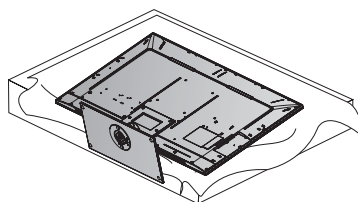

- 2 Remove the screws from the TV.

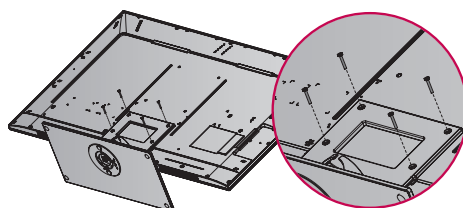

- 3 Detach the stand from TV.

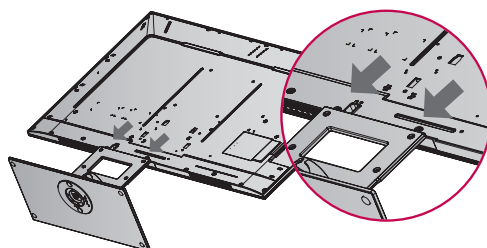


PREPARATION

PLASMA TV Models


PREPARATION

INSTALLATION


- 1 Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.

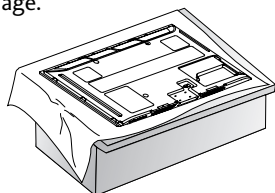

- 2 Assemble the TV as shown.

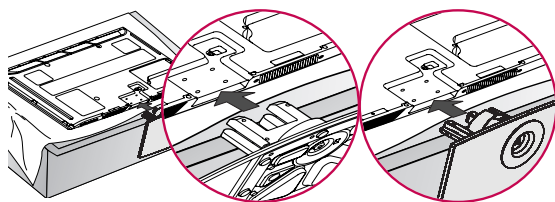

- 3 Fix the 4 bolts securely using the holes in the back of the TV.

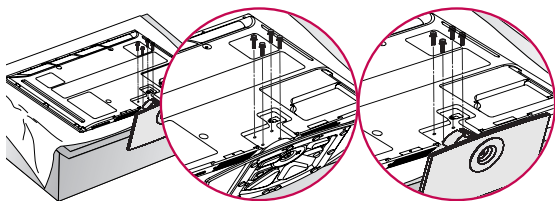


! NOTE




- ▶ When assembling the stand, make sure to distinguish and assemble the front and rear side of the stand correctly.
- ▶ When assembling the desk type stand, check whether the bolt is fully tightened. (If not tightened fully, the product can tilt forward after the product installation). If you tighten the bolt with excessive force, the bolt can deviate from abrasion of the tightening part of the bolt.

DETACHMENT


- 1 Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.

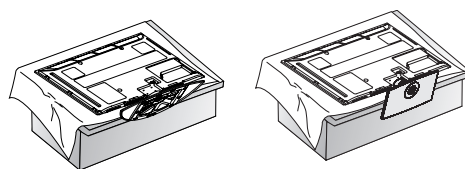

- 2 Loose the bolts from TV.

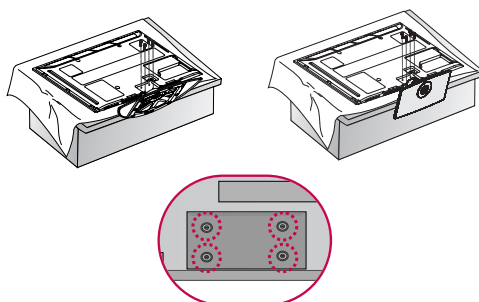


- 3 Detach the stand from TV.

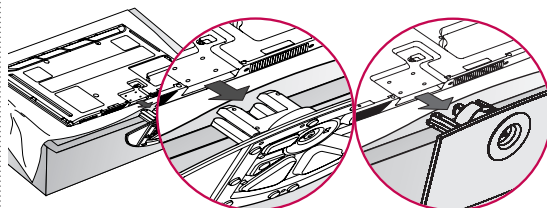

PROTECTION COVER

After removing the stand, install the included **protection cover** over the hole for the stand. Press the **PROTECTION COVER** into the TV until you hear it click.

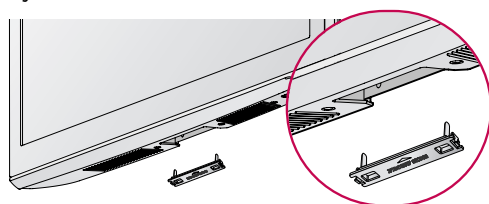

VESA WALL MOUNTING

 
 


Install your wall mount on a solid wall perpendicular to the floor. When attaching to other building materials, please contact your nearest installer.

If installed on a ceiling or slanted wall, it may fall and result in severe personal injury.

We recommend that you use an LG brand wall mount when mounting the TV to a wall.

LG recommends that wall mounting be performed by a qualified professional installer.

First you connect the USB extension cable to the USB IN terminal, and then hang it on the wall. (For 32/42/47LH70**)

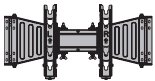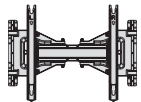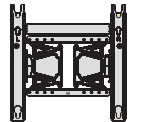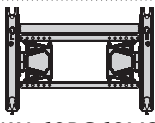Model		VESA (A * B) 	Standard Screw	Quantity	Wall Mounting Bracket (sold separately)
LCD TV Models	32LH70**, 32LH35**, 32SL80**	200 * 100	M4	4	 RW230 AW-47LG30M
	42LH70**, 47LH70**, 37LH35**, 42LH35**, 42LH50**, 47LH50**, 42LH90**, 47LH90**, 42SL80**, 47SL80**, 42SL90**, 47SL90**	200 * 200	M6	4	 AW-47LG30M
	55LH50**, 55LH90** 55SL80**	400 * 400	M6	4	 AW-55LH40M
PLASMA TV Models	42PQ60*, 50PQ60*, 50PS80**	400 * 400	M6	4	 AW-50PG60MS
	60PS80**	600 * 400	M8	4	 AW-60PG60MS

NOTE

- ▶ Screw length needed depends on the wall mount used. For further information, refer to the instructions included with the mount.
- ▶ Standard dimensions for wall mount kits are shown in the table.
- ▶ When purchasing our wall mount kit, a detailed installation manual and all parts necessary for assembly are provided.
- ▶ Do not use screws longer than the standard dimension, as they may cause damage to the inside of the TV.
- ▶ For wall mounts that do not comply with the VESA standard screw specifications, the length of the screws may differ depending on their specifications.
- ▶ Do not use screws that do not comply with the VESA standard screw specifications.
- ▶ Do not use fasten the screws too strongly, this may damage the TV or cause the TV to a fall, leading to personal injury. LG is not liable for these kinds of accidents.
- ▶ LG is not liable for TV damage or personal injury when a non-VESA or non specified wall mount is used or the consumer fails to follow the TV installation instructions.



CAUTION

- ▶ Do not install your wall mount kit while your TV is turned on. It may result in personal injury due to electric shock.

ON

MANAGEMENT

may differ from your TV.

ple with the tab on the **CABLE**
MENT CLIP.

CABLE MANAGEMENT CLIP as





able management clip can be bro-
ive pressure.

les as necessary.

ional equipment, see the
EQUIPMENT SETUP section.


THE POWER CABLE

the **PROTECTIVE**
own. It will help pre-
g removed by acci-

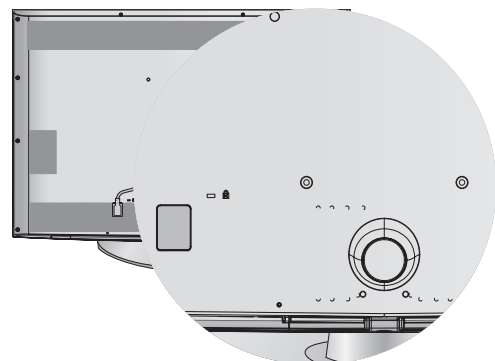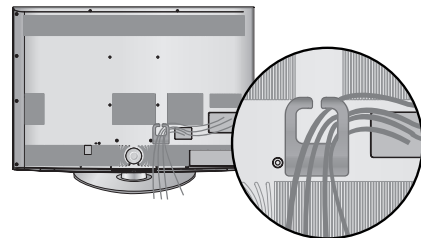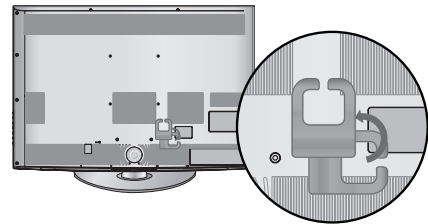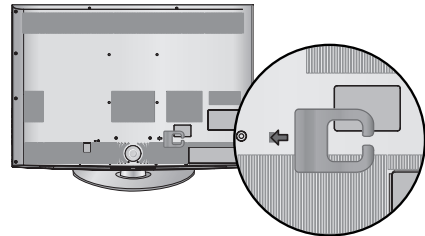


32/37/42LH35**,
42/47/55LH50**, 42/47/55LH90**


- 1 Connect the cables as necessary.
To connect additional equipment, see the **EXTERNAL EQUIPMENT SETUP** section.

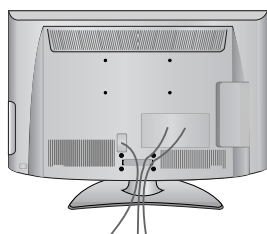

- 2 Install the **CABLE MANAGEMENT CLIP** as shown.

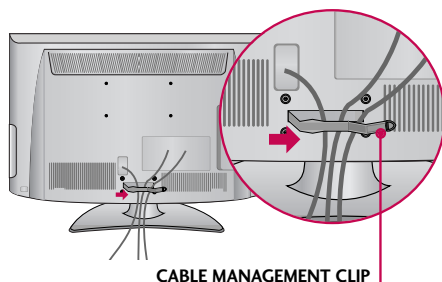


- 3 Put the cables inside the **CABLE MANAGEMENT CLIP** and snap it closed.

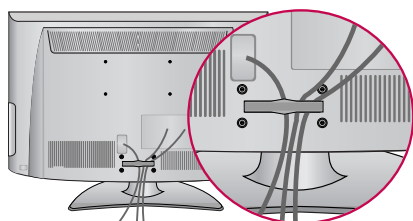


32/42/47/55SL80**

FOR DESK-TYPE STAND

- 1 Install the **CABLE MANAGEMENT CLIP** as shown.

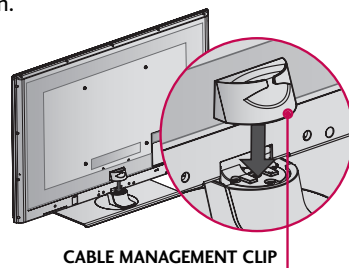


- 2 Connect the cables as necessary.
To connect additional equipment, see the **EXTERNAL EQUIPMENT SETUP** section.

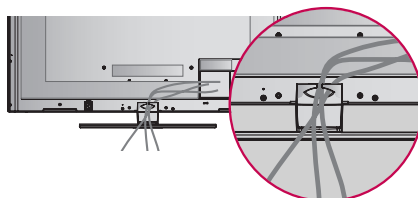

FOR WALL MOUNT

- 1 Connect the cables as necessary.
To connect additional equipment, see the **EXTERNAL EQUIPMENT SETUP** section.
Install **CABLE HOLDER** as shown and bundle the cables.

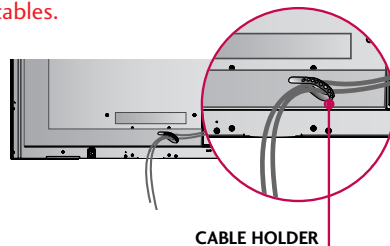

! NOTE


- Do not hold the **CABLE MANAGEMENT CLIP** when moving the TV.
- If the TV is dropped, you may be injured or the product may be broken.

PREPARATION


42/47SL90**

FOR DESK-TYPE STAND

- 1 Install the **CABLE MANAGEMENT CLIP** as shown.

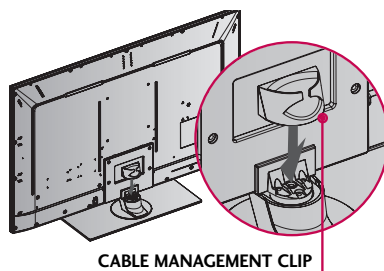


- 2 Connect the cables as necessary.
To connect additional equipment, see the **EXTERNAL EQUIPMENT SETUP** section.

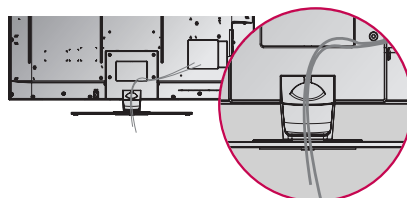


FOR WALL MOUNT

- 1 Connect the cables as necessary.
To connect additional equipment, see the **EXTERNAL EQUIPMENT SETUP** section.
Install **CABLE HOLDER** as shown and bundle the cables.

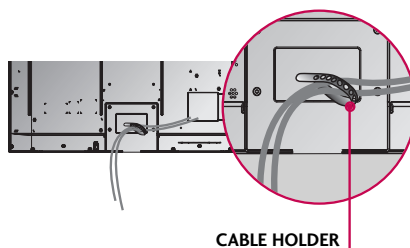


PLASMA TV Models

- 1 After connecting the cables as necessary, install **CABLE HOLDER** as shown and bundle the cables.
To connect additional equipment, see the **EXTERNAL EQUIPMENT SETUP** section.

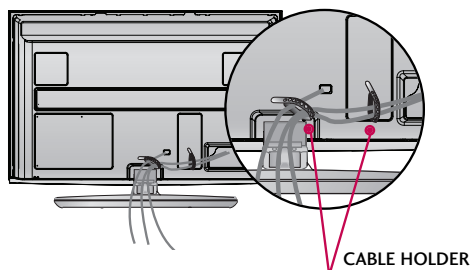

(For 50/60PS80**)


- 2 Install the **CABLE MANAGEMENT CLIP** as shown.

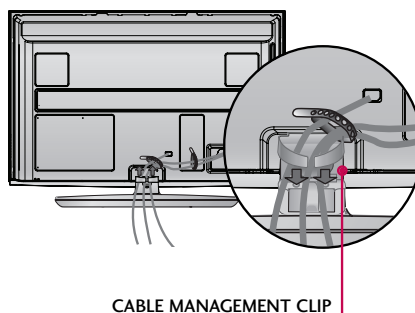

(For 50/60PS80**)

HOW TO REMOVE THE CABLE MANAGEMENT CLIP


- Hold the **CABLE MANAGEMENT CLIP** with both hands and pull it upward.

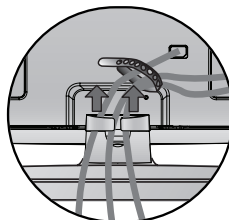

PREPARATION

ATTACHING THE TV TO A DESK (Except 42/47LH70**, 47/55LH50**, 47/55LH90**, 32/42/47/55SL80**, 42/47SL90**, PLASMA TV models)

The TV must be attached to a desk so it cannot be pulled in a forward/backward direction, potentially causing injury or damaging the product.

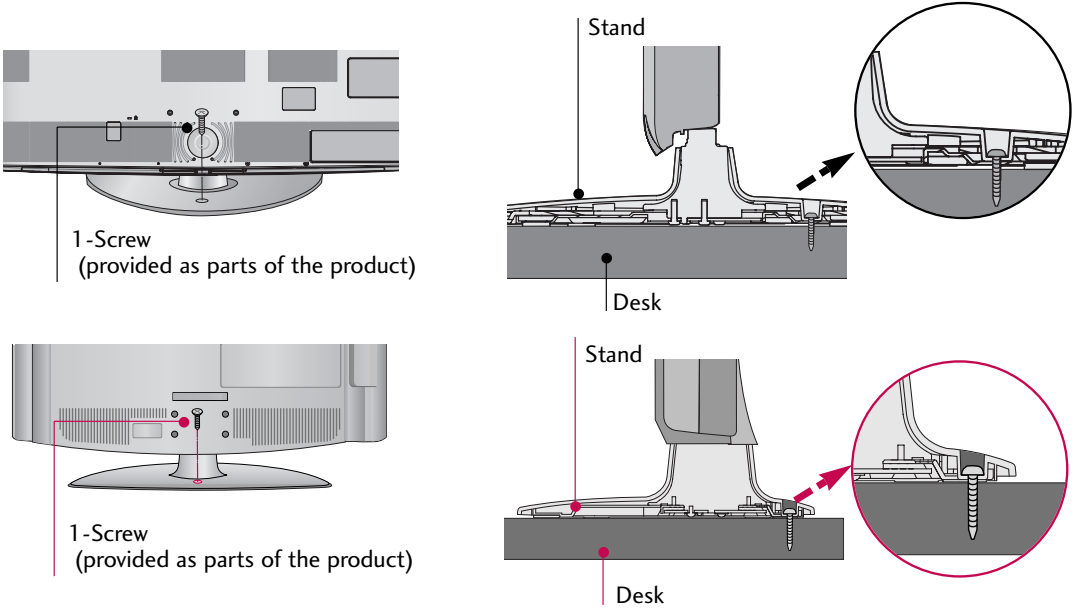

⚠ WARNING

- ▶ To prevent TV from falling over, the TV should be securely attached to the floor/wall per installation instructions. Tipping, shaking, or rocking the machine may cause injury.


KENSINGTON SECURITY SYSTEM (Except 42/47SL90**)

- This feature is not available for all models.

- The TV is equipped with a Kensington Security System connector on the back panel. Connect the Kensington Security System cable as shown below.
- For the detailed installation and use of the Kensington Security System, refer to the user's guide provided with the Kensington Security System.

For further information, contact <http://www.kensington.com>, the internet homepage of the Kensington company. Kensington sells security systems for expensive electronic equipment such as notebook PCs and LCD projectors.


NOTE: The Kensington Security System is an optional accessory.

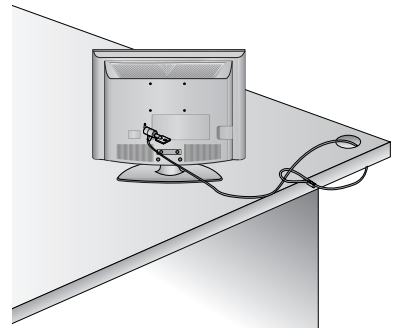

DESKTOP PEDESTAL INSTALLATION

■ Image shown may differ from your TV.

For proper ventilation, allow a clearance of 4 inches on all four sides from the wall.

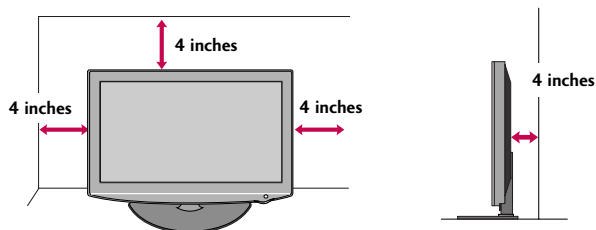


⚠ CAUTION

- ▶ Ensure adequate ventilation by following the clearance recommendations.
- ▶ Do not mount near or above any type of heat source.

SWIVEL STAND

(This feature is not available for all models.)

After installing the TV, you can adjust the TV set manually to the left or right direction by 20 degrees to suit your viewing position.

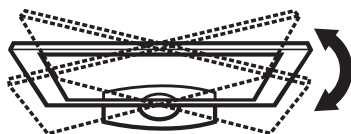

PREPARATION


SECURING THE TV TO THE WALL TO PREVENT FALLING WHEN THE TV IS USED ON A STAND

- You should purchase necessary components to prevent the TV from tipping over (when not using a wall mount).
- Image shown may differ from your TV.


We recommend that you set up the TV close to a wall so it cannot fall over if pushed backwards.

Additionally, we recommend that the TV be attached to a wall so it cannot be pulled in a forward direction, potentially causing injury or damaging the product.

Caution: Please make sure that children don't climb on or hang from the TV.

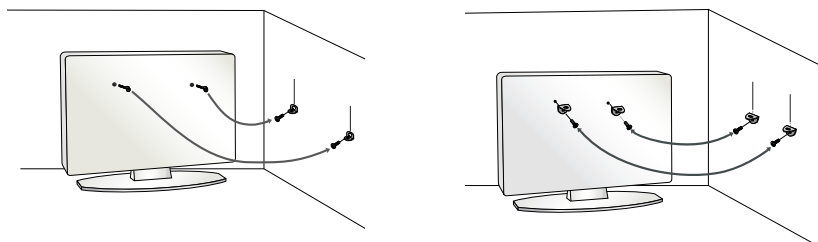

- Insert the eye-bolts (or TV brackets and bolts) to tighten the product to the wall as shown in the picture.
 - * If your product has the bolts in the eye-bolts position before inserting the eye-bolts, loosen the bolts.
 - * Insert the eye-bolts or TV brackets/bolts and tighten them securely in the upper holes.
- Secure the wall brackets with the bolts (sold separately) to the wall. Match the height of the bracket that is mounted on the wall to the holes in the product.
- Ensure the eye-bolts or brackets are tightened securely.

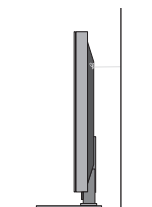

- Use a sturdy rope (sold separately) to tie the product. It is safer to tie the rope so it becomes horizontal between the wall and the product.

! NOTE

- ▶ Use a platform or cabinet strong enough and large enough to support the size and weight of the TV.
- ▶ To use the TV safely make sure that the height of the bracket on the wall and the one on the TV are the same.


- To prevent damage do not connect to the power outlet until all connections are made between the devices.
- Image shown may differ from your TV.

ANTENNA OR CABLE CONNECTION


1. Antenna (Analog or Digital)

Wall Antenna Socket or Outdoor Antenna without a Cable Box Connection.

For optimum picture quality, adjust the antenna direction if needed.

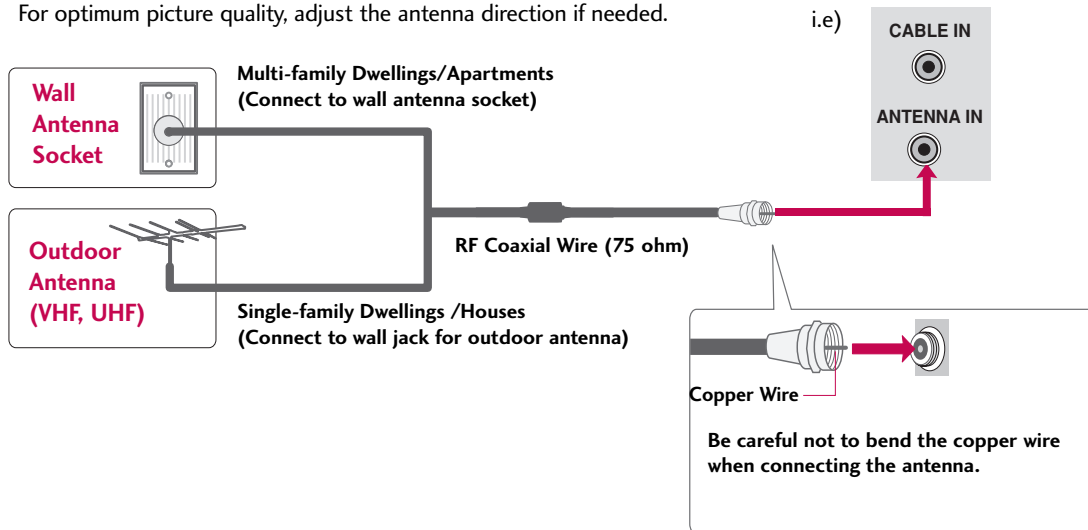

2. Cable

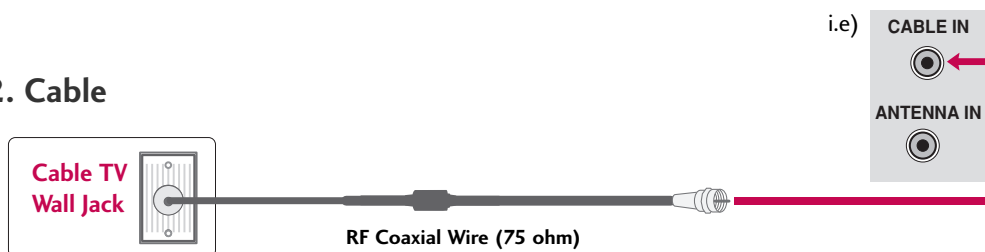

- To improve the picture quality in a poor signal area, please purchase a signal amplifier and install properly.
- If the antenna needs to be split for two TV's, install a 2-Way Signal Splitter.
- If the antenna is not installed properly, contact your dealer for assistance.

EXTERNAL EQUIPMENT SETUP

- To prevent the equipment damage, never plug in any power cords until you have finished connecting all equipment.
- Image shown may differ from your TV.
- This part of EXTERNAL EQUIPMENT SETUP mainly use picture for 32/42/47LH70** models.

HD RECEIVER SETUP

This TV can receive digital over-the-air/digital cable signals without an external digital set-top box. However, if you do receive digital signals from a digital set-top box or other digital external device.


Component Connection

1. How to connect

- 1 Connect the video outputs (Y, PB, PR) of the digital set-top box to the **COMPONENT IN VIDEO 1** jacks on the TV. Match the jack colors (Y = green, PB = blue, and PR = red).
- 2 Connect the audio output of the digital set-top box to the **COMPONENT IN AUDIO 1** jacks on the TV.

2. How to use

- Turn on the digital set-top box.
(Refer to the owner's manual for the digital set-top box. operation)
- Select the **Component 1** input source on the TV using the **INPUT** button on the remote control.
- If connected to **COMPONENT IN2** input, select the **Component 2** input source on the TV.

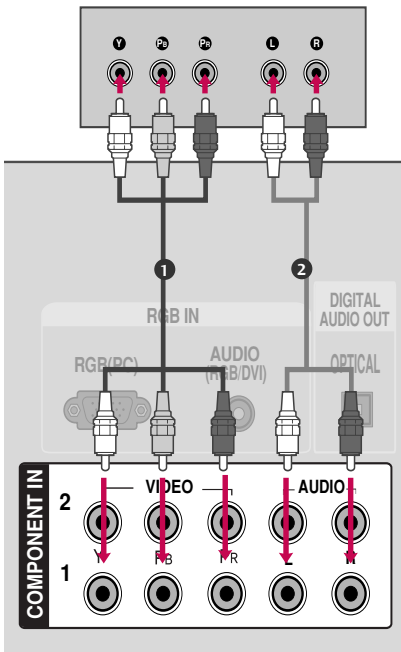

Supported Resolutions

Signal	Component	HDMI
480i	Yes	No
480p	Yes	Yes
720p	Yes	Yes
1080i	Yes	Yes
1080p	Yes	Yes

Y, CB/PB, CR/PR

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)
720x480i	15.73	59.94
	15.73	60.00
720x480p	31.47	59.94
	31.50	60.00
1280x720p	44.96	59.94
	45.00	60.00
1920x1080i	33.72	59.94
	33.75	60.00
1920x1080p	26.97	23.976
	27.00	24.00
	33.71	29.97
	33.75	30.00
	67.432	59.939
	67.50	60.00
	28.125	25.00
	56.25	50.00


HDMI Connection

1. How to connect

- 1 Connect the digital set-top box to **HDMI/DVI IN 1, 2 or 3** jack on the TV.
- 2 No separate audio connection is necessary.
HDMI supports both audio and video.

2. How to use

- Turn on the digital set-top box.
(Refer to the owner's manual for the digital set-top box.)
- Select the **HDMI1, 2, or 3** input source on the TV using the **INPUT** button on the remote control.

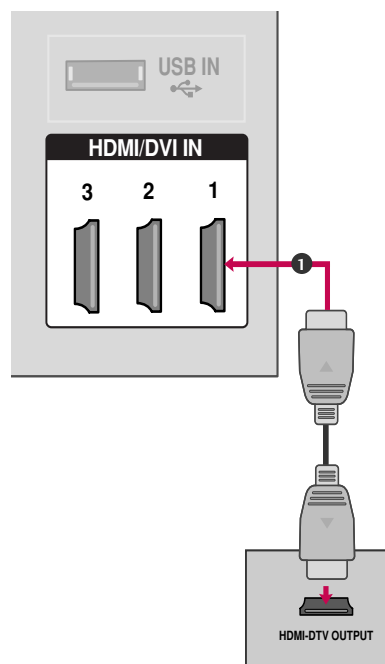

HDMI-DTV

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)
720x480p	31.47	59.94
	31.50	60.00
1280x720p	44.96	59.94
	45.00	60.00
1920x1080i	33.72	59.94
	33.75	60.00
1920x1080p	27.00	24.00
	33.75	30.00
	67.432	59.939
	67.50	60.00
	56.25	50.00
	26.97	23.976
	33.71	29.97
	28.125	25.00

EXTERNAL EQUIPMENT SETUP

DVI to HDMI Connection

1. How to connect


- 1 Connect the DVI output of the digital set-top box to the **HDMI/DVI IN 1, 2 or 3** jack on the TV.
- 2 Connect the PC audio output to the **AUDIO (RGB/DVI)** jack on the TV.

2. How to use

- Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)
- Select the **HDMI1, 2, or 3** input source on the TV using the **INPUT** button on the remote control.

! NOTE

- A DVI to HDMI cable or adapter is required for this connection. DVI doesn't support audio, so a separate audio connection is necessary.

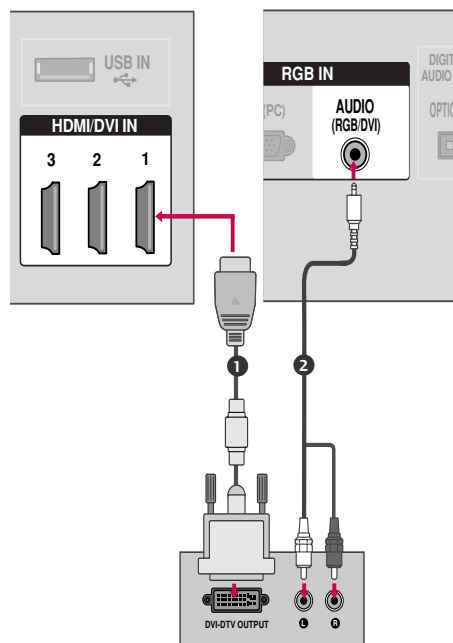

DVD SETUP

Component Connection

1. How to connect


- 1

Connect the video outputs (Y, PB, PR) of the DVD to the **COMPONENT IN VIDEO1** jacks on the TV.
Match the jack colors (Y = green, PB = blue, and PR = red).
- 2

Connect the audio outputs of the DVD to the **COMPONENT IN AUDIO1** jacks on the TV.

2. How to use

- Turn on the DVD player, insert a DVD.
- Select the **Component 1** input source on the TV using the **INPUT** button on the remote control.
- If connected to **COMPONENT IN 2** input, select the **Component 2** input source on the TV.
- Refer to the DVD player's manual for operating instructions.

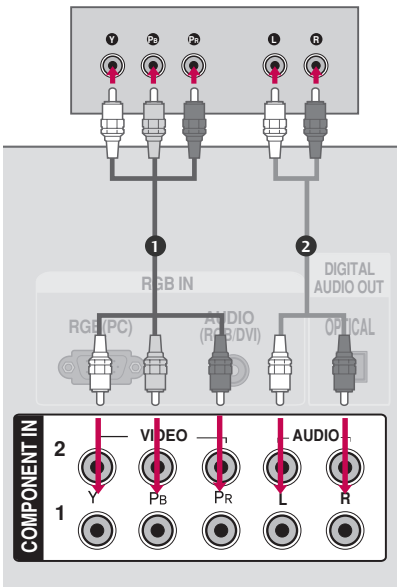

Component Input ports

To get better picture quality, connect a DVD player to the component input ports as shown below.

Component ports on the TV	Y	P _B	P _R
Video output ports on DVD player	Y	P _B	P _R
	Y	B-Y	R-Y
	Y	C _b	C _r
	Y	P _b	P _r

EXTERNAL EQUIPMENT SETUP


Composite (RCA) Connection

1. How to connect

- 1 Connect the **AUDIO/VIDEO** jacks between TV and DVD. Match the jack colors (Video=yellow, Audio Left=white, and Audio Right=red)

2. How to use

- Turn on the DVD player, insert a DVD.
- Select the **AV1** or **AV2** input source on the TV using the **INPUT** button on the remote control.
- Refer to the DVD player's manual for operating instructions.

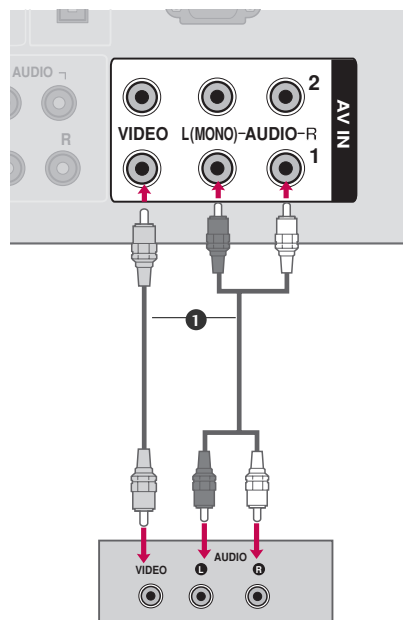

HDMI Connection

1. How to connect


- 1 Connect the HDMI output of the DVD to the **HDMI/DVI IN 1, 2 or 3** jack on the TV.
- 2 No separate audio connection is necessary. HDMI supports both audio and video.

2. How to use

- Select the **HDMI1, 2, or 3** input source on the TV using the **INPUT** button on the remote control.
- Refer to the DVD player's manual for operating instructions.

! NOTE

- ▶ Check HDMI cable over version 1.3. If the HDMI cables don't support HDMI version 1.3, it can cause flickers or no screen display. In this case use the latest cables that support HDMI version 1.3.

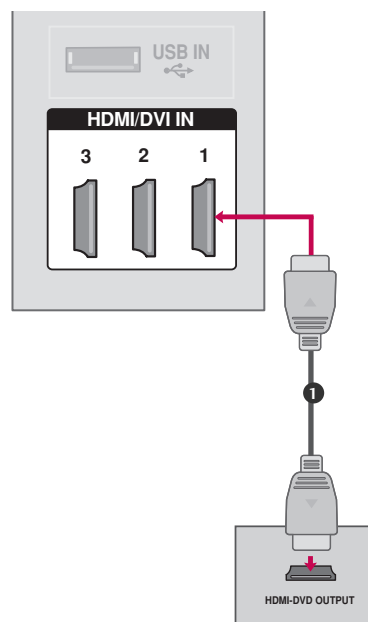


VCR SETUP

Antenna Connection

1. How to connect

- 1 Connect the RF antenna out socket of the VCR to the **ANTENNA IN** socket on the TV.
- 2 Connect the antenna cable to the RF antenna in socket of the VCR.

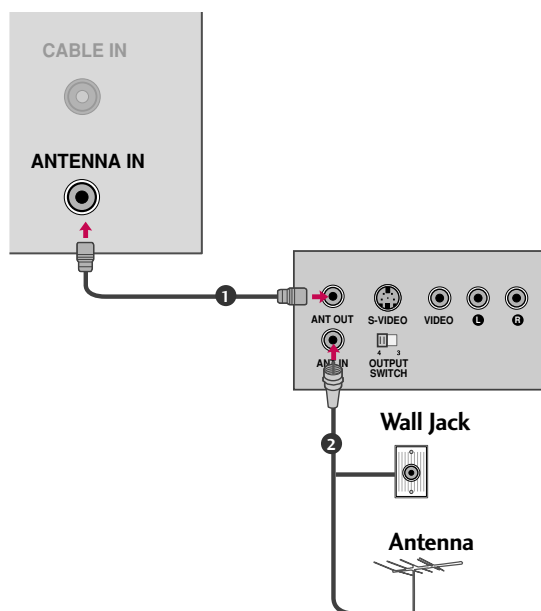

2. How to use

- Set VCR output switch to 3 or 4 and then tune TV to the same channel number.
- Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)

Composite (RCA) Connection

1. How to connect


- 1 Connect the **AUDIO/VIDEO** jacks between TV and VCR. Match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red)

2. How to use

- Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)
- Select the **AV1** input source on the TV using the **INPUT** button on the remote control.
- If connected to **AV IN2**, select **AV2** input source on the TV.

! NOTE

- ▶ If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO L/MONO** jack of the TV.

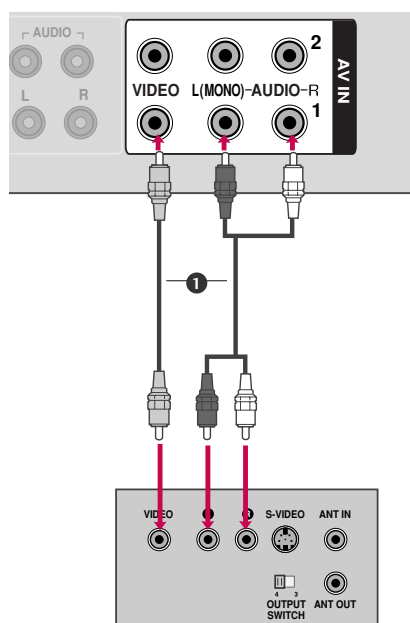

EXTERNAL EQUIPMENT SETUP


OTHER A/V SOURCE SETUP

1. How to connect

- 1 Connect the **AUDIO/VIDEO** jacks between TV and external equipment. Match the jack colors. (Video = yellow, Audio Left = white, and Audio Right = red)

2. How to use

- Select the **AV2** input source on the TV using the **INPUT** button on the remote control.
- If connected to **AV IN1** input, select the **AV1** input source on the TV.
- Operate the corresponding external equipment.

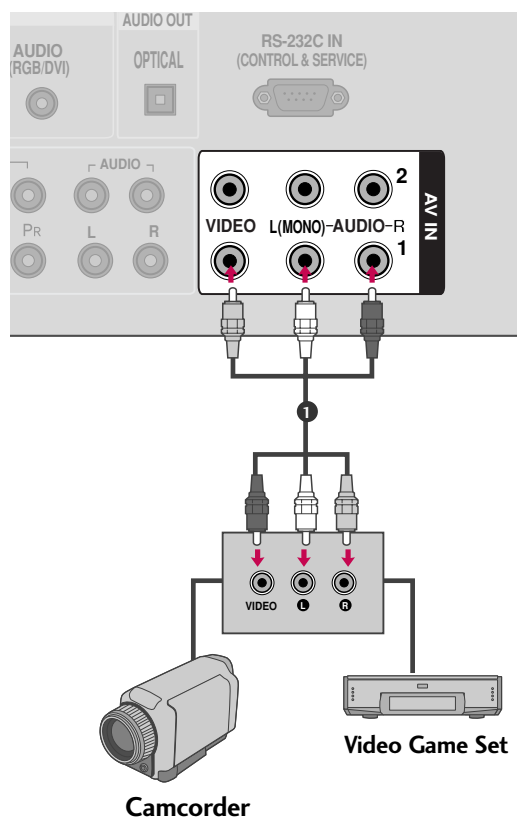

PC SETUP

This TV provides Plug and Play capability, meaning that the PC adjusts automatically to the TV's settings.


VGA (D-Sub 15 pin) Connection

1. How to connect

- 1 Connect the VGA output of the PC to the **RGB (PC)** jack on the TV.
- 2 Connect the PC audio output to the **AUDIO(RGB/DVI)** jack on the TV.

2. How to use

- Turn on the PC and the TV.
- Select the **RGB-PC** input source on the TV using the **INPUT** button on the remote control.

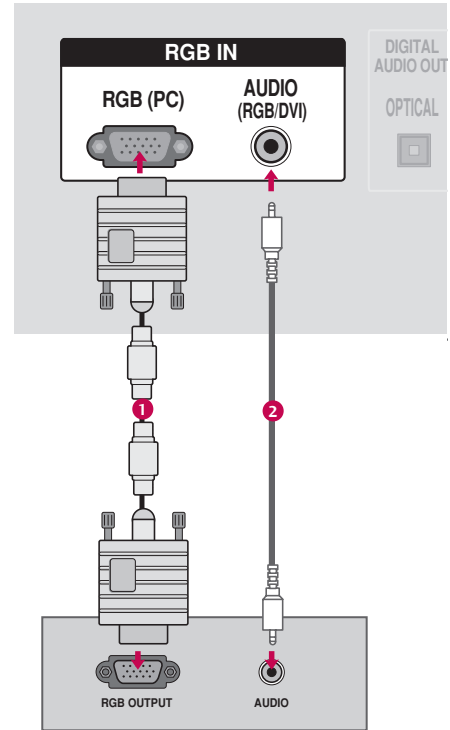


DVI to HDMI Connection

1. How to connect

- 1 Connect the DVI output of the PC to the **HDMI/DVI IN 1, 2 or 3** jack on the TV.
- 2 Connect the PC audio output to the **AUDIO(RGB/DVI)** jack on the TV.

2. How to use

- Turn on the PC and the TV.
- Select the **HDMI1, 2, or 3** input source on the TV using the **INPUT** button on the remote control.

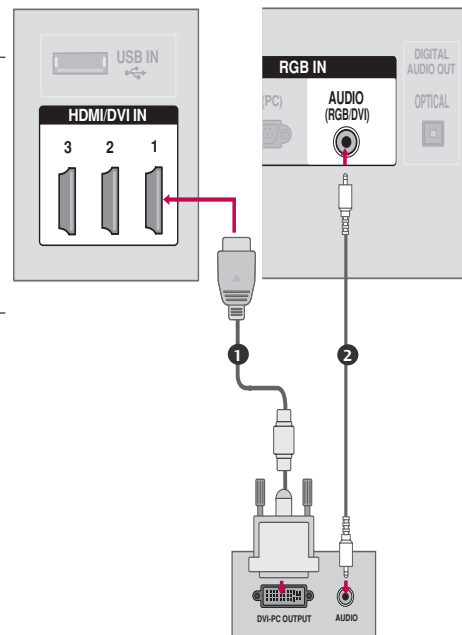

EXTERNAL EQUIPMENT SETUP

! NOTES

- ▶ To get the the best picture quality, adjust the PC graphics card to 1920x1080 or 1360x768(For 42/50PQ60*).
- ▶ Depending on the graphics card, DOS mode may not work if a HDMI to DVI Cable is in use.
- ▶ In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the PICTURE menu until the picture is clear.
- ▶ Avoid keeping a fixed image on the screen for a long period of time. The fixed image may become permanently imprinted on the screen.
- ▶ The synchronization input form for Horizontal and Vertical frequencies is separate.
- ▶ Depending on the graphics card, some resolution settings may not allow the image to be positioned on the screen properly.
- ▶ If there are overscan in HDMI-PC 1920x1080 or 1360x768(For 42/50PQ60*), change aspect ratio to **Just scan**.
- ▶ When the selecting HDMI-PC, set the "Input Label - PC" in the OPTION menu.


Supported Display Specifications (RGB-PC, HDMI-PC)

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)
640x350	31.468	70.09
720x400	31.469	70.08
640x480	31.469	59.94
800x600	35.156 37.879	56.25 60.31
1024x768	48.363	60.00
1280x768	47.776	59.87
1280x1024	63.981	60.02
1360x768	47.712	60.015
1600x1200	75.00	60.00
1920x1080	67.5	60.00

Screen Setup for PC mode

Selecting Resolution

You can choose the resolution in RGB-PC mode.
The **Position**, **Phase**, and **Size** can also be adjusted.

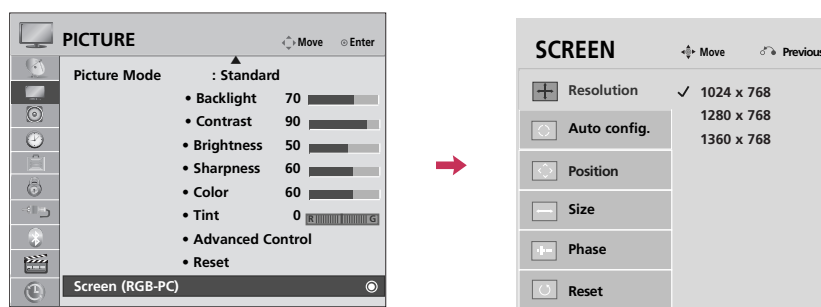


- 1   Select **PICTURE**.
- 2   Select **Screen(RGB-PC)**.
- 3   Select **Resolution**.
- 4   Select the desired resolution.
- 5 

EXTERNAL EQUIPMENT SETUP

Auto Configure

Automatically adjusts picture position and minimizes image instability. After adjustment, if the image is still not correct, try using the manual settings or a different resolution or refresh rate on the PC.

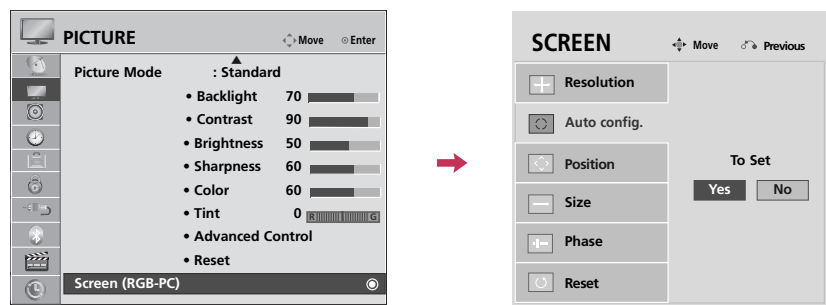


1. Select **PICTURE**.
2. Select **Screen(RGB-PC)**.
3. Select **Auto config..**
4. Select **Yes**.
- 5.

- If the position of the image is still not correct, try Auto adjustment again.
- If picture needs to be adjusted again after Auto adjustment in RGB-PC, you can adjust the **Position, Size** or **Phase**.
- Because the image with the black background may fail the auto adjustment, use the image with the bright background.

Adjustment for screen Position, Size, and Phase

If the picture is not clear after auto adjustment and especially if characters are still trembling, adjust the picture phase manually.

This feature operates only in RGB-PC mode.

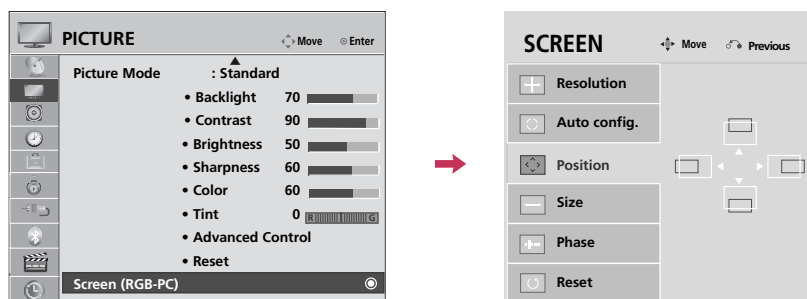


- 1   Select **PICTURE**.
- 2   Select **Screen(RGB-PC)**.
- 3   Select **Position, Size, or Phase**.
- 4   Make appropriate adjustments.
- 5 

- **Position:** This function is to adjust picture to left/right and up/down as you prefer.
- **Size:** This function is to minimize any vertical bars or stripes visible on the screen background. And the horizontal screen size will also change.
- **Phase:** This function allows you to remove any horizontal noise and clear or sharpen the image of characters.

EXTERNAL EQUIPMENT SETUP


Screen Reset (Reset to original factory values)

Returns **Position**, **Size**, and **Phase** to the default factory settings.
This feature operates only in RGB-PC mode.

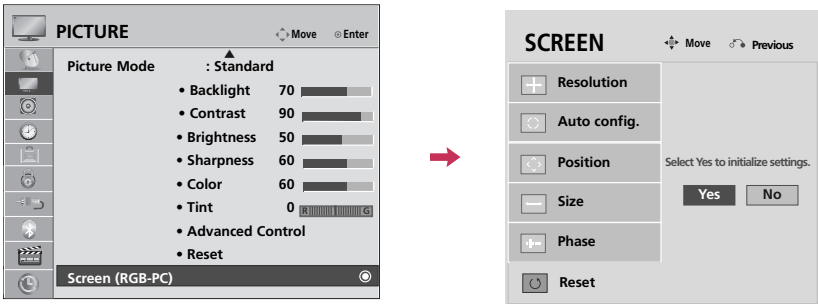

1.   Select **PICTURE**.
2.   Select **Screen(RGB-PC)**.
3.   Select **Reset**.
4.   Select **Yes**.
5. 

USB CONNECTION

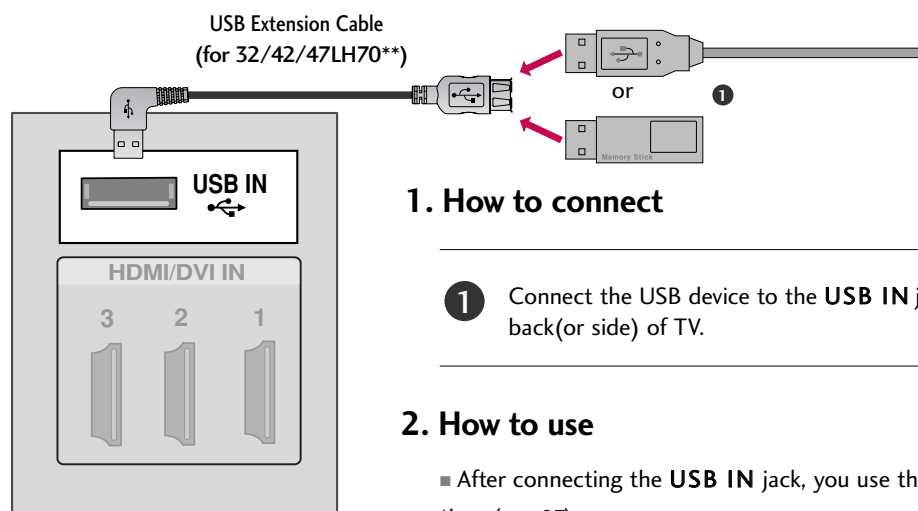

AUDIO OUT CONNECTION

Send the TV's audio to external audio equipment via the Audio Output port.

1. How to connect


- 1 Connect one end of the optical or coaxial cable to the TV port of **OPTICAL DIGITAL AUDIO OUT**.
- 2 Connect the other end of the optical cable to the digital audio input on the audio equipment.
- 3 Set the "TV Speaker option - Off" in the AUDIO menu. (▶ p.132). See the external audio equipment instruction manual for operation.

! NOTE

- ▶ When connecting with external audio equipments, such as amplifiers or speakers, you can turn the TV speakers off in the menu. (▶ p.136)

! CAUTION

- ▶ Do not look into the optical output port. Looking at the laser beam may damage your vision.
- ▶ Audio with ACP (Audio Copy Protection) function may block digital audio output.

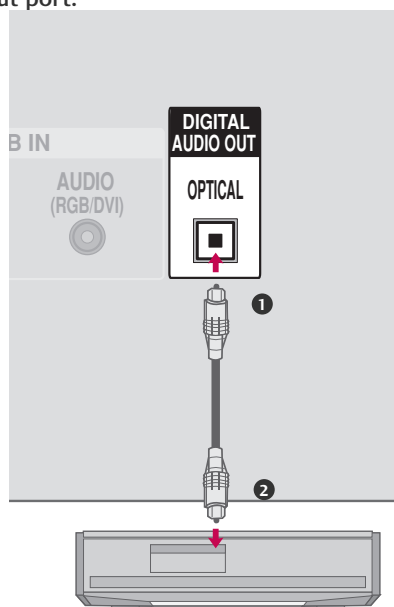

WATCHING TV / CHANNEL CONTROL

REMOTE CONTROL FUNCTIONS

When using the remote control, aim it at the remote control sensor on the TV.

TV/STB Select the remote operating mode: TV, or STB.

POWER Switches the TV ON from standby or standby from ON.

Q.MENU Opens the list of Quick Menu options. ► p.60

MENU Displays the main menu or clears all on-screen displays and return to TV viewing.

INPUT Selects external sources that are available, Switches the TV on from standby mode. ► p.69

ENERGY SAVING Adjusts the Energy Saving.

GUIDE Displays the program event according to time scheduler.► p.74

VOLUME UP /DOWN Adjusts the volume.

MARK Select files that you want to delete or move. ► p.102

FAV Scroll through the programmed Favorite channels. ► p.65


CHAR/NUM, DELETE Used to edit program title in REC.LIST and schedule list.

MUTE Switches the sound on or off. ► p.56

CHANNEL UP/DOWN Changes the channel.

PAGE UP/DOWN Moves from one full set of screen information to the next one.

DVR, USB, Control buttons • Use for USB (PHOTO LIST, MUSIC LIST and MOVIE LIST.) or DVR function.

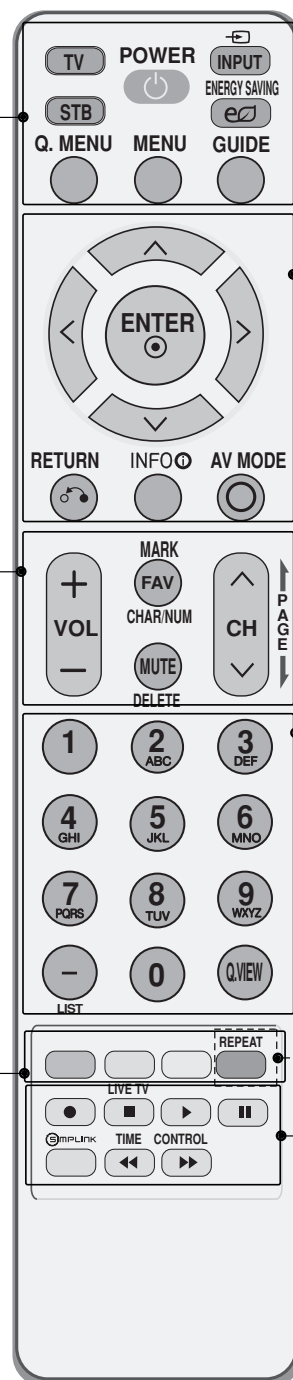

THUMBSTICK
(Up/Down/Left
Right/ENTER)

Navigates the on-screen menus and adjusts the system settings to your preference.
Time Machine control - < , > (Jump thumbnail)

RETURN Allows the user to move return one step in an interactive application or other user interaction function.

INFO Displays the information of watching program.

AV MODE Selects and sets Video and Audio modes. ► p.71

**NUMBER/
character button**

- Directly tune to the channel by numeric button.

- Use for character/number input.

— (DASH) Used to enter a program number for multiple program channels such as 5-1, 5-2, etc.

LIST Displays a list of the programmed all channels.

Q.VIEW Tunes to the last channel viewed.

REPEAT Used in the TIME MACHINE menu function.

**Time Machine/
SIMPLINK
control buttons**

- ◀◀ (Rewind), ▶▶ (Fast Forward), ▶ (Playback), || (Pause)

- Controls the SIMPLINK compatible devices.

(Freezes the current frame by pressing the || (Pause) button. (For PLASMA TV Models))


- (Record) Selects button to record the watching program.

- (Stop) Stops processing of time machine function. (Playback, Record, etc)

LIVE TV Return to the live.

SIMPLINK Shows the list of SIMPLINK devices connected to the TV. ► p.72

Installing Batteries

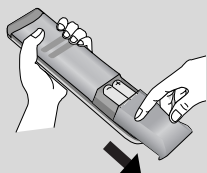

- Open the battery compartment cover on the back side and install the batteries matching correct polarity (+with +,-with -).
- Install two 1.5V AAA batteries. Don't mix old or used batteries with new ones.
- Close cover.

WATCHING TV / CHANNEL CONTROL

POWER Switches the TV ON from standby or standby from ON.

ENERGY SAVING Adjusts the Energy Saving.

BACKLIT Illuminates the remote control buttons of selected mode.

INFO Displays the information of watching program.

TV Select the remote operating mode: TV.

INPUT Selects external sources that are available, Switches the TV on from standby mode. ► p.69

VOLUME UP /DOWN Adjusts the volume.

MARK Select files that you want to delete or move. ► p.102

FAV Scroll through the programmed Favorite channels. ► p.65

CHAR/NUM, DELETE Used to edit program title in REC.LIST and schedule list.

MUTE Switches the sound on or off. ► p.56

CHANNEL UP/DOWN Changes the channel.

PAGE UP/DOWN Moves from one full set of screen information to the next one.


DVR, USB, Control buttons Use for USB (PHOTO LIST, MUSIC LIST and MOVIE LIST,) or DVR function.

Time Machine/ SIMPLINK control buttons


- ◀◀ (Rewind), ▶▶ (Fast Forward), ▶ (Playback), || (Pause)
- Controls the SIMPLINK compatible devices.
- (Freezes the current frame by pressing the || (Pause) button. (For PLASMA TV Models))

- (Record) Selects button to record the watching program.
- (Stop) Stops processing of time machine function. (Playback, Record, etc)

For 32/42/47/55SL80**

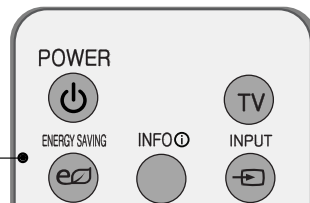

For 42/47/55LH90QD

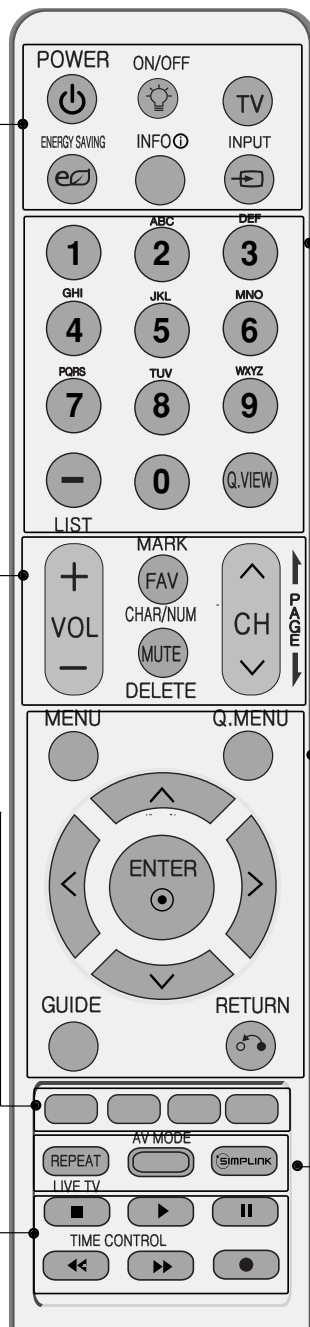


- NUMBER/ character button**
 - Directly tune to the channel by numeric button.
 - Use for character/number input.
- **(DASH)** Used to enter a program number for multiple program channels such as 5-1, 5-2, etc.
- LIST** Displays a list of the programmed all channels.
- Q.VIEW** Tunes to the last channel viewed.

- MENU** Displays the main menu or clears all on-screen displays and return to TV viewing.
- Q.MENU** Opens the list of Quick Menu options. ► **p.60**
- THUMBSTICK**
(Up/Down/Left Right/ENTER) Navigates the on-screen menus and adjusts the system settings to your preference.
Time Machine control - < , > (Jump thumbnail)
- GUIDE** Displays the program event according to time scheduler.► **p.74**
- RETURN** Allows the user to move return one step in an interactive application or other user interaction function.

- REPEAT** Used in the TIME MACHINE menu function.
- AV MODE** Selects and sets Video and Audio modes. ► **p.71**
- SIMPLINK** Shows the list of SIMPLINK devices connected to the TV. ► **p.72**
- LIVE TV** Return to the live.

Installing Batteries

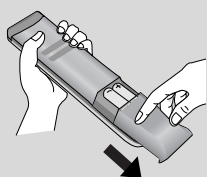

- Open the battery compartment cover on the back side and install the batteries matching correct polarity (+with +,-with -).
- Install two 1.5V AAA batteries. Don't mix old or used batteries with new ones.
- Close cover.

WATCHING TV / CHANNEL CONTROL

REMOTE CONTROL FUNCTIONS


When using the remote control, aim it at the remote control sensor on the TV.

For 42/47SL90**

POWER	Switches the TV ON from standby or standby from ON.
ENERGY SAVING	Adjusts the Energy Saving.
ON/OFF	Illuminates the remote control buttons.
AV MODE	Selects and sets Video and Audio modes. ► p.71
TV	Select the remote operating mode: TV.
INPUT	Selects external sources that are available, Switches the TV on from standby mode. ► p.69

VOLUME UP/DOWN	Adjusts the volume.
MARK	Select files that you want to delete or move. ► p.102
FAV	Scroll through the programmed Favorite channels. ► p.65
CHAR/NUM, DELETE	Used to edit program title in REC.LIST and schedule list.
MUTE	Switches the sound on or off. ► p.56
CHANNEL UP/DOWN	Changes the channel.
PAGE UP/DOWN	Moves from one full set of screen information to the next one.

DVR, USB, Control buttons	Use for USB (PHOTO LIST, MUSIC LIST and MOVIE LIST.) or DVR function.
Time Machine/SIMPLINK control buttons	◀◀ (Rewind), ▶▶ (Fast Forward), ▶ (Playback), (Pause) - Controls the SIMPLINK compatible devices. (Freezes the current frame by pressing the (Pause) button. (For PLASMA TV Models))
● (Record)	Selects button to record the watching program.
■ (Stop)	Stops processing of time machine function. (Playback, Record, etc)

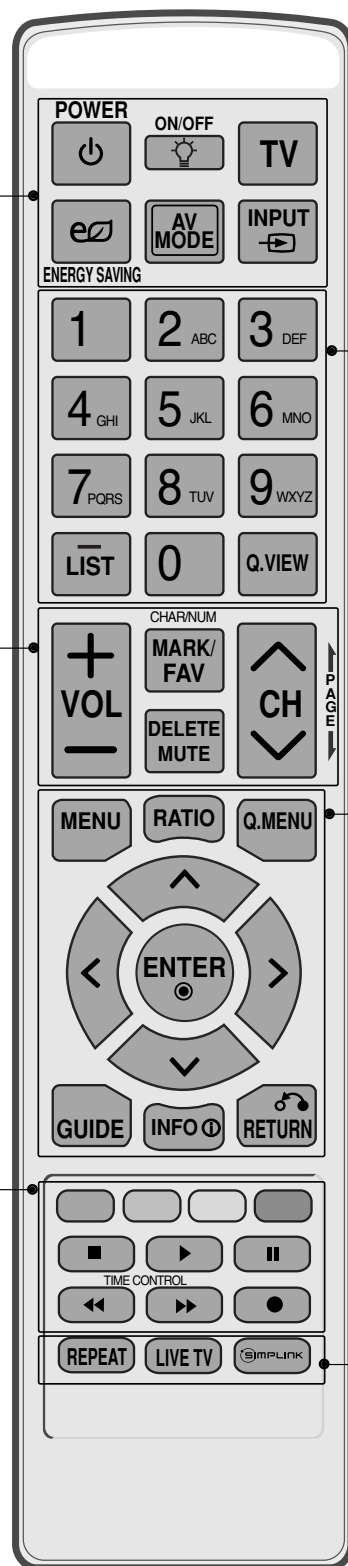


- NUMBER/** ◦ Directly tune to the channel by numeric button.
- character button** ◦ Use for character/number input.
- **(DASH)** Used to enter a program number for multiple program channels such as 5-1, 5-2, etc.
- LIST** Displays a list of the programmed all channels.
- Q.VIEW** Tunes to the last channel viewed.

- MENU** Displays the main menu or clears all on-screen displays and return to TV viewing.
- RATIO** Changes the aspect ratio.
- Q.MENU** Opens the list of Quick Menu options. ► **p.60**
- THUMBSTICK**
(Up/Down/Left
Right/ENTER) Navigates the on-screen menus and adjusts the system settings to your preference.
Time Machine control - < , > (Jump thumbnail)
- GUIDE** Displays the program event according to time scheduler.► **p.74**
- INFO** Displays the information of watching program.
- RETURN** Allows the user to move return one step in an interactive application or other user interaction function.

- REPEAT** Used in the TIME MACHINE menu function.
- LIVE TV** Return to the live.
- SIMPLINK** Shows the list of SIMPLINK devices connected to the TV. ► **p.72**

Installing Batteries

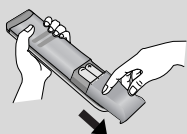

- Open the battery compartment cover on the back side and install the batteries matching correct polarity (+with +,-with -).
- Install two 1.5V AAA batteries. Don't mix old or used batteries with new ones.
- Close cover.

WATCHING TV / CHANNEL CONTROL

TURNING ON THE TV

- 1 First, connect power cord correctly.
And switch the **AC power control switch** on TV. (For LCD TV Models)
At this moment, the TV switches to standby mode.
 - In standby mode to turn TV on, press the ϕ/I (For LCD TV Models) , **INPUT, CH** ($\blacktriangle$ or $\wedge$ $\vee$) button on the TV or press the **POWER, INPUT, CH** ($\wedge$ or $\vee$), **Number (0~9)** button on the remote control.

MAIN POWER SWITCH
(BOTTOM OR BACK)



When the TV cannot be turned on with the remote control, press the main power button on the TV.

- 2 Select the viewing source by using the **INPUT** button on the remote control.
- 3 When finished using the TV, press the **POWER** button on the remote control. The TV reverts to standby mode.

! NOTE

- If you intend to be away on vacation, disconnect the power plug from the wall power outlet.
- If you do not complete the **Initial setting**, it will appear whenever the TV is switched on until the **Initial setting** procedure is completed.

CHANNEL SELECTION

- 1 Press the **CH** ($\wedge$ or $\vee$) or **NUMBER** buttons to select a channel number.

VOLUME ADJUSTMENT

Adjust the volume to suit your personal preference.


- 1 Press the **VOL** ($+$ or $-$) button to adjust the volume.
- 2 If you want to switch the sound off, press the **MUTE** button.
- 3 You can cancel the Mute function by pressing the **MUTE** or **VOL** ($+$ or $-$) button.

INITIAL SETTING

This Function guides the user to easily set the essential items for viewing the TV for the first time when purchasing the TV. It will be displayed on the screen when turning the TV on for the first time. It can also be activated from the user menus.

- Default selection is **“Home Use”**. We recommend setting the TV to **“Home Use”** mode for the best picture in your home environment.
- **“Store Demo”** Mode is only intended for use in retail environments. Customers can adjust the **“Picture menu - Picture mode”** manually while inspecting the TV, but the TV will automatically return to preset in-store mode after 5 minutes.
- **“Store Demo”** Mode is an optimal setting for displaying at stores. “Store Demo” mode initializes the TV to set the image quality.

Step1. Language Selecting

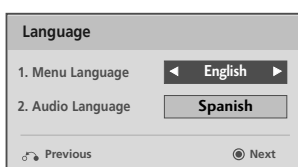


Select **Menu Language** or **Audio Language**.




Select your desired language.

Step2. Mode setting

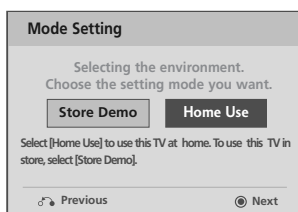

Select **Home Use** mode.

Step3. Time setting

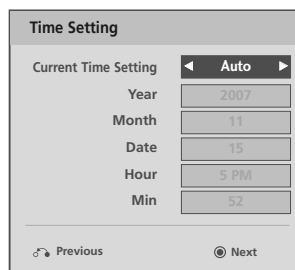


Select **Auto** or **Manual**.



Select desired time option.

Step4. Auto Tuning

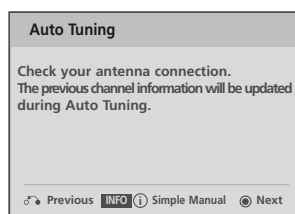

Start **Auto Tuning**.


! NOTE


- You can also adjust **Initial Setting** in the **OPTION** menu.

WATCHING TV / CHANNEL CONTROL

ON-SCREEN MENUS SELECTION

Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.

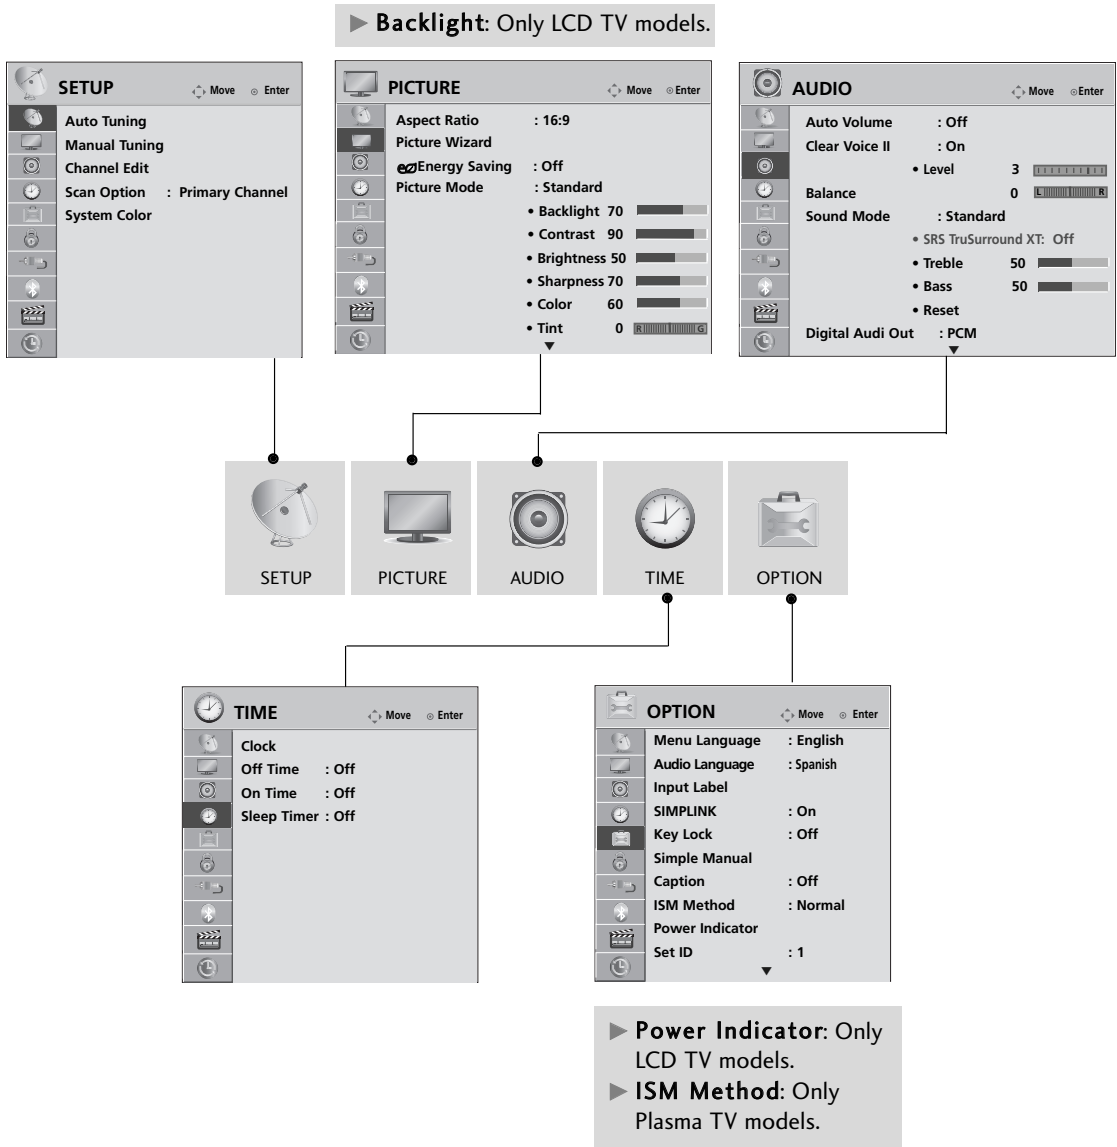

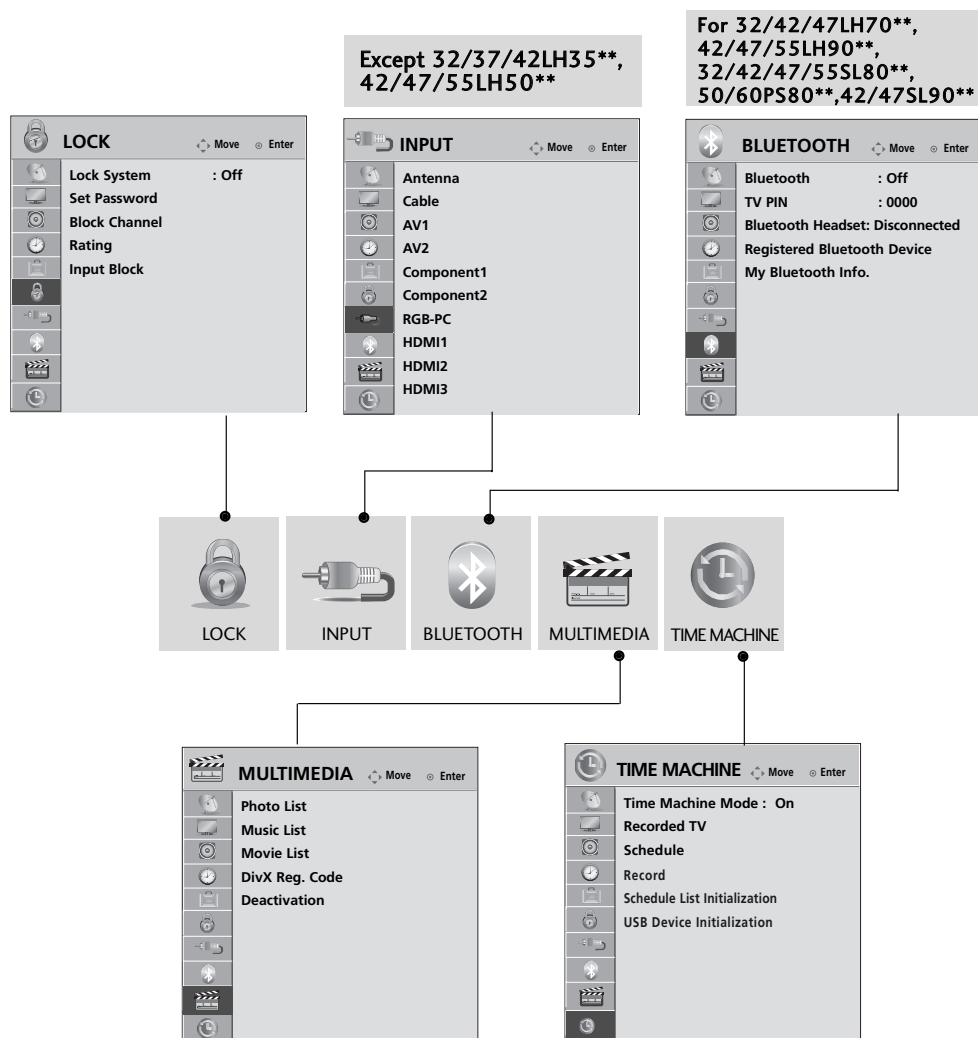

- 1   Display each menu.
- 2   Select a menu item.
- 3  Accept the current selection.
- 4  Return to TV viewing.

WATCHING TV / CHANNEL CONTROL

QUICK MENU

Your TV's OSD (On Screen Display) may differ slightly from what is shown in this manual.

Q.Menu (Quick Menu) is a menu of features which users might use frequently.

- **Aspect Ratio:** Selects your desired picture format.
- **Clear Voice II:** By differentiating the human sound range from others, it helps make human voices sound better.
- **Picture Mode:** Selects the picture depend on the viewing environment.
- **Sound Mode:** Selects the sound for type of program.
- **Multi Audio:** Changes the audio language.(Digital signal)
SAP: Selects MTS sound. (Analog signal)
- **Sleep Timer:** Select the amount of time before your TV turns off automatically.
- **Ch. Add/Delete/Fav:** Select channel you want to add/delete or add the channel to the Favorite List.
- **USB Device:** Select "Eject" in order to eject USB device.




1.   Display each menu.
2.  Make appropriate adjustments.
3.  Return to TV viewing.

CHANNEL SETUP

Auto Scan (Auto Tuning)

Automatically finds all channels available through antenna or cable inputs, and stores them in memory on the channel list.

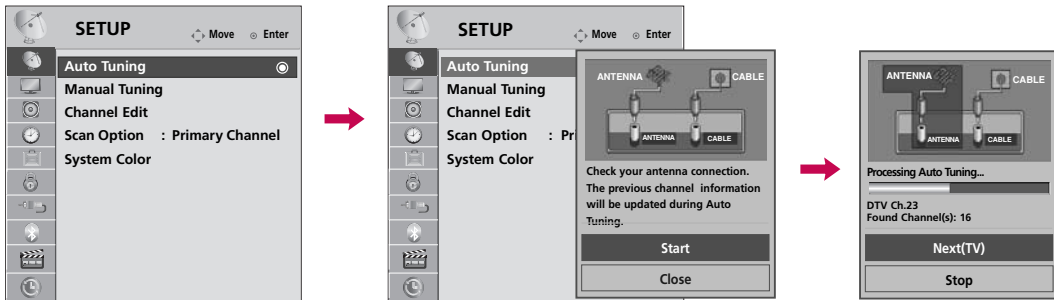


- 1   Select **SETUP**.
- 2   Select **Auto Tuning**.
- 3   Select **Start**.
- 4  Run **Auto tuning**.
- 5  Return to the previous menu.
-  Return to TV viewing.

- The TV will ask for a password if parental control has been activated (LOCK Menu). Use the password you set up in the LOCK Menu to allow a channel search.
- When setting the Auto tuning or Manual tuning, the number of maximum channel you can store is 500.
- It is subject to change depending on the broadcasting signal environment.

WATCHING TV / CHANNEL CONTROL

Add/Delete Channel (Manual Tuning)

When selecting DTV input signal, you can view the on-screen signal strength monitor to see the quality of the signal being received.

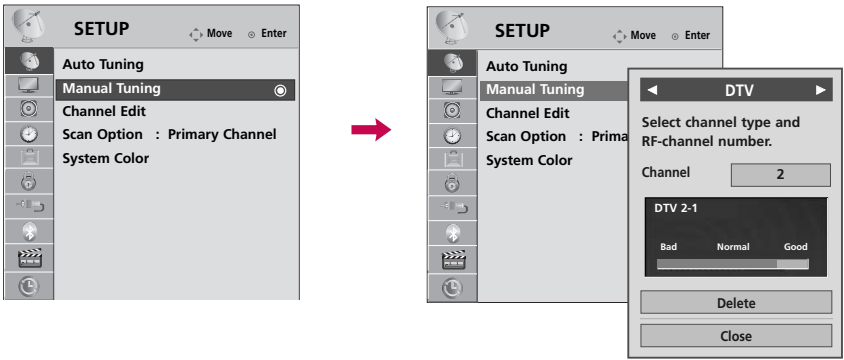


- 1   Select **SETUP**.
- 2   Select **Manual Tuning**.
- 3   Select **TV, DTV, or CATV**.
- 4   Select channel you want to add or delete.
- 5   Select **Add or Delete**.
- 6  Return to the previous menu.
-  Return to TV viewing.

- The TV will ask for a password if parental control has been activated (LOCK Menu). Use the password you set up in the LOCK Menu to allow a channel search.
- When setting the Auto tuning or Manual tuning, the number of maximum channel you can store is 500.
- It is subject to change depending on the broadcasting signal environment.

Channel Editing

When a channel number is deleted, it means that you will be unable to select it using **CH** $\wedge \vee$ button during TV viewing.

If you wish to select the deleted channel, directly enter the channel number with the **NUMBER** buttons or select it in the **Channel Edit** menu.

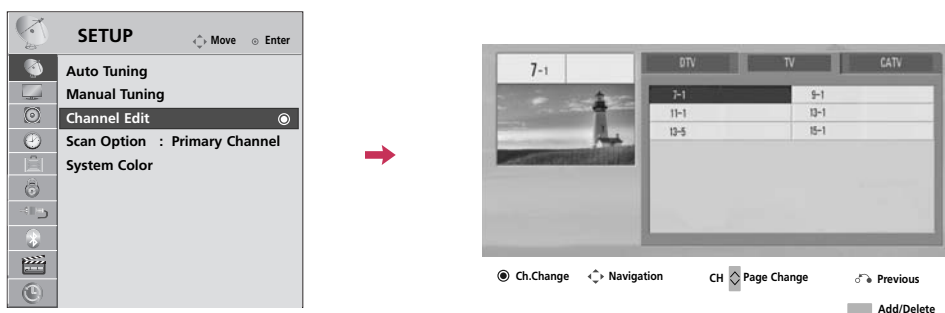


- 1   Select **SETUP**.
- 2   Select **Channel Edit**.
- 3   Select a channel.
- 4  Add or delete a channel.
- 5  Return to the previous menu.
-  Return to TV viewing.

WATCHING TV / CHANNEL CONTROL

CHANNEL LIST

You can check which channels are stored in the memory by displaying the channel label.

 This padlock is displayed when the channel is locked with parental control

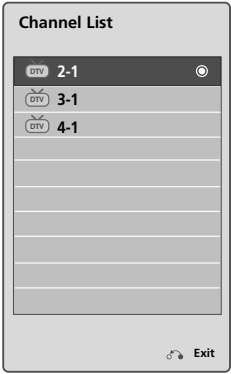

Displaying Channel List

-  Display the **Channel List**.

Selecting a channel in the channel list

-  Select a channel.
-  Switch to the chosen channel number.

Paging through a channel list

-  Turn the pages.
-  Return to TV viewing.

FAVORITE CHANNEL SETUP


Your TV's OSD (On Screen Display) may differ slightly from what is shown in this manual.

Favorite Channels are a convenient feature that lets you quickly select channels of your choice without waiting for the TV to select through all the in-between channels.



- 1  or  Select your desired channel.
- 2   Select **Ch. Add/Delete/Fav**.
- 3  Select **Favorite**.
- 4  Return to TV viewing.

FAVORITE CHANNEL LIST

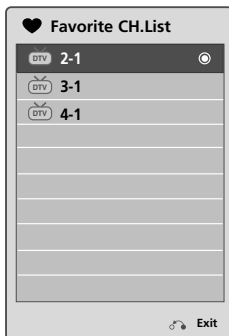

This padlock is displayed when the channel is locked with parental control

Displaying the favorite channel list

- 1  Display the Favorite channel list.

Selecting a channel in the favorite channel list

- 1  Select a channel.
- 2  Switch to the chosen channel number.

Paging through a favorite channel list

- 1  Turn the pages.
- 2  Return to TV viewing.

WATCHING TV / CHANNEL CONTROL

BRIEF INFORMATION

Brief Info shows the present screen information.


- 1

INFO ⓘ

Show the Brief Info on the screen.
- 2

RETURN ⌂

Return to TV viewing

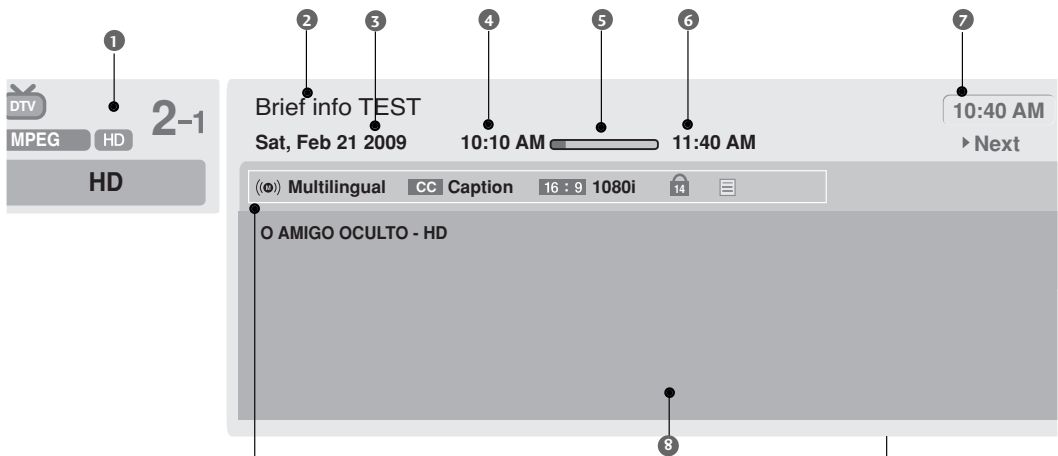

	Multilingual : The program contains two or more audio services. Use the Q.MENU menu to select wanted Audio.	1 Banner information 2 Program title 3 Day, Month, Year 4 Program start time 5 Program progress bar 6 Program finish time 7 Present time 8 Program information
	Caption : The program contains one or more caption services.	
4:3 16:9	The original aspect ratio of the video is 4:3 The original aspect ratio of the video is 16:9 (wide)	
480i 480p 720p 1080i	Video Resolution	
	Blocking conditions by age - L (There is no block), 1 0 (Block if age is under 10 years old), 1 2 (Block if age is under 12 years old), 1 4 (Block if age is under 14 years old), 1 6 (Block if age is under 16 years old), 1 8 (Block if age is under 18 years old).	
	Description	


SCAN OPTION

*This feature is not available for all models.

Whether to search all channels or the first channel of virtual channels is switched with the  when one or more virtual channels exist at one physical channel.

Primary Channel: Only scan the first channel of virtual channels.

All Channel: Scan full channel.

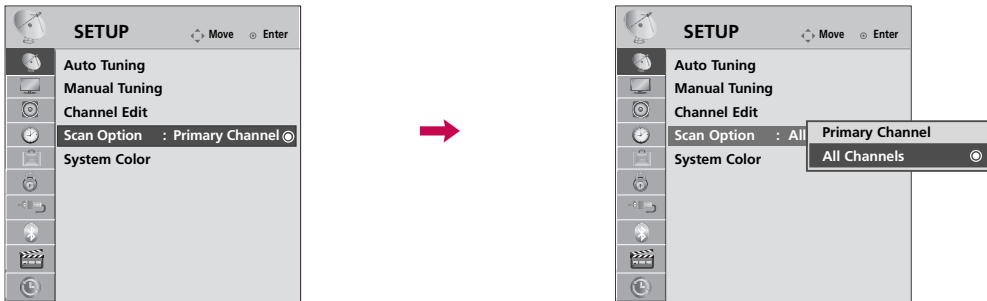

- 1   Select **SETUP**.
- 2   Select **Scan Option**.
- 3   Select **Primary Channel** or **All Channels**.
- 4  Return to the previous menu.
-  Return to TV viewing.


WATCHING TV / CHANNEL CONTROL

SYSTEM COLOR

This function set color suited the each signal.

This feature is disable in digital channel.


Multi : This feature only operates in AV input.

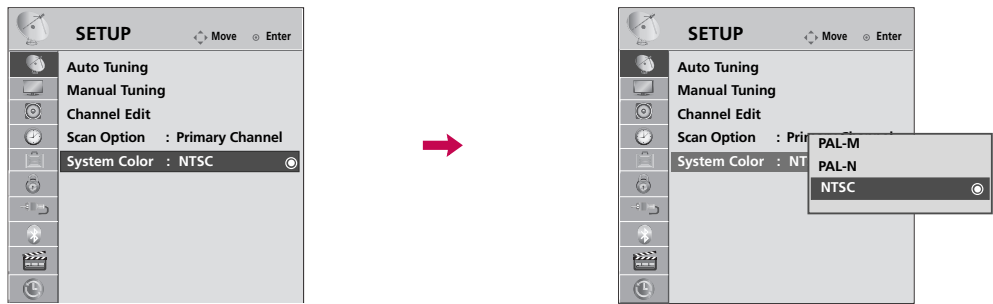

-   Select **SETUP**.
-   Select **System Color**.
-   Select **PAL-M, PAL-N or NTSC**.
-  Return to the previous menu.
-  Return to TV viewing.



INPUT LIST

 Only these input signals which are connected to a TV can be activated and selected.



Select the desired input source.

■ You can also select the desired input source in the **INPUT** menu.

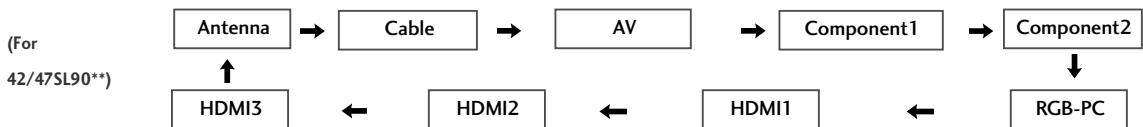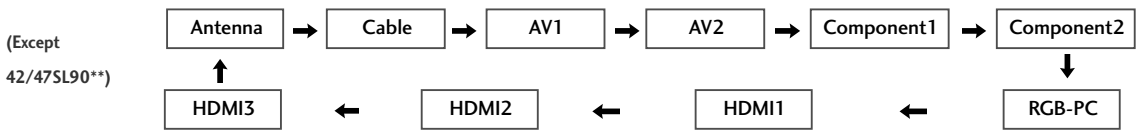

ie)



Disconnected inputs are inactive (grayed out)

Select a desired input source (except **Antenna** or **Cable**). Then, you can select your desired **Input Label** with using Blue button. ► p.70

ie) In case of changing the input label with using Blue button



■ When new external device is connected, this popup menu is displayed automatically.

If selecting **Yes**, you can select input source that you want to appreciate.

■ But, when selecting **"SIMPLINK - On"** in **OPTION** menu, popup menu for HDMI input will not be displayed.




- **Antenna:** Select it to watch over-the-air broadcasts.
- **Cable:** Select it to watch cable.
- **AV:** Select them to watch a VCR or other external equipment.
- **Component:** Select them to watch DVD or a Digital set-top box.
- **RGB-PC:** Select it to view PC input.
- **HDMI:** Select them to watch high definition devices.

WATCHING TV / CHANNEL CONTROL

INPUT LABEL

You can set a label for each input source when it's not in use.
Available label: VCR -> DVD -> Set Top Box -> Satellite -> Cable Box -> Game -> PC -> HD-DVD -> Blu-ray.

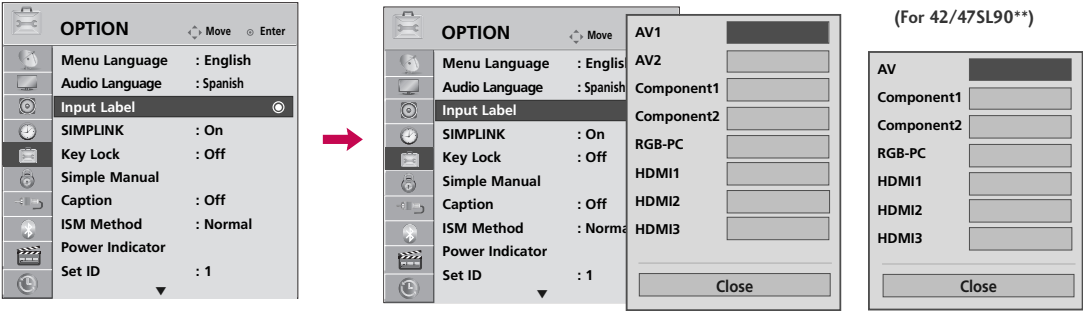

With using OPTION menu


1. Select **OPTION**.
2. Select **Input Label**.
3. Select the source.
4. Select the label.
5. Return to the previous menu.
- Return to TV viewing.

With using INPUT button

1. Select the source.
2. Select the label.
3. Return to the previous menu.
- Return to TV viewing.

AV MODE

You can select the optimal images and sounds.

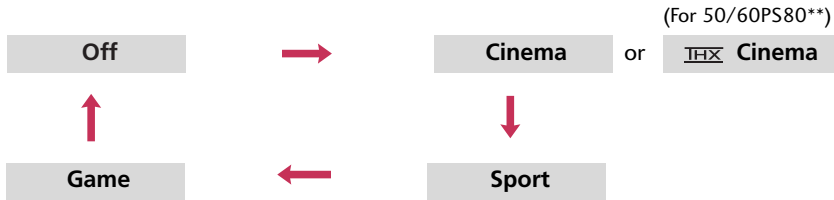

1 Press the **AV MODE** button repeatedly to select the desired source.



2 Return to TV viewing.



- If you select “**Cinema** / **THX Cinema**” in AV mode, **Cinema** will be selected both for “**PICTURE** menu - Picture Mode” and “**AUDIO** menu - Sound Mode” respectively.
- If you select “**Off**” in AV mode, the “**Picture Mode**” and “**Sound Mode**” return to previous selected value.
- **Off**: Disables the AV MODE.
- **Cinema**: Optimizes video and audio for watching movies.
- **Sport**: Optimizes video and audio for watching sports events.
- **Game**: Optimizes video and audio for playing games.

SIMPLE MANUAL

You can easily and effectively access the TV information by viewing a simple manual on the TV.

During the Simple Manual operation, audio will be muted.

On recording, this feature is disable.

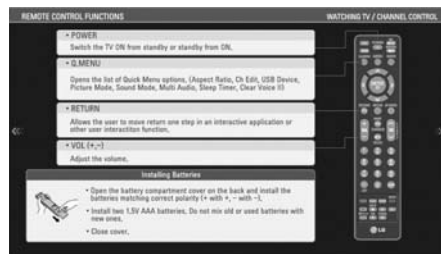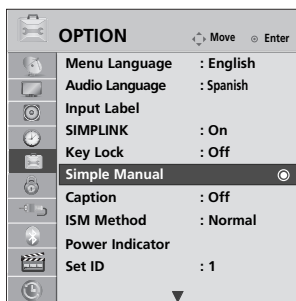

1 Select **OPTION**.



2 Select **Simple Manual**.



3 Select the part of the manual you want to see.




4 Return to TV viewing.

WATCHING TV / CHANNEL CONTROL



SIMPLINK allows you to control and play other AV devices connected with HDMI cable without additional cables and settings. This TV may work with devices with HDMI-CEC support, but only devices with the SIMPLINK logo are fully supported.

SIMPLINK can be turned on and off in the user menus.

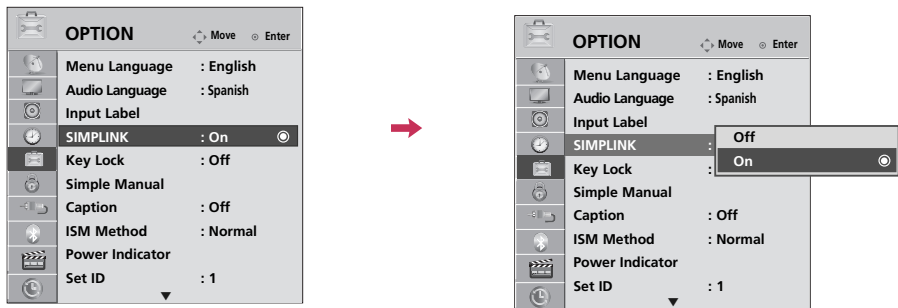

1. Select **OPTION**.
2. Select **SIMPLINK**.
3. Select **On** or **Off**.
4. Return to the previous menu.
- Return to TV viewing.

! NOTE

 
 
 
- ▶ Connect the HDMI/DVI IN or HDMI IN terminal of the TV to the rear terminal (HDMI terminal) of the SIMPLINK device with the HDMI cable.
- ▶ When you switch the Input source with the INPUT button on the remote control, the SIMPLINK device will stop.
- ▶ When you select a device with home theater functionality, the sound output automatically switches to the home theater speakers and the TV speakers are turned off.
- ▶ If a connected SIMPLINK home theater system doesn't play the audio from the TV, connect the DIGITAL AUDIO OUT terminal on the back of the TV to the DIGITAL AUDIO IN terminal on the back of the SIMPLINK device with an OPTICAL cable.


SIMPLINK Functions

- **Direct Play:** After connecting AV devices to the TV, you can directly control the devices and play media without additional settings.
- **Select AV device:** Enables you to select one of the AV devices connected to TV.
- **Disc playback:** Control connected AV devices by pressing the $\wedge \vee < >$, ENTER, $\blacktriangleright$, $\blacksquare$, II, $\blacktriangleleft$ and $\blacktriangleright\blacktriangleright$ buttons.
- **Power off all devices:** When you power off the TV, all connected devices are turned off.
- **Switch audio-out:** Offers an easy way to switch audio-out.
- **Sync Power on:** When the equipment with Simplink function connected HDMI terminal starts to play, The TV will change automatically to turn on mode.

(A device, which is connected to the TV through a HDMI cable but does not support SIMPLINK, does not provide this function)

Note: To operate SIMPLINK, an HDMI cable over Version 1.3 with *CEC function should be used. (*CEC: Consumer Electronics Control).

- 1  Display **SIMPLINK** menu.
- 2  Select the desired device.
- 3  Control connected AV devices.

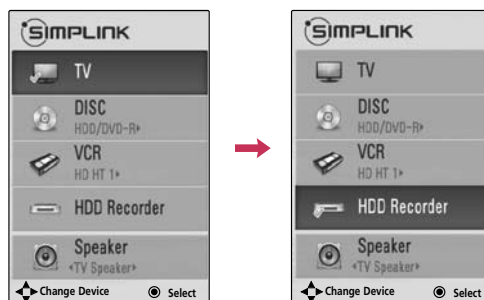

SIMPLINK Menu

- 1 **TV viewing:** Switch to the previous TV channel regardless of the current mode.
- 2 **DISC playback:** Select and play discs. When multiple discs are available, the titles of discs are conveniently displayed at the bottom of the screen.
- 3 **VCR playback:** Control the connected VCR.
- 4 **HDD Recordings playback:** Control recordings stored in HDD.
- 5 **Audio Out to Home Theater speaker/Audio Out to TV:** Select Home Theater speaker or TV speaker for Audio Out.



- When no device is connected (displayed in gray)
- Selected Device
- When a device is connected (displayed in bright color)

WATCHING TV / CHANNEL CONTROL



EPG (ELECTRONIC PROGRAM GUIDE) (IN DIGITAL MODE)

This system has an Electronic Program Guide (EPG) to help your navigation through all the possible viewing options.

The EPG supplies information such as program listings, start and end times for all available services. In addition, detailed information about the program is often available in the EPG (the availability and amount of these program details will vary, depending on the particular broadcaster).

This function can be used only when the EPG information is broadcast by broadcasting companies

The EPG displays the program details for next 8 days.

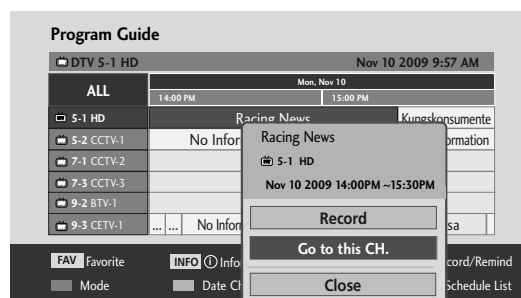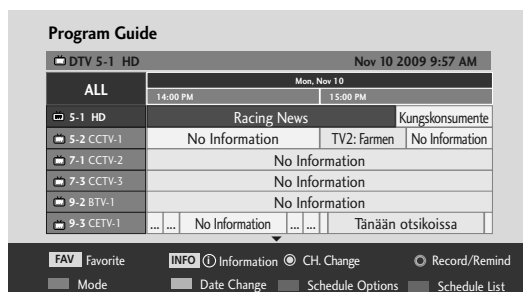


Display the **Program Guide**.



Select the desired program.



 Show the Popup menu.



Select the desired Popup menu.

- If the TV is unplugged once or turn off with the AC power control switch (or ϕ /I (power) button) on the TV, the reserved program reminding will not work.

- When you press the **YELLOW** button from the currently broadcasting program, 'Record', 'Go to this CH.', 'Close' will be displayed.
- When you press the **YELLOW** button from the program after the current time that is not reserved, 'Record', 'Remind', 'Close' will be displayed.
- When you press the **YELLOW** button from the reserved program reminding, 'Record', 'Cancel Remind', 'Close' will be displayed.
- When you press the **YELLOW** button from the reserved program recording, 'Cancel Record', 'Remind', 'Close' will be displayed.
- When you press the **YELLOW** button from the currently broadcasting program recording, 'Cancel Record', 'Go to this CH.', 'Close' will be displayed.

Button Function in NOW/NEXT Guide Mode

	Change EPG mode.		Select the Broadcast Program.
	Move to schedule option popup.		Page Up/Down.
	Switch the Schedule list On or off.		Switch off EPG.
	Change channel (Go to this channel).		The detail information on or off.
	Change NOW&NEXT Mode.		Change the favorite program mode.
	Set Record/Remind.		

Button Function in 8Day Guide Mode

	Change EPG mode.		Select the Broadcast Program.
	Enter Date setting mode.		Page Up/Down.
	Move to schedule option popup.		Switch off EPG.
	Switch the Schedule list On or off.		The detail information on or off.
	Change channel (Go to this channel).		Change the favorite program mode.
	Select a Program.		Set Record/Remind.

Button Function in Date Change Mode

	Switch off Date setting mode.		Switch off EPG.
	Select a date and change to the selected date.		

WATCHING TV / CHANNEL CONTROL

Button Function in Detailed Information Menu

-  Move to schedule option popup.
-  Text Up/Down.
-  Switch off EPG.
-  The detail information on or off.

Button Function in Schedule List Mode

-  Change to Guide mode.
-  Select Schedule list.

BLUETOOTH

- This function is only used for **32/42/47LH70****, **42/47/55LH90****, **32/42/47/55SL80****, **50/60PS80****, **42/47SL90**** models.

Bluetooth?

Bluetooth is a short distance networking technology using 2.4 GHz frequency to connect various types of information devices such as computers, cell phones and PDAs, as well as digital appliances through wireless connection, without having to connect any cable, to enable data exchange.

With the Bluetooth communication function, you can connect the Bluetooth enabled wireless headset or receive images(only JPEG), listen to music from the Bluetooth enabled cell phone using this TV.

- Communication Spec.: Bluetooth Specification Version 2.1 + EDR (Enhanced Data Rate)
- Output: Bluetooth Specification Power Class 2
- Maximum Communication Range: Line of open sight approx. 10 m (30 ft)
- Frequency Band: 2.4 GHz band (2.4 GHz ~ 2.4835 GHz)
- Bluetooth Module: RBFS-B921A
- Compatible Bluetooth Profile: A2DP (Advanced Audio Distribution Profile)
OPP (Object Push Profile)
GAVDP (Generic Audio/Video Distribution Profile)
HSP (Headset Profile)
BIP (Basic Imaging Profile)
FTP (File Transfer Profile)

Precautions when using the Bluetooth


- ▶ Use within 10m(-45°~ 45°) range.
If you use the device out of the range or within the range with obstacles, it can result in communication error.
- ▶ Communication error can occur depending on the surrounding devices.
- ▶ Products using the same frequency of 2.4 GHz (Wireless LAN, microwave oven etc.), can cause communication error by using the same frequency bandwidth.
- ▶ The device search time differs depending on the number of Bluetooth devices and the operating situation.
- ▶ The probability of search increases with less number of devices.
- ▶ Electromagnetic wave can be interfered with applicable wireless devices.
- ▶ Because applicable wireless devices have the possibility of electromagnetic wave interference, they cannot provide services related to human life.
- ▶ You can only connect one Bluetooth device at a time.
- ▶ You cannot receive photos(only JPEG) or listen to music from other Bluetooth devices while using the Bluetooth headset.
- ▶ For details of Bluetooth, refer to the user manual of the Bluetooth device.
- ▶ Operation is subject to the following two conditions: (1) This device may not cause (harmful) interference, and (2) this device must accept any interference received, including interference that may cause undesired operation (of the device).

QDID(Qualified Design Identity): B015199

BLUETOOTH

SETTING THE BLUETOOTH

The Bluetooth feature on this TV allows you to listen to the wireless audio using Bluetooth headphones. It will also connect with a Bluetooth equipped device to view phones.

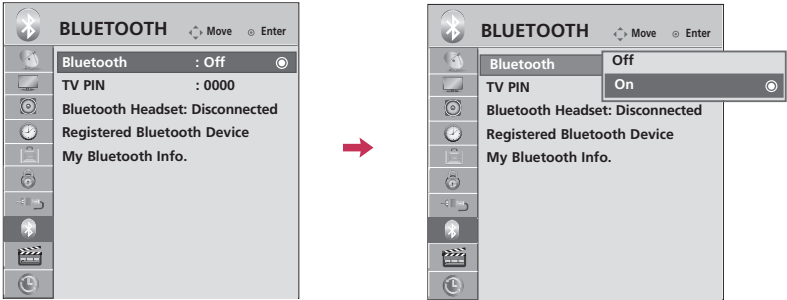

1   Select **BLUETOOTH**.

2   Select **Bluetooth**.

3   Select **On** or **Off**.

4  Start **Bluetooth**. 

5  Return to the previous menu.


 Return to TV viewing.

SETTING TV PIN

To accept a connection from an external Bluetooth device or to connect to an external Bluetooth device, the PIN needs to be entered.

For details on how to set the PIN of the external Bluetooth device, refer to the user manual of the applicable device.

The TV PIN is composed of numbers of up to 10 digits.
The TV PIN must have more than 1 digit.

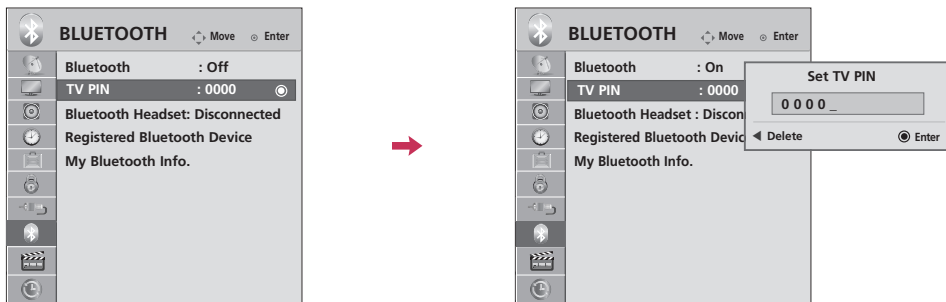

- 1   Select **BLUETOOTH**.
- 2   Select **TV PIN**.
- 3    Select the desired PIN number.
PIN number can support up to maximum of 10 digits.
- 4  Return to the previous menu.
-  Return to TV viewing.

► Press the  button to delete digits one by one.

CONNECTING THE BLUETOOTH HEADSET

When you select the Bluetooth headset, you can listen to the TV audio in the Bluetooth headset through wireless communication. You must pair it with any new Bluetooth device before the first use. For details, refer to the user manual of the applicable device. A maximum of 12 devices can be paired.

Connecting a new Bluetooth headset

You can only search for the new Bluetooth headset only when no headset is already connected. When you run the search, it will show you the list of all Bluetooth headsets responding. After a new Bluetooth device is searched, the PIN number is validated to connect the device. For details, refer to the user manual of the applicable device.

1

Select **BLUETOOTH**.

2

Select **Bluetooth Headset**.

3

Search the Bluetooth headset.
■ If you want to stop, press the **ENTER** button.

4

Select the desired Bluetooth headset.

5

Set the PIN number .

Connect the Bluetooth headset.

Connecting the Bluetooth headset already registered

Bluetooth headsets are listed in the order most recently used with the headset currently in use listed at the top. When connecting the Bluetooth device already registered, you can select and connect directly without any PIN validation.

1

Select **BLUETOOTH**.

2

Select **Bluetooth Headset**.

3

Select the Bluetooth headset in the list.

4

Select **Yes**.

5

Connect the Bluetooth headset.

- ▶ After connecting/using the Bluetooth headset, the headset setting will be the **Disconnected** condition automatically when you turn off the power of the TV and then turn on.
- ▶ After connecting the Bluetooth headset, the TV speaker is switched to Mute condition and the sound will only be generated from the headset.

Disconnecting the Bluetooth headset

- 1   Select **BLUETOOTH**.
- 2   Select **Bluetooth Headset**.
- 3    Disconnect the Bluetooth headset.

! NOTE

- ▶ LG recommends the following headset models.

-Mono/Stereo : FUSION FNC : BT-55D / MOVON : MF 120, MF 300 / LUBIX : UBHS-LC1 / Motorola : H680, S605 / BLUETREK : X2 / PLANTRONICS : VOYAGER 510 / Samsung : SBH170, WEP500 / Nokia : BH-501 / Sony : HBH-GV435 / Apple : iPhone


There might be an audio delay, depending on the buffer memory size of the headset.

- ▶ The stereo/mono headsets officially certified to be Bluetooth compatible can be searched and connected.
- ▶ The stereo/mono headsets that support A2DP or HSP functionality can be connected.
- ▶ If the surrounding environment of the TV is as follows, the device may not be searched or connected properly.
 - If there is strong electromagnetic interference.
 - If there are many Bluetooth devices in the area.
 - If the headset is turned off, not in place or has an error.
 - Because products such as microwave oven, wireless LAN, plasma light, gas range etc., use the same frequency range, it can cause communication errors.
- ▶ Only one Bluetooth device can be connected at a time.
- ▶ Connection that is lost due to the TV being turned off etc. will not be automatically recovered. Try connecting the applicable device again.
- ▶ Some operations can be slower while operating the headset.
- ▶ Even if you choose simplink Home Theater after using the headset during Simplink operation, the unit will not automatically switch to Home Theater speakers.
- ▶ When the headset connection continuously fails, pair the device one more time.
- ▶ The audio quality of mono headsets will not be as good as that for stereo headsets.
- ▶ Mono headsets may suffer from noise as the distance from the TV increases, because they use a different transmission method compared with stereo headsets.
- ▶ When a Bluetooth headset is in use, the Volume +/- and Mute keys do not work, and the Audio menu returns to the default value and is disabled.
- ▶ It does not support the optical power, when connected the Bluetooth headset.
- ▶ On operating USB multimedia, you cannot use the Bluetooth headset.
- ▶ When using the Bluetooth, the recommended capacity is 30GB or less for a USB device.

BLUETOOTH

MANAGING REGISTERED BLUETOOTH DEVICE

If there are no devices registered, Registered Bluetooth Device menu will be deactivated and cannot be used. When 12 devices are registered, you cannot register any more devices, and the external device will no longer be able to pair up with the TV. In this case, you should delete one (disconnect first if a device is connected to the TV) and then you can register another device.

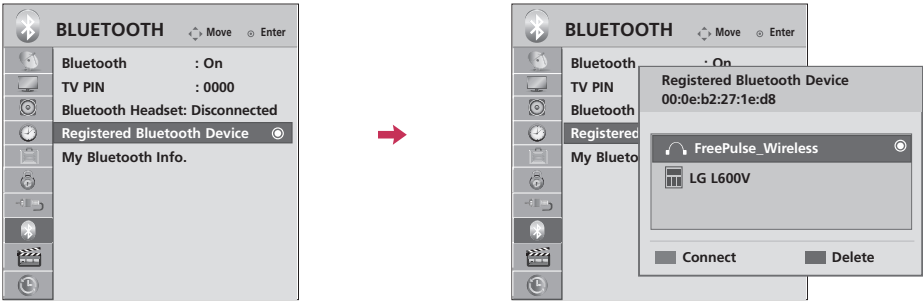

BLUETOOTH

- 1 Select **BLUETOOTH**.
- 2 Select **Registered Bluetooth Device**.
- 3 Check the registered Bluetooth device.


Connecting the registered Bluetooth device

- 1 Select the registered Bluetooth device you want.
- 2 Connect the bluetooth device.
- 3 Select **Yes**.

Deleting the registered Bluetooth device

■ Disconnecting the registered Bluetooth device

- 1 Select the connected Bluetooth device.
- 2 Disconnect the bluetooth device.

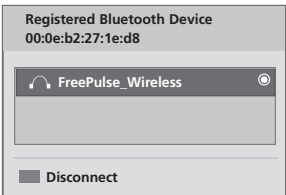


■ Deleting the registered Bluetooth device

- 3 Select **Yes**.

MY BLUETOOTH INFORMATION

This function provides the My Bluetooth Information to the user.
 "Edit" will be available when TV is not connected with any device.

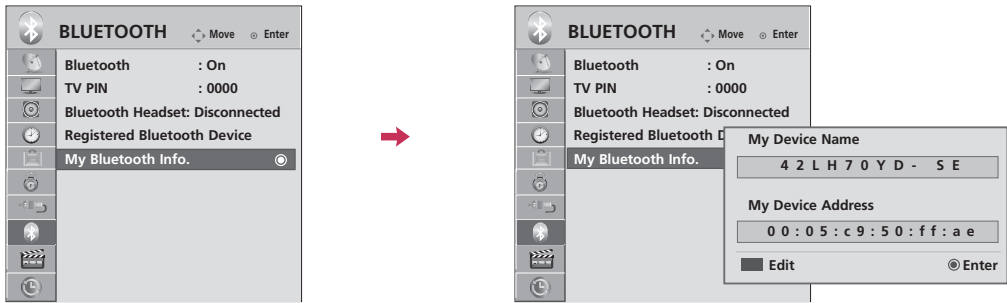

- 1   Select **BLUETOOTH**.
- 2   Select **My Bluetooth Info..**
- 3    Edit the information.
- 4  Save.
- 5  Return to the previous menu.
-  Return to TV viewing.


BLUETOOTH

VIEWING THE PHOTOS WITH BLUETOOTH DEVICE


You can view the photos(*.JPG) that were received from an external Bluetooth device to the TV.

To see the detailed informations about connecting the external Bluetooth device, refer to the user manual of the applicable device.

The On Screen Display on your model may be slightly different.

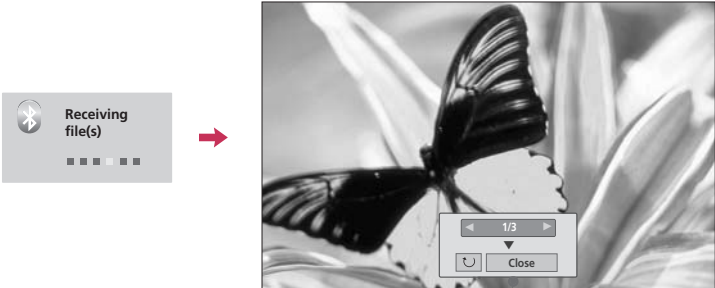

 - ▶  **(Rotate)**: Rotate photos.
 - Every time you press **ENTER** button on  **(Rotate)**, rotates the photo 90° clockwise.
- ▶ **Close** : Close the pop-up menu.
 - when you press the ENTER button, it will appear again.



Select the each menu.


- Use < > button to select the previous or next photo.
- Use ^ v < > button to select and control the menu on the screen.

! NOTE

- ▶ Supported maximum photo size is up to 10MB.
- ▶ You cannot receive the photos while using the Bluetooth headset or listening to the musics from Bluetooth device.
- ▶ On receiving the photos, press the **RETURN** button to stop. At this time, all photos received will be deleted.
- ▶ Some Bluetooth devices may not support sending the photos.

LISTENING THE MUSICS WITH BLUETOOTH DEVICE

You can listen to the musics(**A2DP**) that were received from an external Bluetooth device to the TV.
To see the detailed informations about connecting the external Bluetooth device, refer to the user manual of the applicable device.

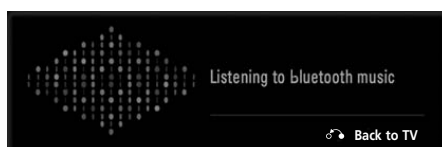

Adjust the volume.

- If you want to switch the sound off, press the **MUTE** button.



Return to TV viewing.

! NOTE

- ▶ You cannot listen to the musics while using the Bluetooth headset or receiving the photos .
- ▶ Some Bluetooth devices may not support listening the music via TV speaker system.

PRECAUTIONS WHEN USING THE USB DEVICE

- ▶ Only a USB storage device is recognizable.
- ▶ If the USB storage device is connected through a USB hub, the device is not recognizable.
- ▶ A USB storage device using an automatic recognition program may not be recognized.
- ▶ A USB storage device which uses its own driver may not be recognized.
- ▶ In case of several partitions or a card reader, up to four memory cards are concurrently recognizable.
- ▶ The recognition speed of a USB storage device may depend on each device.
- ▶ Please do not turn off the TV or unplug the USB device when the connected USB storage device is working. When such device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
- ▶ Only use a USB storage device which has normal music files, image files or movie files.
- ▶ Please use only a USB storage device which was formatted as a FAT16, FAT32 or NTFS file system provided with the Windows operating system. In case of a storage device formatted as a different utility program which is not supported by Windows, it may not be recognized.
- ▶ Please connect power to a USB storage device which requires an external power supply. If not, the device may not be recognized.
- ▶ Please connect a USB storage device with cable is offered by USB maker. If connected with cable is not offered by USB maker or an excessively long cable, the device may not be recognized.
- ▶ Some USB storage devices may not be supported or operate properly.
- ▶ The TV will display up to 128 characters of a files name.
- ▶ Please backup important files because data on USB device may be damaged. Data management is consumer's responsibility and as a result, the manufacturer does not cover data damage.
- ▶ The recommended capacity is 1 TB or less for a USB HDD and 40GB or over for USB memory. Any device with more than the recommended capacity may not work properly.
- ▶ Playing a movie via a USB connection that doesn't support high speed may not work properly.
- ▶ USB storage devices below USB 2.0 are supported as well. But they may not work properly in the movie list.
- ▶ Please maintain the stability of external HDD by using the HDD benchmarking tool in order to guarantee smooth action of HDD.
- ▶ The HDD benchmarking tools is checking the performance of HDD that is read/write rate, access time, stability. It will be able to search at website and use easily it after download the HDD benchmarking tool.


TIME MACHINE(PAUSE & REPLAY OF LIVE TV)

This function allows the unit to automatically record live TV and make it available for viewing at any time. With the Time Machine turned on, you may pause and rewind normal TV viewing at any time without missing any of the live broadcast.

(Time Machine and Recording functions may not work if the signal strength is weak.)

This function is only operated after initializing USB Device.


- 1 Connect the USB device to the **USB IN** jacks on the back(or side) of TV.

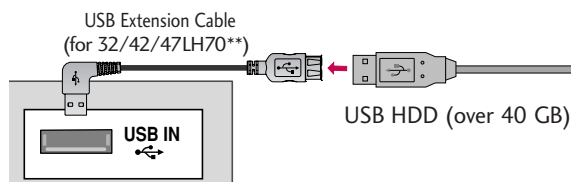

- 2 To use the USB device (over 40 GB) for Timemachine, execute **USB Device Initialization**.

- It initializes the HDD connected to the USB as disk mode for Timemachine.
- It is activated only when the USB HDD available for Timemachine is connected.
- When **USB Device Initialization** is executed, all the data stored in the USB device is deleted.
- While performing **USB Device Initialization**, do not remove the USB device. It may cause error on the TV and the storage device.

USB device Initialization

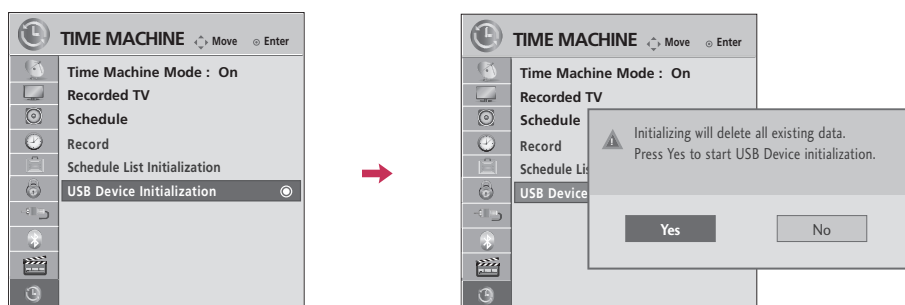

- 1 Select **TIME MACHINE**.
- 2 Select **USB Device Initialization**.
- 3 Select **Yes**.


- When initialization is completed, a popup notice of completion is displayed and the connected USB HDD is available for Timemachine.

NOTE

- ▶ Depending on the capacity of the USB device, the initialization time may vary.
- ▶ The initialized USB device is not recognized by the PC.
- ▶ When a USB device of less than 40 GB is connected, the USB Device Initialization is not activated.
- ▶ Supported maximum external HDD size for back-up is up to 1TB.

TIME MACHINE


Time Machine Mode

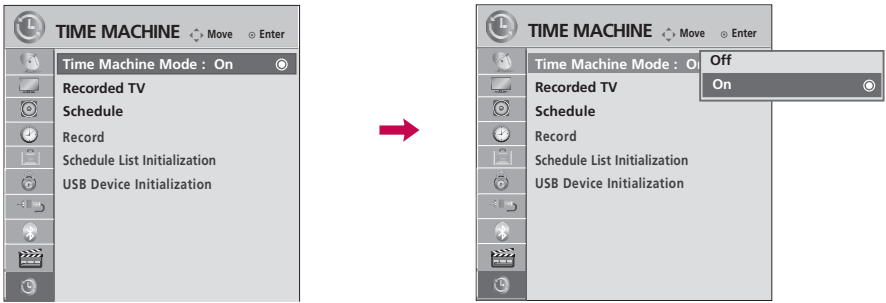

- 1   Select **TIME MACHINE**.
- 2   Select **Time Machine Mode**.
- 3   Select **On** or **Off**.
- 4  Return to the previous menu.
-  Return to TV viewing.

► Time Machine Mode is available in DTV mode.

Time Machine Progress

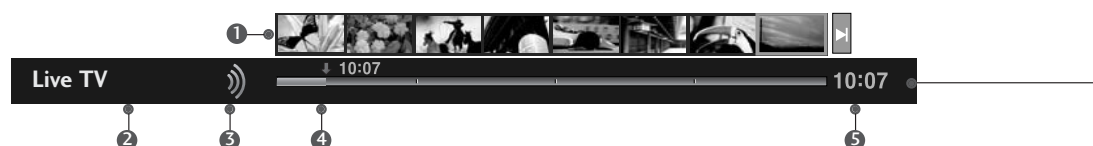

- 1 After selecting **Time Machine Mode On**, press the **ENTER** button.

- As soon as Time Machine starts, a progress bar indicating the current recording status is displayed in the bottom of the screen.
- Press the **RETURN** button to hide the 'Progress Bar' or press the **ENTER** button to display the 'Progress Bar'.
- This function is preserved even change a program on progressing the Time Machine.

- 2 When finished enter the **Time Machine Mode** menu and then turn **Time Machine Mode Off**.

The 'Progress Bar'?

This function indicates what Time Machine reviewing is possible, a current on-screen and live broadcasting position.

- 1 Preview
- 2 Current Status while using the Time Machine
- 3 Current operating function while using the Time Machine


▶ Playback	↶ Direct view +
▶▶ Fast forward	↷ Direct view -
◀◀ Rewind	⏮ By one screen
⏸ Pause	⏭ Slow playback
- 4 Current location and progress time in playback
- 5 Total progress time of the Time Machine

! NOTE

- ▶ In order to save hard-disk space, nothing is saved when there is no signal.
- ▶ Time Machine can be used for maximum of 2 hours.
- ▶ You can't do the channel change or input conversion on recording.
- ▶ When turning power on, it may take up to a maximum of 3 minutes to initialize the HDD.
- ▶ Recording or playing the recorded program may not initiate for a copy-protected program.
- ▶ Instant recording time is set to 3 hours and supported maximum time is up to 5 hours.

Playback during the Time Machine

 During the Time Machine play, the following options are available.



Use of remote control


You can playback the temporarily saved part in various methods during the Time Machine.

	During playback, repeatedly, press the REW(◀◀) or FF(▶▶) button to speed up. ■ Every time you press the button, the search speed will increase by stage(up to 5 stages).
	During playback, press the Pause(II) button. ■ Pause screen is displayed. ■ Every time you press the Pause(II) button from the pause screen, it will move screen by screen. (II▶) ■ Press the Pause(II) button and then use the FF(▶▶) button for slow motion. (I▶)
	When you move the cursor using the Time Machine (◀, ▶) button during playback, and then press the ENTER button, the screen will directly play at the applicable screen where the cursor is located. (◀, ▶)
	To view the current live broadcast, press the LIVE TV button during playback.

RECORDING


Use this function when you cannot watch the desired program due to being out.

Recording or Reminding function in the Program Guide

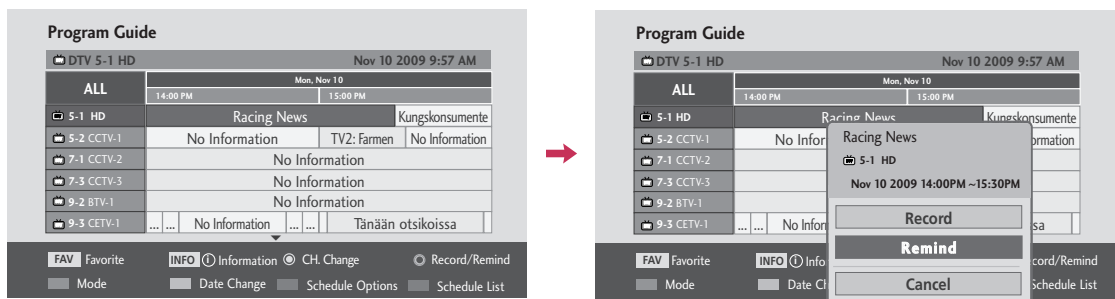

- 1 Display the **Program Guide**.
- 2 Select desired program.
- 3 Select **Record** or **Remind**.
- 4 Return to TV viewing.

 - You can also select **Record** or **Remind** by pressing the repeatedly on the remote control.




NOTE

- ▶ If you turn off the power during the recording, the program being recorded may not be saved. Therefore it is good to press the Stop (■) button and check the reserved/recorded list, and then turn off the power.
- ▶ Recording cannot be reserved for a period less than 10 seconds.
- ▶ Because the title and time of the program for Record/Remind is based on the information transmitted from the broadcasting station, they may be different than the actual ones depending on the situation of the broadcasting station.
- ▶ Recording time may differ depending on resolution of input signal or USB HDD capacity.
- ▶ When it is time for the reserved recording to start and the power of the TV is turned off, the TV will turn on the power of the part required for the recording and proceed to the reservation.
- ▶ When it is time for the reserved recording to start and the Immediate recording is in progress, the recording of the program currently being recorded will be stopped and saved, and then proceed to the reserved recording.
- ▶ If the TV is unplugged once or turn off with the AC power control switch (or (power) button) on the TV, the reserved recording will not work.

Start/Stop record

You can record the channel you are watching for three hours.

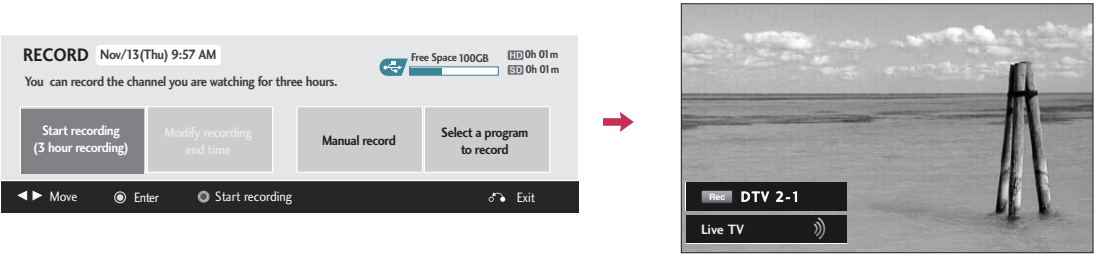


1 When watching the program, Select it you wish to record.


2  Display the recording setting.
■ You can also select this setting in the **Record** menu.

3  or  Start the recording.
■ During recording, **Rec DTV 2-1** is displayed.

4     Select **Yes** to stop the recording.
■ You can also select **Stop recording** using the  button .

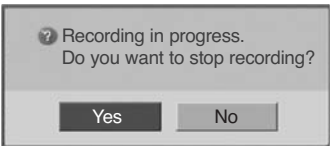

5  Return to TV viewing.

 

Modify recording end time

You can shorten or extend the recording time.



- 



During recording ,
Select the **Modify recording end time**.
- 

Set the Recording End Time.
- 






Select the **Close**.

 
 
 
NOTE

- ▶ When recording, if the available storage space is not sufficient, the recording will automatically Stop.
- ▶ Recordings of less than 10 seconds will not be saved.
- ▶ To save disk space while recording broadcasts, no data will be saved if there is no signal.
- ▶ The recording function will not initiate for a copy-protected **program**.
- ▶ The displayed time may differ slightly from the actual time.
- ▶ When there is no signal or a film source is being viewed, the displayed time may differ slightly from the actual time.

Manual record

This function is easy to register to reserved recording.
Timer recording is set.

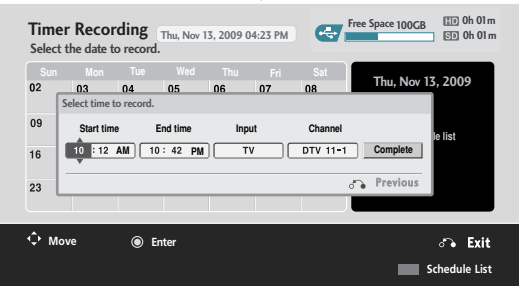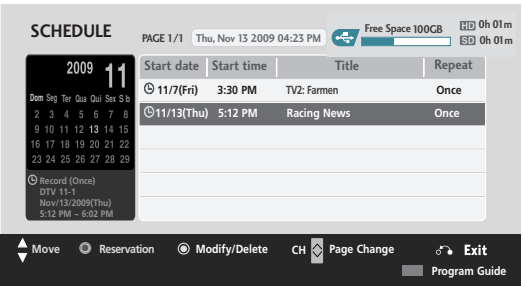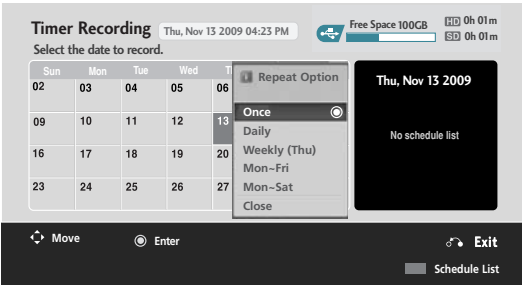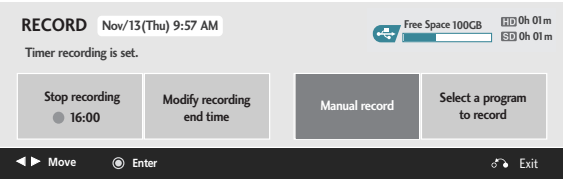

-  Select the **Manual record**.
-  Select **Date**.
-  Select the repeat option.
-  Set the desired **Start Time, End Time, Input and Channel**.

-  Select the **Complete**.
-  Display the Schedule List.
-  Return to TV viewing.

NOTE

- ▶ Recording is not possible with copy-protected programs.

Program with copy protection : failed to record.


- ▶ When a poor quality external source is recorded the quality of the recording will not be optimal.
- ▶ Manual Recording available time is maximum 3 hours and minimum 2 minutes.
- ▶ When broadcasting station send the wrong time information, reserved recording may be failed.
- ▶ If different channels are set for the same time for on time and reserved recording, this TV is powered on to the reserved recording channel.

SCHEDULE

Schedule List

This function is used to show scheduled recordings.

You can store up to 30 programs.

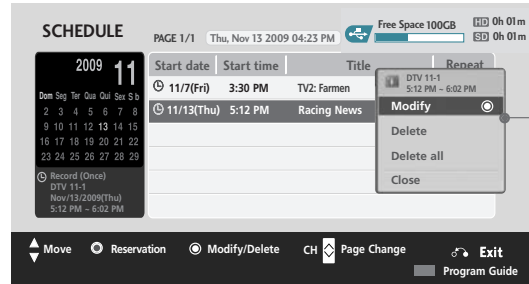

When you select a desired item, this PopUp menu is displayed.

► **Modify:** Edit the contents of **Start date/Start time/End time/Title/Repeat**.

You must press the **RETURN** button to save the edited contents.

This feature is disabled in reserved reminding.

► **Delete:** Delete the selected item in the list.

► **Delete all:** Delete all items in the list.

► **Close:** Close the pop-up menu.



Select **TIME MACHINE**.



Select **Schedule**.



Select a desired item in the schedule list.



Show the Popup menu.



Select the desired Popup menu.




Return to TV viewing.

TIME MACHINE

Schedule List Initialization

This function is to reset the schedule list.

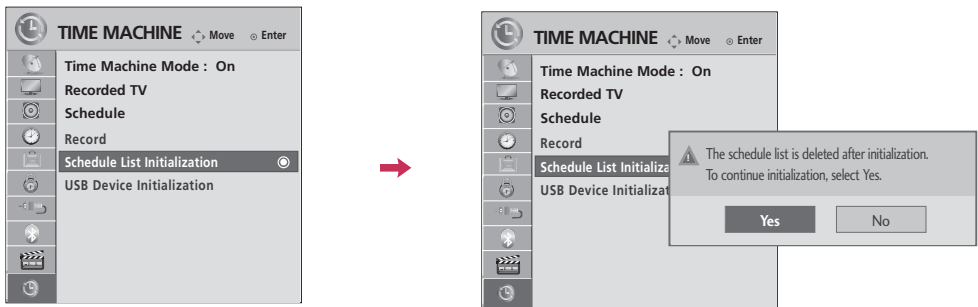


-   Select **TIME MACHINE**.
-   Select **Schedule List Initialization**.
-   Select **Yes**.
Start the Schedule List Initialization.
-  Return to the previous menu.
-  Return to TV viewing.

RECORDED TV

You can view the recorded program list at a glance.
The recorded program stored in the USB device can be played.

Recorded List

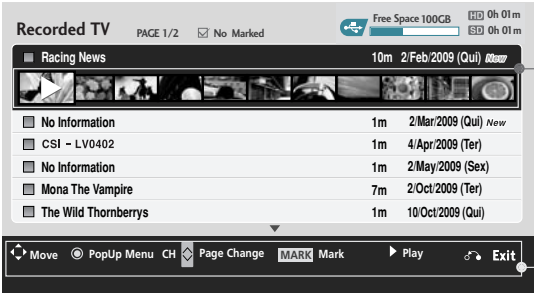

Recorded TV PAGE 1/2 [X] No Marked Free Space 100GB HDD 0h 01m SD 0h 01m

Racing News 10m 2/Feb/2009 (Qui) <i>NEW</i>		
No Information	1m	2/Mar/2009 (Qui) <i>NEW</i>
CSI - LV0402	1m	4/Apr/2009 (Ter)
No Information	1m	2/May/2009 (Sex)
Mona The Vampire	7m	2/Oct/2009 (Ter)
The Wild Thornberrys	1m	10/Oct/2009 (Qui)

Move PopUp Menu CH Page Change MARK Mark Play Exit

 Move to the desired scene and play the recorded program.

[Use of remote control]

 Show the popup menu.

 Move to next page.

 Check and un-check recorded programs.


- A  is displayed next to the preview window if an item is marked.

-   Select **TIME MACHINE**.
-   Select **Recorded TV**.
-   Select a recorded program.
-  Return to TV viewing.


NOTE

- ▶ If there is a bad sector in the disk, part or all of the items of the **Recording list** can be deleted.
- ▶ Maximum number of recordings within the Recording list is 200. When the number of recordings in the Recording list is 200, you cannot record any more.
- ▶ When the full duration of the recording is played back, the screen will stay in the stopped condition for 10 seconds and then automatically end the playback.
- ▶ The recording can be played back even during the recording/reserved recording.
- ▶ During the playback of the recording, the hard disk can generate a certain level of noise. This noise is irrelevant from the performance and reliability of the product and is normal for a hard drive to have a certain level of noise.

Recorded program Selection and Popup Menu

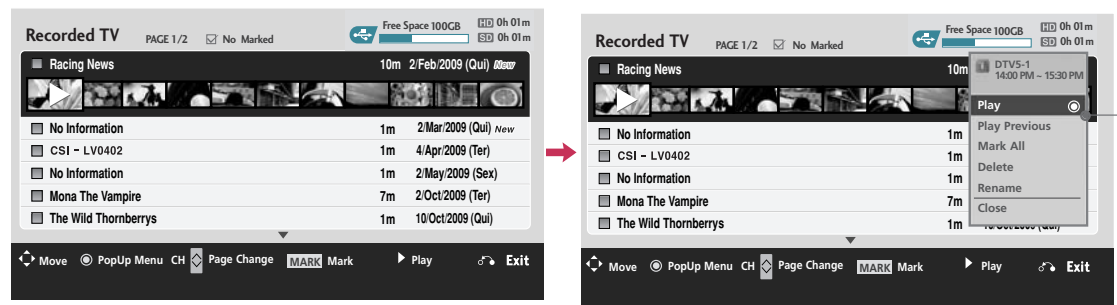

- ▶ **Play** : Playback of selected recorded programs.
- ▶ **Play Previous** : Resumes playing at the previously stopped point.
- ▶ **Mark All** : Mark all recorded programs in the list.
- ▶ **Unmark All** : Change marked recorded programs to unmarked recorded programs.
- ▶ **Delete** : Delete the selected recorded programs.
- ▶ **Rename** : Edit recorded program title.
- ▶ **Close** : Close the pop-up menu.

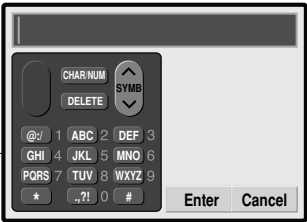

-  Select a desired recorded program.
-  Show the Popup menu.
-  Select the desired Popup menu.
-  Return to TV viewing.


Playing Recorded programs

You can play a selected program from the recorded list.

1 Play a recorded program.

When you press the **ENTER** button during the playback, the information of the recorded program you are current watching will be displayed at the top of the screen and a progress bar showing the current status of the playback at the bottom of the screen. (Playback status is displayed as follows.)

■ To remove the progress bar, press the **ENTER** button.

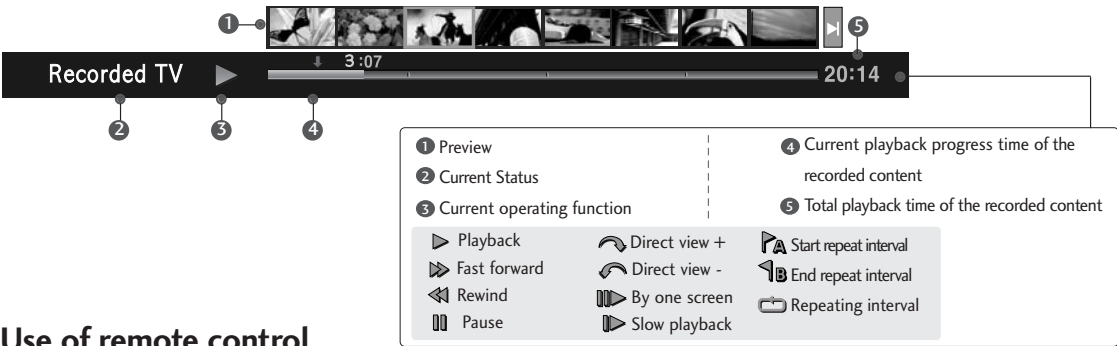

Use of remote control


You can adjust various method during the recorded program play.

	During playback, repeatedly, press the REW(◀◀) or FF(▶▶) button to speed up. ■ Every time you press the button, the search speed will increase by stage.(up to 5 stages)
	During playback, press the Pause(II) button. ■ Pause screen is displayed. ■ Every time you press the Pause(II) button from the pause screen, it will move screen by screen. (II▶) ■ Press the Pause(II) button and then use the FF(▶▶) button for slow motion. (II▶) ■ If you don't press any button 10 minutes after the pause, it will return to the playback.
	When you move the cursor using the Time Machine (<, >) button during playback, and then press the ENTER button, the screen will directly play at the applicable screen where the cursor is located. (<, >)
	When you press the LIVE TV button, the playback will end and you can watch the TV.
	Press the REPEAT button at the starting point where you want to set the interval repeat and press it again at the ending point. To cancel the playback for the interval repeat, press the REPEAT button one more time. ■ The start of the Interval repeat is displayed as A and end of the Interval repeat as B in the recording progress bar at the bottom of the screen. Start and end of the Interval repeat can be set both in forward and reverse direction. ■ Interval shorter than 10 seconds cannot be set. ■ When the Interval repeat is canceled, it will return to normal playback from the end point of the interval.
	To return to normal playback, press the PLAY(▶) button.

ENTRY MODES

When you connect a USB device, this screen is displayed automatically.
In USB device, you can not add a new folder or delete the existing folder.

- 1 Connect the USB device to the **USB IN** jacks on the back(or side) of TV.

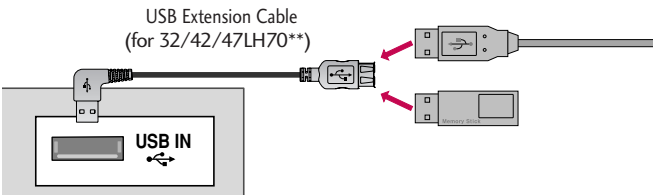

- 2  Select **PHOTO LIST**, **MUSIC LIST** or **MOVIE LIST**.



- 3 

When removing the USB device

Select the **USB Device** menu before removing the USB device.

- 1   Select **USB Device**.

- 2  Select **Eject** .

! NOTE

- The screen saver feature runs when the moving, deleting or copying operation of a photo, music or movie file continues for a long time.(For Plasma TV models)

PHOTO LIST

You can view .JPG files from the USB devices.

The On Screen Display on your model may be slightly different.

This function is not operated after initializing USB Device.

PHOTO(*.JPEG) supporting file

Baseline: 64 x 64 ~ 15360 x 8640

- You can play JPEG files only.
- Non-supported files are displayed in the form of bitmap.
- This TV will not be able to decode some JPG images saved using the progressive option.



1. Select **MULTIMEDIA**.
2. Select **Photo List**.

Screen Components

1. Moves to upper level folder
2. Preview: Display the thumbnail/folder name of the photo in the selected folder
3. Current page/Total pages
4. Total number of marked photos
5. Corresponding buttons on the remote control





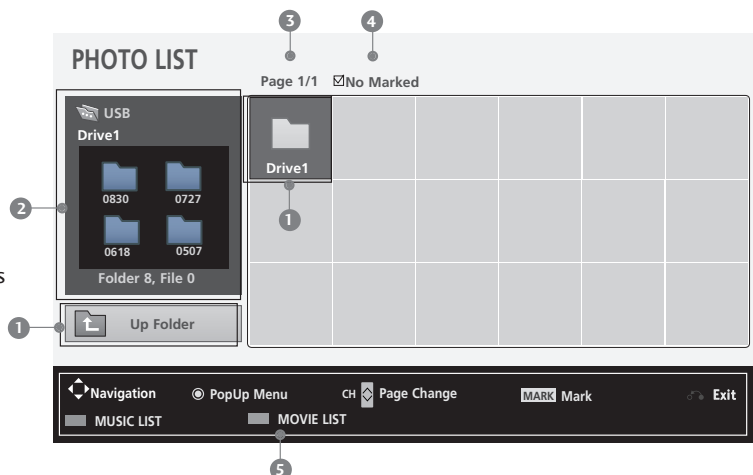 


Photo Selection and Popup Menu

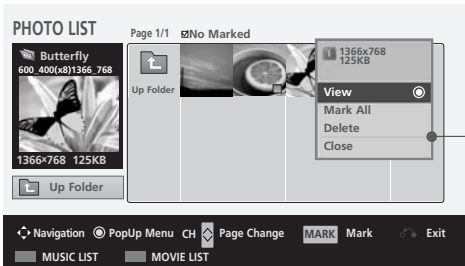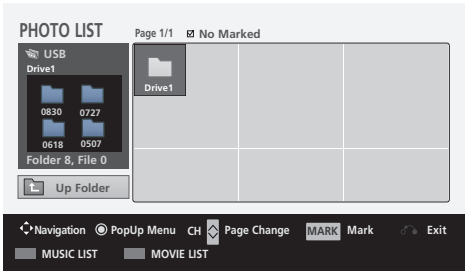 

When you select a file (not folder), this PopUp menu is displayed.



- **View:** Display the selected item.
- **Mark All:** Mark all photos on the screen.
- **Unmark All:** Deselect all marked photos.
- **Delete:** Delete the selected photo item(except NTFS file system).
- **Close:** Close the pop-up menu.

-  Select the target folder or drive.
-  Select the desired photos.
-  Show the pop-up menu.
-  Select the desired Popup menu.

- Use the **CH** ^ v button to navigate in the photo page.
- Use the **MARK** button to mark or unmark a photo. When one or more photos are marked, you can view individual photos or a slide show of the marked photos. If no photos are marked, you can view all photos individually or all photos in the folder in a slide show.

Full Screen Menu



You can change the Photo List view so that it fills the screen. More operations are available in full screen mode.

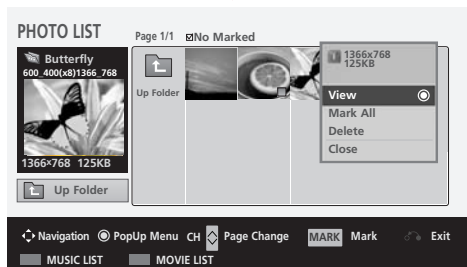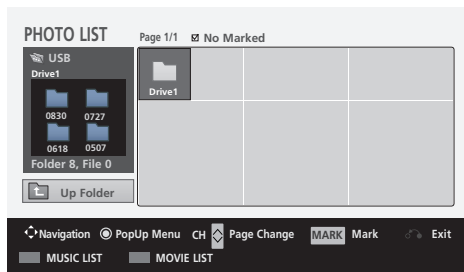

The aspect ratio of a photo may change the size of the photo displayed on the screen in full size.

- 1  Select the target folder or drive.
- 2   Select the desired photos.
- 3  Show the pop-up menu.
- 4  Select **View**.
- 5  The selected photo is displayed in full size.

 
■ Use the **CH**   button to navigate in the photo page.

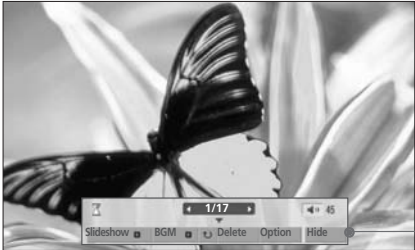

Select the **Slideshow**, **BGM**, **(Rotate)**, **Delete**, **Option**, or **Hide**.

- Use < > button to select the previous or next photo.
- Use ^ v < > button to select and control the menu on the full-sized screen.

- ▶ **Slideshow:** Selected photos are displayed during the slide show. If no photo is selected, all photos in the current folder are displayed during slide show.
 - Set the time interval of the slide show in **Option**.
- ▶ **BGM:** Listen to music while viewing photos in full size.
 - Set the BGM device and folder in **Option**.
- ▶ **(Rotate):** Rotate photos.
 - Rotates the photo 90°, 180°, 270°, 360° clockwise.
- ▶ **Delete:** Delete a photo.
- ▶ **Option:** Set values for **Slide Speed** and **BGM Folder**.
 - Use < > button and **ENTER** button to set values. Then go to **Enter** and press **ENTER** to save the settings.
 - You cannot change **BGM Folder** while BGM is playing.
- ▶ **Hide :** Hide the menu on the full-sized screen.
 - To see the menu again on the full-sized screen, press **ENTER** button to display.

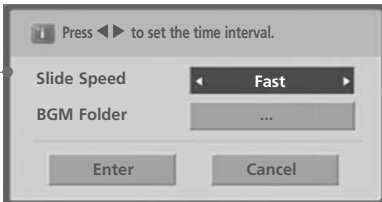

MUSIC LIST

You can use the Music List menu to play MP3 files form.

This TV cannot play back copy-protected files.

The On Screen Display on your model may be slightly different.


Supported music file: *.MP3

- Bit rate range 40Kbps ~ 320Kbps


- Sampling rate (Sampling Frequency)

MPEG1 : 32, 44.1, 48KHz

 MPEG2 : 16, 24, 22.05KHz




Select **MULTIMEDIA**.

 

Select **Music List**.

Screen Components

- 1 Moves to upper level folder
- 2 Preview: If any album jacket for the file exists, this jacket is displayed.
- 3 Current page/Total pages
- 4 Total number of marked musics
- 5 Corresponding buttons on the remote control

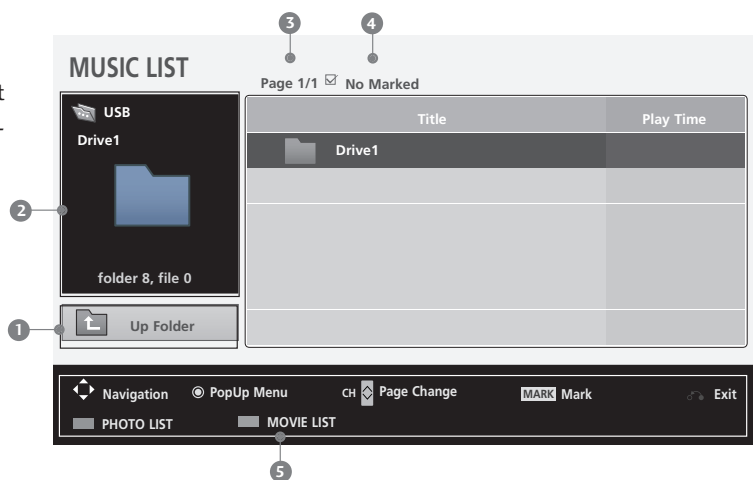

Music Selection and Popup Menu

Up to 6 music titles are listed per page.



- **Play** (During stop): Play the selected music.
Once a song finishes playing, the next selected one will be played. When there are no selected musics to play, the next one in the current folder will be played. If you go to a different folder and press the **ENTER** button, the current music in playback will stop.
- **Stop Play** (During playback): Stop playing musics.
- **Play with Photo**: Start playing the selected musics and then move to the Photo List.
- **Mark All**: Mark all musics in the folder.
- **Unmark All**: Deselect all marked music.
- **Delete**: Delete the selected music.
- **Cancel**: Close the pop-up menu.

1. Select the target folder or drive.
2. Select the desired musics.
3. Show the pop-up menu.
4. Select the desired Popup menu.
5. Return to TV viewing

- Use the **CH** ^ v button to navigate in the music page.
- Use **MARK** button to mark or unmark a music file. If no music is marked, all the music in the folder will be played in sequence. When one or more music files are marked, the marked music files will be played in sequence. If you want to listen to only one song repeatedly, just mark that one file and play.

- The play information box (as shown below) will automatically move across the screen when there is no user input to prevent a fixed image remaining on the screen for an extended period of time.



! NOTE

- ▶ When music is playing,  is displayed in front of the music play time.
- ▶ A damaged or corrupted music file that cannot be played displays 00:00 as the play time.
- ▶ Music files with copy-protection will not play.
- ▶ Press **ENTER**, , or **RETURN** button to stop the screen saver.
- ▶ This TV can not play music files less than 16 Kbytes.

MULTIMEDIA

MOVIE LIST

The movie list is activated once USB devices are detected.

It is used when playing movie files on TV.

Displays the movies in the USB devices and supports play.

Allows playback of all movies in the folder and user desired files.

It is a movie list that displays folder information and DivX file.



- 1 Select **MULTIMEDIA**.
- 2 Select **Movie List**.

Screen Components

1 Moves to upper level folder

2 Preview: Selected movies are played at X4 speed. And sound is mute.

3 Current page/Total pages

4 Total number of marked movies

5 Corresponding buttons on the remote control

MOVIE LIST

Page 1/1 ☒ No Marked

USB Drive1

folder 8, file 0

Up Folder

Title	Play Time
Drive1	

Navigation

PopUp Menu

CH

Page Change

MARK Mark

Exit



PHOTO LIST

MUSIC LIST

108

Movie Selection and Popup Menu

Up to 6 movie titles are listed per page.

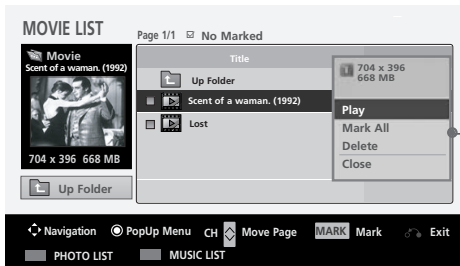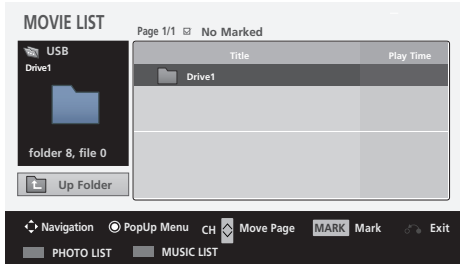

► **Play** (During stop): Play the selected movie.

Once a movie finishes playing, the next selected one will be played. When there are no selected movies to play, the next one in the current folder will be played. If you go to a different folder and press the **ENTER** button, the current movie in playback will stop.

► **Mark All**: Mark all movies in the folder.

► **Unmark All**: Deselect all marked movie.

► **Delete**: Delete the selected movie.

► **Close**: Close the pop-up menu.



1 Select the target folder or drive.



2 Select the desired movies.



3 Show the Popup menu.





4 Select the desired Popup menu.

- Use the **CH** ^ v button to navigate in the movie page.
- Use **MARK** button to mark or unmark a movie file. When one or more movie files are marked, the marked movie files will be played in sequence.

Playing the Movie

You can adjust various method during the movie play.

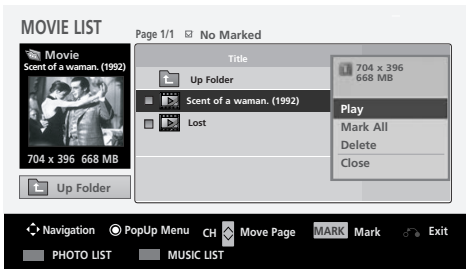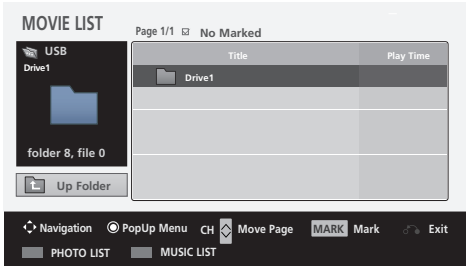

INFO Display the DivX Banner in the top of the screen.




-  Select the target folder or drive.
-   Select the desired movies.
-  Show the pop-up menu.
-   Select **Play**.
-  Display the current movie status progress bar in the bottom of the screen.

[Use of remote control]

 	Press the REW(◀◀) button to rewind. Press the FF(▶▶) button to forward fast.
	Press the Pause(II) button to pause the screen.
	Press the Stop(■) button to stop.
 	Press the Pause(II) button and then use the FF(▶▶) button for slow motion.

Option Menu Selection

During the movie play, the following options are available.

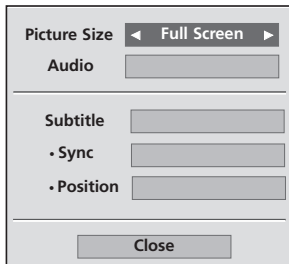

► **Picture Size:** Select the Full screen or Original size.

► **Audio:** Select the language.

But, the file with only one audio can not be selected.

► **Subtitle:** The subtitle can be turned on or off.

If there are two or more subtitles, you can select one of them.

Subtitle Language	Support Language
Latin1	English, Spanish, French, German, Italian, Swedish, Finnish, Dutch, Portuguese, Danish, Romanian, Norwegian, Albanian, Gaelic, Welsh, Irish, Catalan, Valencian

• **Sync:** When the video is not synchronized with the caption, it can be adjusted by the unit of 0.5 second.

• **Position:** Move the location of the subtitle.



 
Display the **Option** menu.



Select the desired movie option.



Make appropriate adjustments.



Select **Close**.

Precautions when playing the DivX

Subtitle format : *.smi/ *.srt/ *.sub(MicroDVD, SubViewer 1.0/ 2.0)/ *.ass/ *.ssa/*.txt(TMPlayer), *.psb(PowerDivx)

Maximum supported DivX bitrate : 20Mbps(Mega bit per second)

- Specific subtitles created by the user may not be operated normally.
- Some special characters are not supported in subtitles.
- HTML tags are not supported in subtitles.
- Only the files saved in ASCII CODE is supported in subtitles.
- Subtitles in languages other than the supported languages are not available.
- **Time information in an external subtitle file should be arranged in ascending order to be played.**
- Damaged movie files may not be played, and certain functions could be limited during the playback.
- Playback for movie file exceeding 30GB (Giga Byte) is not supported.
- If the video and audio structure of recorded file is not interleaved, either video or audio is outputted.
- H.264 codec is supported up to profile level 4.1.
- Files encoded with GMC(Global Motion Compensation) or quarter pel motion estimation may not be played.
- The video file and the subtitle file must be located in the same folder.
- The name of the video file and the subtitle file must be the same to view the subtitles normally.
- Even the supported codec may not be played depending on the encoded condition.
- Files had with not index may not be operated normally.

Supported Movie File

File Extensions	A/V	Codec	Profile/Level Support	Explanation
.asf .wmv .wma	Video	VC-1 Advanced Profile	Advanced Profile@Level 3 (eg. 720p60, 1080i60, 1080p30)	Only streams compliant to SMPTE 421M VC-1 standard are supported.
		VC-1 Simple and Main Profiles	Simple Profile@Medium Level (eg. CIF,QVGA) Main Profile@High Level (eg. 1080p30)	
	Audio	WMA Standard		
		WMA 9 Professional		
.divx .avi	Video	DivX3.11	Advanced Simple Profile (eg. 720p/1080i)	Global motion compensation or quarterpel motion estimation does not supported. Streams using this syntax are not supported.
		DivX4		
		DivX5		
		DivX6		
	Audio	XViD	Main Profile@ Level 4.1 High Profile@ Level 4.1 (eg. 720p60, 1080i60, 1080p30)	
		H.264 / AVC		
.mp4 .m4a .m4v	Video	MPEG-1 Layer I, II MPEG-1 Layer III(MP3) AC-3		Global motion compensation or quarterpel motion estimation does not supported. Streams using this syntax are not supported.
	Audio			
.mkv	Video	H.264 / AVC	Main Profile@ Level 4.1 High Profile@ Level 4.1 (eg. 720p60, 1080i60, 1080p30)	Most of the MKV content available is encoded by the open source x264 codec.
	Audio	MP3	Advanced Simple Profile (eg. 720p/1080i)	
.ts .trp .tp	Video	H.264 / AVC	Main Profile@ Level 4.1 High Profile@ Level 4.1 (eg. 720p60, 1080i60, 1080p30)	Only streams compliant to SMPTE 421M VC-1 standard are supported.
		MPEG-2	Main Profile@High Level(eg. 720p60, 1080i60)	
		VC-1	Simple Profile@Medium Level (eg. CIF, QVGA) Main Profile@High Level (eg. 1080p30) Advanced Profile@Level3 (eg. 720p60, 1080i60, 1080p30)	
	Audio	MPEG-1 Layer I, II MPEG-1 Layer III(MP3) AC-3		
		MP3		
.vob	Video	MPEG-1	Main Profile@High Level (eg. 720p60, 1080i60)	
		MPEG-2		
	Audio	AC-3 MPEG-1 Layer I, II DVD-LPCM		
.mpg	Video	MPEG-1 MPEG-2	Main Profile@High Level (eg. 720p60, 1080i60)	Only streams compliant configured properly for TS, PS or ES
	Audio	MPEG-1 Layer I, II		

DIVX REGISTRATION CODE

Confirm the DivX registration code number of the TV.
Using the registration number, movies can be rented or purchased at www.divx.com/vod.



- 1   Select **MULTIMEDIA**.
- 2   Select **DivX Reg.Code**.
- 3 
- 4  Return to the previous menu.
-  Return to TV viewing.


! NOTE

- ▶ With a DivX registration code from other TV, playback of rented or purchased DivX file is not allowed.
(Only DivX files matched with the registration code of the purchased TV are playable.)
- ▶ The video or audio of a file converted based on a standard other than the DivX codec standard may be corrupted or unable to be played.

MULTIMEDIA

DEACTIVATION

Delete the existing authentication information to receive a new DivX user authentication for TV.
Once this function is executed, a DivX user authentication is required again to see DivX DRM files.

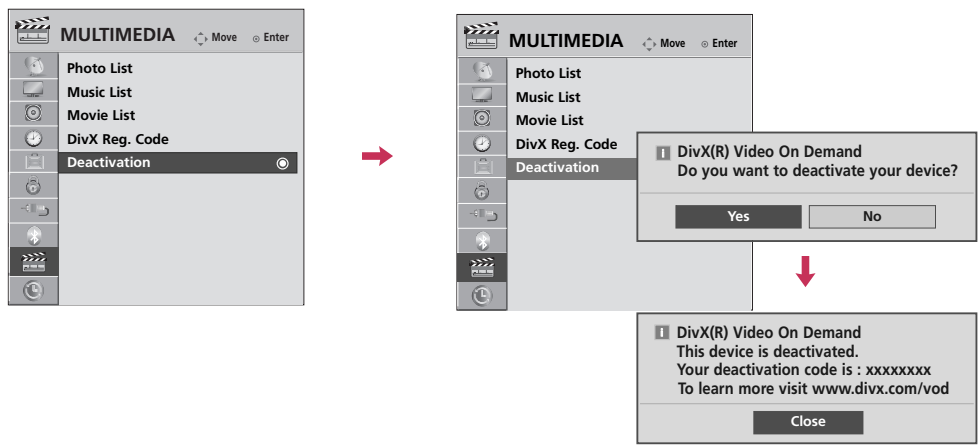


MULTIMEDIA

-   Select **MULTIMEDIA**.
-   Select **Deactivation**.
-    Select **Yes** or **No**.
-  Return to the previous menu.
-  Return to TV viewing.

PICTURE SIZE (ASPECT RATIO) CONTROL

This feature lets you choose the way an analog picture with a 4:3 aspect ratio is displayed on your TV.

- RGB-PC input source use 4:3 or 16:9 aspect ratio.

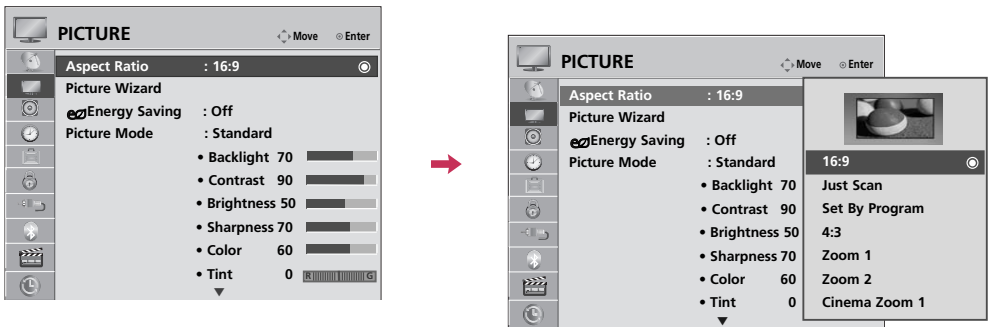

- 1   Select **PICTURE**.
- 2   Select **Aspect Ratio**.
- 3   Select the desired picture format.
- 4  Return to the previous menu.
-  Return to TV viewing.

■ You can also adjust **Aspect Ratio** in the **Q-Menu**.

PICTURE CONTROL

16:9

Adjust the picture horizontally, in a linear proportion to fill the entire screen.



Just Scan

Normally the edges of video signals are cropped 1-2%. Just Scan turns off this cropping and shows the complete video.

Notes: If there is noise on the edges of the original signal, it will be visible when Just Scan is activated.

Just Scan operates only in DTV/Component/HDMI-DTV/DVI-DTV (720p/1080i/1080p) input source.



Set By Program

Selects the proper picture proportion to match the source's image.

(4:3 → 4:3)

(16:9 → 16:9)




4:3

Choose 4:3 when you want to view a picture with an original 4:3 aspect ratio.



Zoom 1

Choose Zoom 1 when you want the picture to be altered, both vertically extended and cropped. The picture taking a halfway trade off between alteration and screen coverage.

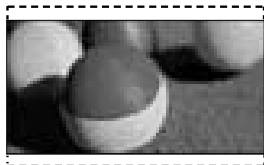

Zoom 2

With this function, when the SD screen is sent to the HD with black at the left side and the right side, this screen can be extended to be fully displayed with no black area.


It is enabled only at the DTV HD broadcasting. (It is the reference for displaying 'HD' at the channel banner if the height is greater than 480.)



Cinema Zoom

Choose Cinema Zoom when you want to enlarge the picture in correct proportion. Note: When enlarging or reducing the picture, the image may become distorted.

- ◀ or ▶ button: Adjust proportion of Cinema Zoom. The adjustment range is 1-16.
- ▲ or ▼ button: Move the image on the screen.

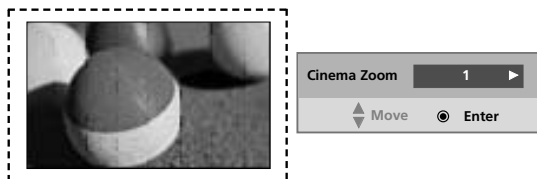


PICTURE CONTROL

PICTURE WIZARD


This feature lets you adjust the picture quality of the original image.

Use this to calibrate the screen quality by adjusting the Black and White Level etc. You can calibrate the screen quality by easily following each step.


When you adjust the image to **Low**, **Recommended** or **High**, you can see the example of the changes you made.

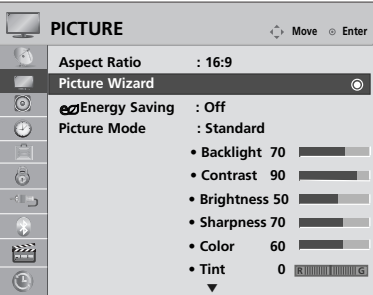


- 1 Select **PICTURE**.
- 2 Select **Picture Wizard**.

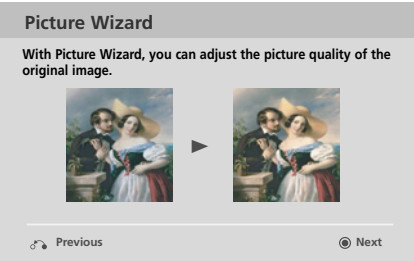


- 4 Adjust **Picture Wizard**.

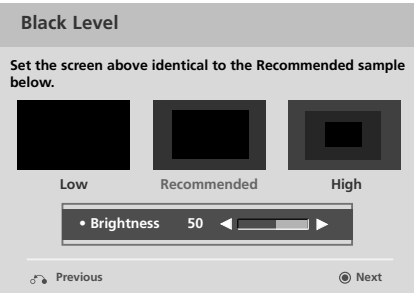


- 5 Adjust **Black Level**.

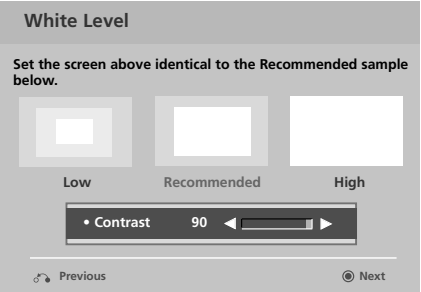


- 6 Adjust **White Level**.

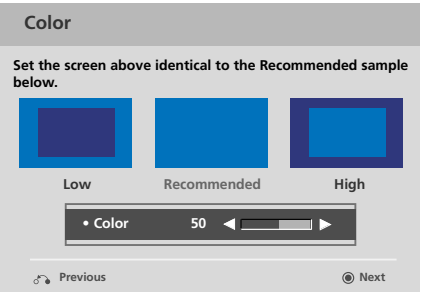


- 7 Adjust **Color**.

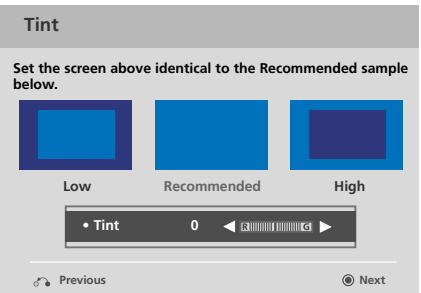


- 8 Adjust **Tint**.

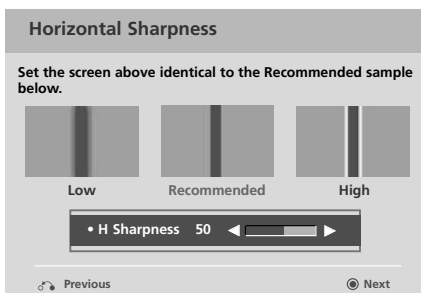


- 9 Adjust **Horizontal Sharpness**.

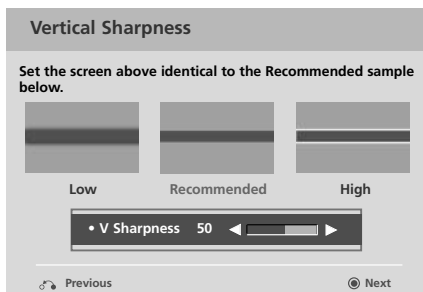


10   Adjust **Vertical Sharpness**.

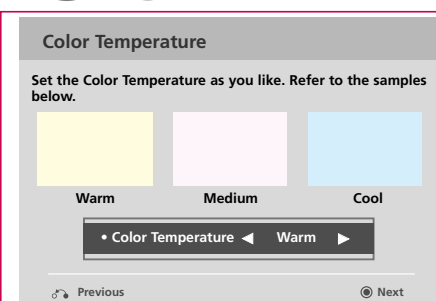

11   Adjust **Color Temperature**.

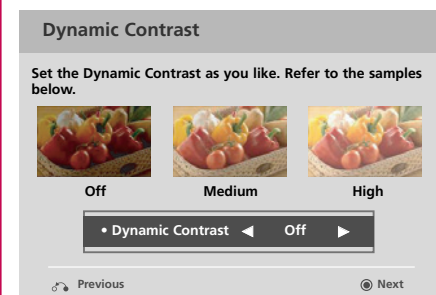


12   Adjust **Dynamic Contrast**.

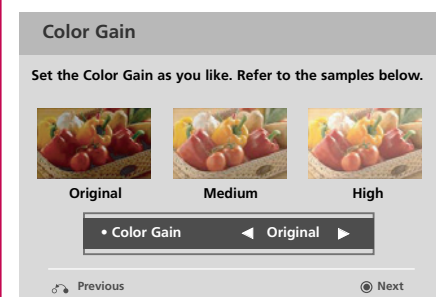


13   Adjust **Color Gain**.

For 42/47SL90**

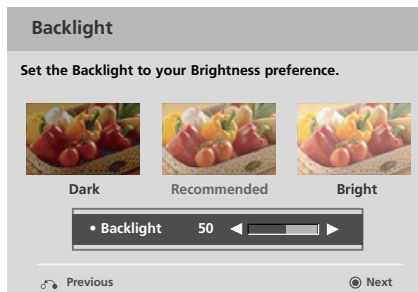


14   Adjust **Backlight**.
(For LCD TV models)

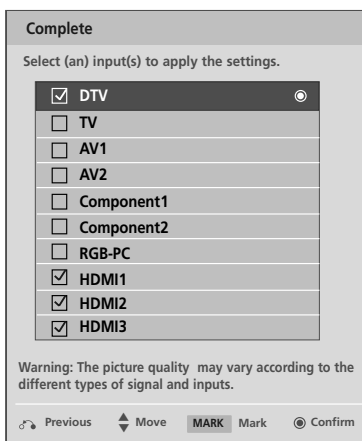

15   Select input source to apply the settings.

16  Save.

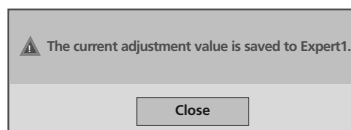


17  Finish the Picture Wizard.

- If you stop the setting before the final step, the changes will not be saved to the TV.

PICTURE CONTROL

PRESET PICTURE SETTINGS (PICTURE MODE)

There are factory presets for picture settings available in the user menus. You can use a preset, change each setting manually.

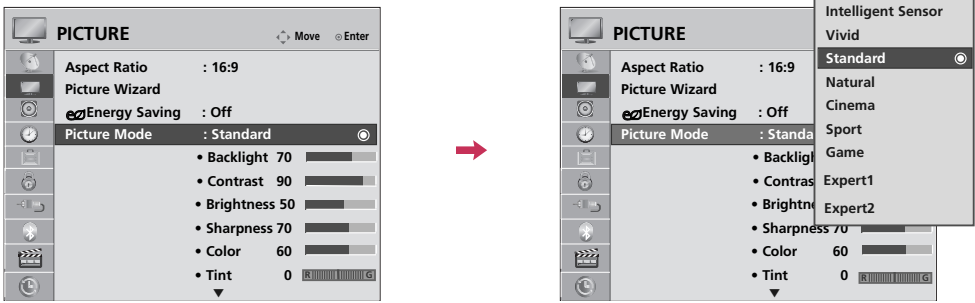


1. Select **PICTURE**.
2. Select **Picture Mode**.
3. Select **Intelligent Sensor** (Except 42/50PQ60**, 50/60PS80**, 32/37/42LH35**), **Vivid**, **Standard**, **Natural** (For LCD TV Models), **Cinema** (or **THX Cinema**), **Sport**, or **Game**.
4. Return to the previous menu.
 Return to TV viewing.

- **THX** (Thomlinson Holman's Experiment) is the audio and video certification standard of THX established by George Lucas and Thomlinson. This is the product to be certified in THX display area and guarantees screen quality that exceeds the display standard specification in both hardware and software.

- When selecting **Intelligent Sensor**, **Energy Saving** is changed to **Auto** automatically (For LCD TV Models).
- When selecting **Intelligent Sensor**, it is changed contrast, brightness, sharpness, color and tint automatically (Except 42/50PQ60**, 50/60PS80**, 32/37/42LH35**).
- **Vivid**, **Standard**, **Natural** (For LCD TV Models), **Cinema** (or **THX Cinema**), **Sport**, and **Game** Settings are preset for the optimum picture quality at the factory.
- **Intelligent Sensor** (Except 42/50PQ60**, 50/60PS80**, 32/37/42LH35**): The most suitable picture is automatically adjusted according to the surrounding conditions.
- **Vivid**: This is the mode to maximize the effect of the video in the general user. Strengthen the contrast, brightness, color and sharpness for vivid picture.
- **Standard**: This is the mode to realize optimum viewing condition for the retail store.
- **Natural** (For LCD TV Models): This is the mode to display the most natural screen status.
- **Cinema**: This mode optimizes video for watching movies.
- **Sport**: This is the video mode to emphasize dynamic video and primary color (e.g. white, uniform, grass, sky blue etc.) by realizing the optimal screen for sports.
- **Game**: This is the mode to realize fast response speed in a fast gaming screen.
- **Expert**: This is the mode to adjust the video in detail for video quality expert and general user.
- **THX Cinema** (For 50/60PS80**): This is cinema quality mode to provide you the experience of watching a movie at home. The user will be able enjoy the best level of satisfactory screen quality in any movie without any separate adjustments. **THX Cinema** expresses the optimal screen quality when it is darkest.
- When selecting **THX Cinema**, Aspect ratio changes to Just scan.
- You can also adjust **Picture Mode** in the **Q.MENU**.

MANUAL PICTURE ADJUSTMENT-USER MODE

Adjust the picture appearance to suit your preference and viewing situations.
This feature is disabled in “**Picture Mode-Intelligent Sensor**”(For LCD TV Models)
For 50/60PS80**: This feature is disabled in “**Picture Mode- THX Cinema**”.

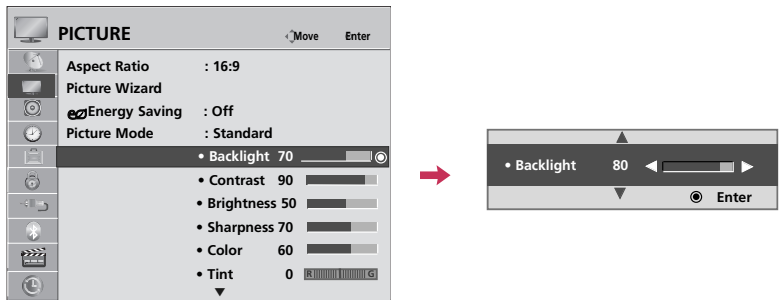

-   Select **PICTURE**.
-   Select **Picture Mode**.
-   Select **Vivid, Standard, Natural**(For LCD TV models), **Cinema**(or **THX Cinema**), **Sport**, or **Game**.
-   Select **Backlight**(For LCD TV models), **Contrast**, **Brightness**, **Sharpness**, **Color**, or **Tint**.
-   Make appropriate adjustments.
-  Return to the previous menu.
-  Return to TV viewing.


- When adjusting Energy Saving, **Backlight** function is disabled.(For LCD TV Models)
- **Backlight**(For LCD TV Models): This function adjusts the brightness of LCD panel, to control the brightness of the screen. Adjusting the backlight is recommended when setting the brightness of the set. When decreasing the backlight, the brightness of the black becomes darker without any loss in video signal and the power consumption is reduced.
- **Contrast**: Increase or decrease the gradient of the video signal. You may use Contrast when the bright part of picture is saturated.
- **Brightness**: Adjusts the base level of the signal in the picture. You may use Brightness when the dark part of the picture is saturated.
- **Sharpness**: Adjusts the level of crispness in the edges between the light and dark areas of the picture. The lower the level, the softer the image.
- **Color**: Adjusts intensity of all colors.
- **Tint**: Adjusts the balance between red and green levels.

PICTURE CONTROL

PICTURE IMPROVEMENT TECHNOLOGY

You can calibrate the screen for each Picture Mode or set the video value according to the special video screen. You can set the video seeing differently for each input.

To reset to the factory default after making adjustments to each input source, execute the **Reset** function for each Picture Mode.

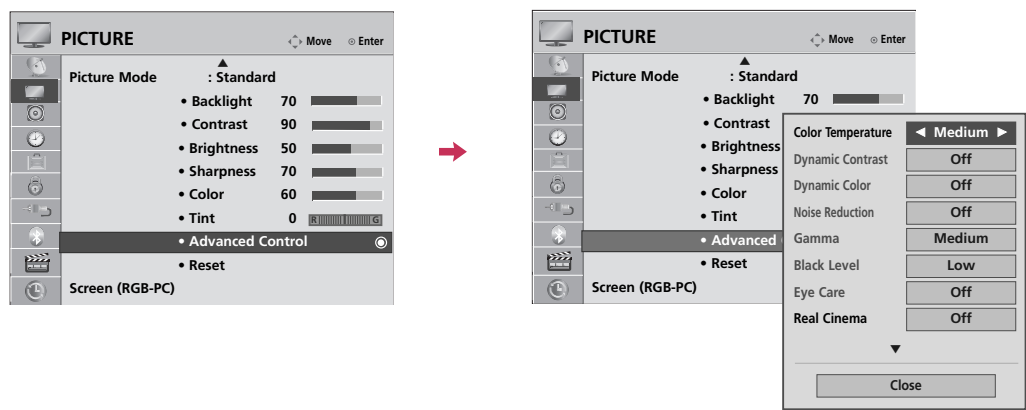


- 1   Select **PICTURE**.
- 2   Select **Advanced Control**.
- 3   Select your desired options.
- 4  Make appropriate adjustments.
- 5  Return to the previous menu.
-  Return to TV viewing.

EXPERT PICTURE CONTROL

By segmenting categories, **Expert1** and **Expert2** provide more categories which users can set as they see fit, offering the optimal picture quality for users.

This may also be used be a professional to help optimize the TV performance in the environment the TV is in.

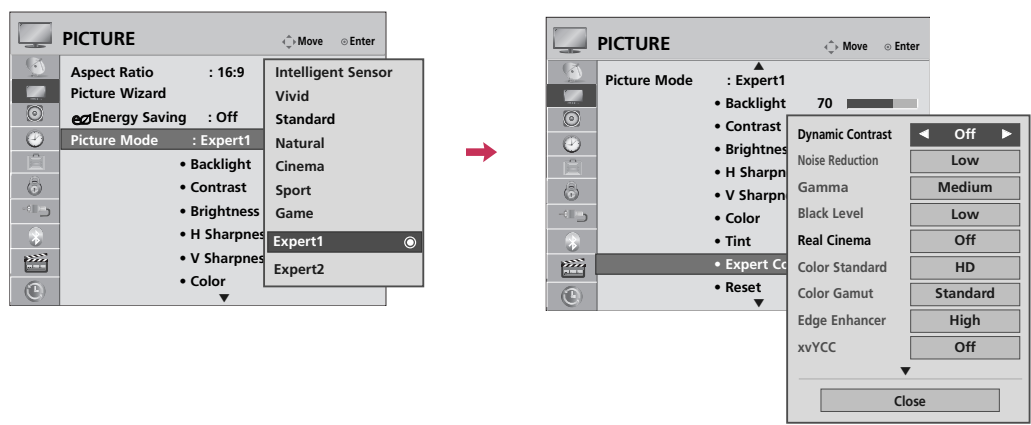

1. Select **PICTURE**.
2. Select **Picture Mode**.
3. Select **Expert1**, or **Expert2**.
4. Select **Expert Control**.
5. Select your desired menu option.
6. Make appropriate adjustments.
7. Return to the previous menu.
- Return to TV viewing.

PICTURE CONTROL

Color Temperature (Advanced Control)	■ Set to warm to enhance hotter colors such as red, or set to cool to make picture bluish.
Dynamic Contrast	■ Adjusts the contrast to keep it at the best level according to the brightness of the screen. The picture is improved by making bright parts brighter and dark parts darker.
Dynamic Color	■ Adjusts screen colors so that they look livelier, richer and clearer. This feature enhances hue, saturation and luminance so that red, blue, green and white look more vivid.
Noise Reduction	■ Reduces screen noise without compromising video quality.
Gamma	<i>Low : Make dark and middle gray level area of the picture brighter.</i> <i>Medium: Express original picture levels.</i> <i>High: Make dark and middle gray level area of the picture darker.</i> ■ You can adjust brightness of dark area and middle gray level area of the picture.
Black Level	<i>Low: The reflection of the screen gets darker.</i> <i>High: The reflection of the screen gets brighter.</i> <i>Auto: Realizing the black level of the screen and set it to High or Low automatically.</i> ■ Set black level of the screen to proper level. ■ This function enables to select 'Low' or 'High' in the following mode: AV (NTSC-M), HDMI or Component. Otherwise, 'Black level' is set to 'Auto'.
Eye Care (For LCD TV models)	■ Adjust the brightness of the screen to prevent the screen from being too bright. Dims extremely bright pictures. ■ This feature is disabled in "Picture Mode-Vivid, Cinema".
Real Cinema(LCD TV models) or Film Mode(PLASMA TV models)	■ Makes video clips recorded in film look more natural. ■ DVD and Blu-ray movies are filmed at 24 frames per second.
TruMotion (Except 32/37/42LH35**, PLASMA TV models)	<i>High: Provides smoother picture movement.</i> <i>Low: Provides smooth picture movement. Use this setting for standard use.</i> <i>Off: Use this setting when "High" and "Low" setting result in noise.</i> ■ TruMotion works with all inputs except PC mode. ■ If you enable "TruMotion", noise may appear on the screen.
Color Gamut	<i>Standard: Displays standard color area.</i> <i>Wide: Mode to use and set the rich color area of the display.</i> ■ Maximize the utilization of color to increase color quality.

Edge Enhancer	■ Show clearer and distinctive yet natural corners of the video.
Color Standard	■ Convert the color of a different video to HD color.
Color Filter	■ This is the function to filter the specific colors of the video. You can use the RGB filter to set color saturation and hue accurately.
xvYCC	<i>*This feature is not available for all models.</i> ■ This is the function to express richer color. ■ This feature represents rich color as much as conventional video signal. ■ This function is enabled in "Picture mode - Cinema, Expert" when xvYCC signal is inputted through HDMI(1080p).
Expert Pattern	■ This is the pattern necessary for expert adjustment. ■ This function is enabled in "Picture Mode - Expert" when you watch DTV.
White Balance (Expert control)	■ This is the function to adjust the overall color of the screen to the feeling you want. a. Method : 2 Points - Pattern: Inner, Outer - Red/Green/Blue Contrast, Red/Green/Blue Brightness: The adjustment range is -50 - +50. b. Method : LCD TV models: 10 Point IRE, PLASMA TV models: 20 Point IRE - Pattern: Inner, Outer
Color Temperature (Expert control) : Only 42/47/55SL80**, 42/47SL90**	- IRE (Institute of Radio Engineers) is the unit to display the size of the video signal and can be set among 10, 20, 30 - 100(LCD TV models) or 5, 10, 15 - 95, 100(PLASMA TV models). You can adjust Red, Green or Blue according to each setting. - Luminance(For LCD TV models): This function displays calculated luminance value for 2.2 gamma. You can input luminance value you want at 100 IRE, than the target luminance value for 2.2 gamma is displayed at every 10 steps from 10 IRE to 90 IRE. - Red/Green/Blue: The adjustment range is -50 - +50.
Color Management System	■ As the tool used by the experts to make adjustments by using the test patterns, this does not affect other colors but can be used to selectively adjust the 6 color areas (Red/Green/Blue/Cyan/Mgt/Yellow). Color difference may not be distinctive even when you make the adjustments for the general video. Adjusts Red/Green/Blue/Yellow/Cyan, Magenta. - Red/Green/Blue/Yellow/Cyan, Magenta Color: The adjustment range is <u>-30 - +30</u>. - Red/Green/Blue/Yellow/Cyan, Magenta Tint: The adjustment range is <u>-30 - +30</u>. - This feature is disable in RGB-PC and HDMI-PC mode.
OPC (For LCD TV models)	<i>*This feature is not available for all models.</i> ■ As the technology to reduce the power consumption while keeping the same brightness, this has the effect of reducing power consumption, improvement in contrast.


PICTURE CONTROL

ENERGY SAVING

It reduces the TV's power consumption by lowering the backlight level.

The default factory setting complies with the **Energy Star** requirements and is adjusted to the comfortable level to be viewed at home.

You can increase the brightness of your screen by adjusting the **Energy Saving** level or by setting the **Picture Mode**.

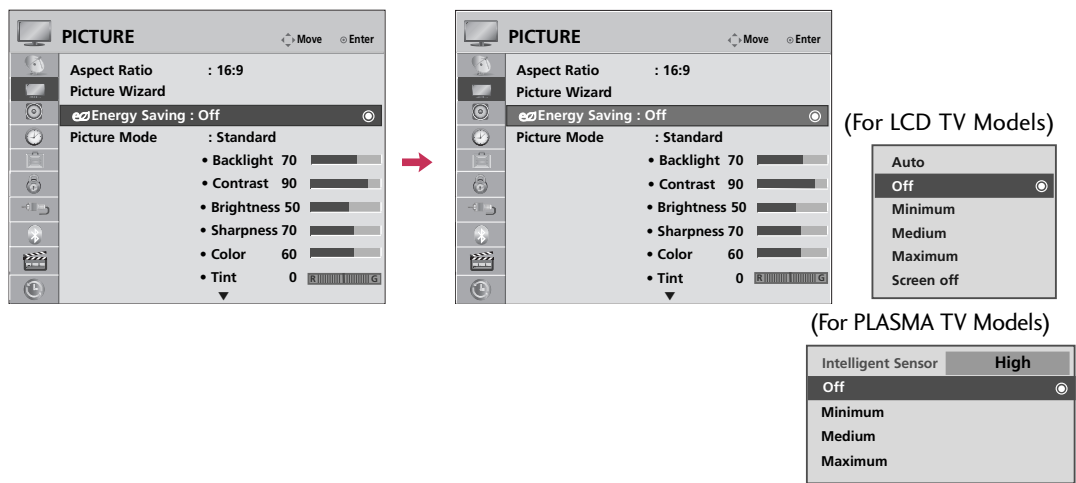


-   Select **PICTURE**.
-   Select **ENERGY SAVING**.
-  
(LCD TV Models)
Select **Auto** (Except 32/37/42LH35**), **Off**, **Minimum**, **Medium**, **Maximum**, or **Screen Off**.
(PLASMA TV Models)
Select **Intelligent Sensor** ( Select **Low**, **Middle**, or **High**), **Off**, **Minimum**, **Medium** or **Maximum**.
-  Return to the previous menu.
 Return to TV viewing.

- (For LCD TV Models)
- When selecting **Screen off**, screen is turned off after 3 seconds. At this time, if you press any button, screen is turned on.
 - If you adjust "**Energy Saving-Auto**, **Minimum**, **Medium**, **Maximum**", **Backlight** feature will not work.
 - When selecting **Auto**, **Backlight** is automatically adjusted through **Intelligent sensor** according to the surrounding conditions.
- You can also adjust the **ENERGY SAVING** button on the remote control.

PICTURE RESET

Settings of the selected picture modes return to the default factory settings.

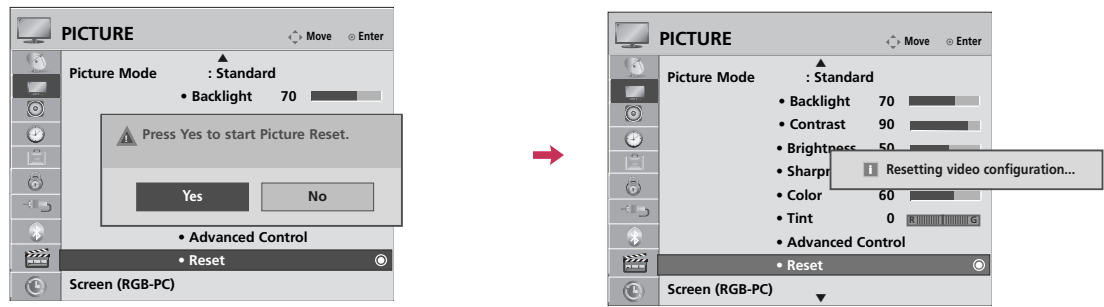

- 1   Select **PICTURE**.
- 2   Select **Reset**.
- 3   Select **Yes**.
- 4  Initialize the adjusted value.
- 5  Return to TV viewing.

PICTURE CONTROL

IMAGE STICKING MINIMIZATION (ISM) METHOD
(For PLASMA TV Models)

A frozen still picture displayed on the screen for prolonged periods can result in a ghost image. You can use Orbiter to help prevent image sticking. The other two functions are for removing a ghost image.



- 1



Select **OPTION**.
- 2



Select **ISM Method**.
- 3



Select **Normal, Orbiter, Color Wash** or **White Wash**.
- 4



Initialize the adjusted value.


- **Normal:** If image sticking is never a problem, ISM is not necessary - set to Normal.
- **Orbiter:** Orbiter may help prevent ghost images. However, it is best not to allow any fixed image to remain on the screen. To avoid a ghost image on the screen, the image will move every 2 minutes.
- **Color Wash:** The color block with the screen moved a little and the white pattern are alternately displayed. It is difficult to see the after image on all colors. Once it has been corrected it will not be visible in any color.
- **White Wash:** White Wash removes ghost images from the screen. Use sparingly. Watch the TV normally for a while before using this feature to see if the ghost image disappears on its own.

! NOTE

- An excessive ghosted image may be impossible to clear entirely with White Wash. To return to normal viewing, press the any button.

POWER INDICATOR

(For 32/42/47LH70**, 32/42/47/55SL80**, 42/47SL90** Models)

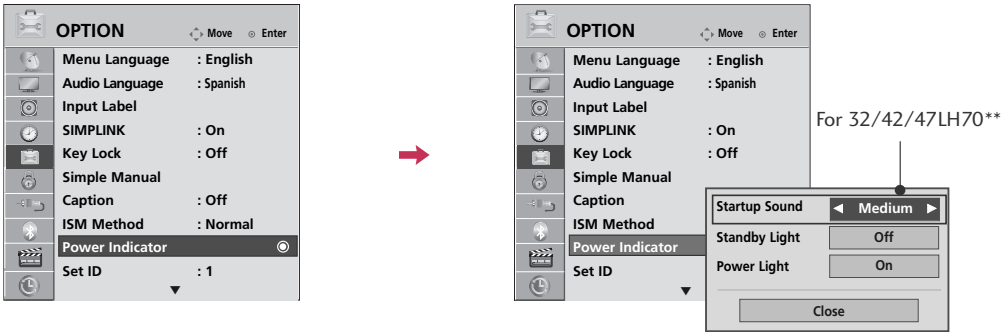


1. Select **OPTION**.
2. Select **Power Indicator**.
3. Select **Startup Sound, Standby Light or Power Light**.
4. Select your desired options.
5. Return to the previous menu.
- Return to TV viewing.

LED LOCAL DIMMING

(For 42/47/55LH90** Models)

After analyzing the signal of the input video by areas of the screen, it adjusts the backlight to improve the contrast ratio. This feature is disabled in “**Picture Mode-Game**”.

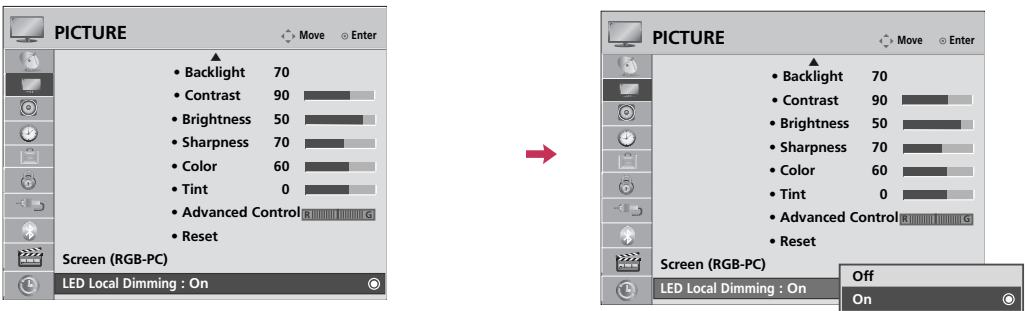


1. Select **PICTURE**.
2. Select **LED Local Dimming**.
3. Select **On or Off**.
5. Return to the previous menu.
- Return to TV viewing.

PICTURE CONTROL

DEMO MODE

Displays a slide show to explain the various feature of this TV.
This feature is disabled in “Initial Setting-Home Use”.

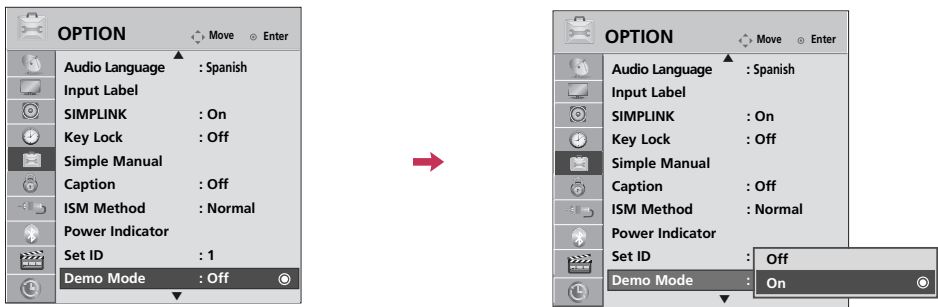


-   Select **OPTION**.
-   Select **Demo Mode**.
-   Select **On** to show the various feature of the TV.
-  Return to TV viewing.
After a while, **Demo Mode** starts.
If you want to stop the demo, press any button (Except VOL +, - and MUTE button).

SOUND & LANGUAGE CONTROL

AUTO VOLUME LEVELER (AUTO VOLUME)

Auto Volume makes sure that the volume level remains consistent whether you are watching a commercial or a regular TV program.

Because each broadcasting station has its own signal conditions, volume adjustment may be needed every time the channel is changed. This feature allows users to enjoy stable volume levels by making automatic adjustments for each program.

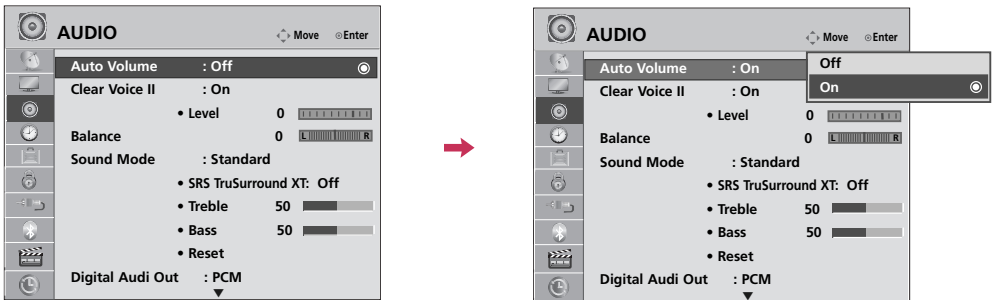


- 1   Select **AUDIO**.
- 2   Select **Auto Volume**.
- 3   Select **On** or **Off**.
- 4  Return to the previous menu.
-  Return to TV viewing.

SOUND & LANGUAGE CONTROL

CLEAR VOICE II

By differentiating the human sound range from others, it improves the sound quality of voices.

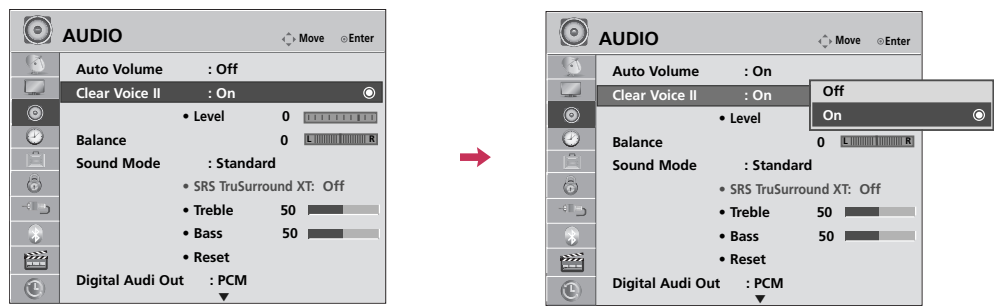


- 1 Select **AUDIO**.
- 2 Select **Clear Voice II**.
- 3 Select **On** or **Off**.

■ If you select “**Clear Voice II-On**”, **SRS TruSurround XT** feature will not work.

Adjustment for Clear Voice II Level With selecting On

 
- 5 Select **Level**.
- 6 Make appropriate adjustments.
- 7 Return to the previous menu.
- Return to TV viewing.



PRESET SOUND SETTINGS (SOUND MODE)

Sound Mode lets you enjoy the best sound without any special adjustment as the TV sets the appropriate sound options based on the program content.

Standard, Music, Cinema, Sport, and Game are preset for optimum sound quality at the factory and are not adjustable.

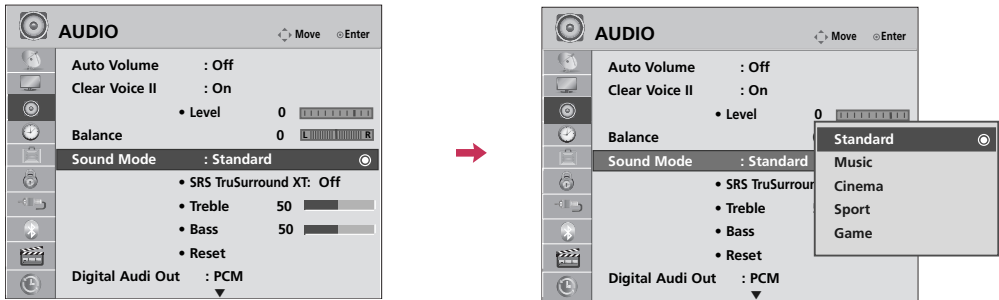


-   Select **AUDIO**.
-   Select **Sound Mode**.
-   Select **Standard, Music, Cinema, Sport, or Game**.
-  Return to the previous menu.
-  Return to TV viewing.

- **Standard, Music, Cinema, Sport, and Game** are preset for optimum sound quality at the factory.
- You can also adjust **Sound Mode** in the **Q.MENU**.
- **Standard:** Offers standard-quality sound.
- **Music:** Optimizes sound for listening to music.
- **Cinema:** Optimizes sound for watching movies.
- **Sport:** Optimizes sound for watching sports events.
- **Game:** Optimizes sound for playing games.

SOUND & LANGUAGE CONTROL

SOUND SETTING ADJUSTMENT - USER MODE

Adjust the sound to suit your taste and room situations.

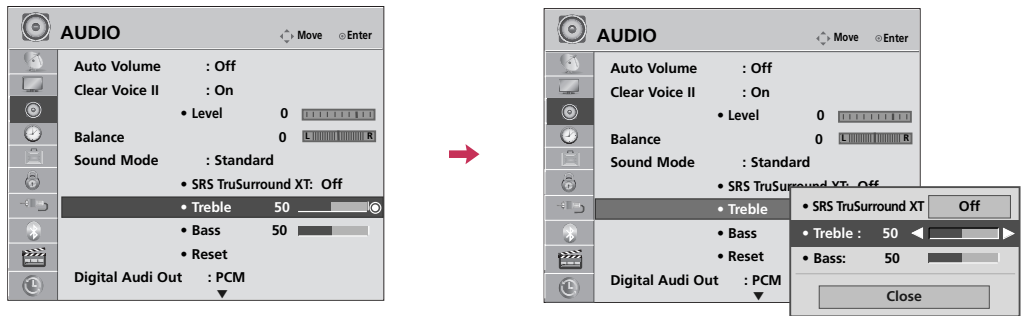

- 1   Select **AUDIO**.
- 2   Select **Sound Mode**.
- 3   Select **Standard, Music, Cinema, Sport, or Game**.
- 4   Select **Treble** or **Bass**.

- 5   Make appropriate adjustments.
- 6  Return to the previous menu.
-  Return to TV viewing.


SRS TRUSURROUND XT

- 1   Select **AUDIO**.
- 2   Select **SRS TruSurround XT**
- 3   Select **On** or **Off**.
- 4  Return to the previous menu.
-  Return to TV viewing.

- If you select “**Clear Voice II-On**”, **SRS TruSurround XT** feature will not work.
- **SRS TruSurround XT**: Takes advantage of any multi-channel format without needing to add extra speakers or equipment. Dialog clarity, bass enrichment, and the addition of stereo audio enhancement produces an immersive sound experience from standard stereo material.
- If sound quality or volume is not at the level you want, it is recommended to use a separate home theater system or amplifier to cope with different user environments.

BALANCE

Adjust the left/right sound of speaker to suit your taste and room situations.

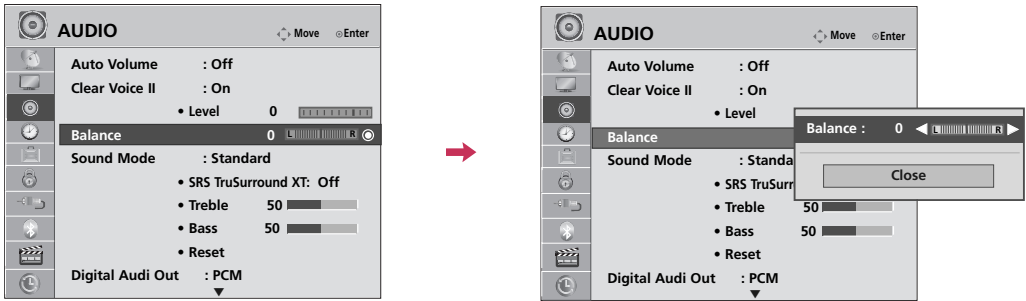


- 1   Select **AUDIO**.
- 2   Select **Balance**.
- 3   Make appropriate adjustments.
- 4  Return to the previous menu.
-  Return to TV viewing.

SOUND & LANGUAGE CONTROL

TV SPEAKERS ON/OFF SETUP

Turn the TV speakers off if using external audio equipment.
If you wish to use an external Hi-Fi system or a SRS System, turn off the TV's internal speakers.

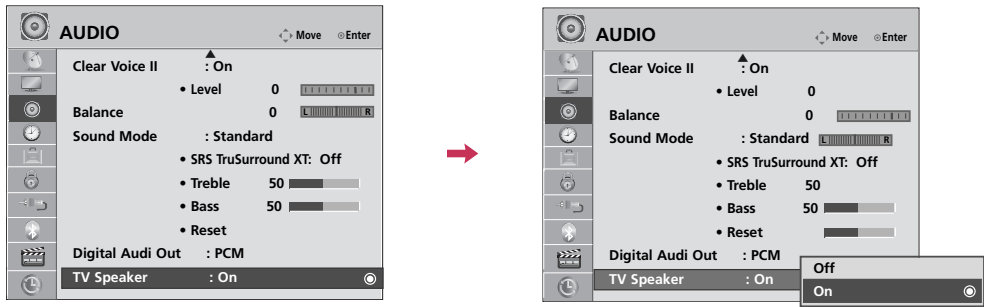

1. Select **AUDIO**.
2. Select **TV Speaker**.
3. Select **On** or **Off**.
4. Return to the previous menu.
- Return to TV viewing.

! NOTE


► Some menus in **AUDIO** are disabled when TV Speaker is set to Off.

DIGITAL AUDIO OUT

This function is setting the Dolby digital/PCM to connect the audio outputs.

If you select “Digital Audio Out - Auto” when Dolby digital is available, SPDIF (Sony Philips Digital InterFace) output will be Dolby Digital.

If you select “Digital Audio Out - Auto” when Dolby digital is not available, SPDIF output will be PCM (Pulse-code modulation).

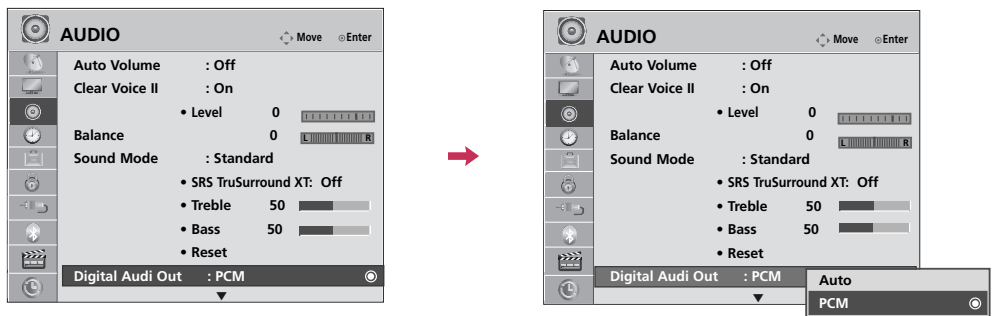

-   Select **AUDIO**.
-   Select **Digital Audio Out**.
-   Select **Auto** or **PCM**.
-  Return to the previous menu.
-  Return to TV viewing.


Item	Audio Input	Digital Audio output
Auto (Speaker On)	MPEG	PCM
	DD	DD
		PCM
Auto (Speaker Off)	MPEG	PCM
	DD	DD
		DD
PCM	PCM	PCM

* To set “SPDIF OUT - Dolby Digital” in DTV input signal, select “Digital Audio Out - Auto” and “TV Speaker - Off”.

SOUND & LANGUAGE CONTROL

AUDIO RESET


Settings of the selected Sound Mode return to the default factory settings.

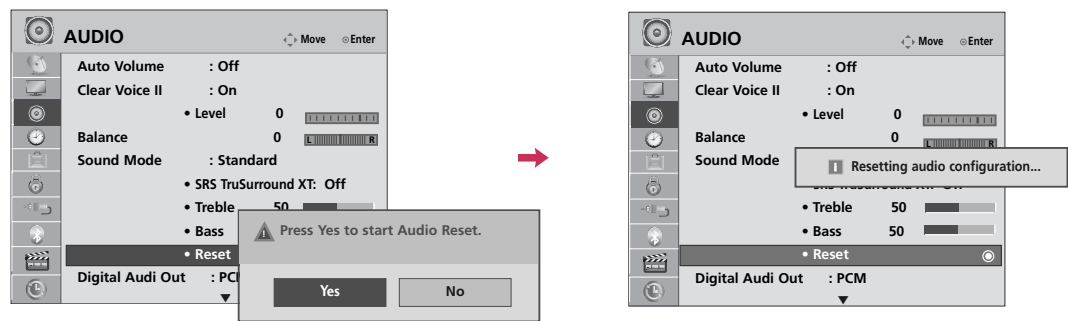

1. Select **AUDIO**.
2. Select **Reset**.
3. Select **Yes**.
4. Initialize the adjusted value.
5. Return to the previous menu.
- Return to TV viewing.

STEREO/SAP BROADCAST SETUP

For Analog only: This TV can receive MTS stereo programs and any SAP (Secondary Audio Program) that accompanies the stereo program if the station transmits an additional sound signal. Mono sound is automatically used if the broadcast is only in Mono.

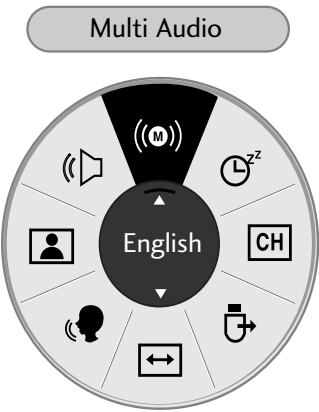

Analog TV

1. Select **SAP**.
2. Select **Mono, Stereo, or SAP**.
3. Return to TV viewing.


Digital TV

 
1. Select **Multi Audio**.
2. Select other languages.
3. Return to TV viewing.

SOUND & LANGUAGE CONTROL

AUDIO LANGUAGE


Other languages may be available if a digital signal is provided by the broadcasting station.
This feature operates only in DTV mode.

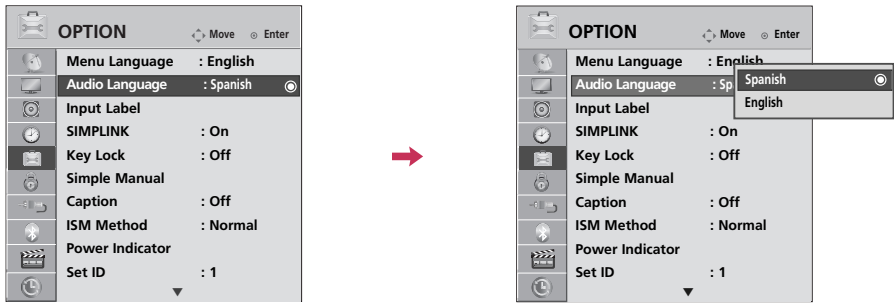

-   Select **OPTION**.
-   Select **Audio Language**.
-   Select your desired language.
-  Return to the previous menu.
-  Return to TV viewing.

ON-SCREEN MENUS LANGUAGE SELECTION

The menus can be shown on the screen in the selected language.

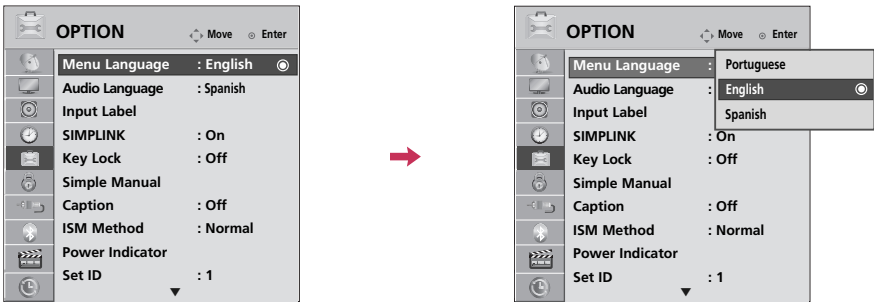



-   Select **OPTION**.
-   Select **Menu Language**.
-   Select your desired language.
From this point on, the on-screen menus will be shown in the selected language.
-  Return to the previous menu.
-  Return to TV viewing.

SOUND & LANGUAGE CONTROL

CAPTION MODE

Analog Broadcasting System Captions

Captions are provided to help people with hearing loss watch TV. Select a caption mode for displaying captioning information if provided on a program. Analog caption displays information at any position on the screen and is usually the program's dialog. Caption/Text, if provided by the broadcaster, would be available for both digital and analog channels on the Antenna/Cable. This TV is programmed to memorize the caption/text mode which was last set when you turned the power off. This function is only available when **Caption Mode** is set **On**.

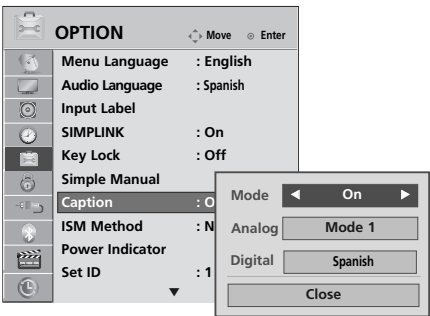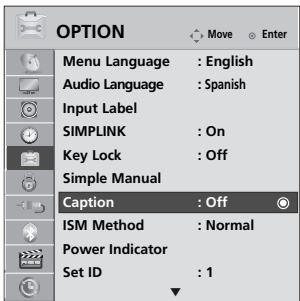

1. Select **OPTION**.
2. Select **Caption**.
3. Select **Mode - On**.
4. Select **Analog**.
5. Select **Mode1-2** or **Text1-2**.
6. Return to the previous menu.
- Return to TV viewing.

■ MODE


The term for the words that scroll across the bottom of the TV screen; usually the audio portion of the program provided for the hearing impaired.

■ TEXT

The term for the words that appear in a large black frame and almost cover the entire screen; usually messages provided by the broadcaster.

Digital Broadcasting System Captions

Choose the language you want the DTV Captions to appear in.
 Other Languages can be chosen for digital sources only if they are included on the program.
 This function is only available when **Caption Mode** is set **On**.

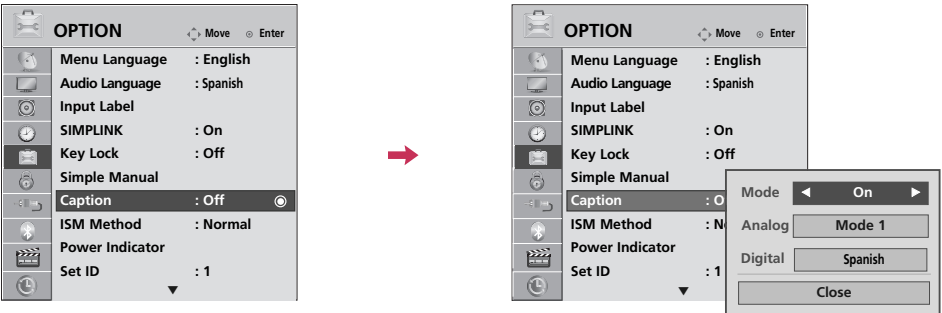


- 1   Select **OPTION**.
- 2   Select **Caption**.
- 3   Select **Mode - On**.
- 4  Select **Digital**.
- 5  Select **Spanish**, or **English**.
- 6  Return to the previous menu.
-  Return to TV viewing.

TIME SETTING

CLOCK SETTING

Auto Clock Setup


The time is set automatically from a digital channel signal.
The digital channel signal includes information for the current time provided by the broadcasting station.
Set the clock manually if the current time is set incorrectly by the auto clock function.

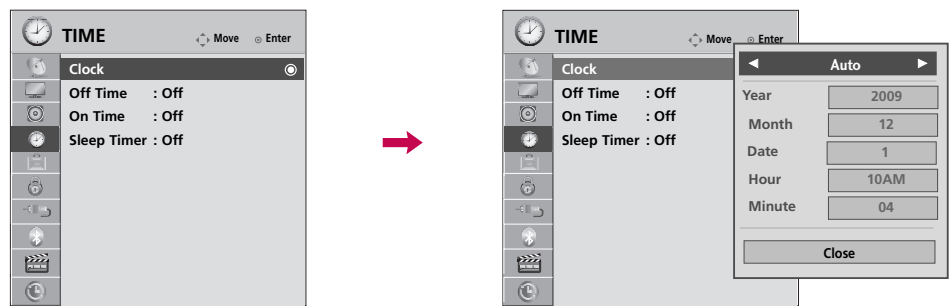

-   Select **TIME**.
-   Select **Clock**.
-   Select **Auto**.
-   Select **Auto, Off, On**.
-  Return to the previous menu.
-  Return to TV viewing.

Manual Clock Setup

If the current time setting is wrong, set the clock manually.

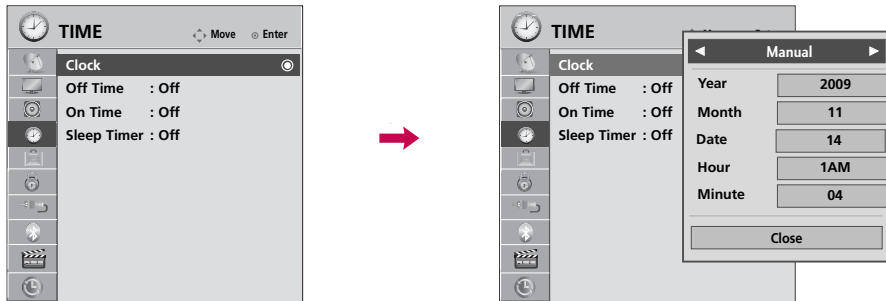

- 1   Select **TIME**.
- 2   Select **Clock**.
- 3   Select **Manual**.
- 4  Select the Year, Month, Date, Hour, or Minutes option.
- 5  Set the Year, Month, Date, Hour, or Minutes option.
- 6  Return to the previous menu.
-  Return to TV viewing.

TIME SETTING


AUTO ON/OFF TIME SETTING

This function operates only if the current time has been set.

The **Off Time** function overrides the **On Time** function if they are both set to the same time.

The TV must be in standby mode for the **On Time** to work.

If you do not press any button within 2 hours after the TV turns on with the **On Time** function, the TV will automatically revert to standby mode.

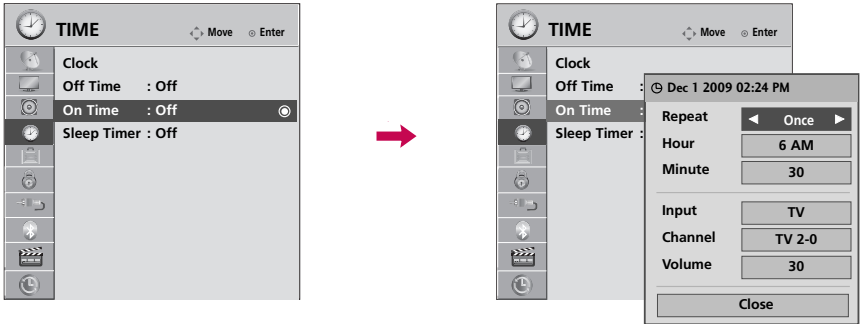

- 1 Select **TIME**.
- 2 Select **Off time** or **On time**.
- 3 Select **Repeat**.
- 4 Select **Off, Once, Everyday, Mon.~Fri., Mon.~Sat., Sat.~Sun., or Sunday**.
- 5 Select and set **Hour** or **Minute**.
- 6 Return to the previous menu.
- Return to TV viewing.

- To cancel **On/Off Time** function, select **Off**.
- Only for On Time function


- 1 Select **Input**.
- 2 Select the desired input source.
- 3 When Selecting **TV**: set the channel at turn-on.
- 4 Adjust to sound level at turn-on.

! NOTE

- If different channels are set for the same time for **on time** and reserved recording, this TV is powered on to the reserved recording channel.

SLEEP TIMER SETTING

The Sleep Timer turns the TV off at the preset time.
Note that this setting is cleared when the TV is turned off.

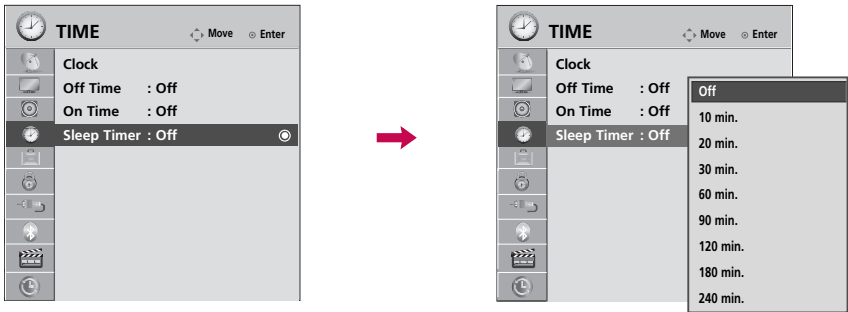

- 1



Select **TIME**.
- 2



Select **Sleep Timer**.
- 3



Select **Off, 10, 20, 30, 60, 90, 120, 180, or 240** minutes.
- 4



Return to the previous menu.
Return to TV viewing.

■ You can also adjust **Sleep Timer** in the **Q-Menu**.

PARENTAL CONTROL / RATINGS

Parental Control can be used to block specific channels, ratings and other viewing sources.


The Parental Control Function is used to block program viewing based on the ratings sent by the broadcasting station. The default setting is to allow all programs to be viewed. Viewing can be blocked by choosing the type of the program and the categories. It is also possible to block all program viewing for a time period. To use this function, the following must be done :

- 1. Set ratings and categories to be blocked.
- 2. Specify a password
- 3. Enable the lock

SET PASSWORD & LOCK SYSTEM

Setting up Your Password

Set up blocking schemes to block specific channels, ratings, and external viewing sources.
A password is required to gain access to this menu.

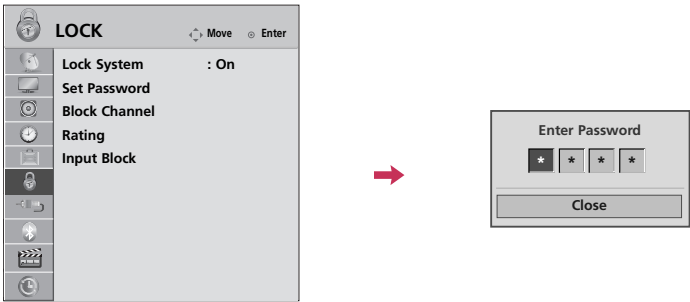


1.    Select **LOCK**.
2.  Input the password.

- Enter the password as requested.
- The TV is set up with the initial password "0-0-0-0".

Lock System

Enables or disables the blocking scheme you set up previously.

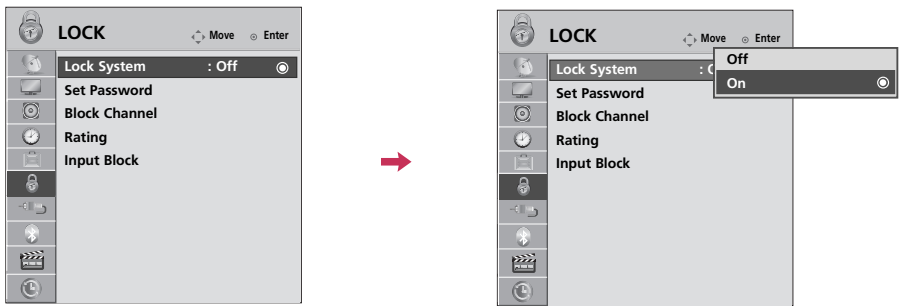

1 MENU Select **LOCK**.

2 Input the password.

3 Select **Lock System**.

4 Select **On** or **Off**.

5 RETURN Return to the previous menu.


MENU Return to TV viewing.

■ When you select **On**, the Lock System is enable.

PARENTAL CONTROL / RATINGS

Set Password

Change the password by inputting a new password twice.

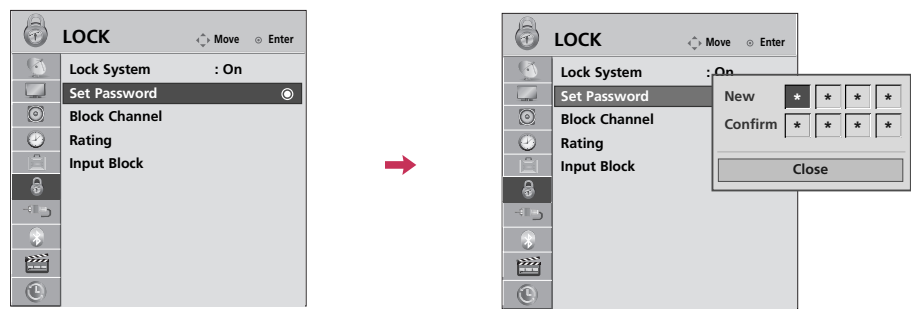

1    Select **LOCK**.

2  Input the password.

3  Select **Set password**.


4   Choose any 4 digits for your new password.
As soon as the 4 digits are entered, re-enter the same 4 digits on the **Confirm**.

 
5  Return to the previous menu.

 Return to TV viewing.

CHANNEL BLOCKING

Blocks any channels that you do not want to watch or that you do not want your children to watch.

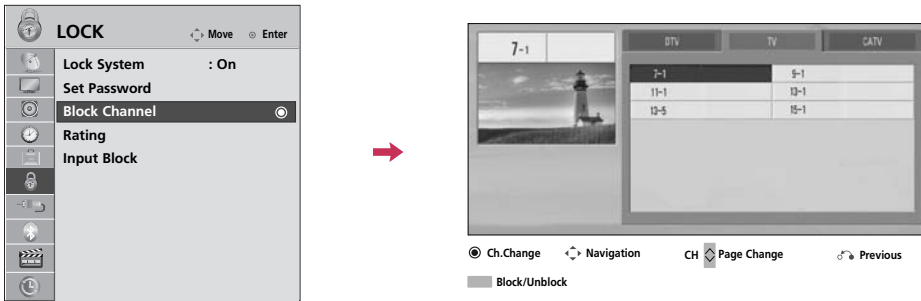


- 1    Select **LOCK**.
- 2  Input the password.
- 3  Select **Block Channel**.
- 4   Select a channel to block or unblock.
- 5  Block or unblock a channel.
- 6  Return to the previous menu.
-  Return to TV viewing.

■ After setting the **Block Channel**, Press the **ENTER** button to enter the password. And then the locked channel is temporarily unlocked.

PARENTAL CONTROL / RATINGS

RATING (Movie Rating)


Blocks movies according to the movie ratings limits specified, so children cannot view certain movies. You can set the ratings limit by blocking out all the movies with the ratings above a specified level. Keep in mind that the movie ratings limit only applies to movies shown on TV, not TV programs, such as soap operas.

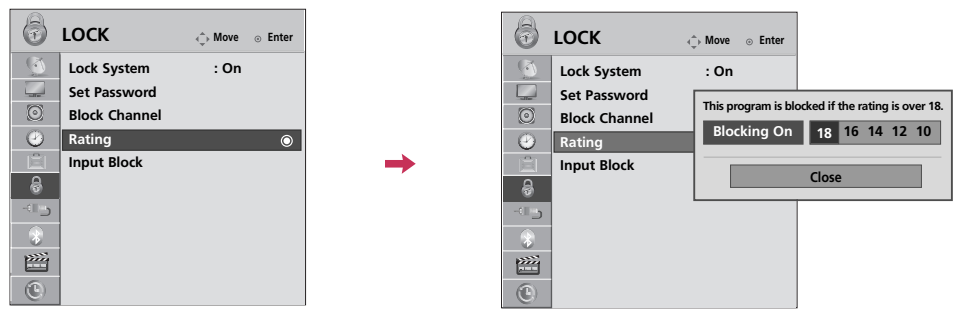

-    Select **LOCK**.
-  Input the password.
-  Select **Rating**.
-   Select the **Blocking Off** or 18, 16, 14, 12 or 10.
-  Return to the previous menu.
-  Return to TV viewing.

EXTERNAL INPUT BLOCKING

Enables you to block an input.

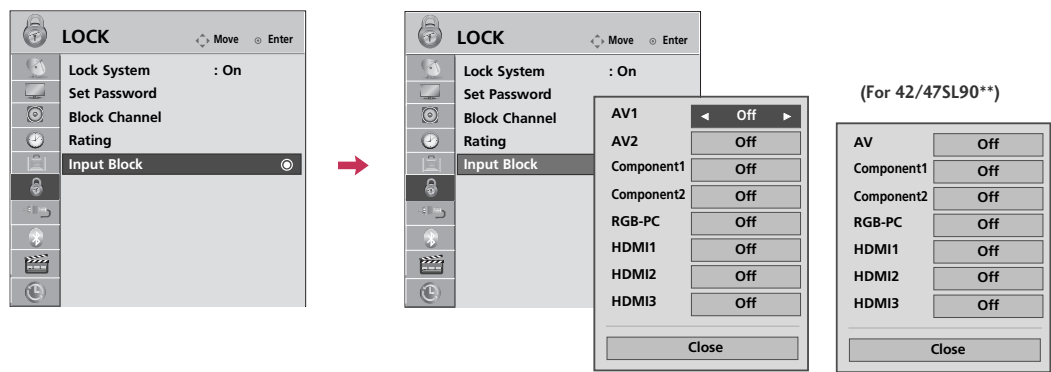


- 1 Select **LOCK**.
- 2 Input the password.
- 3 Select **Input Block**.
- 4 Select input source.
- 5 Select **On** or **Off**.
- 6 Return to the previous menu.
- Return to TV viewing.

PARENTAL CONTROL / RATINGS

KEY LOCK

The TV can be set up so that it can only be used with the remote control.
This feature can be used to prevent unauthorized viewing by locking out the front panel controls.
This TV is programmed to remember which option it was last set to even if you turn the TV off.

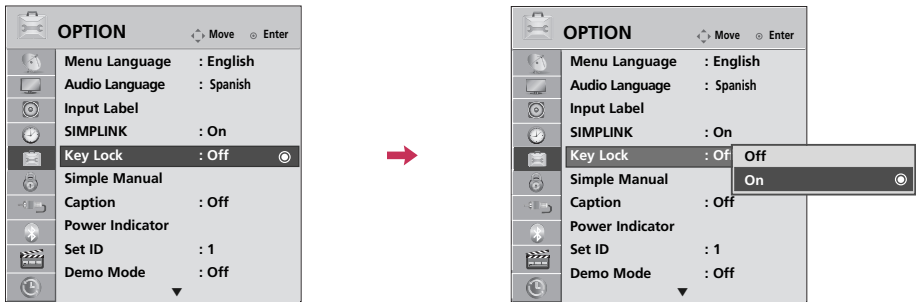

1. Select **OPTION**.
2. Select **Key Lock**.
3. Select **On** or **Off**.
4. Return to the previous menu.
 Return to TV viewing.

- In **Key Lock 'On'**, if the TV is turned off, press the (For LCD TV Models) , **INPUT, CH** (or) button on the TV or **POWER, INPUT, CH** () or **NUMBER** buttons on the remote control to turn TV on.
- With the **Key Lock On**, the display **Key Lock** appears on the screen if any button (Except (power) button of the PLASMA TV Models) on the front panel is pressed while viewing the TV.

APPENDIX

TROUBLESHOOTING

The operation does not work normally.	
The remote control doesn't work	■ Check to see if there is any object between the product and the remote control causing obstruction. Ensure you are pointing the remote control directly at the TV. ■ Ensure that the batteries are installed with correct polarity (+ to +, - to -). ■ Ensure that the correct remote operating mode is set: TV, VCR etc. ■ Install new batteries. *This feature is not available for all models.
Power is suddenly turned off	■ Is the sleep timer set? ■ Check the power control settings. Power interrupted. ■ TV will be automatically turned off, in case of no signal for 15 minutes.
The video does not work.	
No picture & No sound	■ Check whether the product is turned on. ■ Try another channel. The problem may be with the broadcast. ■ Is the power cord inserted into wall power outlet? ■ Check your antenna direction and/or location. ■ Test the wall power outlet, plug another product's power cord into the outlet where the product's power cord was plugged in.
Picture appears slowly after switching on	■ This is normal, the image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes.
No or poor color or poor picture	■ Adjust Color in menu option. ■ Keep a sufficient distance between the product and the VCR. ■ Try another channel. The problem may be with the broadcast. ■ Are the video cables installed properly? ■ Activate any function to restore the brightness of the picture.
Horizontal/vertical bars or picture shaking	■ Check for local interference such as an electrical appliance or power tool.
Poor reception on some channels	■ Station or cable product experiencing problems, tune to another station. ■ Station signal is weak, reorient antenna to receive weaker station. ■ Check for sources of possible interference.
Lines or streaks in pictures	■ Check antenna (Change the direction of the antenna).
No picture when connecting HDMI	■ Check HDMI cable over version 1.3. The HDMI cables don't support HDMI version 1.3, it cause flickers or no screen display. In this case use the latest cables that support HDMI version 1.3.

The audio does not work.	
Picture OK & No sound	■ Press the VOL or VOLUME button. ■ Sound muted? Press MUTE button. ■ Try another channel. The problem may be with the broadcast. ■ Are the audio cables installed properly?
No output from one of the speakers	■ Adjust Balance in menu option.
Unusual sound from inside the product	■ A change in ambient humidity or temperature may result in an unusual noise when the product is turned on or off and does not indicate a fault with the product.
No sound when connecting HDMI/USB	■ Check HDMI cable over version 1.3. ■ Check USB cable over version 2.0. ■ Use normal MP3 file. *This feature is not available for all models.

There is a problem in PC mode. (Only PC mode applied)	
The signal is out of range	■ Adjust resolution, horizontal frequency, or vertical frequency. ■ Check the input source.
Vertical bar or stripe on background & Horizontal Noise & Incorrect position	■ Work the Auto configure or adjust clock, phase, or H/V position. (Option)
Screen color is unstable or single color	■ Check the signal cable. ■ Reinstall the PC video card.

MAINTENANCE

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you can enjoy your new TV.

Caution: Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the Screen

- 1 Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
- 2 Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the Cabinet

- To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth.
- Please be sure not to use a wet cloth.

Extended Absence

 **CAUTION**

► If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

PRODUCT SPECIFICATIONS

MODEL		42PQ60D (42PQ60D-SA)	50PQ60D (50PQ60D-SA)	50PS80BD (50PS80BD-SA)
Dimensions (Width x Height x Depth)	With stand	40.9 x 28.5 x 12.1 inches 1040.8 x 725.8 x 308.0 mm	48.3 x 32.4 x 13.8 inches 1228.8 x 824.6 x 353.0 mm	48.4 x 32.9x 12.2 inches 1228.0 x 835.8 x 309 mm
	Without stand	40.9 x 26.3 x 3.0 inches 1040.8 x 669.2 x 76.8 mm	48.3 x 30.3 x 3.1 inches 1228.8 x 772.0 x 78.9 mm	48.4 x 31.3 x 3.1 inches 1228.0x 795.1 x 78.9 mm
Weight	With stand	55.7 lbs / 25.3 kg	77.1 lbs / 35.0 kg	84.4 lbs / 38.3 kg
	Without stand	51.3 lbs / 23.3 kg	71.6 lbs / 32.5 kg	75.6 lbs / 34.3kg
MODEL		60PS80BD (60PS80BD-SA)	32SL80YD (32SL80YD-SA)	42SL80YD (42SL80YD-SA)
Dimensions (Width x Height x Depth)	With stand	57.7 x 38.9 x 14.6 inches 1465.4x 986.4 x 371 mm	30.1 x 21.6 x 8.8 inches 764.8 x 550.2 x 224.8 mm	39.4 x 27.1 x 10.3 inches 1001.2 x 688.7 x 261.0 mm
	Without stand	57.7 x 36.5 x 3.2 inches 1465.4 x 926.7 x 82.1 mm	30.1 x 19.3 x 1.9 inches 764.8 x 490.4 x 49.8 mm	39.4 x 24.5 x 1.7 inches 1001.2 x 623.2 x 45.0 mm
Weight	With stand	116.4 lbs / 52.8kg	28.4 lbs / 12.9 kg	46.3 lbs / 21.0 kg
	Without stand	101.4 lbs / 46.0kg	24.6 lbs / 11.2 kg	41.2 lbs / 18.7 kg
MODEL		47SL80YD (47SL80YD-SA)	55SL80YD (55SL80YD-SA)	
Dimensions (Width x Height x Depth)	With stand	43.7 x 29.6 x 12.6 inches 1109.6 x 751.2 x 320.2 mm	50.4 x 33.5 x 12.6 inches 1279.0 x 853.3 x 320.2 mm	
	Without stand	43.6 x 26.9 x 1.7 inches 1109.6 x 685.3 x 45.5mm	50.3 x 30.7 x 1.7 inches 1279.0 x 780.5 x 45.0 mm	
Weight	With stand	58.6 lbs / 26.6 kg	87.9 lbs / 39.9 kg	
	Without stand	52.2 lbs / 23.7 kg	76.4 lbs / 34.7 kg	
Power requirement		AC100-240V ~ 50/60Hz		
Television System		NTSC, PAL-M/N, SBTVD		
Program Coverage		VHF 2-13, UHF 14-69, CATV 1-135		
External Antenna Impedance		75 ohm		
Environment condition	Operating Temperature	32 ~ 104°F (0 ~ 40°C)		
	Operating Humidity	Less than 80%		
	Storage Temperature	-4 ~ 140°F (-20 ~ 60°C)		
	Storage Humidity	Less than 85%		

APPENDIX

MODEL		32LH70YD (32LH70YD-SH)	42LH70YD (42LH70YD-SE)	47LH70YD (47LH70YD-SE)	
Dimensions (Width x Height x Depth)	With stand	31.6 x 24.9 x 11.2 inches 803 x 632.9 x 284.8 mm	39.7 x 29.6x 13.1 inches 1009.7 x 753.6 x 334.4 mm	44.2 x 32.5 x 14.7 inches 1123.6 x 824.4x 372.8 mm	
	Without stand	31.6 x 23 x 2.9 inches 803 x 584.2 x 75mm	39.7 x 27.3 x 1.5inches 1009.7 x 695.4 x 39.7 mm	44.2 x 30.2 x 1.6inches 1123.6 x 765.7x 40.9 mm	
Weight	With stand	29.7 lbs / 13.5kg	43.7 lbs / 19.8 kg	58.2 lbs / 26.4 kg	
	Without stand	25.5 lbs / 11.6kg	379lbs / 172 kg	50.2 lbs / 22.8 kg	
MODELS		32LH35FD (32LH35FD-SF)	37LH35FD (37LH35FD-SF)	42LH35FD (42LH35FD-SF)	42LH50YD (42LH50YD-SA)
Dimensions (Width x Height x Depth)	With stand	31.6 x 22.9 x 8.8 inches 805.0 x 583.0 x 224.0 mm	36.2 x 25.9 x 11.6 inches 922.0 x 659.0 x 297.0 mm	40.4 x 28.1 x 11.6 inches 1028.0 x 715.4 x 297.0 mm	41.4 x 28.3 x 11.6 inches 1052.2 x 719.1 x 296.2mm
	Without stand	31.6 x 20.9 x 3.1 inches 805.0 x 531.0 x 79.9 mm	36.2 x 23.4 x 3.4 inches 922.0 x 596.0 x 88.0 mm	40.4 x 25.9 x 3.4 inches 1028.0 x 658.6 x 88.7 mm	41.5 x 25.8 x 3.5 inches 1052.2 x 657.3 x 90.8mm
Weight	With stand	26.6 lbs / 12.1 kg	32.8 lbs / 14.9 kg	39.6 lbs / 18.0 kg	41.8 lbs / 19.0 kg
	Without stand	24.2 lbs / 11.0 kg	28.8 lbs / 13.1 kg	35.7 lbs / 16.2 kg	379 lbs / 172 kg
MODELS		47LH50YD (47LH50YD-SA)	55LH50YD (55LH50YD-SA)	42SL90QD (42SL90QD-SA)	47SL90QD (47SL90QD-SA)
Dimensions (Width x Height x Depth)	With stand	46.1 x 31.0 x 13.2 inches 1173.4 x 789.7 x 337.4 mm	53.4 x 35.4 x 16.6 inches 13570 x 901.0 x 423.0 mm	39.7 x 27.3 x 11.3 inches 1009.2 x 694.5 x 286.5 mm	44.1 x 29.8 x 11.3 inches 1119.6 x 757.1 x 286.5 mm
	Without stand	46.1 x 28.4 x 3.9 inches 1173.4 x 723.4 x 100.8 mm	53.4 x 32.8 x 4.3 inches 13570 x 835.4 x 109.6 mm	39.7 x 24.8 x 1.2 inches 1009.2 x 629.7 x 29.3 mm	44.1 x 27.2 x 1.2 inches 1119.6 x 691.3 x 29.3 mm
Weight	With stand	51.5 lbs / 23.4 kg	80.2 lbs / 36.4 kg	54.2 lbs / 24.6 kg	62.8 lbs / 28.5 kg
	Without stand	45.8 lbs / 20.8 kg	72.5 lbs / 32.9 kg	44.3 lbs / 20.1 kg	52.9 lbs / 24.0 kg
MODELS		42LH90QD (42LH90QD-SA)	47LH90QD (47LH90QD-SA)	55LH90QD (55LH90QD-SA)	
Dimensions (Width x Height x Depth)	With stand	41.9 x 30.5 x 14.2 inches 1065.9 x 776.0 x 361.7 mm	46.4 x 33.5 x 15.7 inches 1179.0 x 851.4 x 398.8 mm	54.0 x 37.9 x 17.8 inches 1373.0 x 964.3 x 454.2 mm	
	Without stand	41.9 x 28.2 x 3.7 inches 1065.9 x 716.4 x 94.4 mm	46.4 x 30.7 x 4.1 inches 1179.0 x 780.6 x 105.9 mm	54.0 x 34.9 x 4.2 inches 1373.0 x 888.5 x 106.9 mm	
Weight	With stand	51.1 lbs / 23.2kg	60.1 lbs / 273kg	90.1 lbs / 40.9 kg	
	Without stand	42.9 lbs / 19.5 kg	51.8 lbs / 23.5kg	78.2 lbs / 35.5 kg	
Power requirement Television System Program Coverage External Antenna Impedance		AC100-240V ~ 50/60Hz NTSC, PAL-M/N, SBTVD VHF 2-13, UHF 14-69, CATV 1-135 75 ohm			
Environment condition	Operating Temperature Operating Humidity	32 ~ 104°F (0 ~ 40°C) Less than 80%			
	Storage Temperature Storage Humidity	-4 ~ 140°F (-20 ~ 60°C) Less than 85%			

■ The specifications shown above may be changed without prior notice for quality improvement.

PROGRAMMING THE REMOTE CONTROL

The provided universal remote control can be programmed to operate most remote-controllable devices.

Note that the remote may not control all models of other brands.

Programming a code into a remote mode

- 1 Testing your remote control.
To find out whether your remote control can operate other components without programming, turn on a component such as a STB and press the corresponding mode button (such as a **STB**) on the remote control, while pointing at the component. Test the **POWER** and **CH** $\wedge$ $\vee$ buttons to see if the component responds correctly. If the component does not operate correctly, the remote control requires programming to operate the device.
- 2 Turn on the component to be programmed, then press the corresponding mode button (such as **STB**) on the remote control. The remote control button of the desired device is illuminated.
- 3 Press the **MENU** and **MUTE** buttons simultaneously, and the remote control is ready to be programmed with the code.
- 4 Enter a code number using the number buttons on the remote control. Programming code numbers for the corresponding component can be found on the following pages. If the code is correct, the device will turn off.
- 5 Press the **MENU** button to store the code.
- 6 Test the remote control functions to see if the component responds correctly. If not, repeat from step 2.

Remote Control Code

VCR

Brand	Codes	Brand	Codes	Brand	Codes
AIWA	034	MAGNAVOX	031 033 034 041	SAMSUNG	032 040 102 104
AKAI	016 043 046 124		067 068		105 107 109 112
	125 146	MARANTZ	012 031 033 067		113 115 120 122
AMPRO	072		069		125
ANAM	031 033 103	MARTA	101	SANSUI	022 043 048 135
AUDIO DYNAMICS	012 023 039 043	MATSUI	027 030	SANYO	003 007 010 014
BROKSONIC	035 037 129	MEI	031 033		102 134
CANON	028 031 033	MEMOREX	003 010 014 031	SCOTT	017 037 112 129
CAPEHART	108		033 034 053 072		131
CRAIG	003 040 135		101 102 134 139	SEARS	003 008 009 010
CURTIS MATHES	031 033 041	MGA	045 046 059		013 014 017 020
DAEWOO	005 007 010 064	MINOLTA	013 020		031 042 073 081
	065 108 110 111	MITSUBISHI	013 020 045 046		101
	112 116 117 119		049 051 059 061	SHARP	031 054 149
DAYTRON	108		151	SHINTOM	024
DBX	012 023 039 043	MTC	034 040	SONY	003 009 031 052
DYNATECH	034 053	MULTITECH	024 034		056 057 058 076
ELECTROHOME	059	NEC	012 023 039 043		077 078 149
EMERSON	006 017 025 027		048	SOUNDESIGN	034
	029 031 034 035	NORDMENDE	043	STS	013
	036 037 046 101	OPTONICA	053 054	SYLVANIA	031 033 034 059
	129 131 138 153	PANASONIC	066 070 074 083		067
FISHER	003 008 009 010		133 140 145	SYMPHONIC	034
FUNAI	034			TANDY	010 034
GE	031 033 063 072	PENTAX	013 020 031 033	TATUNG	039 043
	107 109 144 147		063	TEAC	034 039 043
GO VIDEO	132 136	PHILCO	031 034 067	TECHNICS	031 033 070
HARMAN KARDON	012 045	PHILIPS	031 033 034 054	TEKNIKA	019 031 033 034
HITACHI	004 018 026 034		067 071 101		101
	043 063 137 150	PILOT	101	THOMAS	034
INSTANTREPLAY	031 033	PIONEER	013 021 048	TMK	006
JCL	031 033	PORTLAND	108	TOSHIBA	008 013 042 047
JCPENNY	012 013 015 033	PULSAR	072		059 082 112 131
	040 066 101	QUARTZ	011 014	TOTEVISION	040 101
JENSEN	043	QUASAR	033 066 075 145	UNITECH	040
JVC	012 031 033 043	RCA	013 020 033 034	VECTOR RESEARCH	012
	048 050 055 060		040 041 062 063	VICTOR	048
	130 150 152		107 109 140 144	VIDEO CONCEPTS	012 034 046
KENWOOD	014 034 039 043		145 147	VIDEOSONIC	040
	047 048	REALISTIC	003 008 010 014	WARDS	003 013 017 024
LG (GOLDSTAR)	001 012 013 020		031 033 034 040		031 033 034 040
	101 106 114 123		053 054 101		053 054 131
LLOYD	034	RICO	058	YAMAHA	012 034 039 043
LXI	003 009 013 014	RUNCO	148	ZENITH	034 048 056
	017 034 101 106	SALORA	014		058 072 080 101
MAGIN	040				

HDSTB

Brand	Codes	Brand	Codes	Brand	Codes
ALPHASTAR DSR	123	HOUSTON TRACKER	033 037 039 051	PROSAT	072
AMPLICA	050		057 104	RCA	066 106
BIRDVIEW	051 126 129	HUGHES	068	REALISTIC	043 074
CHANNEL MASTER	013 014 015 018	JANIEL	060 147	SAMSUNG	123
	036 055	JERROLD	061	SATELLITE SERVICE CO	028 035 047 057
CHAPARRAL	008 009 012 077	KATHREIN	108		085
CITOH	054	LEGEND	057	SCIENTIFIC ATLANTA	032 138
CURTIS MATHES	050 145	LG	001	SONY	103
DRAKE	005 006 007 010	LUTRON	132	STARCAST	041
	011 052 112 116	LUXOR	062 144	SUPER GUIDE	020 124 125
	141	MACOM	010 059 063 064	TEECOM	023 026 075 087
DX ANTENNA	024 046 056 076		065		088 090 107 130
ECHOSTAR	038 040 057 058	MEMOREX	057		137
	093 094 095 096	NEXTWAVE	028 124 125	TOSHIBA	002 127
	097 098 099 100	NORSAT	069 070	UNIDEN	016 025 042 043
	122	PACE SKY SATELLITE	143		044 045 048 049
ELECTRO HOME	089	PANASONIC	060 142		078 079 080 086
EUROPLUS	114	PANSAT	121		101 135 136
FUJITSU	017 021 022 027	PERSONAL CABLE	117	VIEWSTAR	115
	133 134	PHILIPS	071	WINEGARD	128 146
GENERAL INSTRUMENT	003 004 016 029	PICO	105	ZENITH	081 082 083 084
	031 059 101	PRESIDENT	019 102		091 120
HITACHI	139 140	PRIMESTAR	030 110 111		

DVD

Brand	Codes	Brand	Codes	Brand	Codes
APEX DIGITAL	022	MITSUBISHI	002	RCA	005 006
DENON	020 014	NAD	023	SAMSUNG	011 015
GE	005 006	ONKYO	008 017	SONY	007
HARMAN KARDON	027	PANASONIC	003 009	THOMPSON	005 006
JVC	012	PHILIPS	013	TOSHIBA	019 008
LG	001 010 016 025	PIONEER	004 026	YAMAHA	009 018
MAGNAVOX	013	PROCEED	021	ZENITH	010 016 025
MARANTZ	024	PROSCAN	005 006		

IR CODES

 
1. How to Connect

- Connect your wired remote control to the Remote Control port on the TV.

2. Remote Control IR Codes

■ Output waveform


Single pulse, modulated with 37.917KHz signal at 455KHz




Carrier frequency
 $FCAR = 1/T_C = f_{OSC}/12$
Duty ratio = $T_1/T_C = 1/3$

■ Configuration of frame

 
1st frame




Repeat frame

 


■ Lead code

 

■ Repeat code

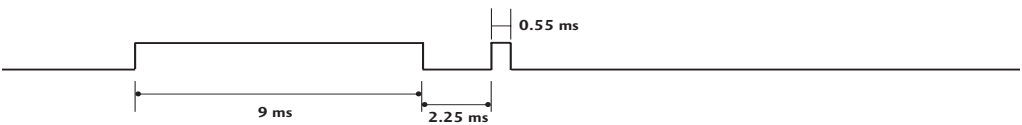


■ Bit description

 

■ Frame interval: Tf

 The waveform is transmitted as long as a key is depressed.



Code (Hexa)	Function	Note	Code (Hexa)	Function	Note
08	POWER	Remote control Button (Power On/Off)	AB	GUIDE	Remote control Button
45	Q.MENU	Remote control Button	AA	INFO	Remote control Button
43	MENU	Remote control Button	D6	TV	Discrete IR Code (TV Input Selection)
0B	INPUT	Remote control Button	C4	POWER ON	Discrete IR Code (Only Power On)
10-19	Number Key 0-9	Remote control Button	C5	POWER OFF	Discrete IR Code (Only Power Off)
4C	- Dash(LIST)	Remote control Button	5A	AV1	Discrete IR Code (AV1 Input Selection)
1A	Q.VIEW(FLASHBK)	Remote control Button	D0	AV2	Discrete IR Code (AV2 Input Selection)
09	MUTE(DELETE)	Remote control Button	BF	COMPONENT1	Discrete IR Code (Component1 Input Selection)
02	VOL +	Remote control Button	D4	COMPONENT2	Discrete IR Code (Component2 Input Selection)
03	VOL -	Remote control Button	D5	RGB-PC	Discrete IR Code (RGB-PC Input Selection)
00	CH ^	Remote control Button	CE	HDMI1	Discrete IR Code (HDMI1 Input Selection)
01	CH v	Remote control Button	CC	HDMI2	Discrete IR Code (HDMI2 Input Selection)
1E	FAV(MARK)	Remote control Button	E9	HDMI3	Discrete IR Code (HDMI3 Input Selection)
40	^	Remote control Button	76	Ratio 4:3	Discrete IR Code (Only 4:3 Mode)
41	v	Remote control Button	77	Ratio 16:9	Discrete IR Code (Only 16:9 Mode)
07	<	Remote control Button	AF	Ratio Zoom	Discrete IR Code (Only Zoom Mode)
06	>	Remote control Button			
44	ENTER	Remote control Button			
28	RETURN	Remote control Button			
7E	SIMPLINK	Remote control Button			
30	AV MODE	Remote control Button			
B0	PLAY	Remote control Button			
BA	PAUSE	Remote control Button			
B1	STOP(LIVE TV)	Remote control Button			
BD	REC	Remote control Button			
8F	REW	Remote control Button			
8E	FF	Remote control Button			
95	ENERGY SAVING	Remote control Button			
72	Red	Remote control Button			
71	Green	Remote control Button			
63	Yellow	Remote control Button			
61	Blue(REPEAT)	Remote control Button			

* Use this feature depending on your model.

For 42/47/55LH90**, 32/42/47/55SL80**, 42/47SL90** Models

Code (Hexa)	Function	Note
0F	TV	Remote control Button
61	Blue	Remote control Button
B8	REPEAT	Remote control Button
79	RATIO	Remote control Button
9E	LIVE TV	Remote control Button


(Only 42/47SL90** Models)

EXTERNAL CONTROL THROUGH RS-232C

The RS-232C port allows you connect the RS-232C input jack to an external control device (such as a computer or an A/V control system) to control the TV's functions externally.

- Note: RS-232C on this unit is intended to be used with third party RS-232C control hardware and software. The instructions below are provided to help with programming software or to test functionality using telenet software.

RS-232C Setup

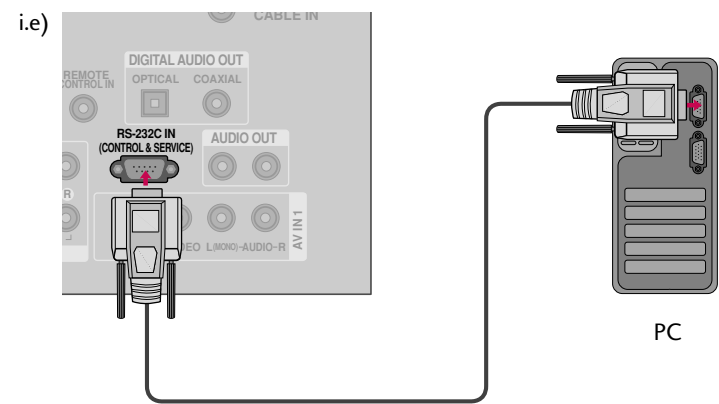

Type of Connector; D-Sub 9-Pin Male


No.	Pin Name
1	No connection
2	RXD (Receive data)
3	TXD (Transmit data)
4	DTR (DTE side ready)
5	GND
6	DSR (DCE side ready)
7	RTS (Ready to send)
8	CTS (Clear to send)
9	No Connection

Communication Parameters

- Baud rate : 9600 bps (UART)
- Data length : 8 bits
- Parity : None
- Stop bit : 1 bit
- Communication code : ASCII code
- Use a crossed (reverse) cable.

! NOTE

- This product has command echo back in the RS-232C Command.

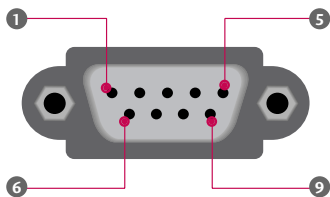

RS-232C Configurations



Either cable below can be used.

7-Wire Configuration (Serial female-female NULL modem cable)				
	PC		TV	
RXD	2	—	3	TXD
TXD	3	—	2	RXD
GND	5	—	5	GND
DTR	4	—	6	DSR
DSR	6	—	4	DTR
RTS	7	—	8	CTS
CTS	8	—	7	RTS
	D-Sub 9		D-Sub 9	


3-Wire Configurations (Not standard)				
	PC		TV	
RXD	2	—	3	TXD
TXD	3	—	2	RXD
GND	5	—	5	GND
DTR	4		6	DTR
DSR	6		4	DSR
RTS	7		7	RTS
CTS	8		8	CTS
	D-Sub 9		D-Sub 9	

Set ID

 
Use this function to specify a TV ID number.
Refer to 'Real Data Mapping'

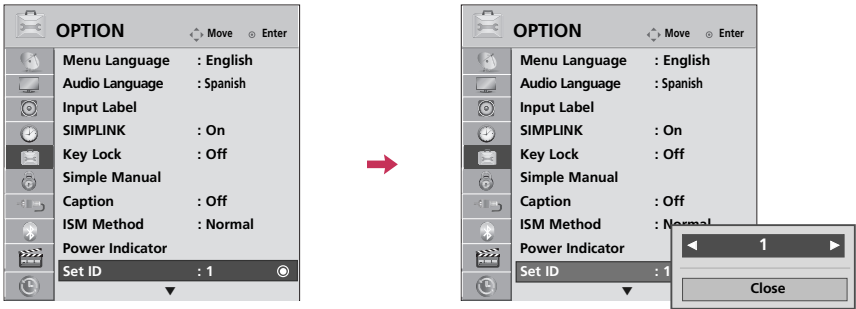

Select **OPTION**.

 

Select **Set ID**.

 

Choose the desired TV ID number.
The adjustment range of Set ID is 1~99.



Return to the previous menu.



Return to TV viewing.

- Real data mapping
 - 0 : Step 0
 - ⋮
 - A : Step 10 (SET ID 10)
 - ⋮
 - F : Step 15 (SET ID 15)
 - 10 : Step 16 (SET ID 16)
 - ⋮
 - 63 : Step 99 (SET ID 99)
 - 64 : Step 100

Command Reference List

COMMAND1 COMMAND2 DATA (Hexadecimal)				COMMAND1 COMMAND2 DATA (Hexadecimal)			
01. Power	k	a	00 ~ 01	14. Treble	k	r	00 ~ 64
02. Input Select	x	b	(▶ p.163)	15. Bass	k	s	00 ~ 64
03. Aspect Ratio	k	c	(▶ p.163)	16. Balance	k	t	00 ~ 64
04. Screen Mute	k	d	00 ~ 01	17. Color Temperature	k	u	00 ~ 02
05. Volume Mute	k	e	00 ~ 01	18. ISM Method	j	p	(▶ p.164)
06. Volume Control	k	f	00 ~ 64	19. Energy Saving	j	q	00 ~ 01
07. Contrast	k	g	00 ~ 64	20. Auto Configuration	j	u	(▶ p.165)
08. Brightness	k	h	00 ~ 64	22. Channel Add/Del	m	b	00 ~ 01
09. Color	k	i	00 ~ 64	23. Key	m	c	(▶ p.166)
10. Tint	k	j	00 ~ 64	24. Backlight	m	g	00 ~ 64
11. Sharpness	k	k	00 ~ 64				
12. OSD Select	k	l	00 ~ 01				
13. Remote Control Lock Mode	k	m	00 ~ 01				
				For PLASMA TV Models For LCD TV Models			

COMMAND1	COMMAND2	DATA00 (Hexadecimal)	DATA01 (Hexadecimal)	DATA02 (Hexadecimal)	DATA03 (Hexadecimal)	DATA04 (Hexadecimal)	DATA05 (Hexadecimal)
21. Channel Tuning	m	a	physical program high	major program low	major low	minor high	minor low attribute

Transmission / Receiving Protocol

Transmission

[Command1][Command2][][Set ID][][Data][Cr]

[Command 1] : First command to control the set.(j, k, m or x)

[Command 2] : Second command to control the set.

[Set ID] : You can adjust the set ID to choose desired TV ID number in Setup menu. Adjustment range is 1~99. When selecting Set ID '0', every connected the TV is controlled. Set ID is indicated as decimal (1~99) on menu and as Hexa decimal (0x0~0x63) on transmission /receiving protocol.

[DATA] : To transmit the command data.

Transmit the 'FF' data to read status of command.

[Cr] : Carriage Return

ASCII code '0x0D'

[] : ASCII code 'space (0x20)'

* In this model, TV will not send the status during the standby mode.

OK Acknowledgement

[Command2][][Set ID][][OK][Data][x]

The TV transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

* In this model, TV will not send the status during the standby mode.

* Data Format

[Command 2] : Use as command.

[Set ID] : Use the small character, if set ID is 10, it will send the '0'; 'a'.

[DATA] : Use the small character, if data is 0 x ab, it will send the 'a'; 'b'.

[OK] : Use the large character.

Error Acknowledgement

[Command2][][Set ID][][NG][Data][x]

The TV transmits ACK (acknowledgement) based on this format when receiving abnormal data from non-viable functions or communication errors.

Data1: Illegal Code

Data2: Not supported function

Data3: Wait more time

* In this model, TV will not send the status during the standby mode.

* Data Format

[Command 2] : Use as command.

[Set ID] : Use the small character, if set ID is 10, it will send the '0'; 'a'.

[DATA] : Use the small character, if data is 0 x ab, it will send the 'a'; 'b'.

[NG] : Use the large character

APPENDIX

166

01. Power (Command: k a)

To control Power On/Off of the TV.

Transmission [k][a][][Set ID][][Data][Cr]

Data 00: Power Off Data 01: Power On

Acknowledgement [a][][Set ID][][OK/NG][Data][x]

* In a like manner, if other functions transmit 'FF' data based on this format, Acknowledgement data feedback presents status about each function.

* Note: In this model, TV will send the Acknowledge after power on processing completion.

There might be a time delay between command and acknowledge.

02. Input Select (Command: x b)

To select input source for TV.

Transmission [x][b][][Set ID][][Data][Cr]

Data 00: DTV (Antenna)

Data 10: Analog (Antenna) Data 11: Analog (Cable)

Data 20: AV1 Data 21: AV2

Data 40: Component 1 Data 41: Component 2

Data 60: RGB Data 90: HDMI1

Data 91: HDMI2 Data 92: HDMI3

Acknowledgement [b][][Set ID][][OK/NG][Data][x]

* Use the feature depending on your model.

03. Aspect Ratio (Command: k c)

To adjust the screen format.

Transmission [k][c][][Set ID][][Data][Cr]

Data 01: 4:3 06: Set by program

02: 16:9 09: Just scan

04: Zoom1 10: Cinema Zoom1

05: Zoom2 ⋮

1F: Cinema Zoom16

Acknowledgement [c][][Set ID][][OK/NG][Data][x]

04. Screen Mute (Command: k d)

To select screen mute on/off.

Transmission [k][d][][Set ID][][Data][Cr]

Data 00: Screen mute off (Picture on), Video-out Mute off

Data 01: Screen mute on (Picture off)

Data 10: Video-out Mute on

Acknowledgement [d][][Set ID][][OK/NG][Data][x]

* In case of Video-out Mute on only, TV will display On Screen Display (OSD). But, in case of screen mute on, TV will not display On Screen Display (OSD).

05. Volume Mute (Command: k e)

To control volume mute on/off.

You can also adjust mute using the MUTE button on remote control.

Transmission [k][e][][Set ID][][Data][Cr]

Data 00: Volume mute on (Volume off)

Data 01: Volume mute off (Volume on)

Acknowledgement [e][][Set ID][][OK/NG][Data][x]

06. Volume Control (Command: k f)

To adjust volume.

You can also adjust volume with the volume buttons on remote control.

Transmission [k][f][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping'. ► p.161.

Acknowledgement [f][][Set ID][][OK/NG][Data][x]

07. Contrast (Command: k g)

To adjust screen contrast.

You can also adjust contrast in the PICTURE menu.

Transmission [k][g][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping'. ► p.161.

Acknowledgement [g][][Set ID][][OK/NG][Data][x]

08. Brightness (Command: k h)

To adjust screen brightness.

You can also adjust brightness in the PICTURE menu.

Transmission [k][h][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping'. ► p.161.

Acknowledgement [h][][Set ID][][OK/NG][Data][x]

09. Color (Command: k i)

To adjust screen color.

You can also adjust color in the PICTURE menu.

Transmission [k][i][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping'. ► p.161.

Acknowledgement [i][][Set ID][][OK/NG][Data][x]

10. Tint (Command: k j)

To adjust screen tint.

You can also adjust tint in the PICTURE menu.

Transmission [k][j][][Set ID][][Data][Cr]

Data Red: 00 ~ Green: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping'. ► p.161.

Acknowledgement [j][][Set ID][][OK/NG][Data][x]

11. Sharpness (Command: k k)

To adjust screen sharpness.

You can also adjust sharpness in the PICTURE menu.

Transmission [k][k][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping'. ► p.161.

Acknowledgement [k][][Set ID][][OK/NG][Data][x]

12. OSD Select (Command: k l)

To select OSD (On Screen Display) on/off.

Transmission [k][l][][Set ID][][Data][Cr]

Data 00: OSD off Data 01: OSD on

Acknowledgement [l][][Set ID][][OK/NG][Data][x]

13. Remote Control Lock Mode (Command: k m)

To lock the remote control and the front panel controls on the set.

Transmission [k][m][][Set ID][][Data][Cr]

Data 00: Lock off Data 01: Lock on

Acknowledgement [m][][Set ID][][OK/NG][Data][x]

If you're not using the remote control and front panel controls on the TV, use this mode. When main power is on/off, remote control lock is released.

If Key Lock is on in the standby mode, TV will not turn on by POWER button of remote control and on the TV.

14. Treble (Command: k r)

To adjust treble.

You can also adjust treble in the AUDIO menu.

Transmission [k][r][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping'. ► p.161.

Acknowledgement [r][][Set ID][][OK/NG][Data][x]

15. Bass (Command: k s)

To adjust bass.

You can also adjust bass in the AUDIO menu.

Transmission [k][s][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping'. ► p.161.

Acknowledgement [s][][Set ID][][OK/NG][Data][x]

16. Balance (Command: k t)

To adjust balance.

You can also adjust balance in the AUDIO menu.

Transmission [k][t][][Set ID][][Data][Cr]

Data Min: 00 ~ Max: 64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping'. ► p.161.

Acknowledgement [t][][Set ID][][OK/NG][Data][x]

17. Color Temperature (Command: k u)

To adjust color temperature.

You can also adjust color temperature in the PICTURE menu.

Transmission [k][u][][Set ID][][Data][Cr]

Data 00: Medium 01: Cool 02: Warm

Acknowledgement [u][][Set ID][][OK/NG][Data][x]

18. ISM Method (Command: j p)

(For PLASMA TV models)

To avoid having a fixed image remain on screen.

Transmission [j][p][][Set ID][][Data][Cr]

Data 02: Orbiter 04: White Wash

08: Normal 20: Color Wash

Acknowledgement [p][][Set ID][][OK/NG][Data][x]

18. Energy Saving (Command: j q)

To control the energy saving function.

Transmission [j][q][][Set ID][][Data][Cr]

Data 00: Energy saving - off

01: Energy saving - Minimum

02: Energy saving - Medium

03: Energy saving - Maximum

For LCD TV Models
(Except 32/37/42LH35**)

04: Energy saving - Auto

05: Energy saving - Screen off

For LCD TV Models

10: Intelligent Sensor: Low

11: Intelligent Sensor: Middle

12: Intelligent Sensor: High

For PLASMA TV Models

Acknowledgement [q][][Set ID][][OK/NG][Data][x]

19. Auto Configuration (Command: j u)

To adjust picture position and minimize image shaking automatically. Auto configuration only works in RGB-PC mode.

Transmission [j][u][][Set ID][][Data][Cr]

Data 1: To set

Acknowledgement [u][][Set ID][][OK/NG][Data][x]

20. Channel Tuning (Command: m a)

To tune channel to following physical/major/minor number.

Transmission [m][a][][Set ID][][Data0][][Data1][][Data2][][Data3][][Data4][][Data5][Cr]

Digital channels have a Physical, Major, and Minor channel number. The Physical number is the actual digital channel number, the Major is the number that the channel should be mapped to, and the Minor is the sub-channel. Since the tuner automatically maps the channel to the Major number, the Physical number is not required when sending a command.

Data 0: Physical Channel Number

Analog air: 01~69, Analog cable: 01~135

DTV air: 01~69

Data1 & 2: Major Channel Number

Data1: High byte

Data2: Low byte

Two bytes are available for the Major and Minor, normally only the second byte is used.

Data3 & 4: Minor Channel Number

Not needed for NTSC.

Data05:

7	Main/Sub Picture	6	Two/One Part Channel	5	Using Physical Channel	4	Reserved	3	2	1	0	Step
0	Main	0	Two	0	Use	x		0	0	0	0	Analog air
1	Sub	1	One	1	No Use	x		0	0	0	1	Analog cable
						x		0	0	1	0	DTV air
						x		0	0	1	1	Reserved
						x		0	1	0	0	Reserved
						x		0	1	0	1	Reserved
						x		0	1	1	0	Reserved
						x		0	1	1	1	Reserved
						x		x	x	x	x	...
						x		1	1	1	1	Reserved

The table above lists the binary code which must be converted to Hexadecimal before sending. For example: The binary code to tune the sub source to an NTSC cable channel is “1000 0001”, which translates to “81” in Hex.

- * 7th bit : For which source do you want to change the channel.
- * 6th bit: Use a two part or one part channel. Most cases just use 0 since it's ignored when using NTSC.
- * 5th bit: Use 0 with NTSC since it can only use the physical channel number. Normally use 1 for ATSC since most times it doesn't matter what the physical number is.
- * 4th bit: Set to 0.
- * 3-0 bits: Choose signal type.

- * Tune Command Examples:
 1. Tune to the analog cable channel 35.
Data 00 = Physical of 35 = 23
Data 01 & 02 = No Major = 00 00
Data 03 & 04 = No Minor = 00 00
Data 05 = 0000 0001 in binary = 01
Total = ma 00 23 00 00 00 00 01
 2. Tune to the digital local channel 30-3.
Data 00 = Don't know Physical = 00
Data 01 & 02 = Major is 30 = 00 1E
Data 03 & 04 = Minor is 3 = 00 03
Data 05 = 0010 0010 in binary = 22
Total = ma 00 00 00 1E 00 03 22

Acknowledgement[a][][Set ID][][OK][Data00][Data01][Data02][Data03][Data04][Data05][x][a][][Set ID][][NG][Data00][x]

21. Channel Add/Del (Command: m b)

To add and delete the channels

Transmission [m][b][][Set ID][][Data][Cr]

Data 00: Channel Delete Data 01: Channel Add

Acknowledgement [b][][Set ID][][OK/NG][Data][x]

22. Key (Command: m c)

To send IR remote key code.

Transmission [m][c][][Set ID][][Data][Cr]

Data Key code: ► p.159.

Acknowledgement [c][][Set ID][][OK/NG][Data][x]

23. Backlight (Command: m g)

(For LCD TV Models)

To adjust screen backlight.

Transmission [m][g][][Set ID][][Data][Cr]

Data Min:00 ~ Max:64 (*transmit by Hexadecimal code)

*Refer to 'Real data mapping'. ► p.161.

Acknowledgement [g][][Set ID][][OK/NG][Data][x]



NOTE

ENG

Some video codecs listed in the manual may not be supported, depending on the region (country).

POR

Alguns codecs de vídeo listados no manual podem não ser suportados, dependendo da região (país).

POL

Niektóre kodeki wideo wymienione w instrukcji mogą nie być obsługiwane, w zależności od regionu (kraju).

SPA

Algunos códecs de vídeo que figuran en el manual pueden no ser compatibles, dependiendo de la región (país).

THA

ชนิดของไฟล์วิดีโอบางชนิดที่อยู่ในคู่มือเล่มนี้ อาจไม่รองรับการใช้งานในบางพื้นที่(ประเทศ)

Open source software notice

The following GPL executables and LGPL/MPL libraries used in this product are subject to the GPL2.0/LGPL2.1/MPL1.1 License Agreements:

GPL EXECUTABLES:

- Linux kernel 2.6
- busybox
- lzo

LGPL LIBRARIES:

- uClibc

MPL LIBRARIES:

- Nanox

LG Electronics offers to provide source code to you on CD-ROM for a charge covering the cost of performing such distribution, such as the cost of media, shipping and handling upon e-mail request to LG Electronics at: opensource@lge.com

This offer is valid for a period of three(3) years from the date of the distribution of this product by LG Electronics.

You can obtain a copy of the GPL, LGPL, MPL licenses from

- <http://www.gnu.org/licenses/old-licenses/gpl-2.0.html>,
- <http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html>,
- <http://www.mozilla.org/MPL/MPL-1.1.html>.

Also you can obtain the translation of GPL, LGPL licenses from

- <http://www.gnu.org/licenses/old-licenses/gpl-2.0-translations.html>,
- <http://www.gnu.org/licenses/old-licenses/lgpl-2.1-translations.html>.

This software is based in part on the work of the Independent JPEG Group copyright © 1991 – 1998, Thomas G. Lane.

This product includes

- libpng library : copyright © 2004 Glenn Randers-Pehrson
- Zlib compression library: Copyright © 1995-2002 Jean-loup Gailly and Mark Adler.
- Tinyxml library : copyright © 2000-2006 Lee Thomason