


## Additional Information

### Specifications

 
Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 330.0 mm x 716.0 mm x 318.0 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	500 W RMS

Design and specifications are subject to change without notice.

### Caution


- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

### Replacement of battery

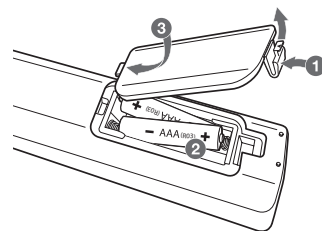

**POWER:** This unit operates on a mains supply of 200 - 240 V ~, 50 / 60 Hz.

**Wiring:** This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below.

**Warning:** A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

**Important:** The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE:** As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



# SIMPLE MANUAL

## Mini Hi-Fi

## Audio

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL  
OK55




MFL70343942

[www.lg.com](http://www.lg.com)  
Copyright © 2018 LG Electronics Inc. All Rights Reserved.  
1807\_Rev02


 
## Top panel

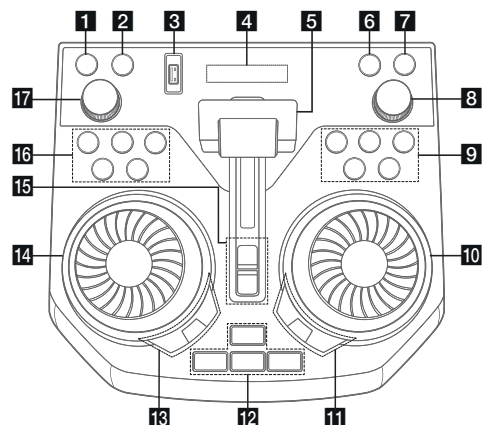

- 1** (Standby)  
Turns the power on or off.
- 2** **USB REC / DEMO**  
- Records to USB.  
- To stop Recording, press and hold for 3 seconds.  
- In power off status, if you press **USB REC / DEMO**, show demo mode.
- 3** **USB Port**  
You can play sound files by connecting the USB device.
- 4** Display window
- 5** **PARTY ACCELERATOR** lever  
Slide the lever to create a party atmosphere.
- 6** **F (Function)**  
Selects the function and input source.
- 7** **WIRELESS LINK**  
- Selects MAIN or OTHER on WIRELESS PARTY LINK mode.  
- Enable or disable WIRELESS PARTY LINK mode.
- 8** **MASTER VOL.** (Volume) **-/+**  
Adjusts speaker volume.
- 9** **K<** (Skip/Search)  
- Skips backward.  
- Searches for a section within a track/file.  
- Selects the radio stations.  
**II** (Play/Pause)  
- Starts or pauses playback.  
- Selects stereo/mono.  
**K>** (Skip/Search)  
- Skips forward.  
- Searches for a section within a track/file.  
- Selects the radio stations.

- (Stop)  
Stops playback or cancels DELETE function.
- (Open/Close)  
Opens and closes the disc tray.

- 10** **DJ SCRATCH / SEARCH & MULTI**  
- Turns clockwise or counterclockwise to make scratch sound.  
- Searches a folder or a file

- 11** **SPECIAL EQ / BASS BLAST** (or **BASS BLAST+**)  
- Chooses special equalizer.  
- Press and hold to select **BASS** (or **BASS+**) effect directly.

**SEARCH**  
Moves to folder or file in selection mode.

**OK**  
Selects a folder when searching a file.

- 12** **PARTY STARTER**  
- In power off state, this function turns on the unit with Party Kick Starter sound.  
- In power on state, this function mixes the music with Party Kick Starter sound.

**CLUB, DRUM, USER** (DJ PAD)  
Selects CLUB, DRUM or USER sound effect to mix.  
(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)

**1, 2, 3** (DJ PAD)  
Press a desired sound pad.

- 13** **DJ EFFECT**  
Selects a desired DJ effect.
- USER EQ**  
Selects the equalizer created by your own.

**LIGHTING**  
Selects the lighting mode.

- 14** **DJ SCRATCH / LEVEL CONTROL**  
- Turns clockwise or counterclockwise to make scratch sound.  
- Turns clockwise or counterclockwise to control the USER EQ level.  
- Adjust DJ EFFECT level.  
- Selects the vocal effects.  
- Selects the lighting effects.

- 15** **PARTY ACCELERATOR MODE**  
Selects PARTY ACCELERATOR MODE.

**DJ LOOP**  
Selects DJ LOOP mode.  
(DJ LOOP mode can use during CD/USB playback.)

- 16** **KEY CHANGER** (**b / #**)  
Changes the key to suit your vocal range.


**VOICE CANCELLER**  
You can reduce the vocal tones during music playback from various input sources.

**VOCAL EFFECTS**  
Selects VOCAL EFFECTS mode.


**MIC ECHO**  
Selects ECHO mode.

- 17** **MIC VOL.** (Microphone Volume) **-/+**  
Adjust microphone volume.

## Front panel / Rear panel

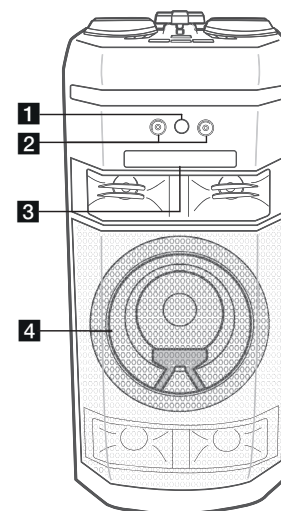 

 - 1** (Remote sensor)
- 2** **MIC**(Microphone) **1/2** jack
- 3** Disc tray
- 4** Lighting

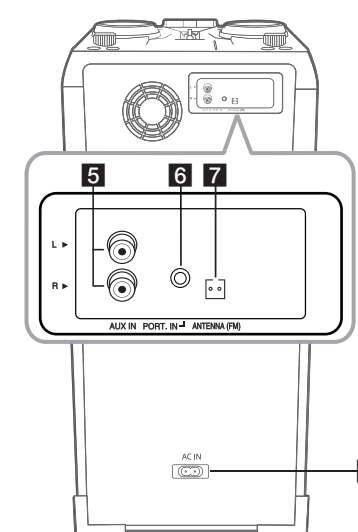

- 5** **AUX IN** (L/R) : Connect an auxiliary device.
- 6** **PORT.**(Portable) **IN** : Connect a portable device.
- 7** **ANTENNA** (FM)
- 8** **AC IN** socket

### Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

### LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>