 


# SJ7/SJ5's/SJ4's SW Update Guide – Preparation

## ● Preparation

1. SJ7(Master Unit), SJ5's, SJ4's Main Units
2. SJ7/SJ5's/SJ4's Remote Controller Unit
3. USB Memory
4. SW File



<Main Unit>  
Necessary




<RCU>  
Necessary



<USB Memory>  
Necessary

## <Software Download – Example>

1. Website : <http://www.lg.com>
2. Path : Support > Software&Drivers
3. Search your “model name”
4. And then pop-up window will be showed
5. Select the file and download it

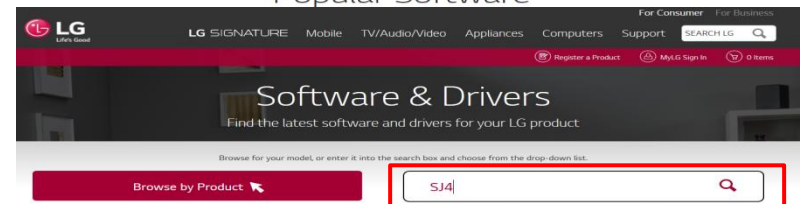

## Software

Software upgrades include device drivers and firmware updates only for specific models. Check your owner's manual to determine if your product supports software upgrades.

### Firmware update for SJ4Y (Version : 1704262)

Software\_download\_guide(Eng)\_20170428.pdf 330K

MICOM\_SJ4\_1704262\_919D\_rev3093.zip 75K

(This is an example)

04/28/2017

04/28/2017

Reference

Close

- ※ Take care not to power off during update
- ※ Do format USB memory before update (FAT32 file system)

# SJ7/SJ5's/SJ4's SW Update Guide – Update

## Step 1. Prepare SJ4/SJ5 update binaries.

Change the downloaded "filename" like below by models.

ex) If your model is SJ4Y, please change the filename to DSP\_MAIN\_SJ4\_1712060 from DSP\_MAIN\_SJX\_1712060

| Update module | Filename Sample                                                                                         |
|---------------|---------------------------------------------------------------------------------------------------------|
| DSP           | SJ4's : DSP_MAIN_SJ4_1712060.ROM<br>SJ5Y's : DSP_MAIN_SJ5_1712060.ROM<br>SJ7 : DSP_MAIN_SJ7_1712060.ROM |

## Step 2. Copy SW file to USB memory.

## Step 3. Power on SJ4/SJ5/SJ7 main unit.


## Step 4. Press Function key to change function to USB.

Verify whether USB function is or not by VFD(SJ7/SJ5's) or LED(SJ4's).


※ Press "SET Vol –" and "Remote Vol +" more than 3 sec at the same time(SJ7).

※ Verify whether USB function is or not by VFD(SJ7/SJ5) or LED(SJ4).


SJ4

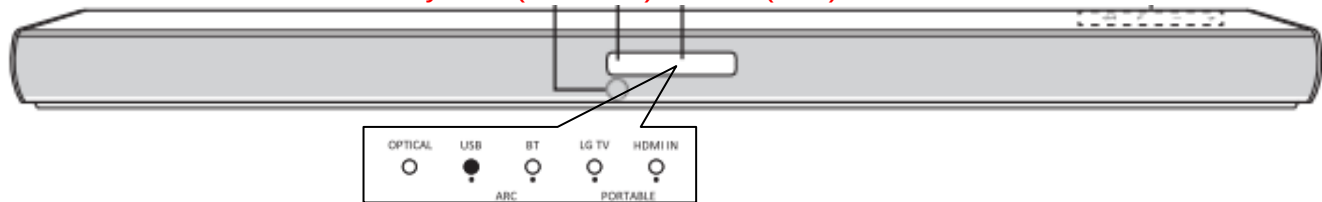

SJ5

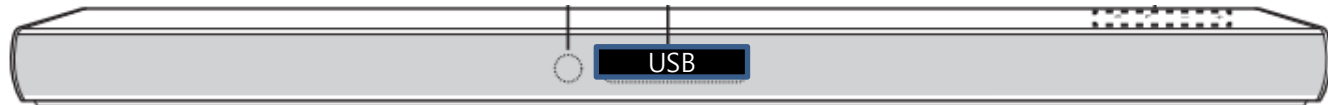


SJ7

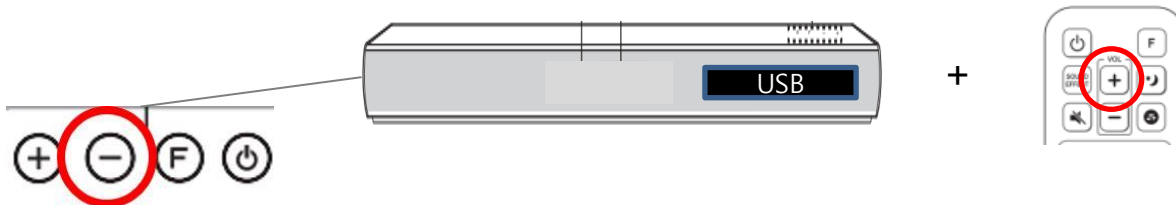


# SJ7/SJ5's/SJ4's SW Update Guide – Update

Step 5. Attach USB which has update software to the USB slot back of SJ7(Master)/SJ5/SJ4 main unit.

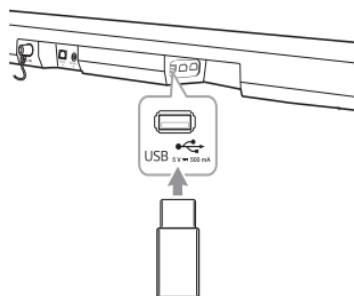

<SJ4/5>

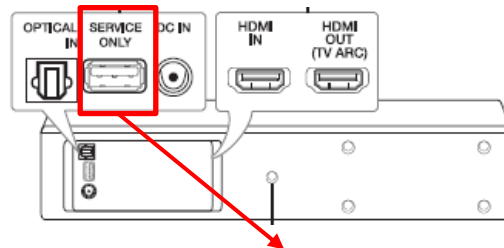


USB(SERVICE ONLY) : SW Download Connector


<SJ7>

Step 6. Update will start automatically.


※ SJ4 : Check whether function LED blinks one by one to the right direction

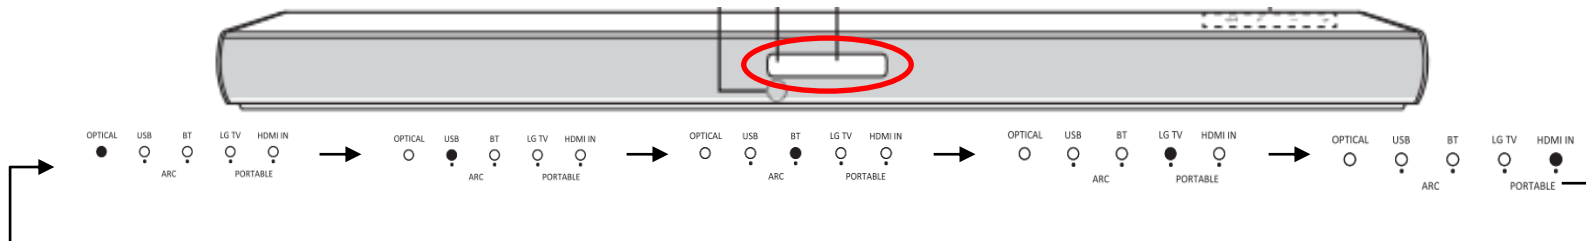

※ SJ5 : Check whether VFD is “D-UP”

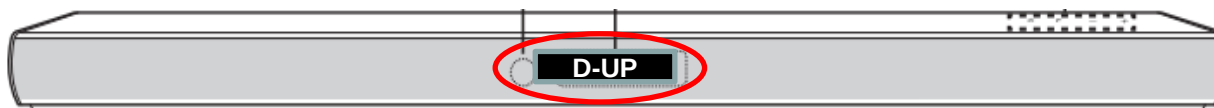

※ SJ7 : Check whether VFD is “D-UP”

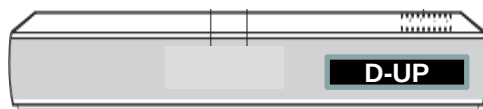

Step 7. SJ7/SJ5/SJ4 main unit will be off automatically after update finish.