



SIMPLE MANUAL

# Outdoor Mini

ENGLISH

To view the instructions of advanced features,  
visit <http://www.lg.com> and then download Owner's Manual.  
Some of the content in this manual may differ from your unit.

 
MODEL  
OM7560



[www.lg.com](http://www.lg.com)  
Copyright © 2016-2019 LG Electronics Inc. All Rights Reserved.



## Top panel

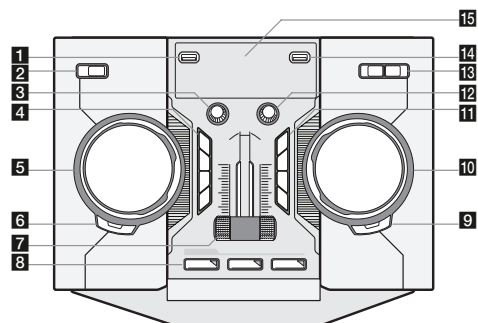

**1** USB 1 Port  
You can play or record sound files by connecting the USB device.

**2** (Standby/On)

**3** MIC. (Microphone volume)  
Controls microphone's volume.

**4** VOICE CANCELLER  
- You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.  
Press to switch this mode on or off.

### KEY CHANGER (b/#)

Changes the key to suit your vocal range.

### LIGHTING / PARTY LINK

- Turns on/off the lighting effects.
- Press and hold to select the PARTY LINK.

**5** SCRATCH / LEVEL / SYNC SET  
Turn clockwise or counterclockwise to make Scratch sound.  
/ Adjust DJ EFFECT level. / Sets Delay value in PARTY LINK mode.

**6** DJ EFFECT  
Selects DJ EFFECT mode.

### USER EQ

Selects the sound effect created by your own.

**7** PARTY THRUSTER  
Slide the lever to create a party atmosphere.

**8** CLUB, DRUM, USER (DJ PRO)  
Selects CLUB, DRUM or USER sound effect to mix.  
(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)

**1, 2, 3** (DJ PRO PAD)

Press a desired sound pad.

### 9 SEARCH

Moves to folder or file in selection mode.

### OK

Selects a folder when searching a file.

### 10 & SEARCH (Skip/Search)

- Searches a folder or a file.
- Searches for a section within a track/file.
- Selects the radio stations.

### 11 (Play/Pause)

- Starts or pauses playback.
- Selects Stereo/Mono.

### (Stop)

Stops playback or cancels DELETE function.

### (Open/Close)

Opens and closes the disc tray.

### REGION EQ / BASS BLAST

- Chooses region equalizer.
- Press and hold to select BASS effect directly.

### 12 VOL. (Volume)

Adjusts speaker volume.

### 13 USB REC / DEMO

Records to USB. / Shows Demo mode.

### F (Function) / WIRELESS LINK

 
- Selects the function and input source.
- Press and hold for 3 seconds to select WIRELESS PARTY LINK mode.


### 14 USB 2 Port


You can play or record sound files by connecting the USB device.

### 15 Display window

## Front panel / Rear panel

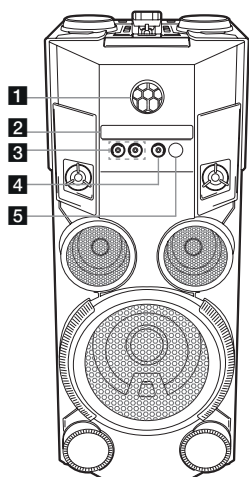

 - 1 DANCE LIGHTING** (Lighting ball)
  - Shows the various lighting patterns and color.
  - You can control angle up and down with your finger.
- 2** Disc tray
- 3 MIC** (Microphone) 1 / 2 jack
- 4 PORT. IN**
- 5**  Remote sensor

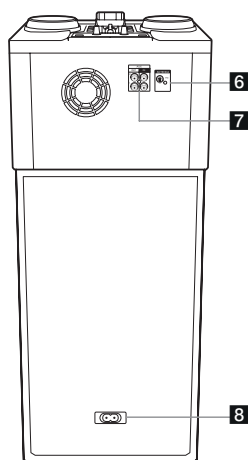

- 6 ANTENNA** (FM)
- 7 AUX IN / OUT**
- 8** AC in socket

### Controller App



Download the **Music Flow Bluetooth** App to your device.


### LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

## Additional Information

### Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 330 mm x 815 mm x 302 mm
Net Weight	Approx. 16.8 kg
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	1,000 W

Design and specifications are subject to change without notice.

### Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

 
### Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

### How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

### Replacement of battery

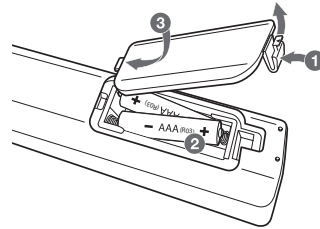

### Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type MINI HI-FI AUDIO is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.



-----

-----

-----

-----

-----

-----

-----

-----

-----

-----



-----

-----

-----

-----

-----

-----

-----

-----

-----

-----



-----

-----

-----

-----

-----

-----

-----

-----

-----

-----

### **Российская Федерация**

Импортер ООО "ЛГ Электроникс Рус"

Адрес импортера: 143160 Российская Федерация, Московская область, Рузский район, сельское поселение Дороховское, 86 км. Минского шоссе, д.9

Адрес производителя : ЛГ Электроникс (Хужоу) Инк., завод Хатаи  
516006, Китай, пров. ГуанДонг, г. Хужоу, Промышленная зона  
Жонгкай, Индустриальный парк Хутай, ХуФенг Донг Уи Роуд, 13.

**Сделано в Китае**

### **Україна**

Вироблено в: ЛГ Електронікс (Хужоу) Інк., завод Хатай  
516006, Китай, пров. ГуанДонг, м. Хужоу, Промислова зона Жонгкай,  
Індустріальний парк Хутай, ХуФенг Донг Уі Роуд, 13.

### **Қазақстан Республикасы**

Импорттаушы АҚ "ЭЛ Джи Электроникс Алматы Қазақстан", 050061, Алматы қ., Көкорай көшесі, 2А/9

Өндірушінің мекенжайы: LG Electronics(Huizhou) Inc. Huitai Factory  
516006, Қытай, ГуанДонг ауданы, Хужоу қаласы, Жонгкай өнеркәсіптік аймағы,  
Хутай Индустриялық саябағы, ХуФенг Донг Уи Роуд, 13.

Қазақстан Республикасы территориясында тұтынушылардан келіп түскен талаптар мен ұсыныстарды қарайтын және тауарды жөндеу мен техникалық қызмет көрсететін ұжым:

АҚ «Эл Джи Электроникс Алматы Қазақстан», 050061, Қазақстан Республикасы, Алматы қ., Көкорай көшесі, 2А/9. Басқа сервис орталықтары жайында мағлұматты "Тұтынушыға қызмет көрсету орталығына" телефон шалу арқылы білуге болады.

**Қытайда жасалған**