



OWNER'S MANUAL

Mini Hi-Fi Audio

Please read this manual carefully before operating your set and retain it for future reference.

MODEL

OK99M

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

Check the specification page of this owner's manual to be certain of the current requirements.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

CAUTION: Be careful to make sure children do not put their hands or any objects into the *speaker duct.

* speaker duct: A hole for plentiful bass sound on speaker cabinet. (enclosure)

CAUTION: No naked flame sources, such as lighted candles, should be placed on the apparatus.

Symbols

~	Refers to alternating current (AC).
≡	Refers to direct current (DC).
⊞	Refers to class II equipment.
⏻	Refers to stand-by.
I	Refers to "ON" (power).
⚡	Refers to dangerous voltage.

Table of Contents

1 Getting Started

- 2 Safety Information
- 6 Unique Features
- 7 Playable file Requirement
 - 7 – Music file requirement
 - 7 – Compatible USB Devices
 - 7 – USB device requirement
- 8 Remote control
- 10 Top panel
- 12 Front panel / Rear panel
- 13 Carrying the unit

2 Connecting

- 14 AC Power Cord Connection
- 14 Optional Equipment Connection
 - 14 – AUX IN 1 Connection
 - 15 – AUX IN 2 Connection
 - 15 – Listening to music from your portable player or external device
- 16 LG Sound Sync
 - 17 – USB Connection

3 Operating

- 18 Basic Operations
 - 18 – USB Operations
 - 18 – Auto Play
 - 19 – Selecting a folder and an MP3/WMA file
 - 20 – Deleting a file/folder or format
- 20 Playback Effect
 - 20 – DJ EFFECT
 - 21 – DJ SCRATCHER
 - 22 – AUTO DJ
 - 22 – DJ PAD
 - 23 – DJ LOOP
 - 23 – PARTY ACCELERATOR
 - 24 – MIX
 - 24 – TEMPO
 - 24 – AUTO SYNC
 - 25 – DJ STAR
 - 25 – REAL SCRATCHER
 - 25 – CUE
- 26 Using BLUETOOTH® wireless technology
 - 26 – Listening to music stored on the Bluetooth devices
- 29 Using the LG XBOOM App
 - 29 – About “LG XBOOM” App
 - 29 – Install “LG XBOOM” App onto Your Bluetooth Device
 - 30 – Activate Bluetooth with “LG XBOOM” App
- 31 Sound adjustment
 - 31 – Setting the sound mode
 - 31 – Setting the USER EQ
- 32 Advanced Operations

- 32 – Recording to USB
- 34 Other Operations
 - 34 – Turn off the sound temporarily
 - 34 – CHILDSAFE Mode
 - 34 – DEMO
 - 34 – Resume stop
 - 34 – Using Microphone
- 36 – Using H/P MODE
- 37 – LIGHTING
 - 37 – Sleep Timer Setting
 - 37 – Dimmer
- 38 – AUTO POWER On
- 39 – Auto function change
- 40 Setting the Clock
 - 40 – Setting the Clock through “LG XBOOM” App
- 41 WIRELESS PARTY LINK Connection

4 Troubleshooting

- 42 Troubleshooting
 - 42 – General
 - 43 – NOTES to release Demo mode

5 Appendix

- 44 General specifications
- 45 Trademarks and licenses
- 46 Maintenance
 - 46 – Handling the Unit

1

2

3

4

5

Unique Features

BLUETOOTH®

Listens to music stored on your **Bluetooth** device.

Playback effects

Listens to music with various sound and playback effects.

USB Direct Recording

Records music to your USB device.

LG XBOOM

LG XBOOM is an app designed to let you take control of some of LG's latest audio devices. (Page 29-30)

LG Sound Sync

Controls volume level of this unit by the remote control of your LG TV that is compatible with LG Sound Sync.

Playable file Requirement

Music file requirement

MP3/WMA file compatibility with this unit is limited as follows.

- Sampling frequency: within 32 to 48 kHz (MP3), within 32 to 48 kHz (WMA)
- Bit rate: within 32 to 320 kbps (MP3), 40 to 192 kbps (WMA)
- Maximum files: 2,000
- Maximum folders: 200
- File extensions: ".mp3"/ ".wma"
- Certain MP3/WMA files may not be played depending on the type or format of the file.


Compatible USB Devices

- MP3 Player: Flash type MP3 player.
- USB Flash Drive: Devices that support USB2.0 or USB1.1.
- The USB function of this unit does not support all USB devices.

USB device requirement

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- Do not extract the USB device while in operation.
- For a large capacity USB, it may take longer than a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT(16/ 32) file system is supported.)
- This unit recognizes up to 2,000 files.
- External HDD, Card readers, Locked devices, or hard type USB devices are not supported.
- USB port of the unit cannot be connected to PC. The unit cannot be used as a storage device.
- Some USB may not work with this unit.

Remote control

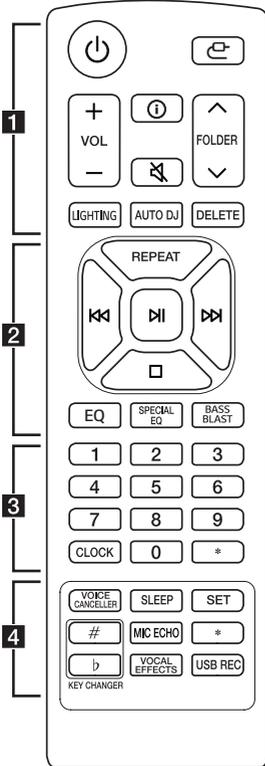

- **1**
- ⏻ (Standby): Turns the power on or off.
- ⏮ (Function): Selects the function and input source.

Input source / Function	Display
USB	USB1 / USB2
AUX (3.5 mm) input	AUX 1
AUX input	AUX 2
Bluetooth	BLUETOOTH
LG Sound Sync (Wireless)	LG TV

VOL (Volume) +/-: Adjusts speaker volume.

i (Information) :

- Sees information about your music. An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
- Sees **Bluetooth** device name of the unit in BLUETOOTH READY.
- Sees the name of connected all **Bluetooth** device in **Bluetooth** mode.
- When these units are successfully connected each other in WIRELESS PARTY LINK mode, each of connected device names appears in the each unit.

🔇 (Mute): Mutes the sound.


FOLDER **^**/**v**: Searches for a folder of MP3/WMA files. When a USB containing MP3/WMA files in several folders is being played, press **FOLDER** **^**/**v** to select the folder you want to play.

LIGHTING: Selects the lighting mode.

AUTO DJ: Selects the AUTO DJ mode. (Page 22)

DELETE: Deletes MP3/WMA files. (Page 20)

Replacement of battery

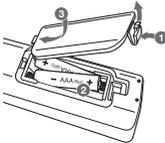

Remove the battery cover on the rear of the remote control, and insert the battery with **+** and **-** matched correctly.

Risk of fire or explosion if the battery is replaced by an incorrect type.

2

REPEAT: Listens to your files repeatedly or randomly.

⏮/⏭ (Skip/Search):

- Skips backward or forward.
- Searches for a section within a file.

⏮|| (Play/Pause): Starts or pauses playback.

□ (Stop):

- Stops playback.
- Cancels DELETE function.

EQ: Chooses sound impressions.

SPECIAL EQ: Chooses special equalizer.

BASS BLAST (or **BASS BLAST+**): Press to select BASS BLAST (or BASS BLAST+) effect directly.

3

0 to 9 numerical buttons: Selects numbered files.

CLOCK: Sets a clock and checks a time.

★: This button is not available.

4

VOICE CANCELLER: You can reduce the vocal tones during music playback from various input sources.

SLEEP: Sets the system to turn off automatically at a specified time.

(Dimmer: The display window will be darkened by half.)

SET: Confirms the setting.

KEY CHANGER (#/b): Changes the key to suit your vocal range.

MIC (Microphone) **ECHO:** Selects ECHO mode.


★: This button is not available.

VOCAL EFFECTS: Selects various vocal effects mode.

USB REC:

- Records to USB.
- Stops recording.

Top panel

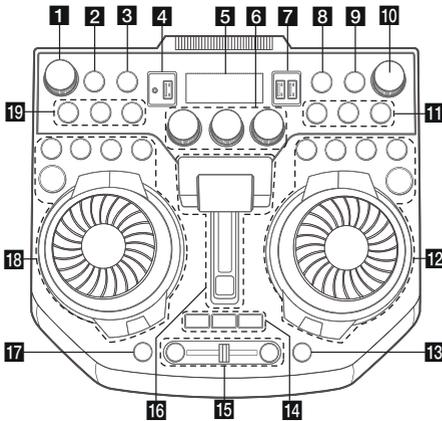

1 H/P (Headphone) VOLUME -/+

Adjusts headphone volume.

2 ⏻ (Standby)

Turns the power on or off.

3 ⏸ (Function)

Selects the function and input source.

4 HEADPHONE IN jack

USB 1 Port

You can play sound files by connecting the USB device.

5 Display window

6 TEMPO A -/+

Adjusts TEMPO in USB 1 function.

MASTER VOLUME -/+

Adjusts speaker volume.

TEMPO B -/+

Adjusts TEMPO in USB 2 function.

7 USB 2 Port

You can play sound files by connecting the USB device.

RECORD PORT

You can record files from various sources.

8 USB REC / DEMO

- Records to USB.
- Stops recording.
- In power off status, if you press **USB REC / DEMO**, show demo mode.

9 MIC (Microphone) ECHO

Selects ECHO mode.

10 MIC (Microphone) VOLUME -/+

Adjusts microphone volume.

11 VOCAL EFFECTS

Selects various vocal effects mode.

VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

KEY CHANGER

Changes the key to suit your vocal range with rotating **MIC VOLUME**.

12 Side 2 / Basic controls (USB 2 only)

- (Stop)
- Stops playback or cancels DELETE function.

⏮/⏭ (Skip/Search)

- Skips backward or forward.
- Searches for a section within a file.

⏸ (Play/Pause)

Starts or pauses playback.

CUE

Sets cue point on DJ STAR mode.

SEARCH

Moves to folder or file in selection mode.

OK

Selects a folder when searching a file.

REAL SCRATCHER / SEARCH & MULTI

- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control playback point on DJ STAR mode.
- Searches a folder or a file.
- Selects the lighting effects.

Input source / Function	Display
USB	USB1 / USB2
AUX (3.5 mm) input	AUX 1
AUX input	AUX 2
Bluetooth	BLUETOOTH
LG Sound Sync (Wireless)	LG TV

SPECIAL EQ

- Chooses special equalizer.

DJ LOOP

Selects DJ LOOP mode.

(DJ LOOP mode can use during USB playback.)

LIGHTING

Selects the lighting mode.

13 ⓘ (Information):

- Sees information about your music. An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
- Sees **Bluetooth** device name of the unit in BLUETOOTH READY.
- Sees the name of connected all **Bluetooth** device in **Bluetooth** mode.
- When these units are successfully connected each other in WIRELESS PARTY LINK mode, each of connected device names appears in the each unit.

14 CLUB, DRUM, USER (DJ PAD)

Selects CLUB, DRUM or USER sound effect to mix.

(If you want to use USER, you have to register a source with "LG XBOOM" app.)

1, 2, 3 (DJ PAD)

Press a desired sound pad.

15 AUTO SYNC

When using MIX/DJ STAR, you can synchronize the tempo of audio files being played in USB 1 and USB 2 by pressing **AUTO SYNC**.

MIX

Mixes audio sound.

Cross fader

Move the cross fader to adjust the sound volume of mixed sound when using MIXER/DJ STAR ON.

16 PARTY ACCELERATOR lever

Slide the lever to create a party atmosphere.

PARTY ACCELERATOR MODE

Selects PARTY ACCELERATOR MODE.

17 BASS BLAST (or BASS BLAST+)

Press to select BASS BLAST (or BASS BLAST+) effect directly.

18 Side **1** / Basic controls (USB 1 / BLUETOOTH only)

□ (Stop)

Stops playback or cancels DELETE function.

⏮/⏭ (Skip/Search)

- Skips backward or forward.

- Searches for a section within a file.

⏮/⏭ (Play/Pause)

Starts or pauses playback.

CUE

Sets cue point on DJ STAR mode.

SEARCH

Moves to folder or file in selection mode.

OK

Selects a folder when searching a file.

REAL SCRATCHER / SEARCH & LEVEL CONTROL

- Turns clockwise or counterclockwise to make scratch sound.

- Turns clockwise or counterclockwise to control playback point on DJ STAR mode.

- Turns clockwise or counterclockwise to control the USER EQ level.

- Searches a folder or a file.

- Adjusts DJ EFFECT level.

- Selects vocal effects.

DJ EFFECT

Selects a desired DJ EFFECT.

DJ LOOP

Selects DJ LOOP mode.

(DJ LOOP mode can use during USB playback.)

USER EQ

Selects the equalizer created by your own.

19 H/P (Headphone) MODE

Press to select a headphone monitor mode.



⊕TWIN

Connects two speakers for TWIN mode in WIRELESS PARTY LINK.

DJ STAR

Turns on or off the DJ STAR mode.

Front panel / Rear panel

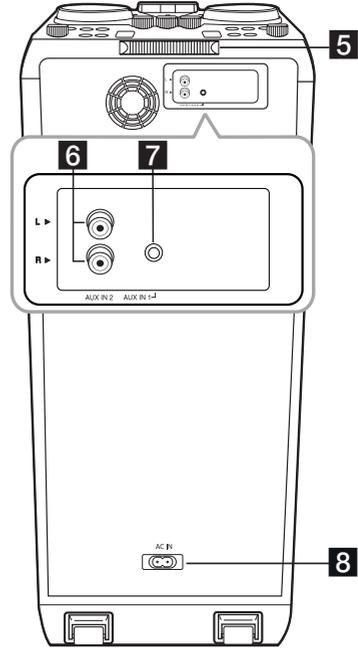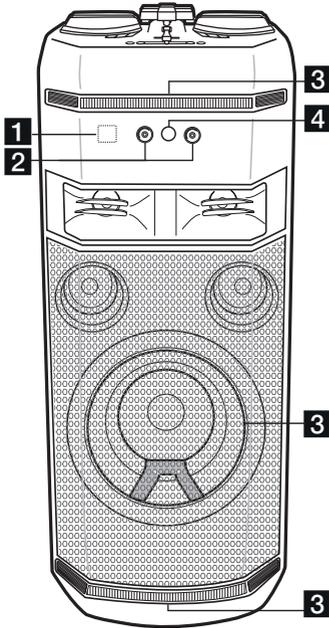

- 1** (Auto Music Play)
Plays the audio currently playing by tagging the mobile (with "LG XBOOM" App) to this unit. (Android Only)
- 2** MIC (Microphone) 1/2 jack
- 3** Lighting
- 4** (Remote sensor)

Caution

Place the speaker at a safe distance from the child's reach. Otherwise it may result in the speaker falling down and causing personal injury and/or property damage.


- 5** Lighting
- 6** AUX IN 2 (L/R): Connect an auxiliary device.
- 7** AUX IN 1: Connect a portable device.
- 8** AC IN socket

Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

Carrying the unit

The unit has wheels and handles so you can easily move the unit.

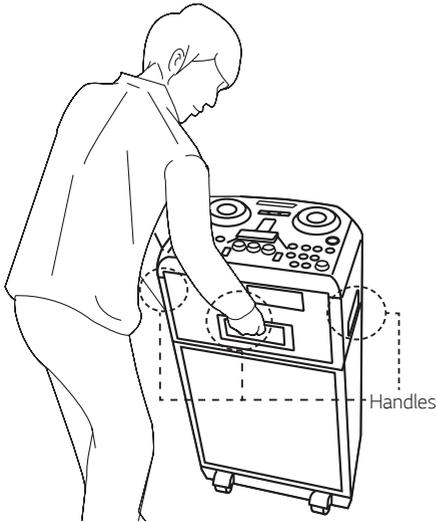

⚠ Caution


- Do not roll the unit on an unpaved road or the stairs.
- When carrying the unit, be careful not to drop it.
- Disconnect all connected cables before carrying the unit.
- Do not place the unit on anything unstable. Place the unit at a safe distance from a child's reach.
- Be careful so that the unit does not fall down. Otherwise it may result in malfunction or cause personal injury and/or property damage.

Useful functions for using the unit

Function	Description	To do	Do this
BT Lock On/Off (Page 28)	It allows you to connect a Bluetooth device only on BLUETOOTH and LG TV functions. Initial setting of this function was set to off.	ON	Press and hold BT on the remote control or BT on the side 1 of the unit for 5 seconds in BLUETOOTH function.
		OFF	Press and hold BT on the remote control or BT on the side 1 of the unit for 5 seconds in BLUETOOTH function.
Auto Power On (Page 38)	It allows the unit to turn on automatically by input signals: LG TV or BLUETOOTH	ON	Turn off the unit by pressing Power on the unit for 5 seconds.
		OFF	Turn off the unit by pressing Power on the unit for 5 seconds.

AC Power Cord Connection

1. Connect one end of the AC power cord (included) to the **AC IN** socket.

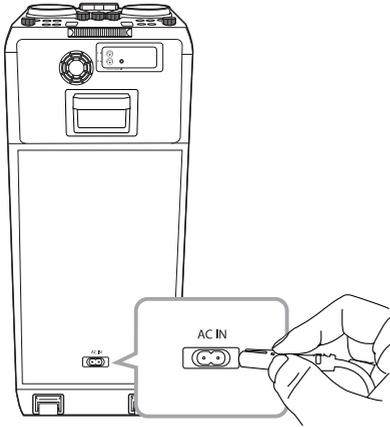

2. Plug the other end into the wall outlet.




Note

Unplug the AC power cord from the wall outlet if you do not to use for an extended period of time.

Optional Equipment Connection


AUX IN 1 Connection

Connect an output (earphone or line out) of portable device (MP3 or PMP etc.) to the AUX IN 1 (3.5 mm) connector.

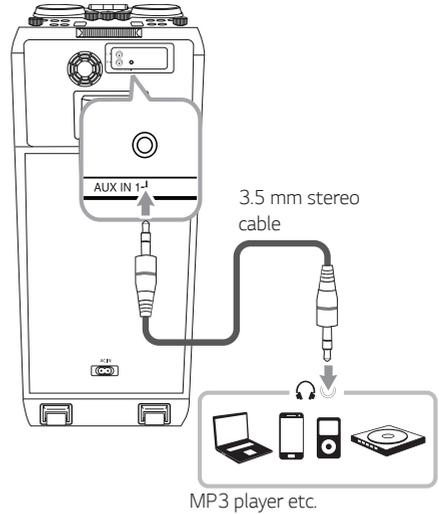

AUX IN 2 Connection

Connect an output of auxiliary device (Camcorder, TV, Player, etc) to the **AUX IN 2** (L/R) connector. If your device has only one output for audio (mono), connect it to the left (white) audio jack on the unit.

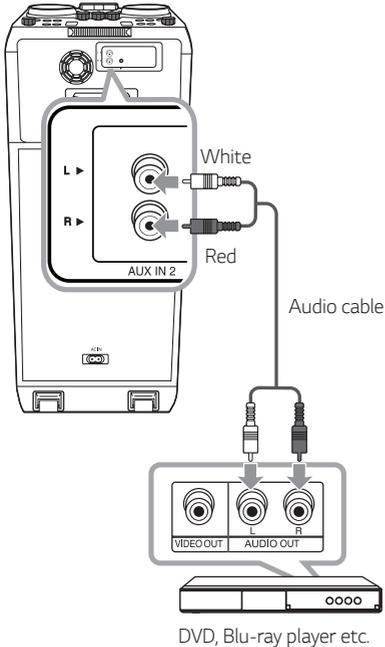

Listening to music from your portable player or external device

The unit can be used to play the music from many types of portable player or external device.

1. Connect the portable player to the **AUX IN 1** connector of the unit.

Or

Connect the external device to the **AUX IN 2** connector of the unit.

2. Turn the power on by pressing $\text{\textcircled{P}}$.
3. Press $\text{\textcircled{A}}$ to select AUX 1 or AUX 2 function.
4. Turn on the portable player or external device and start it playing.



Note

Automatically switches to the AUX 1 function when you connect the portable device to the **AUX IN 1** connector.

LG Sound Sync



You can control some functions of this unit by your TV's remote control with LG Sound Sync. It is compatible with LG TV that supports LG Sound Sync. Make sure your TV has the LG Sound Sync logo.

Controllable function by LG TV's remote control:
Volume up/down, mute

Refer to the TV's instruction manual for the details of LG Sound Sync.

1. Turn on the unit by pressing .
2. Press  until LG TV function is selected.
3. Set up the sound output of TV to listen to the sound through this unit:
TV setting menu [Sound] → [TV Sound output]
→ [LG Sound Sync (Wireless)]


You can see "LG TV PAIRED" on the display window if connecting normally between this unit and your TV.

Note

- You can also use the remote control of this unit while using LG Sound Sync. If you use TV's remote control again, the unit synchronizes with the TV. (According to TV Specifications, the volume and mute of this unit synchronize with TV.)
- If the connection fails, check the conditions of this unit and your TV: power, function.
- Make sure of the condition of this unit and the connection in the cases below when using LG Sound Sync.
 - The unit is turned off.
 - Changing to a different function.
 - Disconnecting the wireless connection caused by interference or a distance.
- If you try to change the function on using the LG TV function, volume will be change according to the LG TV volume level.
- Details of TV setting menu vary depending on models of your TV.
- If you turned off the unit directly by pressing , LG Sound Sync will be disconnected. To use this function again, you should reconnect the TV and the unit.
- The volume may be increased when the TV and this unit is connected by LG Sound Sync. Decrease the TV volume and then connect with this unit.
- When you turn on your LG TV connected by LG Sound Sync or enter LG TV function, this unit changes the function to LG TV automatically.
- You should set the TV Sound output manually depending on the TV version.
- If you control TV volume when this unit and TV are connected by LG Sound Sync, this unit may louder the volume due to synchronizing volume with TV's.

USB Connection

Connect a USB device (or MP3 player, etc.) to the USB ports on the unit.

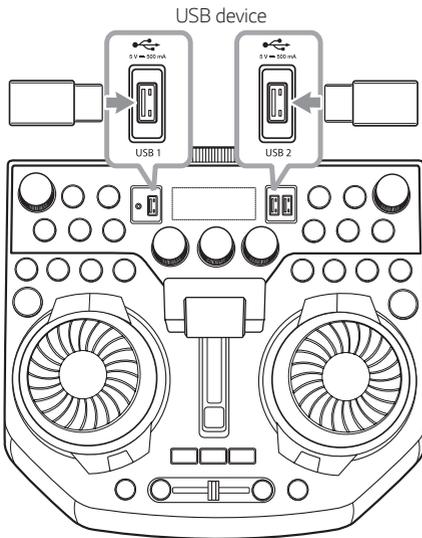

Note

Removing the USB device from the unit:

1. Choose a different function/mode or press  twice in a row.
2. Remove the USB device from the unit.

Basic Operations

USB Operations

1. Connect the USB device to the USB port.
2. Select USB function by pressing .

To	Do this
Stop	Press  .
Playback	Press  .
Pause	Press  during playback.
Searching for a section within a file	Press and hold  during playback and release it at the point you want to listen to.
Selecting a file directly	Press 0 to 9 numerical buttons on the remote control to go to the desired file directly.
Skipping to the next/previous file	- In stop status, Press  to go to the next/previous file.
	- During playback, (1) By using  buttons: Press  to go to the next file. Playing in less than 3 seconds, press  to go to the previous file. Playing after 3 seconds, press  to go to the beginning of the file. (2) By using SEARCH : Rotate REAL SCRATCHER / SEARCH & LEVEL CONTROL on the side 1 of the unit (or REAL SCRATCHER / SEARCH & MULTI on the side 2 of the unit) or  and press  to play the file.
Playing repeatedly or randomly	Press REPEAT on the remote control repeatedly. Refer to the note for details about the display change.

Note

- Repeat/Shuffle playback operates as follows.

On Display	Description
OFF	Plays songs in order, and stops the playback.
ONE	Plays a same song repeatedly.
FOLDER	Plays songs in a folder repeatedly.
ALL	Plays all the songs repeatedly.
SHUFFLE	Plays all the songs once randomly, and stops the playback.

- Even after restarting the unit or switching one function to another, you can listen to music from the point where it's last been played.

Auto Play

When USB is inserted

- If you press  on the side **1** of the unit, the function is changed to USB 1 and playback starts. (Except BLUETOOTH function)
- If you press  on the side **2** of the unit, the function is changed to USB 2 and playback starts. (Except MIXER/DJ STAR ON mode)

Note

When USB is inserted

- Function is changed to USB 1 if , , **SEARCH** on the side **1** of the unit is pressed. (Except BLUETOOTH function)
- Function is changed to USB 2 if , , **SEARCH** on the side **2** of the unit is pressed. (Except MIXER/DJ STAR ON mode)

Selecting a folder and an MP3/WMA file

On the unit


1. Press **SEARCH** and rotate **REAL SCRATCHER / SEARCH & LEVEL CONTROL** on the side **1** (or rotate **REAL SCRATCHER / SEARCH & MULTI** on the side **2**) or **⏪/⏩** until a desired file appears. You can also search a folder if you press **SEARCH** again.
2. Press **OK** or **▶|◀** to play the selected file. When you search a folder, press **OK** to select a file in the folder; then press **OK** or **▶|◀** again. The selected file is played.

On the remote control

1. Press **FOLDER ▲/▼** repeatedly until a desired folder appears.
2. Select the file you want by using **⏪/⏩**.
3. Press **▶|◀** to play it.

Note

- USB Folders/Files are recognized as below.

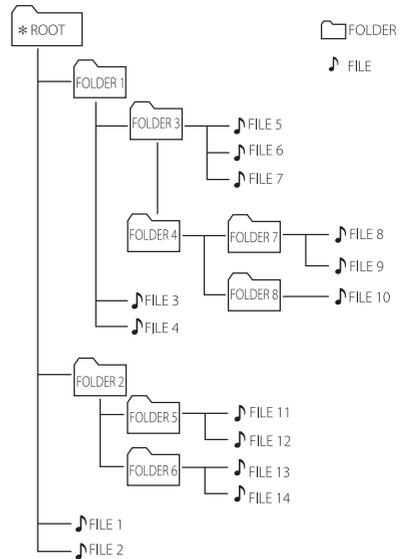

- If there is no file in a folder, the folder will not appear.
- Folders will be presented as the following order:
ROOT → FOLDER 1 → FOLDER 3 → FOLDER 7 → FOLDER 8 → FOLDER 5 → FOLDER 6
- File will be played from **♪ file No.1** to **♪ file No.14** one by one.
- Files and folders will be presented in order recorded and may be presented differently according to the record circumstances.

*ROOT: The first screen you can see when a computer recognize the USB is "ROOT".

Deleting a file/folder or format

You can delete file, folder on your USB or format the USB.

1. Select USB function by pressing .
2. Press **DELETE** on the remote control repeatedly, the display changes as followings.
DEL FILE ? → DEL FOLDER ? → FORMAT ?

On Display	Description
DEL FILE ?	Select the file you want to delete.
DEL FOLDER ?	Select the folder you want to delete.
FORMAT ?	Select to format the USB device.

If you want to exit the current mode, press .

3. To delete file/folder or format, press and hold **DELETE** on the remote control.



Caution

- Do not extract the USB device during operation. (play, delete, etc.)
- Regular back up is recommended to prevent data loss.
- The delete function may not be supported according to the USB status. (lock, etc.)

Playback Effect

The unit supports various sound and playback effects: DJ EFFECT, DJ SCRATCHER, AUTO DJ, DJ PAD, DJ LOOP, PARTY ACCELERATOR, MIX, TEMPO, AUTO SYNC, REAL SCRATCHER, CUE.

DJ EFFECT

It allows you to enjoy DJ EFFECT such as FLANGER/ PHASER/WAH/DELAY/VCF/ROLLING/BIT CRUSH sound effect.

1. Press **DJ EFFECT** on the unit to select a desired DJ EFFECT.

Normal mode

(FLANGER, PHASER, WAH, DELAY, OFF)

DJ STAR mode

(VCF, PHASER, FLANGER, DELAY, ROLLING, BIT CRUSH, OFF)

2. Turn **REAL SCRATCHER / SEARCH & LEVEL CONTROL** on the unit clockwise or counterclockwise to adjust the DJ EFFECT level between 0 to 15.

On Display	Description
FLANGER	As an audio effect using phase difference, it gives delay effect to the sound signal.
PHASER	As an audio effect using phase difference, it gives feeling of distance or wavelength to original sound by detecting position of sound.
WAH	The effect of creating a 'wah-wah' sound using frequency filter.
DELAY	As an audio effect, using echo effect.
VCF	An effect that makes a difference in tone using audio source that has passed a specific frequency band.
ROLLING	Creates a loop effect using the played audio source before setting the rolling effect.
BIT CRUSH	Changes the bit depth of an audio source to create a digital distortion effect.

! Note

- The DJ EFFECT mode is displayed for 3 seconds when a **DJ EFFECT** key on the unit is inputted.
- The current gage level is displayed when adjusting gage.
- If the function changed or the unit is turned off and on, DJ EFFECT mode with DJ EFFECT is turned off.
- If the DJ STAR mode is turned on or off, DJ EFFECT mode is turned off.
- According to effect level and application time, the DJ EFFECT may not effect when the DJ effect cover the original sound.
- Even though the same DJ EFFECT, the effect may different due to the DJ STAR mode.

DJ SCRATCHER

You can output and mix the sound effects of the DJ SCRATCHER.

Rotating **REAL SCRATCHER / SEARCH & LEVEL CONTROL** or **REAL SCRATCHER / SEARCH & MULTI** on the unit to mix the scratch sound.

- You can hear effect of scratch sound depending on the direction in which you rotate **REAL SCRATCHER / SEARCH & LEVEL CONTROL** or **REAL SCRATCHER / SEARCH & MULTI** on the unit.

! Note

DJ SCRATCHER function does not work on the DJ STAR mode.

AUTO DJ

Auto DJ blends the end of one song into the beginning of another for seamless playback. It equalizes volume across files for uninterrupted playback.

Press **AUTO DJ** on the remote control repeatedly, the display changes as followings.

SHUFFLE → SEQUENTIAL → OFF

On Display	Description
OFF	-
SHUFFLE	The music is played randomly on this mode.
SEQUENTIAL	The music is played repeatedly on this mode.

! Note

- AUTO DJ mode does not support searching for a section within a file or to play repeatedly or randomly.
- If you move to other functions or stop the music using on AUTO DJ mode, AUTO DJ will be disabled.
- AUTO DJ is not supported in the music file whose length is less than 60 seconds.

DJ PAD

It allows you to mix CLUB, DRUM or USER sound effect. Each mode has up to 3 sounds effect.

1. Press and hold **DJ PAD (CLUB, DRUM or USER)** on the unit to select a desired DJ PAD sound effect.
2. Press a **DJ PAD (1, 2, 3)** of desired sound on the unit.

! Note

- If you want to use USER, you have to register a source with "LG XBOOM" app. If the source is not register to USER, "USER MODE EMPTY" or "DJ PAD NO SOUND" appears on the display window.
- Initial DJ PAD mode is CLUB sound effect.
- DJ PAD mode is displayed for 3 seconds when you press **DJ PAD (CLUB, DRUM or USER)** on the unit.
- The DJ PAD sound is mixed when you press a **DJ PAD (1, 2, 3)** on the unit.
- The currently playing DJ PAD sound is stopped and the selected DJ PAD sound outputs if you press a different **DJ PAD (1, 2, 3)** on the unit while DJ PAD sound is playing.

DJ LOOP

The certain section (about 1 sec) of sound is repeatedly played. (USB Only)

During playback, press and hold **DJ LOOP** on the unit at the point you want. And you can cancel DJ LOOP function by releasing it.

! Note

This function is released after operating 10 times or releasing **DJ LOOP** on the unit.

PARTY ACCELERATOR

It allows you to create a party atmosphere.

1. Select the mode by pressing **PARTY ACCELERATOR MODE** on the unit.
The sound effect will react differently according to the mode.

PARTY ACCEL MODE 1 → PARTY ACCEL MODE 2 → PARTY ACCEL USER

2. After selecting the mode, slide up the lever of **PARTY ACCELERATOR** on the unit to create a party atmosphere.
The lighting on the speakers, the LED lighting and the sound effect will react according to moving the lever of **PARTY ACCELERATOR** on the unit.

PARTY ACCEL OFF → PARTY ACCEL 1 → PARTY ACCEL 2 → PARTY ACCEL CLIMAX

! Note

If you want to use USER, you have to register a source with "LG XBOOM" app. If the source is not register to USER, "PARTY ACCEL EMPTY" or "PARTY ACCEL NO SOUND" appears on the display window.

MIX

You can mix audio sounds.

1. Press **MIX** on the unit.
“MIXER ON” is displayed. Select a desired function for side **1** and play it. Mix is available in all functions except USB 2.
2. During playback, insert a USB device in USB 2 port and play it. side **2** is fixed as USB 2 function.
3. Move the cross fader to adjust the sound volume of mixed sound.
Move it to the left to lower the volume of side **2** and move it to the right to lower the volume of side **1**.

! Note

- In MIXER ON mode,
 - You can adjust the Tempo for USB function 1 or 2.
 - If you press **KK/▷▷**, **□** or **▷II** on the unit, it works only for each side.
 - If you press **KK/▷▷**, **□** or **▷II** on the remote control, it works for both side **1** and side **2**.
 - For operating, it is recommended to use **KK/▷▷**, **□** or **▷II** on the unit instead of remote controls.
 - Numerical, **DELETE** buttons do not work.
 - You can use **H/P MODE** (Page 36)
- If you turn off the unit in the middle of mixing process, MIX mode turns to OFF.

TEMPO

You can adjust the Tempo for USB function from 50 (MIN) to 150 (MAX).

Rotate **TEMPO A** on the unit to adjust the tempo for USB 1. Rotate **TEMPO B** on the unit to adjust the tempo for USB 2.

! Note

- The tempo is set as 100 if you turn the unit on/off or fully stop.
- The tempo is kept when you pause and resume play.

AUTO SYNC

When using Mixing, you can synchronize the tempo of audio files being played in USB 1 and USB 2 by pressing **AUTO SYNC** on the unit.

To stop it, press **AUTO SYNC** on the unit twice.

! Note

- The tempo of music being played in USB 1 is synchronized to that in USB 2.
- **TEMPO A** doesn't work when **AUTO SYNC** is on.
- If USB 2 fully stops or function is changed, **AUTO SYNC** function is cancelled.
- In case of below, **AUTO SYNC** error may occur depending on the sound source.
 - The silent section in the beginning of the track.
 - Intro or bridge section in which few musical instruments appear.
 - In cases where playback speed or tempo of the song changes.
 - In case that the data for BPM is provided in real time, not the beginning of the song.
- If the song is being played too fast or slow, press and hold **AUTO SYNC**.
‘AUTO SYNC RE-ANALYZING’ is displayed.
- **AUTO SYNC** is available only when USB 1 is selected for side **1** and USB 2 is selected for side **2** in MIXER/DJ STAR ON mode and both are being played.

DJ STAR

DJ STAR mode combines various effect mode to experience professional DJ effect.

1. Press **DJ STAR** on the unit.
“DJ STAR ON” is displayed.
2. Insert the USB devices in USB 1/USB 2 port and play the music.
3. Control the various sound effect.

To turn off the DJ STAR mode, press **DJ STAR** on the unit again.

! Note

- In DJ STAR mode,
 - Automatically enter the USB 1 & USB 2 & MIX mode.
 - REAL SCRATCHER and CUE function work on the DJ STAR mode.
 - You can enjoy more DJ effects (VCF, PHASER, FLANGER, DELAY, ROLLING, BIT CRUSH) on the DJ STAR mode.
 - DJ STAR mode only recognizes USB 1 or USB 2 music files.
- DJ SCRATCHER function does not work on the DJ STAR mode.
- DJ STAR mode releases when you turn off the unit, change the function or turn off the Mix.

REAL SCRATCHER

You can control playback point to backward or forward in DJ STAR mode.

Rotating **REAL SCRATCHER / SEARCH & LEVEL CONTROL** or **REAL SCRATCHER / SEARCH & MULTI** on the unit to control playback point.

! Note

- This function works on the DJ STAR mode.
- You can't move to previous music file using this function.

CUE

You can set cue point in DJ STAR mode.

1. During playback, pause or resume stop status, press **CUE** on the unit at the point you want.
2. Press **CUE** on the unit when you want to start music from cue point.

To delete cue point, press and hold **CUE** on the unit.

! Note

- This function works on the DJ STAR mode.
- You can set only 1 cue point at current selected music.
- The Cue point will be deleted when USB is removed, music is changed or full stop on playback.

Using BLUETOOTH® wireless technology

About Bluetooth

Bluetooth is wireless communication technology for short range connection.

The sound may be interrupted when the connection interfered by the other electronic wave or you connect the **Bluetooth** in the other rooms.

Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology.

- Available Devices: Smart phone, MP3, Notebook, etc.
- Version: 4.0
- Codec: SBC, AAC

Bluetooth Profiles

In order to use **Bluetooth** wireless technology, devices must be able to interpret certain profiles.

This unit is compatible with following profile.

A2DP (Advanced Audio Distribution Profile)

Listening to music stored on the Bluetooth devices

Pairing your unit and Bluetooth device

Before you start the pairing procedure, make sure the **Bluetooth** feature is activated on your **Bluetooth** device. Refer to your **Bluetooth** device's user guide. Once a pairing operation is performed, it does not need to be performed again.

1. Turn on the unit.

! Note

When Bluetooth connection lock is activated, you can search **Bluetooth** device in BLUETOOTH function.

2. Operate the **Bluetooth** device and perform the pairing operation. When searching for this unit with the **Bluetooth** device, a list of the devices found may appear in the **Bluetooth** device display depending on the type of **Bluetooth** device. Your unit appears as "LG OK99M (XX)".

! Note

- XX means the last two digits of **Bluetooth** address. For example, if your unit has a **Bluetooth** address such as 9C:02:98:4A:F7:08, you will see "LG OK99M (08)" on your **Bluetooth** device.
- Depending on the **Bluetooth** device type, some devices have a different pairing way. For details about **Bluetooth** pairing, refer to your **Bluetooth** device manual.
- You can connect this unit with up to 3 **Bluetooth** devices simultaneously using the same method as described above, only in the **Bluetooth** function.
- The multi phone pairing connection is only supported on Android devices. (Multi phone pairing connection may not be supported depending on the connected device specifications.)
- Removable/detachable **Bluetooth** devices (Ex: Dongle etc.) will not support multi phone pairing.

3. When this unit is successfully connected with your **Bluetooth** device, "BLUETOOTH PAIRED" appears on the display window and change to **Bluetooth** device name soon.

! Note

- "BLUETOOTH PAIRED" will momentarily appear on the display when you connect other devices for multi phone pairing.
- If the device name is unavailable, "_" will be displayed.

4. Listen to music.

To play a music stored on your **Bluetooth** device, refer to your **Bluetooth** device's user guide.

! Note

- When using **Bluetooth** technology, you have to make a connection between the unit and the **Bluetooth** device as close as possible and keep the distance.
However, it may not work well in certain situations as described below:
 - There is an obstacle between the unit and the **Bluetooth** device.
 - There is a device using same frequency with **Bluetooth** technology such as a medical equipment, a microwave or a wireless LAN device.
- If **Bluetooth** connection does not work well, try pairing it again.
- Even if this unit is connected to up to 3 **Bluetooth** devices in the Bluetooth mode, you can play and control music by using only one of the connected devices.

! Note

- The sound may be interrupted when the connection has interference from other electronic devices.
- Depending on the type of the device, you may not be able to use the **Bluetooth** function.
- You can enjoy wireless system using phone, MP3, Notebook, etc.
- The more distance between the unit and the **Bluetooth** device, the lower the sound quality becomes.
- **Bluetooth** connection will be disconnected when the unit is turned off or the **Bluetooth** device gets too far from the unit.
- When **Bluetooth** connection is disconnected, connect the **Bluetooth** device to the unit again.
- When a **Bluetooth** device is not connected, "BLUETOOTH READY" appears on the display window.
- When you use the **Bluetooth** function, adjust the volume to a proper level on the **Bluetooth** device.
- When you connect **Bluetooth** device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized with each other.
- **Bluetooth** connection will be disconnected when you change the **Bluetooth** function to some other function. In "LG XBOOM" app connection, only one device which you are playing keeps **Bluetooth** connection. You can control the **Bluetooth** device with this unit but you cannot use sound output.
- When entering the **Bluetooth** function, this unit automatically connects to the last connected **Bluetooth** device or the device which played back last.
(Auto connection may not be supported depending on the connected device specifications.)

Controls connected Bluetooth device

You can control connected **Bluetooth** device by the unit; play, pause, stop, skip.



Note

- Only Android OS and iOS is available to use this function.
- This function may not be supported depending on the **Bluetooth** device, or operated differently.

Bluetooth connection lock (BT LOCK)

You can limit **Bluetooth** connection to only BLUETOOTH and LG TV function to prevent unintended **Bluetooth** connections.

To turn this function on, press and hold **⏻** on the remote control or **⏻** on the side **1** of the unit for about 5 seconds in BLUETOOTH function. "BLUETOOTH LOCK ON" appears then you can limit **Bluetooth** connection.

To turn this function off, press and hold **⏻** on the remote control or **⏻** on the side **1** of the unit for about 5 seconds in BLUETOOTH function. "BLUETOOTH LOCK OFF" appears.



Note

- Even if you set up **Bluetooth** connection lock to On, this unit turns on by Auto Power function. Turn off Auto Power function to prevent it.
- When you turn on or off the **Bluetooth** connection lock, search and connect again using **Bluetooth** after deleting the paired list of your **Bluetooth** device.

Using the LG XBOOM App

! Note

- Only Android OS is available to use "LG XBOOM" app with this unit.
- It is recommended to use the latest version of app.

About "LG XBOOM" App

"LG XBOOM" app brings a suite of new features to this unit.

To enjoy more features, you are recommended to download and install free "LG XBOOM" app.

Below introduces you to a few of the many features of "LG XBOOM" app.

Multi Juke box: Your entertainment increases three fold when you connect up to 3 **Bluetooth** phones at the same time. Play music from both phones and create a customized playlist from all phones.

Sampler Creator: Record effects on your smartphone and very simply sync them via **Bluetooth** to the system. Be as creative as you can be.

Install "LG XBOOM" App onto Your Bluetooth Device

There are two ways to install "LG XBOOM" App onto Your **Bluetooth** Device.

Install "LG XBOOM" App through QR code

1. Install "LG XBOOM" app through QR code. Use the scanning software to scan the QR code.



2. Tap an icon for installation.

! Note

- Make sure that your **Bluetooth** device is connected to the Internet.
- Make sure that your **Bluetooth** device has a scanning software application. If you don't have one, download one from "Google Android Market (Google Play Store)".
- Depending on the area, QR code may not work.

Install “LG XBOOM” App through “Google Android Market (Google Play Store)”

1. Tap the “Google Android Market (Google Play Store)” icon.
2. In the search bar, type in the “LG XBOOM” and search it.
3. In the search result list, find and tap “LG XBOOM” to start downloading **Bluetooth** app.
4. Tap an icon for installation.



Note

- Make sure that your **Bluetooth** device is connected to the Internet.
- Make sure that your **Bluetooth** device is equipped with “Google Android Market (Google Play Store)”.

Activate Bluetooth with “LG XBOOM” App

“LG XBOOM” app helps to connect your **Bluetooth** device to this unit.

Tap “LG XBOOM” app icon on the home screen to open “LG XBOOM” app, and go to the main menu.



Note

- “LG XBOOM” app will be available in the software version as follow;
 - Android O/S: Ver 6.0 or higher
- If you use “LG XBOOM” app for operation, there would be some differences between “LG XBOOM” app and the supplied remote control. Use the supplied remote control as necessary.
- Depending on the **Bluetooth** device, “LG XBOOM” app may not work.
- After connection of “LG XBOOM” app, music may be output from your **Bluetooth** device. In this case, try connecting procedure again.
- If you operate the other applications or change the settings on your **Bluetooth** device while using “LG XBOOM” app, “LG XBOOM” app may operate abnormally.
- When “LG XBOOM” app operates abnormally, check your **Bluetooth** device and the connection of “LG XBOOM” app and then try to connect again.
- Depending on the smart phone's operating system, you have some differences for “LG XBOOM” operation.
- Check **Bluetooth** setting on your **Bluetooth** device if “LG XBOOM” app connection does not work well.

Sound adjustment

Setting the sound mode

This system has a number of pre-set equalizers. The displayed items for the equalizer may be different depending on sound sources and effects.

You can select a desired sound mode by using **EQ** on the remote control.

On Display	Description
BASS (BASS BLAST) or BASS+ (BASS BLAST+)	Reinforces the bass and powerful sound.
POP CLASSIC ROCK JAZZ	This program lends an enthusiastic atmosphere to the sound, giving you the feeling you are at an actual rock, pop, jazz or classic concert.
FOOTBALL	You can enjoy the equalizer FOOTBALL STADIUM.
STANDARD	You can enjoy optimized sound.

You can select a desired sound mode by using **SPECIAL EQ** on the remote control or the unit.

On Display	Region	Description
FUNK, REGUETON, SAMBA, MERENGUE, AXE, SALSA, SERTANEJO, FORRO	Latin America	Optimized sound effect for the music genre preferred in each region.
ARABIC	Middle East	
DANGDUT	Indonesia	
AFRO	Africa	
INDIA	India	



Note

By pressing **BASS BLAST** (or **BASS BLAST+**), you can directly select BASS (BASS BLAST) or BASS+ (BASS BLAST+) effect.

Setting the USER EQ

You can adjust the sound level of Bass, Middle and Treble as your preference.

1. Press **USER EQ** on the unit. "USER EQ" is displayed.
2. Press **USER EQ** on the unit repeatedly until desired setting appears in the display window.
3. Rotate **REAL SCRATCHER / SEARCH & LEVEL CONTROL** on the unit to adjust the value.

Advanced Operations

Recording to USB

You can record a various sound source to USB.
(USB 1, USB 2, AUX 1, AUX 2)

1. Connect the USB device to RECORD PORT on the unit.
2. Press **☑** to select a function you want to record.
3. Start the recording by pressing **USB REC** on the remote control or **USB REC / DEMO** on the unit.

Function /Mode	Status	Result
USB 1, USB 2	Play/Pause	Recorded until stop.
	Resume stop (Page 34)	Quick recorded the latest song.
	Full stop	Quick recorded All songs In case below, scope is limited. - After File search (Page 19), quick recorded an indexed song. - Only while the Folder name is displayed on the display window, quick recording All songs on Folder. (Folder Search Mode is released when there is no button input for a few seconds after entering the folder search mode.) (Page 19)
AUX 1, AUX 2, MIXER ON, DJ STAR ON mode	-	Recorded until stop.

To stop recording

To stop recording, press **USB REC** on the remote control or **USB REC / DEMO** on the unit.

To select recording bit rate

1. Press and hold **USB REC** on the remote control or **USB REC / DEMO** on the unit for 3 seconds.
2. Press **⏮/⏭** on the remote control or **⏮/⏭** on the side 1 of the unit to select a bit rate.
3. Press **USB REC** on the remote control or **USB REC / DEMO** on the unit to finish the setting.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

Be responsible
Respect copyrights

! Note

- When you stop recording, the file that has been recorded at that time will be stored. (Except when recording MP3/ WMA files that are in stop status.)
- Do not remove the USB device or turn off the unit during USB recording. If does not, an incomplete file may be made and not deleted on PC.
- If USB recording does not work, the message like "NO USB", "ERROR", "USB FULL", "NOT SUPPORT" or "FILE MAX" is displayed on the display window.
- Multi card reader device or external HDD can not be used for USB recording.
- A file is recorded by about 512 Mbyte when you record for a long term.

! Note

- You can record various sound using DJ EFFECT, DJ SCRATCHER, DJ PAD, REAL SCRATCHER, CUE or MIC. (In MIXER/DJ STAR OFF mode, except when USB that are in stop status.)
- You can control recorded microphone sound according to microphone volume.
- You may not store more than 2,000 files.
- In case of the unsupported MP3/WMA file, the file recording may be stopped.
- When you are recording during playback, the sound now playing is output.
- When function is set to BLUETOOTH or LG TV, recording is available in MIXER ON mode.
- VOICE CANCELLER or KEY CHANGER will be reset, if you use recording function during operating VOICE CANCELLER or KEY CHANGER.
- VOICE CANCELLER or KEY CHANGER can not be operated during recording.
- It'll be stored as follows.

MP3/WMA
Play or pause status <pre> ■ FILE_REC AUDIO_0001 AUDIO_0002 </pre>
The other status <pre> ■ FILE_REC ABC(File name) DEF(File name) </pre>
The other source*
<pre> ■ OTHERS_REC AUDIO_0001 AUDIO_0002 </pre>
MIXER / DJ STAR ON mode
<pre> ■ DJ_MIX_REC MIX_0001 MIX_0002 </pre>

*: AUX and the like.

Other Operations

Turn off the sound temporarily

Press  on the remote control to mute your sound.

You can mute your unit, for example, to answer the telephone, the "XM" will appear in the display window.

To cancel it, press  on the remote control again or change the volume level.

CHILDSAFE Mode

This function helps to prevent you from being surprised when you turn on the unit in case that the volume of the unit is set at a high level.

To turn on CHILDSAFE mode, press and hold **OK** on the unit when the volume of the unit is "MIN".

In CHILDSAFE mode, the volume increase gradually.

To turn off CHILDSAFE mode, press and hold **OK** on the unit when the volume of the unit is "MIN" and this mode is turned on.

Note

In case of USB or BLUETOOTH function, CHILDSAFE mode does not work after about 2 minutes from power on the unit even if this mode is enabled.

DEMO

In the power off state, press **USB REC / DEMO** on the unit once. The unit will power on and display the each of functions with demo sound in the display window.

To cancel the DEMO function, press **USB REC / DEMO** on the unit once more.

Resume stop

The unit records the point where you pressed  depending on the USB.

If you press  twice, the unit will clear the stopped point.

Using Microphone

1. Connect your microphone to the MIC jack.
2. Play the music you want.
3. Sing along with the accompaniment. Adjust the microphone volume by rotating **MIC VOLUME** clockwise or counterclockwise on the unit.

Note

- When not using the microphone, set the MIC volume to minimum or turn off the MIC and remove the microphone from the MIC jack.
- If the microphone is set too near the speaker, a howling sound may be produced. In this case, move the microphone away from the speaker or decrease the sound level by using the **MIC VOLUME** on the unit.
- If sound through the microphone is extremely loud, it may be distorted. In this case, rotate **MIC VOLUME** on the unit.
- You can give an echo effect to the sound from the microphones by pressing **MIC ECHO**.

VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

Press the **VOICE CANCELLER** and “VOICE CANCELLER ON” will appear in display window.

To cancel it, press **VOICE CANCELLER** again.

The quality of the VOICE CANCELLER may be different depending on the recording conditions of music files.

! Note

- This function is available in the USB or BLUETOOTH Function.
- If the function is not available, “NOT SUPPORT” appears in the display window.
- This function is available to use only when a microphone is connected.
- If a microphone is not connected, “PLEASE INSERT MIC” appears in the display window.
- It is not available on the mono source.
- To initialize it, change the function or disconnect the microphone.
- This function may not be initialized depending on the status of connected devices.

KEY CHANGER

You can adjust the key to 9 steps (4 steps higher; 4 steps lower and the original key).

- To make the key more sharp, one by one, press the **KEY CHANGER (#)** on the remote control repeatedly or press **KEY CHANGER** on the unit and clockwise **MIC VOLUME** during playback.
- To make the key more flatten, one by one, press the **KEY CHANGER (b)** on the remote control repeatedly or press **KEY CHANGER** on the unit and counter clockwise **MIC VOLUME** during playback.

! Note

- This function is available in the USB or BLUETOOTH Function.
- To initialize it, change the function, disconnect the microphone or change the music.
- This function may not be initialized depending on the status of connected devices.
- If the function is not available, “NOT SUPPORT” appears in the display window.
- If a microphone is not connected, “PLEASE INSERT MIC” appears in the display window.

VOCAL EFFECTS

When you connect your microphone to the MIC jack, you can enjoy karaoke function by changing voice in the various source.

To select various vocal effects mode, pressing **VOCAL EFFECTS** repeatedly or pressing **VOCAL EFFECTS** and then turning **REAL SCRATCHER / SEARCH & LEVEL CONTROL** on the unit when vocal effects mode appears in the display window.

BASS → SOPRANO → HELIUM → ROBOT → DUET MAN → DUET WOMAN → BASS ECHO1 → SOPRANO ECHO1 → HELIUM ECHO1 → ROBOT ECHO1 → DUET MAN1 → DUET WOMAN1 → BASS ECHO2 → SOPRANO ECHO2 → HELIUM ECHO2 → ROBOT ECHO2 → DUET MAN2 → DUET WOMAN2 → OFF

! Note

- If a microphone is not connected, "PLEASE INSERT MIC" appears in the display window.
- If you press **KEY CHANGER, DJ EFFECT** or **MIC ECHO** on the unit on VOCAL EFFECTS mode, after backing up current VOCAL EFFECTS, turn off VOCAL EFFECTS mode and operate KEY CHANGER, DJ EFFECT or ECHO mode.
- To turn off VOCAL EFFECTS mode, press and hold **VOCAL EFFECTS** on the unit.

ECHO

When you connect your microphone to the MIC jack, you can give an echo effect to the sound from the microphones by pressing **MIC ECHO**.

ECHO MODE 1 → ECHO MODE 2 → ECHO OFF

! Note

- If a microphone is not connected, "PLEASE INSERT MIC" appears in the display window.
- If you press **VOCAL EFFECTS** button on ECHO mode, after backing up current ECHO, turn off ECHO mode and operate VOCAL EFFECTS mode.
To operate ECHO mode, press **MIC ECHO** again, after backing up current VOCAL EFFECTS.

Using H/P MODE


Headphone monitoring is available.

Press **H/P MODE** on the unit to listen to music using headphone. Rotate **H/P VOLUME** on the unit to adjust the volume.

When mixing, press **H/P MODE** on the unit to select a monitoring mode. You can listen to the music being mixed or playing in Source A or Source B.

! Note

- It is not compatible with a 4 pole jack.

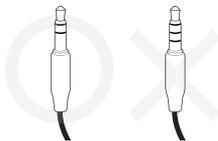

- If you select one source output in MIXER / DJ STAR ON mode, the playback effects (Except TEMPO) are not applied to the output through the headphone.
- If you power off or switch to MIXER / DJ STAR OFF, the selected H/P MODE is cancelled.

LIGHTING

This function offers a party atmosphere by operating the lighting on the unit.

Press **LIGHTING** on the unit or the remote control repeatedly or press **LIGHTING** on the unit or the remote control and then turn **REAL SCRATCHER / SEARCH & MULTI** on the unit.

PARTY → WATER → FOREST → (MY STYLE) → OFF

! Note

- Lighting function is available in all functions.
- Lighting mode retains in its previous mode when you first press **LIGHTING** on the unit or the remote control, press again to change modes.
- If you want to use MY STYLE, you have to register a source with "LG XBOOM" app.
- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.
- To turn on or off upper and lower lighting LED, press and hold **LIGHTING** on the unit or the remote control for 3 seconds.

On Display	Description
FLASH ON	Upper and lower lighting LED is turned on.
FLASH OFF	Upper and lower lighting LED is turned off.

Sleep Timer Setting

Press **SLEEP** on the remote control repeatedly to select delay time between 10 and 180 minutes.

After the delay time, the unit will be turned off.

To cancel the sleep function, press **SLEEP** on the remote control repeatedly until "SLEEP OFF" appears.

! Note

- You can check the remaining time before the unit is turned off. Press **SLEEP** on the remote control to check or change the remaining time.
- You can edit the remain time when the remaining time or "DIMMER ON" is displayed.

Dimmer

Press **SLEEP** on the remote control once.

The display window will be darkened by half.

To cancel it, press **SLEEP** on the remote control repeatedly until "SLEEP OFF" appears.

! Note

All the lighting turns off when Dimmer is being operated.

AUTO POWER On

This unit automatically turns on by an input source: LG TV, **Bluetooth**.

When you turn on your TV connected to this unit, this unit recognizes the input signal and selects the suitable function. You can hear the sound from the unit.

If you try to connect your **Bluetooth** device, this unit turns on and connects your **Bluetooth** device. You can play your music.

When you turn off this unit by pressing  on the unit for 5 seconds each time, you can turn on or off the AUTO POWER function.

On Display	Description
AUTO POWER ON	AUTO POWER function is turned on.
AUTO POWER OFF	AUTO POWER function is turned off.

Note

- Depending on the connected device, this function may not operate.
- Depending on the connected device, the unit turns on but **Bluetooth** function may not be connected.
- If you disconnect **Bluetooth** connection by this unit, some **Bluetooth** devices try to connect to the unit continually. Therefore it is recommended to disconnect the connection before turning off the unit.
- If you try to connect to the "LG XBOOM" app, **Bluetooth** function of this unit is turned on.
- If you turn on the unit using LG TV or **Bluetooth** function, proper function of this unit is turned on.
- If you have already paired with this unit, this unit can automatically turn on by an input source when this unit is turned off.

Auto function change

This unit recognizes input signals such as **Bluetooth**, LG TV and Aux 1 and then automatically changes to the suitable function.

When you try to connect Bluetooth device

When you try to connect your **Bluetooth** device to this unit, **Bluetooth** function is selected. Play your music on the **Bluetooth** device.

When AUX IN 1(3.5 mm stereo cable) is connected

When you connect the portable device to the **AUX IN 1** connector, **AUX 1** function is selected. Play your music on the portable device.

When LG TV is connected

When you turn on your LG TV connected by LG Sound Sync (Wireless connection), this unit changes the function to LG TV. You can hear the sound from your TV.



Note

- This function is not available during recording or deleting.
- This function only works with devices that were previously connected.
- If the **Bluetooth** connection lock function is set, **Bluetooth** and LG TV connection will be only available on **Bluetooth** and LG TV function. (Page 28)

Setting the Clock

1. Turn the unit on.
2. Press and hold **CLOCK** on the remote control.
3. Select time mode by pressing **⏮ / ⏭** on the remote control.
 - AM 12:00 (for an AM and PM display) or 0:00 (for a 24 hour display)
4. Press **SET** on the remote control to confirm your selection.
5. Select the hours by pressing **⏮ / ⏭** on the remote control.
6. Press **SET** on the remote control.
7. Select the minutes by pressing **⏮ / ⏭** on the remote control.
8. Press **SET** on the remote control.

Setting the Clock through “LG XBOOM” App

Install “LG XBOOM” app on your Android device.
(Page 29-30)

Your unit’s clock will be automatically synchronized with your device by activating **Bluetooth** connection through “LG XBOOM” app.


Note

- If you set the clock time, you can check the time by pressing **CLOCK** on the remote control even when the player is turned off.

WIRELESS PARTY LINK Connection

You can enjoy the sound by using two speakers. For enjoying WIRELESS PARTY LINK, you need to purchase another speaker.

It is compatible with unit that supports WIRELESS PARTY LINK.

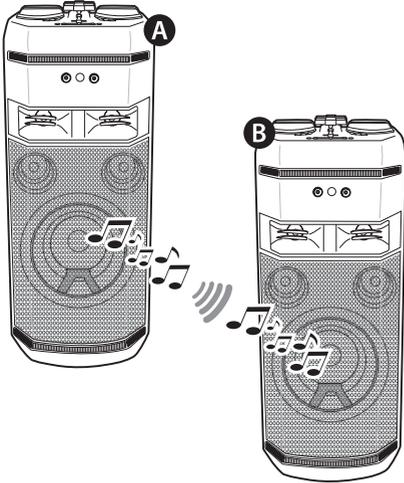

1. Press **TWIN** on the unit. TWIN MODE ROLE SELECT appears in the display window.
2. Press **TWIN** on the unit to select MAIN or OTHER.
 - **A** unit: Selects MAIN.
 - **B** unit: Selects OTHER.

Two units try to connect with each other.
3. When these units are successfully connected each other, each of connected device names appears in the each unit.

! Note

- If you are using the LG Sound Sync, this function is not available. If you connect the LG TV function, "NOT SUPPORT" appears in the display window.
- You can use microphone in the OTHER unit only. In case of OTHER unit, some functions are supported only.
- When WIRELESS PARTY LINK is disconnected, OTHER unit is changed to BLUETOOTH function.
- If the connection is failed, "FAILED" appears in the display window.
- Mute function is synchronized with each other.
- WIRELESS PARTY LINK connection will be disconnected when you turn off the unit or press **TWIN** on the unit.
- Sound of MAIN unit and OTHER unit may be different depending on playback status or source.
- Check the following information when connecting to **Bluetooth**.
 - You can connect only one **Bluetooth** device in the MAIN unit. You cannot connect **Bluetooth** device to the OTHER unit.
 - WIRELESS PARTY LINK connection is only supported on Android devices. (WIRELESS PARTY LINK connection may not be supported depending on the connected device specifications or OS.)
 - Removable/detachable **Bluetooth** devices (ex. Dongle etc.) will not support WIRELESS PARTY LINK connection.
 - When WIRELESS PARTY LINK is connected, **Bluetooth** connection is not available in status of recording or deleting.
 - If you connect WIRELESS PARTY LINK while you are playing connected **Bluetooth** device, it may be reconnected again, depending on phone specification.

Troubleshooting

General

Problem	Cause & Solution
The unit does not work properly.	<ul style="list-style-type: none"> • Turn off the power of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and turn them on again. • Disconnect the power cord of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and then try connecting again. • Previous setting may not be saved when device power is shut off.
No Power.	<ul style="list-style-type: none"> • The power cord is not plugged in. Plug in the power cord. • Check whether electricity failed. Check the condition by operating electronic devices using the same AC outlet.
No sound.	<ul style="list-style-type: none"> • Check whether you select right function. Press function button and check if you have selected the right function.
The remote control does not work properly.	<ul style="list-style-type: none"> • The remote control is too far from the unit. Operate the remote control within about 7 m (23 feet). • There is an obstacle in the path of the remote control and the unit. Remove the obstacle. • The batteries in the remote control are exhausted. Replace the batteries with new ones.
No speaker light.	<ul style="list-style-type: none"> • Check the light effects by pressing LIGHTING. (Page 37)
LG Sound Sync does not work.	<ul style="list-style-type: none"> • Check whether your LG TV supports LG Sound Sync. • Check connection of LG Sound Sync. • Check sound setting of your TV and this unit.
The AUTO POWER function does not work.	<ul style="list-style-type: none"> • Check connection of the external device such as TV or Bluetooth device. • Depending on the connected device, this function may not operate.

NOTES to release Demo mode

Problem	Cause & Solution
<p>Can not change input source with '☞' key such as BLUETOOTH, USB etc. and only DEMO mode is showing in the display.</p>	<ul style="list-style-type: none"> • Press 'DEMO' Key on the unit for 15 seconds.
<p>Remote Control does not work properly.</p>	

General specifications

General	
Power requirements	Refer to the main label on the unit.
Power consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 430.0 mm x 1,050.0 mm x 400.0 mm
Operating temperature	5 °C to 35 °C
Operating humidity	5 % to 60 % RH

Inputs	
Analog audio in (AUX IN 2)	2.0 Vrms (1 kHz, 0 dB), 600 Ω , RCA jack (L, R) x 1
Portable in (AUX IN 1)	1.0 Vrms (3.5 mm stereo jack) x 1
Microphone (MIC 1/2)	Sensitivity 20 mV (1 kHz), 6.3 mm jack x 2

System	
Frequency Response	100 to 20,000 Hz
Signal-to-noise ratio	More than 75 dB
Dynamic range	More than 80 dB
Bus Power Supply (USB)	5 V  500 mA

Amplifier (RMS Output power)	
Total output	2,000 W RMS
HIGH	550 W RMS x 2 (6 Ω at 1 kHz, 25 % THD)
LOW	900 W RMS (12 Ω at 200 Hz, 15 % THD)

- Design and specifications are subject to change without notice.

Trademarks and licenses



The **Bluetooth**® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.

Other trademarks and trade names are those of their respective owners

Maintenance

Handling the Unit

When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

Keeping the exterior surfaces clean

Do not use volatile liquids such as insecticide spray near the unit. Wiping with strong pressure may damage the surface. Do not leave rubber or plastic products in contact with the unit for a long period of time.

Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

