


DVD Player DP540 / DP542 / DP547

ENGLISH | SIMPLE MANUAL

To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

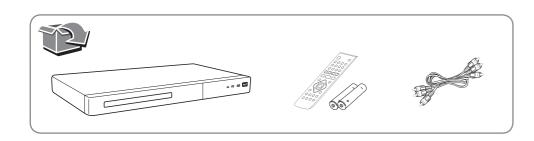




www.lg.com




COMPONENT OUTPUT

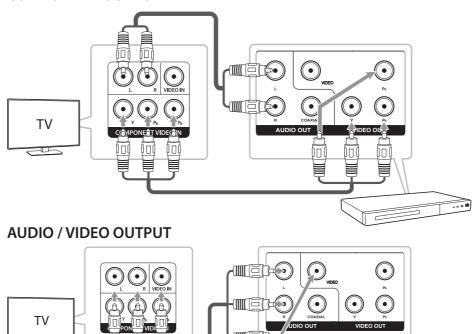




Amplifier Connection

DIGITAL AUDIO OUTPUT (COAXIAL)

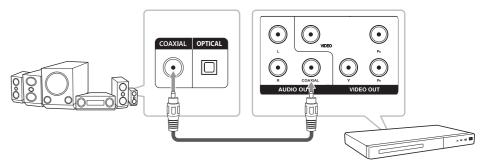


AUDIO OUT (L/R)

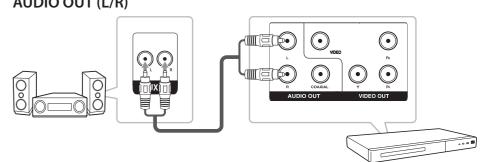




Disc Playback

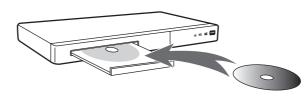






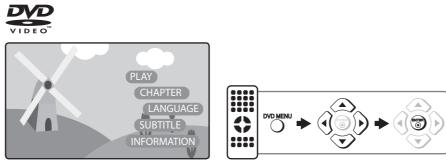







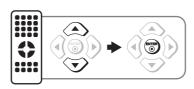




Data Playback

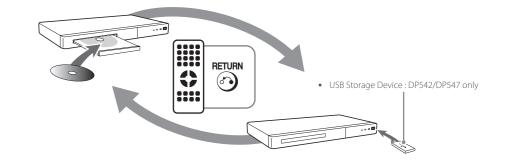

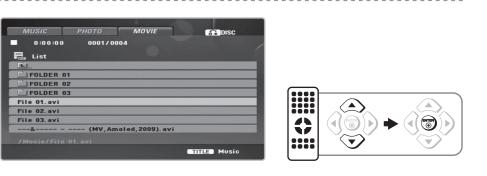

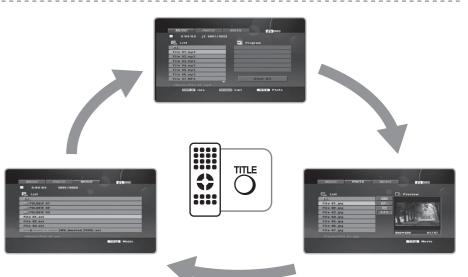









On-Screen Display

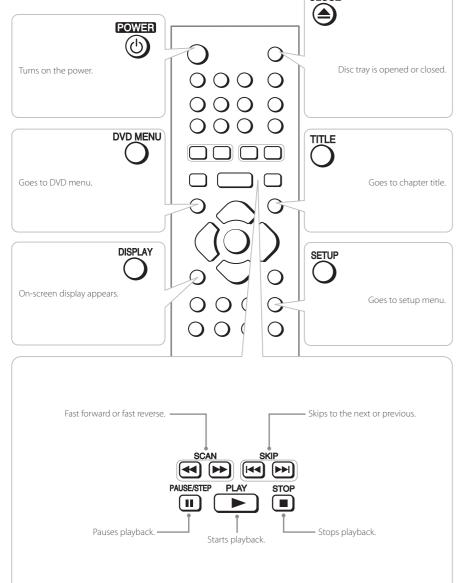

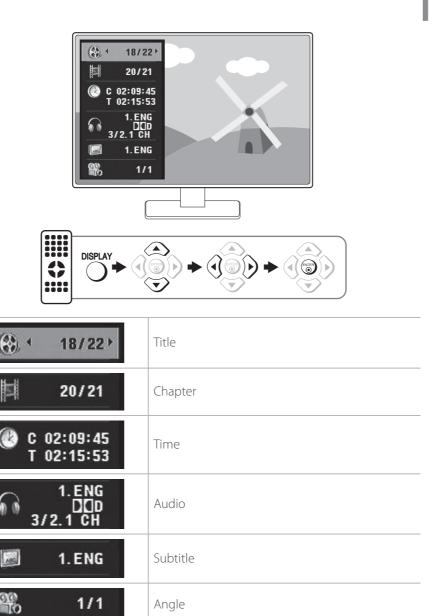

POWER: This unit operates on a mains supply of 110-240V~, 50-

 $\textbf{Wiring:} \ \text{This unit is supplied with a BS 1363 approved main plug.}$ When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To

obtain a replacement fuse cover contact your dealer. If the type of

plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please

Warning: A mains plug removed from the mains lead of this unit

must be destroyed. A mains plug with bared wires is hazardous

earth pin, marked with the letter E or with the earth symbol $\frac{1}{2}$ or

coloured green or green and yellow. If any other plug is fitted, use

Important: The wires in this mains lead are coloured in accordance

- BLUE: NEUTRAL, BROWN: LIVE - As the colours of the wires in

the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal

which is marked with the letter N or coloured black. The wire which

is coloured brown must be connected to the terminal which is

if inserted in a mains socket. Do not connect either wire to the

refer to the wiring instructions below:

same rating of fuse in the plug.

marked with the letter L or coloured red.

with the following codes:



Specification

ENGLISH

without notice.

Power requirements	AC 110-240 V, 50 - 60 Hz	
Power consumption	9 W	
Dimensions (W x H x D)	Approx. 360 mm x 39.5 mm x 200 mm	
Net Weight (Approx.)	1.14 kg	
Bus Power Supply (USB)	5 V === 200 mA (DP542/DP547 only)	
Design and specifications are subject to change		



Safety Information



0



































This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing he product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to



CAUTION: This product employs a Laser System.To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference.

Shall the unit require maintenance, contact an authorized service

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure.

CAUTION concerning the Power Cord

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the **equipment:** Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

