



 
SIMPLE MANUAL

Wireless Rear Speakers Kit

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.


MODEL
SPK8-S



1 Rear Speakers Connection



Speaker design and connection method may be different according to models.

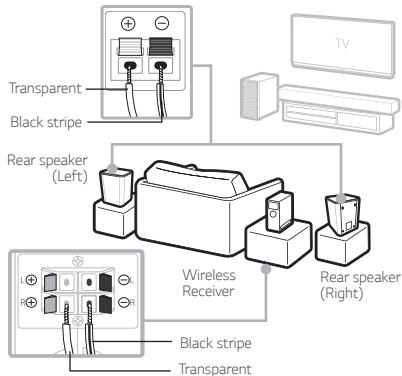

- 1 Connect the speaker cables to rear speakers correctly.
- 2 Connect the Wireless Receiver and the rear speakers (Grey: right, Blue: left) with the speakers cables.
- 3 Turn on the Surround function to enjoy surround sound.

2 Wireless Receiver Connection

- 1 Connect the power cord of the wireless receiver to the AC outlet.
- 2 Turn on the unit: The unit and wireless receiver will be **automatically** connected. The receiver's yellow - green LED turns on


Wireless Receiver Connection Manually

If the rear speakers do not make sound, try to connect manually.

- 1 Press PAIRING button on the rear of the wireless receiver.
 - The yellow - green LED on the wireless receiver blinks quickly.
- 2 Turn on the main unit.
- 3 Pairing is completed.
 - The yellow - green LED on the wireless receiver turns on.



Set the distance between the sound bar and the wireless receiver as close as possible and keep them away from the device (ex. wireless router, microwave oven, etc.) over 1 m (3.3 ft) to prevent wireless interference.

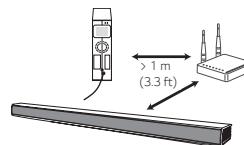

Surround Sound On/Off

When you turn on surround function, you can enjoy magnificent surround sound for all the input sound source with rear speakers.



The initial setting for the surround function is OFF, turn the surround function ON to use it.

SK5Y

Surround On: Press and hold **REAR +** button on the remote control about 2 seconds.

Surround Off: Press and hold **REAR -** button on the remote control about 2 seconds.

SK10Y/SK9Y/SK8Y/SK6Y

Surround On: Press and hold **AUTO VOL** button on the remote control about 2 seconds and then press **AUTO VOL** button repeatedly to select ON - SURROUND in the display window.

Surround Off: Press and hold **AUTO VOL** button on the remote control about 2 seconds and then press **AUTO VOL** button repeatedly to select OFF - SURROUND in the display window.

SL4Y/SL5Y/SL5YF/SL6Y/SL6YF/SL7Y/SL7YF/SL8Y/
SL8YG/SL9Y/SL9YG/SL10Y/SL10YG/
SN10Y/SN10YG/DSN10YG/SN9Y/SN9YG/
DSN9YG/SN8Y/SN8YG/DSN8YG/SN7Y/DSN7Y/
SN7CY/DSN7CY/SN6Y/DSN6Y/SN5Y/DSN5Y/GX/
G1

Surround On: Press and hold **¶** button on the remote control about 3 seconds and then press **¶** button repeatedly to select ON - SURROUND in the display window.

Surround Off: Press and hold **¶** button on the remote control about 3 seconds and then press **¶** button repeatedly to select OFF - SURROUND in the display window.

SP9YA/DSP9YA/SP8YA/DSP8YA/SP7Y/DSP7Y/
SPD7Y/SP70Y/DSPD7Y/SPD75YA/DSPD75YA/
SP60Y

Press **Settings** button. The product enters the setting mode and you can see "OFF-AUTO POWER" or "ON-AUTO POWER".

While the "OFF-AUTO POWER" or "ON-AUTO POWER" is scrolling in the status display, press Left/Right button to select the surround sound setting. You can see the status of the surround sound, "OFF-SURROUND" or "ON-SURROUND".

While the "OFF-SURROUND" or "ON-SURROUND" is scrolling in the status display, press Up/Down button to turn on or off the surround sound.

Additional Information

Specification of Wireless receiver

| | |
|------------------------|------------------------------------------------------------------------------------|
| Power requirement | Refer to the main label on the wireless receiver. |
| Power consumption | Refer to the main label on the wireless receiver. |
| Dimensions (W x H x D) | Approx. 60.0 mm x 220.0 mm x 175.0 mm (2.4 inch x 8.7 inch x 6.9 inch) |

Design and specifications are subject to change without notice.

About Ferrite Core (Optional)

