



## OWNER'S MANUAL

# Magic Remote Premium

Please read this manual carefully before using your remote and retain it for future reference.

Contents in this manual may be changed without prior notice due to upgrade of product functions.

PM22GN



\* M F L 7 1 7 4 3 1 2 1 2 1 1 2 R E V 0 0 \*

[www.lg.com](http://www.lg.com)


Copyright © 2022 LG Electronics Inc. All Rights Reserved.

## Accessories

- Magic Remote Premium and Alkaline Batteries (AAA)
- Owner's manual

## Installing Batteries

- Press the top of the battery cover, slide it back, and lift the cover as shown below.
- To replace batteries, open the battery cover, replace alkaline batteries (1.5 V, AAA) matching  $\oplus$  and  $\ominus$  ends to the label inside the compartment, and close the battery cover. Be sure to point the remote control at the remote control sensor on the TV.
- To remove the batteries, perform the installation actions in reverse. Don't mix old or used batteries with new ones. Close the cover securely.
- Failure to match the correct polarities of the battery may cause the battery to burst or leak, resulting in fire, personal injury, or ambient pollution.

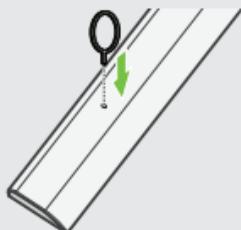

## Register/Unregister the Magic Remote

- Turn on the TV and press the  $\odot$  **Wheel (OK)** on the Magic remote for registration.
- Press and hold the  $\text{Home}$  button and  $\text{Back}$  button together for more than 5 seconds to disconnect the Magic Remote.
- Press and hold the  $\text{Home}$  button and  $\text{Settings}$  button together for more than 5 seconds to disconnect and re-register the Magic Remote at the same time.

# Remote Description



**Power** Turns the TV on or off.

**STB Power** You can turn your set-top box on or off by adding the set-top box to the universal remote control for your TV.

Accesses the saved programmes list.

**Number buttons** Enters numbers.

Accesses the [Quick Help].

Accesses the [Guide].

Accesses the [Edit Quick Access].

- [Edit Quick Access] is a feature that allows you to enter a specified app or Live TV directly by pressing and holding the number buttons.

**More actions** Displays more remote control functions.

**More Actions** Audio descriptions function will be enabled.

**Volume buttons** Adjusts the volume level.

**Mute** Mutes all sounds.

**Mute** Accesses the [Accessibility] menu.

**Programme buttons** Scrolls through the saved programmes.

-  **Voice recognition** Network connection is required to use the voice recognition function. Check for recommended content. (Some recommended services may not be available in some countries.)
-  **Voice recognition** Speak while pressing and holding the button to use the voice recognition feature. To achieve accurate recognition of your speech, you must pronounce words in a slow and accurate manner at an appropriate voice volume at a distance of about 10 cm away from the Magic Remote's microphone ().
-  **Home** Accesses the Home menu.
-  **Home** Launches the last used apps.
-  **Input** Changes the input source.
-  **Input** Accesses the [Home Dashboard].
-  **Wheel (OK)** Press the centre of  button to select a menu. You can change programmes by using  button.
  - Do not move the wheel on the remote control right or left. This may cause the malfunction of the product.
-  **Wheel (OK)** Accesses the [Magic Explorer]. You can run the [Magic Explorer] feature when the pointer colour is changed to purple. If watching a programme, press and hold down the pointer onto the video. When using [TV Guide], [Settings], [Sports Alert], or [Art Gallery], press and hold down on the text.
-  **up/down/left/right** Press the up, down, left or right button to scroll the menu. If you press the up, down, left or right button while the pointer is in use, the pointer will disappear from the screen and Magic Remote will operate like a general remote control. To display the pointer on the screen again, shake Magic Remote to the left and right.
-  **Back** Returns to the previous level.
-  **Back** Clears on-screen displays and returns to last input viewing.



**Q. Settings** Accesses the Quick Settings.



**Q. Settings** Displays the [All Settings] menu.



**Streaming Service buttons** Connects to the Video Streaming Service.



These access special functions in some menus.



**Red button** Runs the record function.



**Note**

- \*\*To use the button, press and hold for more than 1 second.
- The remote control image shown may differ from the actual product.
- The order of description may differ from the actual product.
- Some countries, some remote control buttons may not work.

# Connecting Smart Devices using NFC Tagging

## Using the NFC Feature

NFC is technology that uses Near Field Communication, allowing you to conveniently send and receive information without separate settings.

By bringing a smart device near the NFC-enabled remote control, you can install the LG ThinQ app and connect the device to the TV.

1. Turn on NFC in the smart device's settings. To use NFC with Android devices, set the NFC option to enable 'read/write tags' in the smart device's settings. The NFC settings may vary depending on the device.
2. Bring the smart device near the  (NFC) on the remote control. The required distance for NFC tagging is about 1 cm.
3. Follow the instructions to install the LG ThinQ app on your smart device.
4. Retagging the smart device to the remote control allows you to conveniently access various features on the connected TV through the LG ThinQ app.



- This feature is available for NFC-enabled smart devices only.
- This feature is only available if the remote control has an NFC logo.

## Precautions To Take

- Use the remote control within the specified range (within 10 m).

You may experience communication failures when using the device outside the coverage area or if there are obstacles within the coverage area.

- You may experience communication failures depending on the accessories.

Devices such as a microwave oven and wireless LAN operate in the same frequency band (2.4 GHz) as the Magic Remote. This may cause communication failures.

- The Magic Remote may not work properly if a wireless router (AP) is within 0.2 m of the TV. Your wireless router should be more than 0.2 m away from the TV.

- Do not disassemble or heat the batteries.

- Do not drop the battery. Avoid extreme shocks to the battery.

- Do not immerse the batteries in water.

- **Caution:** Risk of fire or explosion if the battery is replaced by an incorrect type.

- Properly dispose of used batteries.

## Specifications

CATEGORIES	DETAILS
Model No.	PM22GN
Range of frequency	2.400 GHz to 2.4835 GHz
Output Power (Max.)	8 dBm
Channel	40 channels
Power source	AAA 1.5 V, 2 alkaline batteries are used
Operational temperature range	0 °C to 40 °C

NFC	DETAILS
Range of frequency	13.553 to 13.567 MHz
Output Power (Max.)	-9.95 dBuA/m @ 10 m

