


NANO80*
NANO83*
NANO85*





Quick Start Guide

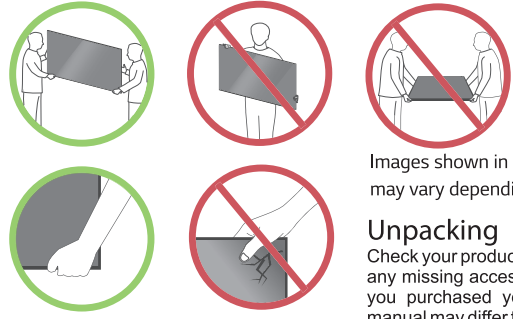











Images shown in manual
may vary depending on model





Unpacking

Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.

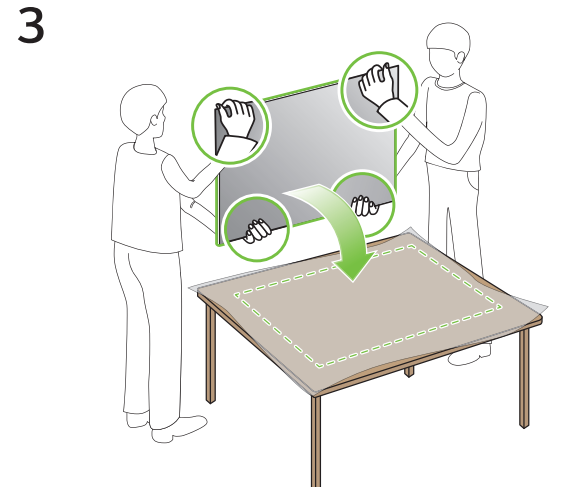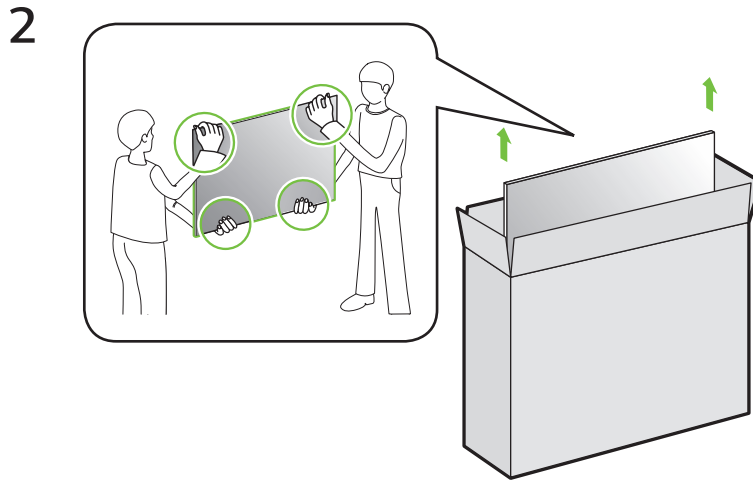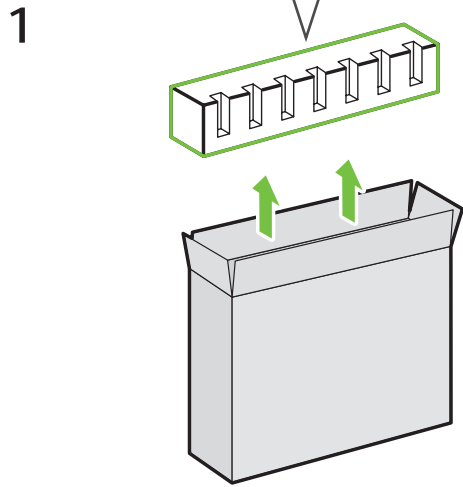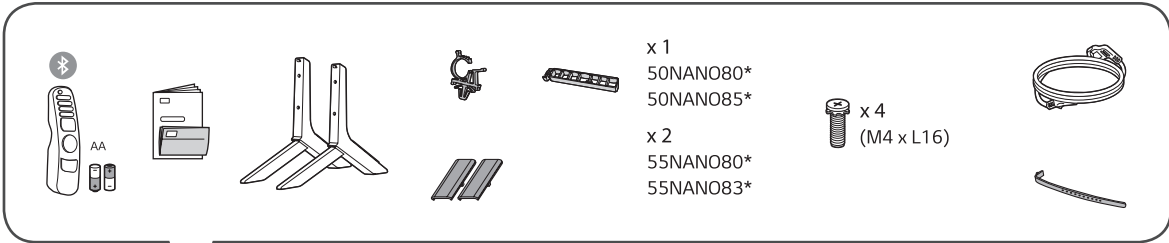

CAUTION
Image shown may differ from your TV
When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

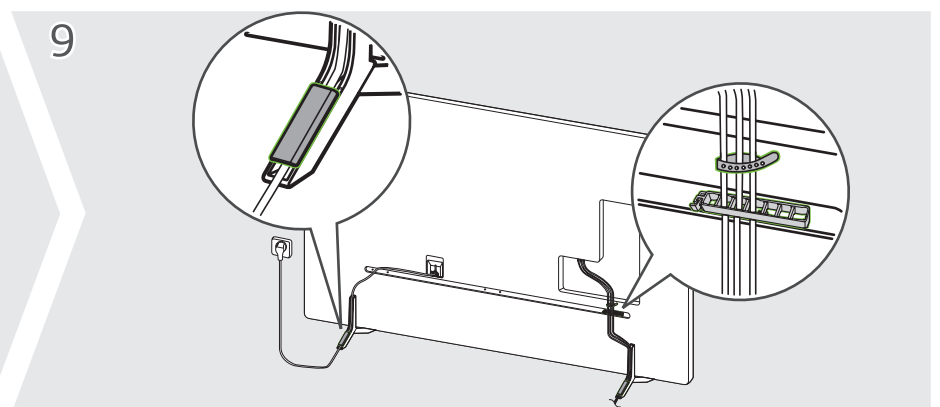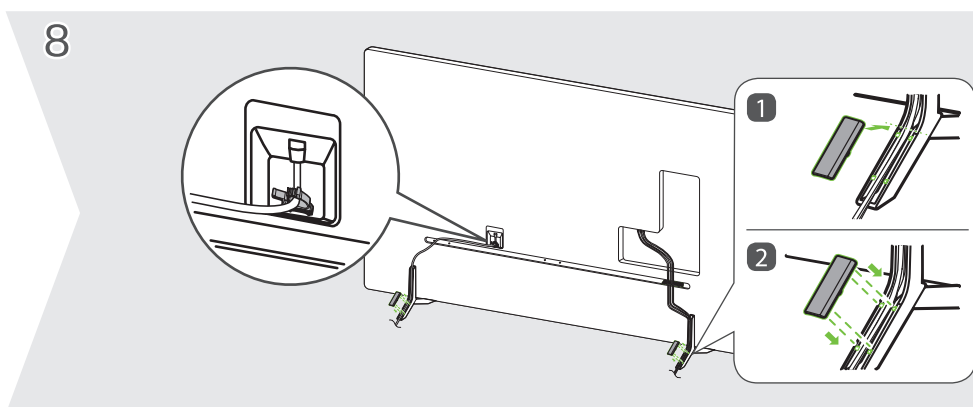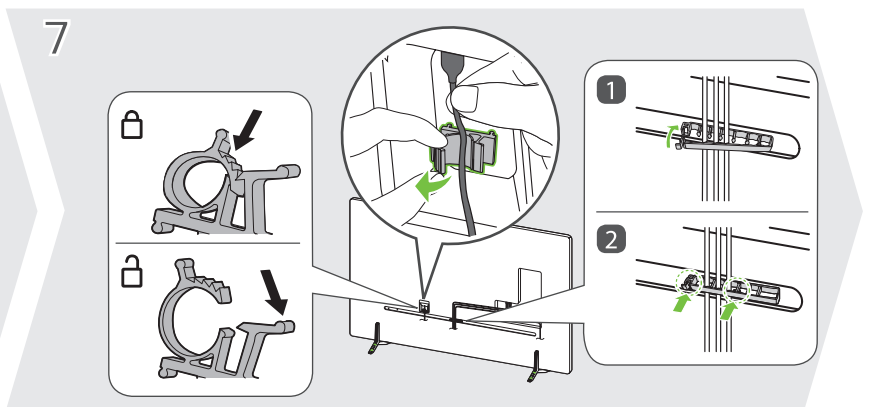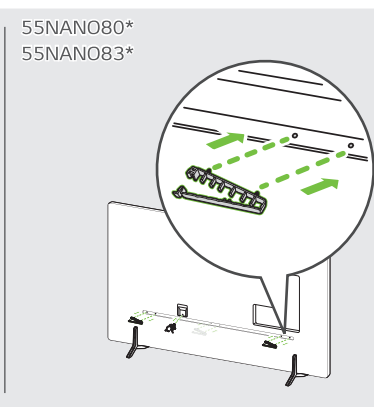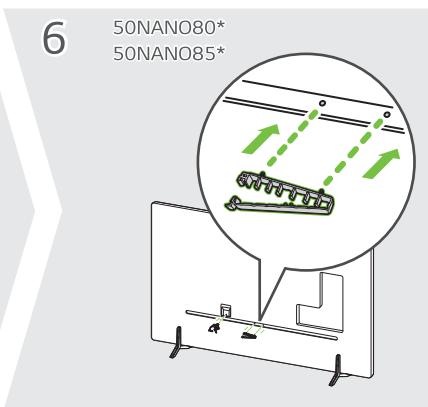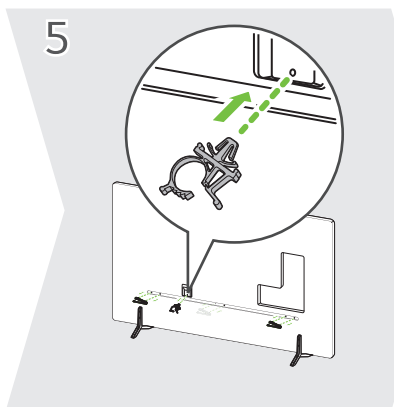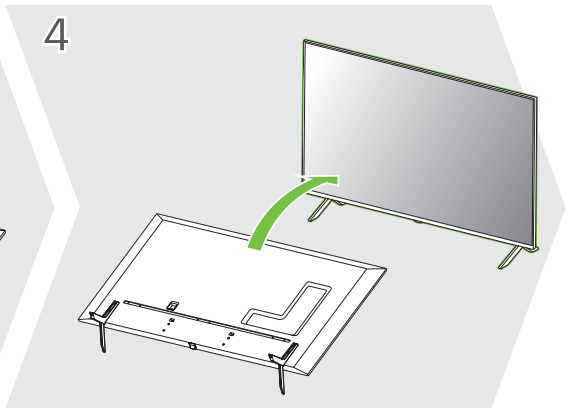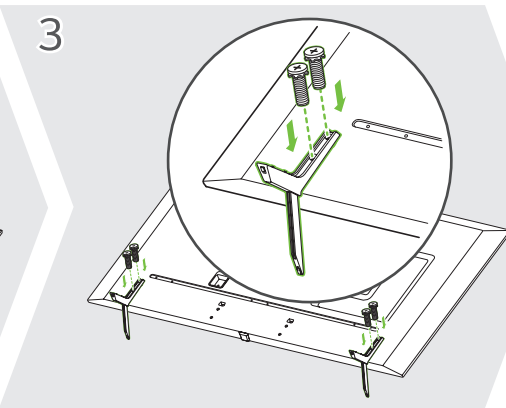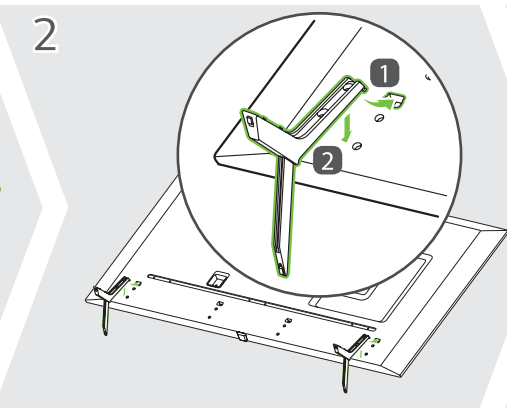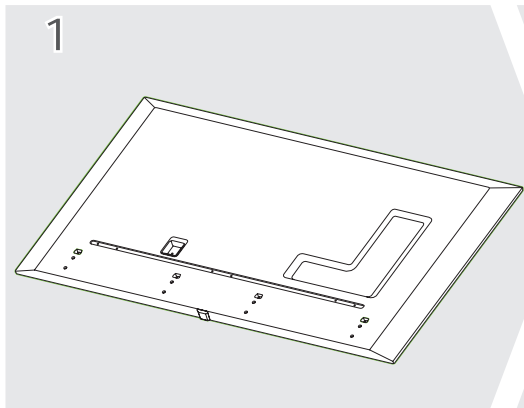

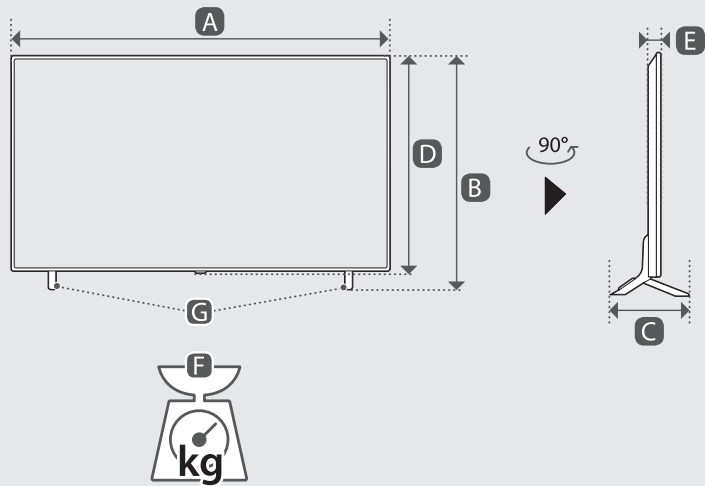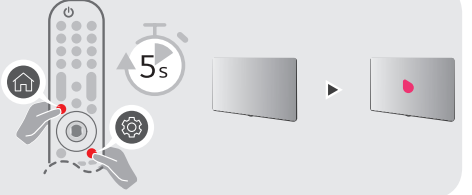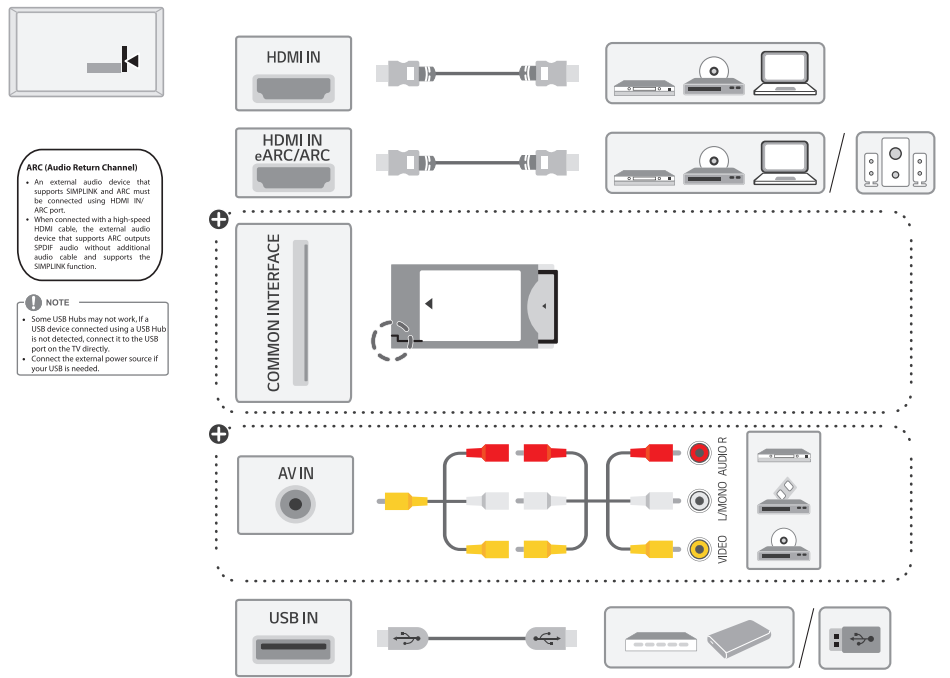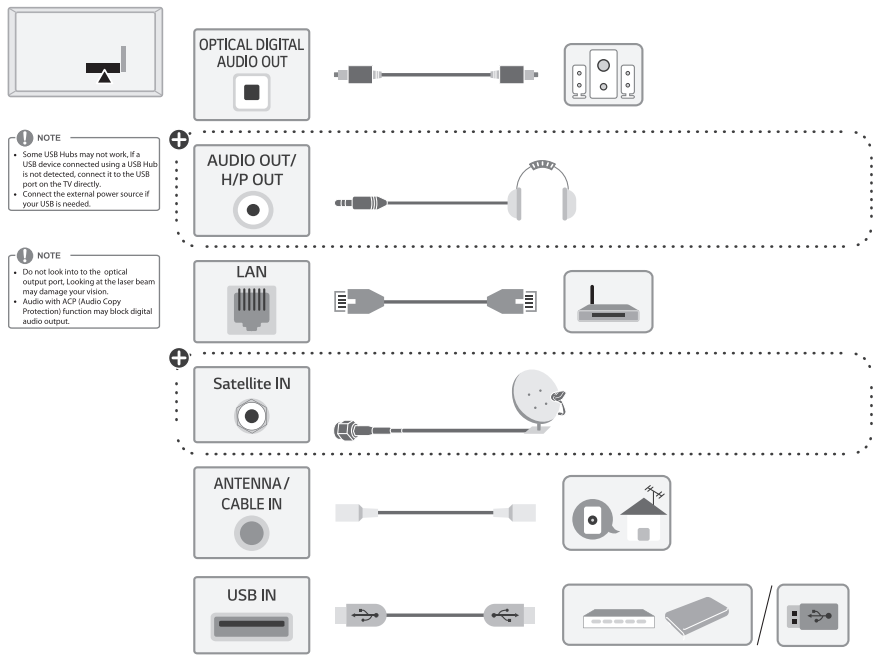

	A	B	C	D	E	F	F - G
	(mm)					(kg)	
50NANO80TPA 50NANO80TPZ 50NANO80VPA 50NANO85TPZ	1120	718	257	653	49.2	14.4	14.0
55NANO80TPA 55NANO80TPZ 55NANO80VPA 55NANO83TPZ	1233	781	257	716	44.2	16.4	16.0
Power requirement				AC 100-240 V ~ 50 / 60 Hz			



English

- Read **Safety and Reference**.
- The Analog Gender adapter can be purchased separately at Customer Service.

⊕ : Depending on model