



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.



CAUTION: This product employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Shall the unit require maintenance, contact an authorized service center.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

CAUTION: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

CAUTION: No naked flame sources, such as lighted candles, should be placed on the apparatus.

- The appliance is not intended for use by young children or infirm persons without supervision.
- Young Children should be supervised to ensure that they do not play with appliance.
- If the appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable outlet device must be positioned so that it is not subject to splashing (of water or any form of liquid) or ingress of moisture.



RF Radiation Exposure Statement

This equipment shall be installed and used at a minimum distance of 20 cm from the human body.

Symbols

~	Refers to alternating current(AC).
==	Refers to direct current(DC).
□	Refers to class II equipment.
⏻	Refers to stand-by.
I	Refers to "ON" (power).
⚡	Refers to dangerous voltage.



SIMPLE MANUAL

Mini Hi-Fi System

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual.

Some of the content in this manual may differ from your unit.

MODEL
CK56

 


www.lg.com

Copyright © 2018-2019 LG Electronics Inc. All Rights Reserved.
1807_Rev02



Front Panel

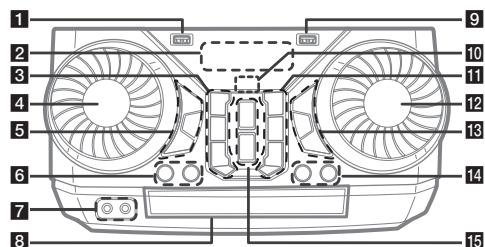

- 1** USB 1 Port
You can play sound files by connecting the USB device.

- 2** Display window

- 3** ⏻ (Standby)

Turns the power on or off.

USB REC / DEMO

- Records to USB.
- To stop Recording, press and hold for 3 seconds.
- In power off status, if you press **USB REC / DEMO**, show DEMO mode.

⏮ (Skip/Search)

- Skips backward.
- Searches for a section within a track/file.
- Selects the radio stations.

⏸ (Stop)

Stops playback or cancels DELETE function.

- 4** **EQUALIZER / SEARCH**

- Chooses sound impressions.
- Searches a folder or a file.
- Selects the lighting effects.

- 5** **SPECIAL EQ / BASS BLAST (or BASS BLAST+)**

- Chooses special equalizer.
- Press and hold to select BASS (or BASS+) effect directly.

SEARCH

Moves to folder or file in selection mode.

OK

Selects a folder when searching a file.

- 6** **LIGHTING**

Selects lighting mode.

VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

- 7** **PORTABLE IN jack**

MIC (Microphone) jack

- 8** Disc tray

- 9** USB 2 Port

You can play sound files by connecting the USB device.

- 10** (Remote sensor)

- 11** **F** (Function)

Selects the function and input source.

WIRELESS LINK

- Selects MAIN or OTHER on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode.

(Skip/Search)

- Skips forward.
- Searches for a section within a track/file.
- Selects the radio stations.

(Open/Close)

Opens and closes the disc tray.

- 12** **MASTER VOL. (Volume) / MULTI**

- Adjust speaker volume.
- Adjust microphone volume.
- Selects vocal effects.

- 13** **VOCAL EFFECTS**

Selects VOCAL EFFECTS mode.

MIC VOL (Microphone volume)

Selects microphone volume mode.

MIC ECHO

Selects ECHO mode.

- 14** **KEY CHANGER (b/#)**

Changes the key to suit your vocal range.

 
- 15** **AUTO DJ**

Selects the AUTO DJ mode.

(Play/Pause)

- Starts or pauses playback.
- Selects stereo/mono.

Rear Panel

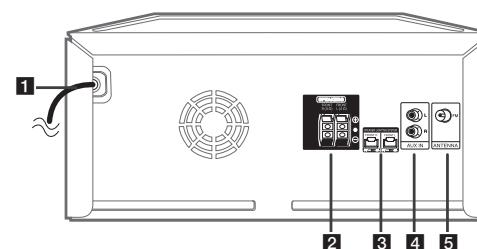

- 1** Power cord

- 2** **SPEAKERS** connector

- 3** **SPEAKER LIGHTING SYSTEM**

 
Connect the speaker lighting cables.

- 4** **AUX IN (L/R)**

Connect an auxiliary device.

- 5** **ANTENNA** (FM)

Speaker Connection

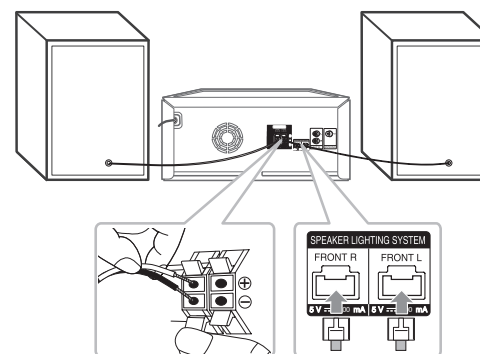


Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 350 mm x 166 mm x 276 mm
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS output power)	700 W RMS

Design and specifications are subject to change without notice.

 Replacement of battery

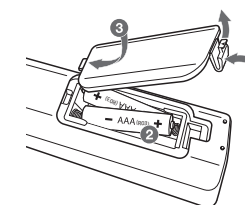

Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>