



簡易手冊

Wi-Fi Soundbar

Wi-Fi Soundbar

SG10TY



MFL72087352
2407_Rev02

www.lg.com
版權所有 © 2024-2025 LG Electronics Inc. 保留一切權利。

中文

規格

- 電源耗用
- 請參閱主標籤。
- 電源適配器
- 型號：MS-Z2610R230-065E0-P
 - 製造商：MOSO POWER SUPPLY TECHNOLOGY CO., LTD.
 - 輸入：100 - 240 V ~ 50/60 Hz
 - 輸出：23.0 V 2.61 A
- 尺寸（闊 x 高 x 深）：大約 1446.0 mm x 150.0 mm x 32.5 mm
- 匯流排電源供應 (USB): 5 V 500 mA
- 擴音器（總RMS輸出功率）：420 W RMS

注意：開放來源程式碼軟件

欲獲得 GPL、LGPL、MPL 及其他有義務公開包含本產品內容原始程式授權的源代碼，及存取所有提及授權條款、版權聲明及其他相關文件，請瀏覽 <https://opensource.lge.com>。

LG Electronics 也可應您要求，在由您支付相關費用（如媒體成本、運費及處理費）的條件下以 CD-ROM 方式提供開放原始程式碼，如有需要請寄送電子郵件至 opensource@lge.com。

該產品最後一次出貨的三年內，任何收到此資訊的人可享此優惠。

安全注意事項

本機的插頭握柄是專為本產品所設計,且與附贈的電源線結合為一體,若您因為任何理由而需截短此電源線時

請勿再使用該插頭

應使用全新的插頭以確保連續使用之安全性。請依據1994年之插頭及插座規範的規定,將插頭確實地與電源線結合。



符合標準聲明

在此，LG電子聲明 Wi-Fi Soundbar 類型的無線電設備符合 2014/53/EU指令。你可以從以下互聯網地址獲得歐盟符合性聲明的全文：
<http://www.lg.com/global/support/cedoc/cedoc#>

為使用者安全着想，安裝或使用裝置時，身體與裝置之間的距離不應少於 20 厘米。

ENGLISH

Specification

- Power consumption
- Refer to the main label.
- AC adapter
- Model: MS-Z2610R230-065E0-P
 - Manufacturer: MOSO POWER SUPPLY TECHNOLOGY CO., LTD.
 - Input: 100 - 240 V ~ 50/60 Hz
 - Output: 23.0 V 2.61 A
- Dimensions (W x H x D): Approx. 1446.0 mm x 150.0 mm x 32.5 mm
- Bus Power Supply (USB): 5 V 500 mA
- Amplifier (Total RMS Output power): 420 W RMS

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord,

DO NOT RE-USE THE PLUG

 
 
 
A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.



Declaration of Conformity

Hereby, LG Electronics declares that the radio equipment type Wi-Fi Soundbar is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

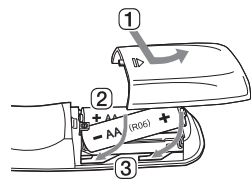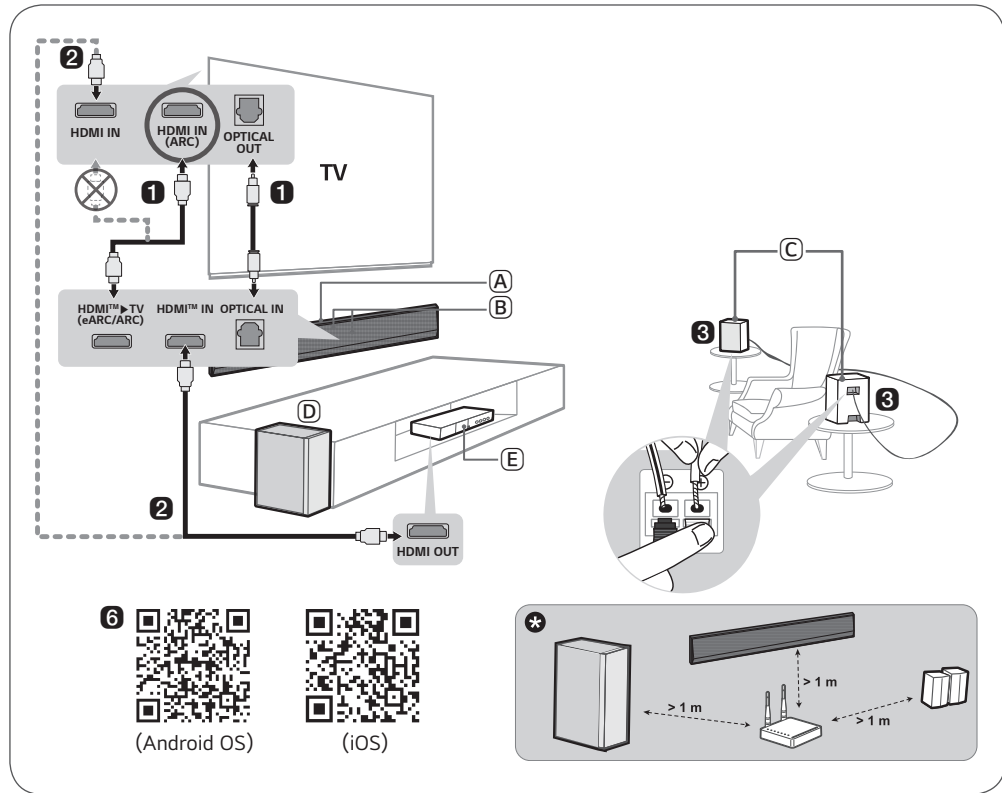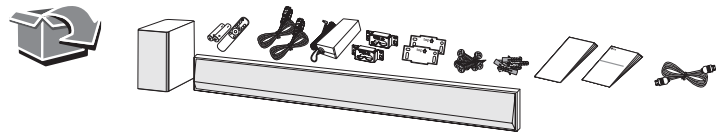

更換電池
Replacement of Battery

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

中文 產品安裝及使用

操作設備前請仔細閱讀本手冊，並保留以備日後參考。
要檢視有關進階功能的指示，請造訪 <http://www.lg.com> 或掃描二維碼下載使用說明書。部份使用說明的內容有可能與你的產品不同。



- (A) Soundbar
(B) 遙控接收器 / 狀態顯示器
(C) 後置揚聲器（單獨發售，SPT8-S）
(D) 無線重低音揚聲器 — 貼近 Soundbar 安裝。
(E) 外置設備 —（藍光播放機、遊戲機等等）

- 1 請用光纖線或 HDMI 線將 Soundbar 連接至您的電視機。
- 2 如果您使用的是外部裝置（如機頂盒、藍光播放器、遊戲機等），透過 HDMI 連接線將其連接到 Soundbar 或電視。
! 如有必要，請購買 HDMI 線纜、光纖或 USB 延長線來連接 Soundbar。
- 3 如果您單獨購買了後置揚聲器，請使用揚聲器電纜連接後置揚聲器。連接後置揚聲器時，請將黑色條紋電纜連接到每個揚聲器的負極端子，將剩餘的電纜連接到每個揚聲器的正極端子。
- 4 依照以下順序連接電源：無線重低音揚聲器 → 後置揚聲器 → Soundbar。然後開啟 Soundbar。與 Soundbar 自動建立連接後，無線重低音揚聲器和後置揚聲器上的 LED 將點亮綠色。
- 5 與您的電視機配合使用產品
1 重複按下功能 按鈕直至「OPT/HDMI ARC」顯示於狀態顯示器。
2 在電視的設定上，將輸出揚聲器設定為 [HDMI ARC]、[光纖]、[LG WOWCAST] 或 [外部揚聲器]。
3 當電視已連接至產品時，「OPT」、「ARC」，或「E-ARC」字樣會顯示於狀態顯示器並發出提示聲。
! 如果您的 LG 電視支援內建的 WOWCAST 功能，您可以通過無線方式將其連接到條形音箱。
- 6 透過 Wi-Fi 將產品連接至您的智能電話
1 將您的智能電話連接至 Wi-Fi。
2 從 Google Play 或 App Store 安裝 LG ThinQ 應用程式。
3 運行 LG ThinQ 應用程式並依照指引操作。
4 產品會連接至您的智能電話，您可透過 LG ThinQ 應用程式操控產品。
- 7 透過 Bluetooth 將設備連接至您的智能電話
1 輕觸您的智能電話內的設定 按鈕，選擇 Bluetooth。開啟 Bluetooth 功能。（ 關 > 開）
2 按下 Bluetooth 配對 按鈕。稍後，您會看見「BT READY」顯示於狀態顯示器。
3 尋找並選擇「LG_Speaker_SG10TY_XXXX」。
4 當產品透過 Bluetooth 連接至您的智能電話後，您會看見狀態顯示器出現變化：「PAIRED」→「已連接之藍牙設備名稱」→「BT」。



如果無線重低音揚聲器或後置揚聲器上的 LED 指示燈亮紅色，表示 Soundbar 未連接到揚聲器。若出現該情況，請依照以下順序進行連接。

- 1 按下 Soundbar 的電源 按鈕以關閉它。
 - 2 按無線重低音揚聲器或後置揚聲器背面的 PAIRING 按鈕。查看 LED 指示燈是否閃爍綠色。
- 如果無線重低音揚聲器上仍出現紅色 LED 指示燈，請再次長按重低音揚聲器背面的按鈕。
 - 3 按下 Soundbar 的電源 按鈕以開啟它。
 - 4 建立連線後，您會看見無線重低音揚聲器或後置揚聲器上的 LED 指示燈亮起綠色。
- * 請將 Soundbar、重低音揚聲器及後置揚聲器放置於距離其他設備（如無線路由器、微波爐等等）超過 1 米的位置，避免無線電干擾。
- 某些揚聲器可能因輸入來源而沒有發聲。選擇 BASS BLAST (BASS BLAST+) 聲音模式以聆聽所有揚聲器的聲音。

- 設計和規格若有更改，恕不另行通知。
- Google Play 是 Google LLC 的商標。

ENGLISH Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



- (A) Soundbar
(B) Remote Control Receiver / Status Display
(C) Rear Speakers (Sold separately, SPT8-S)
(D) Wireless Subwoofer - Install it close to the soundbar.
(E) External Device - (Blu-ray player, game console, etc.)

- 1 Connect the soundbar to your TV via an optical cable or an HDMI cable.
- 2 If you are using an external device (ex. Set-top box, Blu-ray player, game console, etc.), connect it to the soundbar or to the TV via an HDMI cable.
! If necessary, purchase HDMI cables, an optical cable, or a USB extension cable to connect the soundbar.
- 3 If you purchased the rear speakers separately, connect the rear speakers via a speaker cable. When connecting the rear speakers, connect the black striped cable to the negative terminal of each speaker and the remaining cable to the positive terminal of each speaker.
- 4 Connect to power in the following order: wireless subwoofer → rear speakers → soundbar. Then, turn on the soundbar. When the connection is automatically established with the soundbar, the LEDs on the wireless subwoofer and the rear speaker will light up green.
- 5 Using the product with your TV
1 Press the **Function** button repeatedly until "OPT/HDMI ARC" appears on the status display.
2 On your TV's settings, set the output speaker to [HDMI ARC], [Optical], [LG WOWCAST], or [External Speaker].
3 When the TV is properly connected to the product, "OPT", "ARC", or "E-ARC" will appear on the status display with a sound.
! If you have an LG TV that supports the WOWCAST built-in function, you can connect it to the soundbar wirelessly.
- 6 Connecting the product to your smartphone via Wi-Fi
1 Connect your smartphone to Wi-Fi.
2 Install the **LG ThinQ app** on Google Play or the App Store.
3 Run the **LG ThinQ app** and follow the instructions.
4 The product will connect to your smartphone and you can control the product with **LG ThinQ app**.
- 7 Connecting the product to your smartphone via Bluetooth
1 Tap the **Settings** button on your smartphone and select **Bluetooth**. Turn on the **Bluetooth** function.
(Off > On)
2 Press the **Bluetooth pair** button. After a moment, you will see "BT READY" on the status display.
3 Find and select "LG_Speaker_SG10TY_XXXX".
4 When the product is connected to your smartphone via **Bluetooth**, you can see the status display change from "PAIRED" → "Connected Bluetooth device name" → "BT".



If you see a red LED on the wireless subwoofer or rear speaker, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.

- 1 Press the **Power** button on the soundbar to turn it off.
 - 2 Press the **PAIRING** button on the back of the wireless subwoofer or rear speaker. Check if each LED blinks green.
- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.
 - 3 Press the **Power** button on the soundbar to turn it on.
 - 4 When the connection is established, you will see a green LED light on the wireless subwoofer or rear speaker light up.
- * Keep the soundbar, the subwoofer and rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.
- Some speakers may not make sound depend on the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

- Design and specifications are subject to change without notice.
- Google Play is a trademark of Google LLC.