


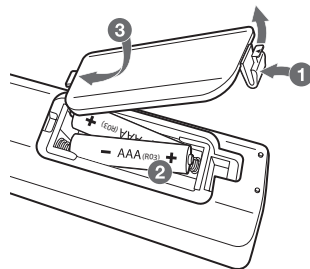 
## Additional Information

### Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 350 mm x 163 mm x 251 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	480 W RMS

 
Design and specifications are subject to change without notice.

### Replacement of battery



**POWER:** This unit operates on a mains supply of 200 - 240 V - 50 / 60 Hz.

**Wiring:** This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

**Warning:** A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

**Important:** The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



# SIMPLE MANUAL Mini Hi-Fi System

Please read this manual carefully before operating your set and retain it for future reference.  
To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL  
CJ44




MFL72144711  
2407\_Rev01




This product has no disc drive.

[www.lg.com](http://www.lg.com)

 Copyright © 2024 LG Electronics Inc. All Rights Reserved.




## Front Panel

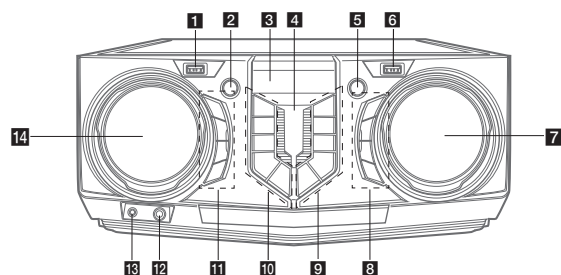 


- 1** USB 1 Port  
You can play sound files by connecting the USB device.
- 2** (Standby)  
Turns the power on or off.
- 3** Display window
- 4** (Remote sensor)
- 5** **WIRELESS LINK**
  - Selects MAIN or OTHER on WIRELESS PARTY LINK mode.
  - Enable or disable WIRELESS PARTY LINK mode.
- 6** USB 2 Port  
You can play sound files by connecting the USB device.
- 7** **VOLUME**  
Adjust speaker volume.
- 8** **MIC** (Microphone) +/-  
Adjust microphone volume.  
**VOICE CANCELLER**  
You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.  
**ECHO**  
Selects ECHO mode.
- 9** **F** (Function)  
Selects the function and input source.
  - >||** (Play/Pause)
    - Starts or pauses playback.
    - Selects stereo/mono.
  - >>I** (Skip/Search)
    - Skips forward.
    - Searches for a section within a file.
    - Selects the radio stations.
- KEY CHANGER** (**#** / **b**)  
Changes the key to suit your vocal range.
- 10** **USB REC / DEMO**
  - Records to USB.
  - In power off status, if you press **USB REC / DEMO**, show DEMO mode.
  - (Stop)  
Stops playback or cancels DELETE function.
  - I<<** (Skip/Search)
    - Skips backward.
    - Searches for a section within a file.
    - Selects the radio stations.
  - (Information)
    - Sees information about your music. An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
    - Sees **Bluetooth** device name of the unit in BT READY.
    - Sees the name of connected all **Bluetooth** device in **Bluetooth** mode.
    - When these units are successfully connected each other in WIRELESS PARTY LINK mode, each of connected device names appears in the each unit.
- AUTO DJ**  
Selects the AUTO DJ mode.
- 11** **EQ**  
Chooses sound impressions.  
**SPECIAL EQ / BASS BLAST**
  - Chooses special equalizer.
  - Press and hold to select BASS effect directly.
- SEARCH**  
Moves to folder or file in selection mode.
- OK**  
Selects a folder when searching a file.
- 12** **MIC** (Microphone) jack
- 13** **PORT.** (Portable) **IN** jack
- 14** **SEARCH**
  - Searches a folder or a file.
  - Turns clockwise or counterclockwise to control the EQ, SPECIAL EQ mode.

## Rear Panel

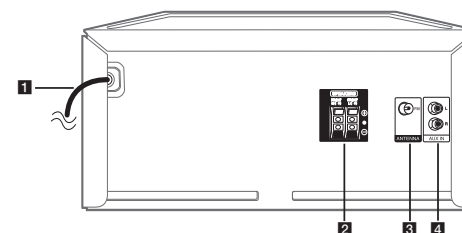 

- 1** Power cord
- 2** **SPEAKERS** terminals
- 3** **ANTENNA** (FM)
- 4** **AUX IN** (L/R)  
Connect an auxiliary device.

## Speaker Connection

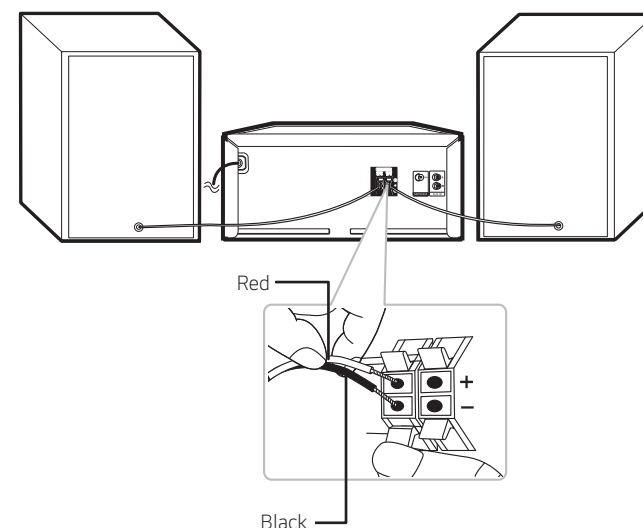 

### Controller App



Download the **LG XBOOM** App to your device.  
(Android only)

### LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>